Lecture 2 — Modern Processors

Jeff Zarnett jzarnett@uwaterloo.ca

Department of Electrical and Computer Engineering University of Waterloo

January 2, 2017

ECE 459 Winter 2017 1/31

Modern Processors

Remember the classic von Neumann machine architecture.


A program is comprised of both instructions and data, both of which are stored in the same memory.

A program executes sequentially, one statement at a time, one after another.

That is not really how computers work, at least not anymore, but it is an abstraction we still maybe find useful when it comes to algorithm analysis.

ECE 459 Winter 2017 2/3

CPU Frequency Over Time

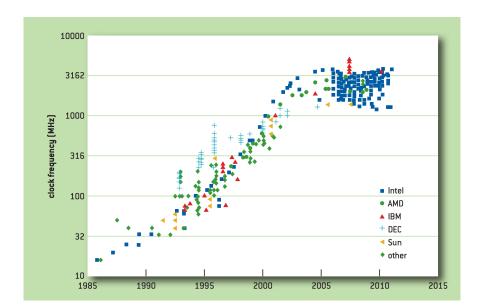

ECE 459 Winter 2017 3/31

CPU Frequency Over Time

The x86 processor is a Complex Instruction Set Computing (CISC) processor. In other words, there are a lot of assembly instructions.

But why? This was intended for your convenience as a programmer!

So the hardware people thought they were doing everyone a favour.

These are easy to program in, from the way the assembly programmer thinks, but hard to implement and hard to pipeline.

ECE 459 Winter 2017 4/3

For a lot of CISC machines, the Cycles Per Instruction (CPI) varied, something like 4-10 cycles to complete any instruction, but at least it was predictable.

Program performance was basically the number of page faults times the amount of time it takes to read from disk, plus the instruction execution time.

Thus the optimization goal is: minimize page faults.

Page fault count is relatively easy to measure and there are some things we can do to reduce the number of page faults.

If you were working with an embedded system with no disk (or at least no page faults) then the optimization goal is minimize instruction count.

ECE 459 Winter 2017 5/3

RISCy Business

Between 1990 and 2005 we got some impressive scaling on CPU frequency.

We got Reduced Instruction Set Computing (RISC) CPUs.

Simpler processors are easier to scale than complex ones, and simpler instructions mean fewer cycles per instruction.

That also means we can have more pipelining.

The tradeoff is that RISC CPUs are much harder to program in assembly directly, so compilers had to do the work.

ECE 459 Winter 2017 6/3

RISCy Business

Consider delay slots: an instruction after a branch is always executed or worse, the result of a computation is not available to the next instruction.

In these cases the "simple" solution is to put a NOP (do-nothing) instruction in.

Good compilers (and programmers) can rearrange instructions, hopefully, to make this work without wasting time.

Also: memory got cheaper, so we have more of it, so page faults occurred less and less frequently.

ECE 459 Winter 2017 7/3

Over The Wall

But then, as we have seen, we hit the (power) wall.

And you might think, well, if I run into a wall, I can just go around it.

There must be other ways to advance!

And there are, except, we hit three other walls too, and now we are surrounded.

What are these other three seemingly-insurmountable barriers?

ECE 459 Winter 2017 8/3

Mr. Gorbachev, Tear Down This Wall!

Instruction level parallelism (ILP) is getting close to the limit of what we can do.

We can predict branches with a certain accuracy but if we have already got 95% efficiency, our maximum improvement is 5%.

The speed of memory advances has not kept up with the advances in CPUs.

So now we have moved from the era of runtime being dominated by page faults to the era of runtime being dominated by cache misses.

Doubling, say, level one cache (at great expense) does not double the speed of the program; it may speed it up by a small amount at most.

ECE 459 Winter 2017 9/3

Quicker Than a Ray of Light

The final wall is the universal speed limit: the speed of light.

The more complex the CPU is, the longer the path any signal may have to travel to get from A to B.

This is limited, most practically, by the speed of light, and thus far, nobody has invented a way to get around this universal speed limit.

ECE 459 Winter 2017 10 / 31

Back to ILP

The idea with ILP is not having more cycles to work with, but instead, doing more in each clock cycle. And there's a lot of clever ideas.

Pipelining: you may have heard a bit about his already, especially so if you are taking ECE 429 this term as well.

ECE 459 Winter 2017 11/3

Pipelining

To complete an instruction there are five basic steps:

- Fetch the instruction from memory
- 2 Decode the instruction
- **3** Fetch needed operands
- 4 Perform the operation, and
- 5 Write the result

Example: ADD R1, R2

ECE 459 Winter 2017 12 /:

Pipelining

Thus even a simple instruction takes more than one clock cycle, but the good news is that the stages can overlap:

Clock Cycle		1		2		3		4		5		6	7	'	8		9		10
•	ΙF	1																	
			DC	1															
					OP	1													
						-	EX	1				+							
							-/	-	WB	1		+		+					
									MD	_	TE C	,		+					
											IF 2	-		-					
												_	DC 2	_					
														OP	2				
																EX	2		
																		WB	2
	IF	1																	
			DC	1															
					OP	1													
			1.	_	_		EX	1				+							
					DC	_				_		+		-					
							OP	2	WB			_							
									EX	2									
											WB 2	2							

ECE 459 Winter 2017 13/3

Hazard Lights

There are pipeline hazards: sometimes you need the result of a previous step before you can go on.

These prevent us from reaching the theoretical maximum of one instruction completed per clock cycle.

There are other hazards; we may have conflicts over certain CPU resources or fetch may be unable to identify the next instruction because of a branch.

In the worst case, if we've mispredicted a branch, we have to flush the pipeline.

In that case, some extra work was done that was not necessary...

ECE 459 Winter 2017 14/31

If we do a load from memory, and we are lucky, it is found in the fastest cache and is available in perhaps 2-3 clock cycles.

If we must go to memory, it may be 200-300 cycles.

If it is in level 2 or level 3 cache it will be somewhere in between.

The key idea, though, is if we are trying to put something in register R7, it will take time until that value is actually present in that register.

The simplest approach is to just wait around until that value has arrived, and then go on to the next instruction.

That works, but we can do better.

ECE 459 Winter 2017 15 / 3

Shadow of Mordor

That better idea is: continue executing until R7 is used somewhere.

This allows us to get some useful work done in the meantime.

Hardware keeps track of the fact that the register is not quite ready yet, but the work can get done in what is called the "miss shadow".

It's possible to have more than one load in flight at a time, two or more can be done in various CPU architectures, but it is of course hardware dependant.

ECE 459 Winter 2017 16/3

Branch Prediction

Branch prediction has come up already, but if we have a load followed by a compare used as a branch, we can then, well, guess.

If we are wrong, there is the need to cleanup. But the good news is that branch prediction is usually right most of the time, perhaps 95% or more.

ECE 459 Winter 2017 17/3

Dual Issue

Another nice thing that the hardware can do for us is "dual issue" instructions.

If we have two consecutive instructions that both take the same amount of time, use unrelated registers, and don't consume two of the same resource.

Example: ADD R1, 16 and CMP R2, 0.

In an embedded system, you may be interested in ensuring that this happens during a computationally intensive loop, such as encoding/decoding of media.

If programmed correctly, you can be sure you get dual issue on every cycle.

ECE 459 Winter 2017 18 / 3

Then a group of things that somewhat go together: register renaming, branch prediction, speculation, and Out-of-Order (O-O-O) Execution.

Register renaming works on a fairly simple principle: an assembly instruction says to read from register R4.

Behind the scenes inside the processor, it is mapped to a physical register (let's say RA for the purpose of the example).

ECE 459 Winter 2017 19 / 3

Register Renaming

Consider the following assembly instructions:

```
MOV R2, R7 + 32
ADD R1, R2
MOV R2, R9 + 64
ADD R3, R2
```

ECE 459 Winter 2017 20/31

Branch Prediction Synergy

This has a certain synergy with the branch prediction.

If we predict a branch, we can do speculative changes into one set of registers while we keep the "old" register values around too.

When we figure out whether the branch prediction is correct, we can then get rid of the ones we don't need.

So we get better recovery if there is a misprediction.

ECE 459 Winter 2017 21/31

It ain't about how hard you hit...

Most importantly, it allows us to get past a cache miss and keep going.

The goal here is to run until we can start the next cache miss, because the sooner that starts the sooner it's over, and the faster the program executes.

```
ld rax, rbx+16
add rbx, 16
cmp rax, 0
jeq null_chk
st rbx-16, rcx
ld rcx, rdx
ld rax, rax+8
```

ECE 459 Winter 2017 22 / 31

It's about how hard you can get hit & keep moving forward

There are seven operations we were trying to do here with two cache misses.

The cache misses complete in cycles 300 and 304 (maybe 302 if we have dual issue), so in total we complete 7 operations in about 305 cycles.

All the trickery and cleverness got us to that second miss which means we complete in 305.

If we did not manage that, it would take about 600 cycles to complete it all.

So we did double performance, even though in this example our overall performance was very, very low.

ECE 459 Winter 2017 23 / 3

Intel Itanium

For years Intel was trying to push its Itanium processors.

The goal of these was to find static (compile-time) parallelism: if a machine has infinite registers, can speculate infinitely, etc, the program gets sped up.

Run all possibilities in parallel and at the end figure out which is right.

Unfortunately it didn't work out very well because this requires the right kind of program and an super smart compiler.

Oh yes, and infinite registers requires infinite space as well as infinite money.

So instead the quest has turned to how to get better performance out of x86...

ECE 459 Winter 2017 24/31

x86 Instead

The x86 approach tries to maximize dynamic (run-time) parallelism.

This has been done incrementally, with more pipelining, re-order buffers, adding more functional units, and so on.

Cache miss rates and branch mispredicts continue to dominate performance, even though the rates are very low, because a miss costs so much.

ECE 459 Winter 2017 25 / 3

Moore's Law...


Something like 90-99% of the transistors on a modern x86 chip are spent in cache.

In spite of the extreme complexity of the decode logic that allows multiple parallel decodes of all the weird and wacky instructions of the x86...

Pushing cache to the biggest size it can be is so important because it prevents the performance hit of going to memory.

ECE 459 Winter 2017 26 / 31

The image below (from Sun World Wide Analyst Conference in 2003) is obviously a bit dated but this is very instructive as to the trend:

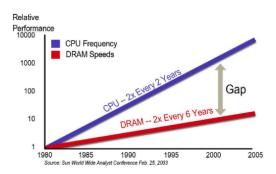

ECE 459 Winter 2017 27/31

DRAM is, however, not the only kind of memory.

There is SRAM (Static RAM) which is fast but expensive, the kind of stuff that goes on the CPU die, and it is six transistors per bit.

Compare against DRAM which is much cheaper, but slow: one transistor and one capacitor per bit.

Improvements in DRAM have not really improved latency but have improved bandwidth.

DDR means there are two transfers per cycle, but it still takes significant time to get any data out.

And DRAM needs occasional refreshes (capacitors...) so sometimes we have to wait for that.

ECE 459 Winter 2017 28 / 31

In the Operating Systems course you probably learned that disk is the slowest thing and the limiting factor.

That's true, as Obi-Wan Kenobi would say, from a certain point of view.

Now that we live in the world of Solid State Drives (SSDs), "disk" reads are about as fast as memory reads and memory reads are the rate-limiting step.

More is the new more, orange is the new black, and memory is the new disk.

ECE 459 Winter 2017 29/3

Future Ideas

To get memory access speed up there are things we can do, like relax coherency constraints, more synchronization through locks...

All of which we will come back to in some upcoming lectures.

If we want to get better performance, we need to figure out where time is going.

For that we will have the subject of profiling, which comes up later.

If we can track down where our cache misses are occurring, maybe, just maybe, we can do something about it.

ECE 459 Winter 2017 30 / 31

Modern Processors

If you'd much prefer to hear this material from someone else, the source for this lecture is:

http://www.infoq.com/presentations/click-crash-course-modern-hardware

ECE 459 Winter 2017 31/31