


Countertop coordination

SAMPLE A-101 | Concept coordination only | Not to scale | Not for construction

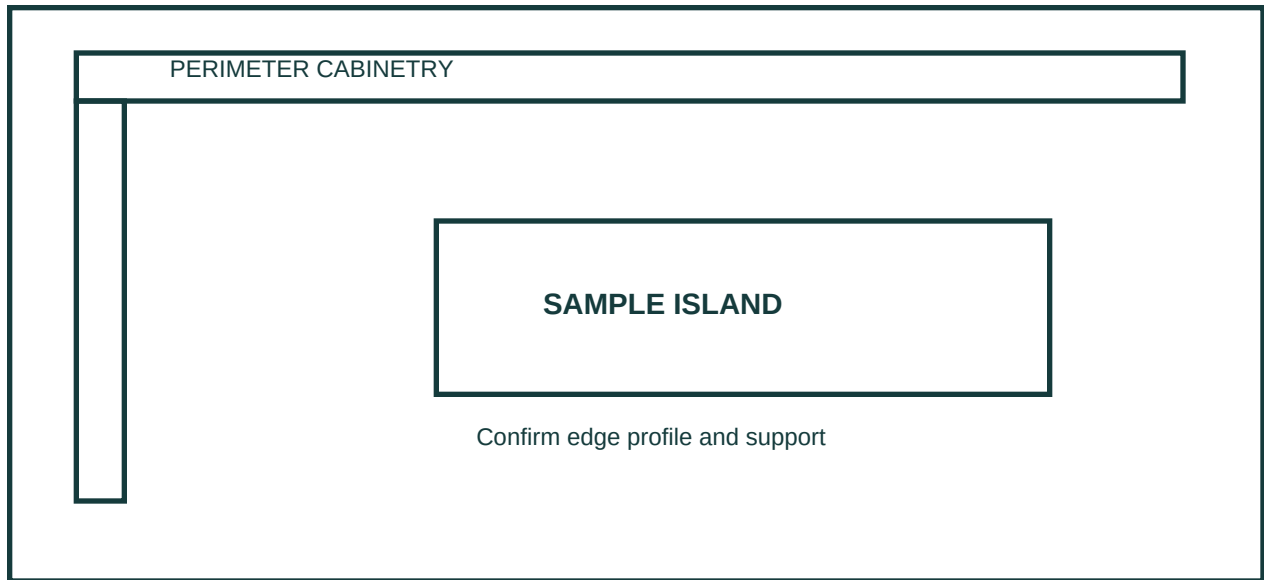

Concept diagram: dimensions, engineering, and cutouts intentionally omitted.

Hold point: field measure

Confirm cabinet installation, leveling, appliance models, sink cutout, faucet centers, and outlet locations before authorizing a template.

Review with the owner and design team

Select material, finish, edge profile, seam layout, and any waterfall ends. Review natural variation with the actual slab supplier. Record the decision and any scope change in Arc.

Coordination sequence

Cabinets ready > field measure > shop review > fabrication release > installation > plumbing trim > punch. This sheet is an exercise for linking documents, RFIs, selections, and schedules.