NEW · PAUSE ⏸
Temporary stop — open the door, continue later

CHANGED · ABORT
Final stop, behind a safety confirmation

REPORTS
Stopped runs in orange · report written to USB

1 Pausing and stopping a running process

Two separate buttons on the active step card (Cure Process screen). Neither acts immediately — each opens its own confirmation.

	⏸ PAUSE — TEMPORARY STOP	ABORT — FINAL STOP
Purpose	Open the door mid-run (inspect, add or remove a model) and **continue the same run** afterwards.	**End the run for good.** It cannot be resumed.
Dialog	"Pause the Process?" — Note: pausing interrupts the cure and **may affect the quality of the models**; hot-surfaces caution.	"Stop the Cure Process?" — appearance / surface finish and warping warnings; hot-surfaces caution; points to Pause for a temporary stop.
Hot-surface caution	Both dialogs and the paused screen carry the machine's CAUTION pictogram (hot surfaces inside): **wear heat-resistant gloves, avoid contact**; from 40 °C the live chamber temperature is shown.	
Buttons	Keep Running · **Pause & Open Door**	Keep Running · **Yes, Stop**
What the machine does	Heating, UV and gas **off immediately**; door **released**; every clock frozen. No time limit — the door-open safety abort is never triggered.	Heating, UV and gas off; the run is logged as **Stopped**; screen returns to Home.
Afterwards	Close the door → **Continue**: heater and UV (and N_2) come back, the step resumes exactly where it stopped. **Stop Process** on the paused screen = Abort.	The report of the stopped run can still be written to USB from Cure History.

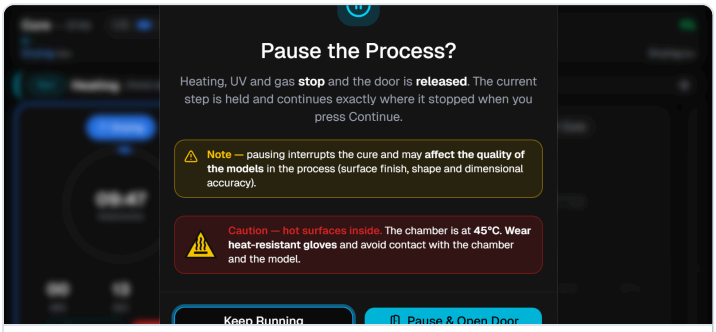


Fig. 1 Pause — confirmation with the model-quality note and the hot-surface caution

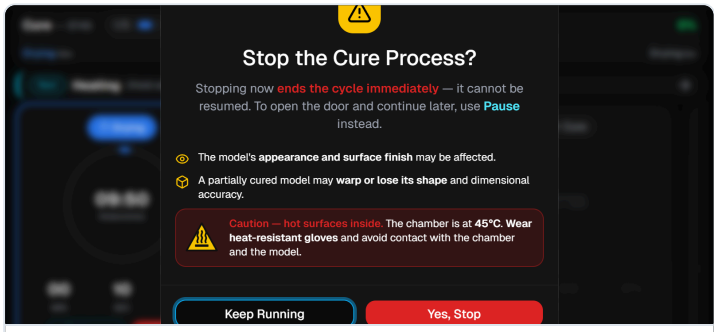


Fig. 2 Abort — final-stop confirmation

2 Stopped runs and process reports

- A stopped run is labeled **Stopped** and shown in **orange** — never green — in Cure History, on Home, and in the process report (status pill and Status card). **Green** is reserved for completed runs.
- The report button in Cure History writes the report **directly to the USB drive** on the machine and shows ✓ / X; with no stick, alert **9081** is raised instead of a silent download.

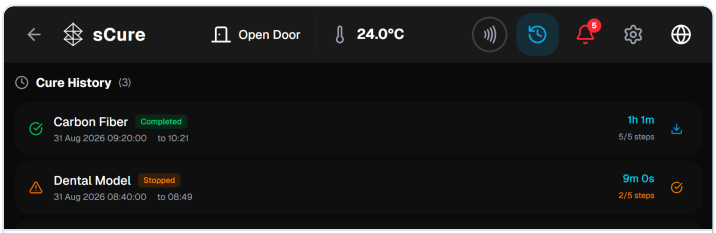


Fig. 3 Cure History — stopped run in orange, report written to USB (✓)

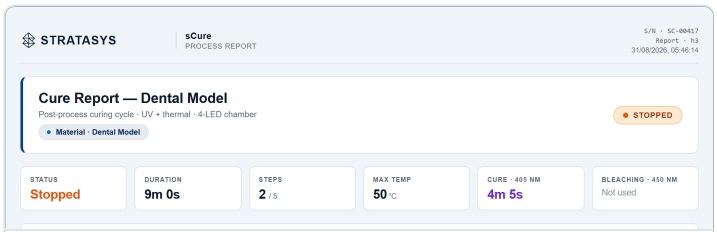



Fig. 4 Process report of a stopped run

3 Fixes


- **UV Start = "On ramp start"** now really lights the UV LEDs from the start of the heat-up ramp (the run engine used to ignore the setting).
- **Run telemetry** is sampled at t = 0 and every 5 s and is no longer reset by status polling — runs no longer end without data or report.
- **Report export** — new `POST /api/system/export-report`; USB missing / write error → alert **9081 / 9082**.
- **Machine** — inserting a USB drive no longer pops the file-manager dialog over the screen; the drive still mounts silently.

4 Operator guide — where the buttons are and how to use them


Cure Process screen → the card of the step that is running (blue frame, first card) → under the MIN / SEC / DONE counters.

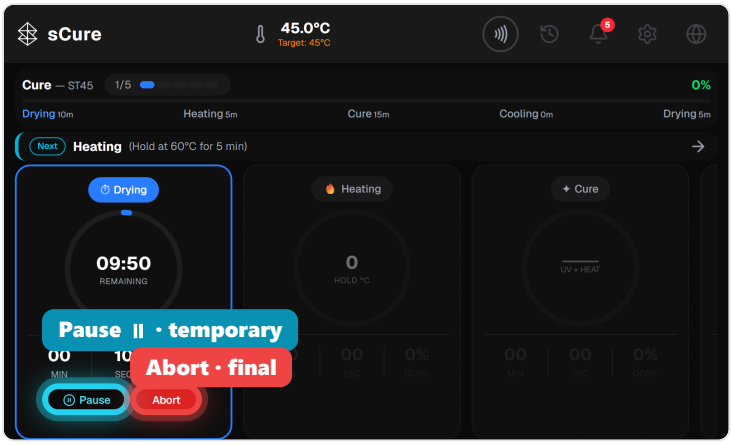


	ACTION	WHAT HAPPENS
1	**Locate the buttons**	Active step card → **Pause** (cyan) and **Abort** (red). Available in every step type.
2	**Pause → Pause & Open Door**	Outputs off, door released, timers frozen. Work with heat-resistant gloves; no time limit.
3	**Close the door → Continue**	Heater and UV come back; the step resumes exactly where it stopped. (Stop Process on that screen = Abort.)
4	**Abort → Yes, Stop**	Run ends; logged as **Stopped**; back to Home. Report still available from Cure History.
–	**Keep Running**	In either dialog: closes it, nothing changes.

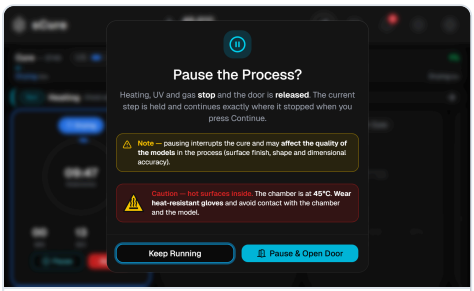

Step 2 Pause → confirmation

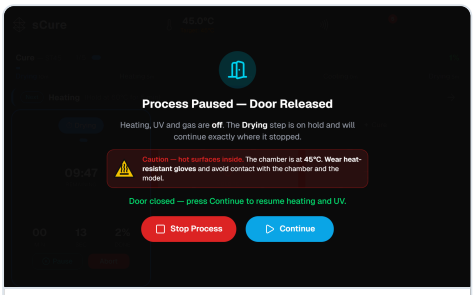

Step 3 Paused — close the door, then Continue

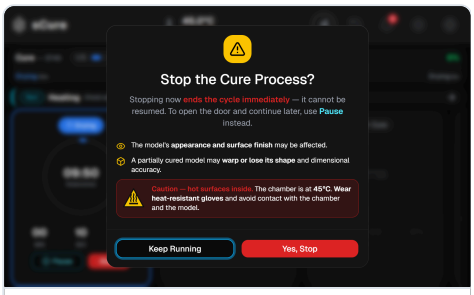

Step 4 Abort → final confirmation

Safety — opening the door without pausing: a 10-second countdown appears; if the door is not closed in time the run is aborted automatically (alert 6016). Always press Pause first.

Screens captured from the sCure simulator · 800×480