

Table of Contents

Section 1: Getting Started

1. Room Preparation

- a) Floor
- b) Studding
- c) Insulation
- d) Electrical Connections
- e) Ventilation
- f) Fire Sprinkler
- g) Plywood

2. Tools needed

- a) Power Tools
- b) Hand Tools
- c) Consumables
- d) Personal Skills

Section 2: The Build

- 1. Vapor Barrier
- 2. Ceiling Tongue and Groove
- 3. Wall Tongue and Groove
- 4. Ceiling medallions and Ceiling trim
- 5. Benches
- 6. Corner Trim and Base Trim
- 7. Heater Guard Rail
- 8. Door
- 9. Flooring

Section 1: Getting Started

1. Room Preparation

a. Floor

- i. The sauna floor needs to be a sealed concrete, tile, or other waterproof surface. Do not slope the floor, and Am-Finn recommends against putting a drain in the sauna.

b. Studding

- i. Stud the walls out to create an interior dimension 1.5" bigger than what is shown on the layout. This is to account for the plywood. The ceiling should be 96 $\frac{3}{4}$ " inches from concrete to stud.



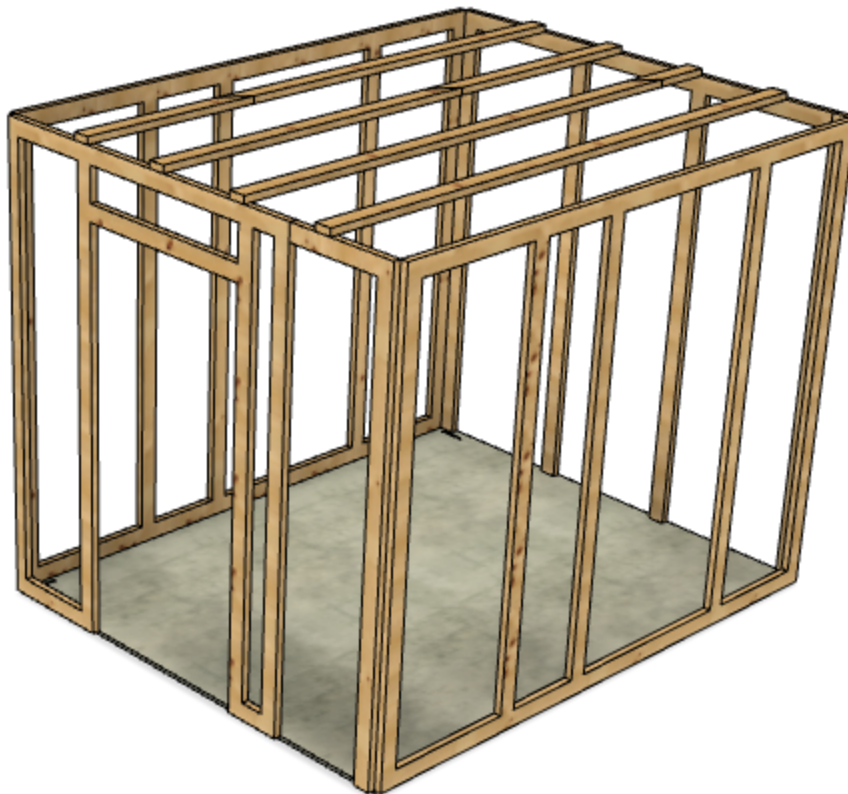


Diagram 1.A.1 – Floor and Studding

- ii. Stud the door rough opening to be 38" x 82" for our standard cedar door. For a full glass door, the rough opening should be 38.5" x 85". Check your Am-Finn layout for door RO location.

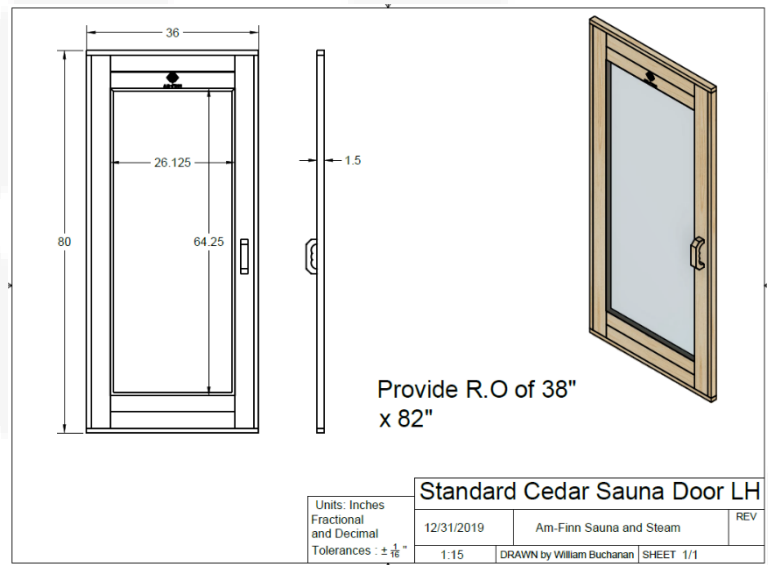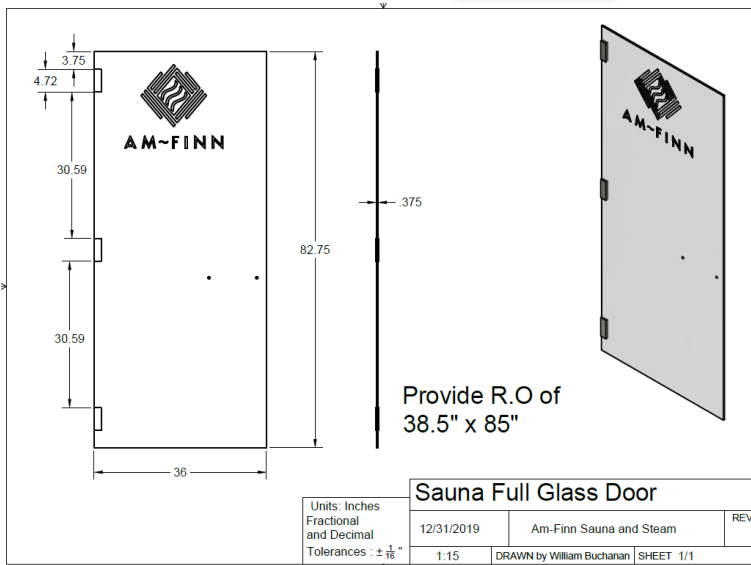

c. Insulation

- i. Insulation is necessary to retain the heat inside a sauna.
Provide R13 Insulation in the walls and R19 in the ceiling.

d. Electrical Connections

- i. Heater and Control Box

1. The Heater is the heart of the sauna. If the heater is not connected properly, the sauna will struggle to maintain a consistent high temperature.

2. Electric Heaters

- a. Please ensure you have the Ultra Sauna Electric Heater installation guide. This will go over the details of any electrical connections, conduit locations, and other important details.
- b. The Scandia Ultra Sauna Electric heater needs High Voltage power. All electrical connections and conduit need to be handled by a certified electrician. The heater is built to run off the power

you have supplied to the room, so you can choose 240V or 208V, 1 or 3 Phase.

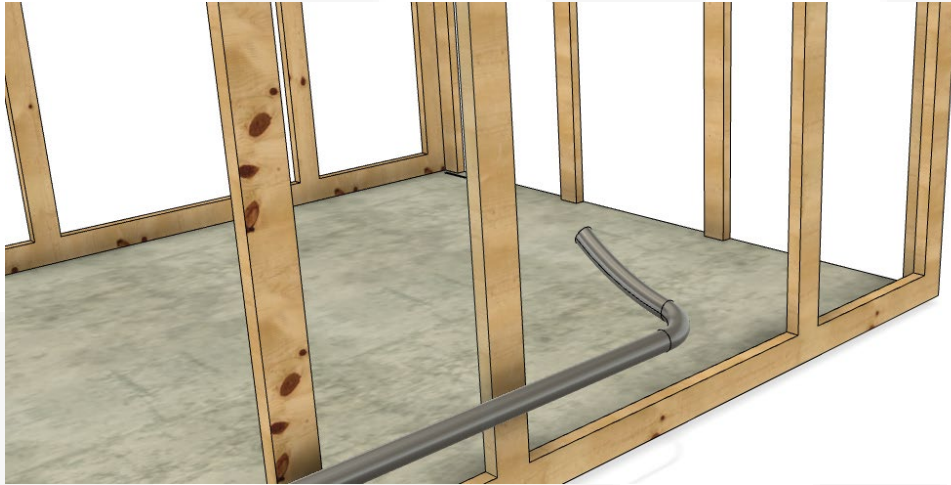


Diagram 1.A.2 – High voltage Whip and Conduit

- c. The Control box will determine when the heater is on or off. We offer a 60 Minute Timer or 24 Hour Programmable timer. Power needs to be run through the control box to the heater. Please follow the Heater installation guide for proper control box mounting and installation.

3. Gas Heaters

- a. Please ensure you have the Ultra Sauna Gas Heater Installation guide. This will go over the details of any electrical connections, HVAC requirements, natural gas or propane requirements, and other important details.
- b. Am-Finn recommends consulting an HVAC Specialist when using a Gas heater

ii. Sauna Light

1. The sauna light, whether standard or upgraded, will need a 120V Jbox either on a wall near the ceiling or on the ceiling itself. Consider putting a switch in this circuit to easily control the sauna light. Electrical connections should be terminated by a certified electrician.


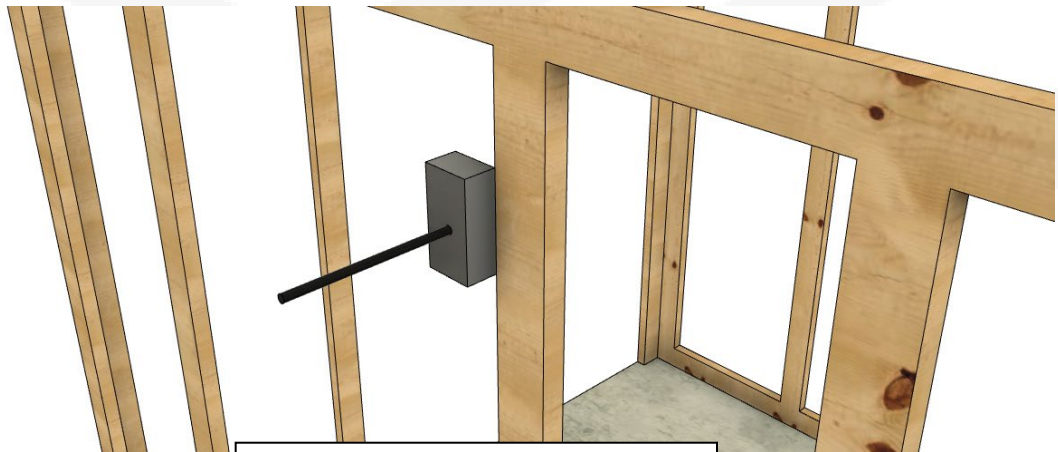


Diagram 1.A.3 – J- Box for Light

iii. Other Accessories

1. For any Salt Panels, place a 120V J box in the top left corner of the intended panel location. This will be used to connect the power for the salt panels.
2. For any other custom accessories like sauna speakers, E-Stop Button, High Temp Alarms, etc, please contact Am-Finn to coordinate electrical locations
3. Ventilation
 - iv. A 4" x 10" Fresh Air Intake Vent will be placed centered and underneath the heater. You will need to cut holes in any existing wall material for this vent.
 - v. The door will be undercut by 1" to provide exhaust ventilation.
4. Fire Sprinkler
 - b) A Fire Safety Sprinkler rated at 286 ° F is recommended and required in some states. Choose a location for this and consult a professional from your area before installing.
5. Plywood
 - i. Fasten ¾" Plywood to all walls and ceiling. Be sure to cut holes in the plywood for the electrical, fire sprinkler, and ventilation requirements

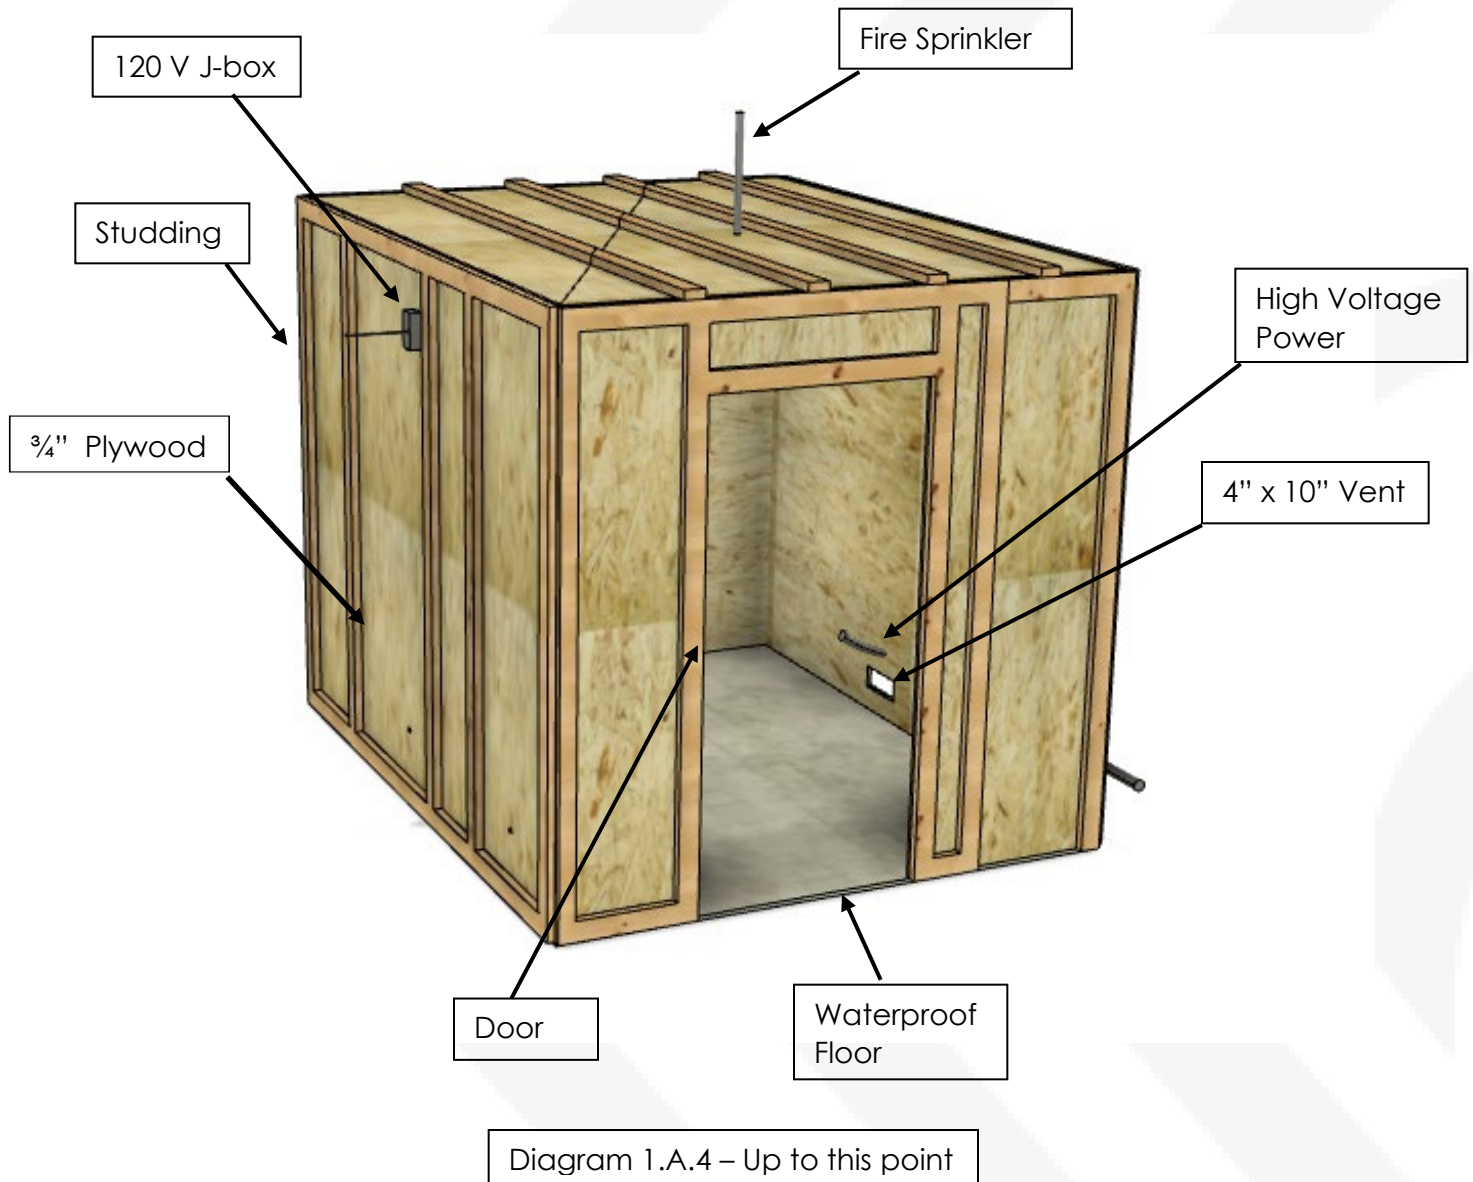

6. Tools needed

a. Power Tools Needed

- Brad nail Gun
- Random Orbital Sander and Sandpaper (120 Grit)
- Power Drill with bits (Phillips head, square drive)
- Jigsaw with Blades
- Skillsaw

b. Hand Tools

- i. Hammer with Brad Nail Set
- ii. Sanding Block
- iii. Utility Knife
- iv. Pencil or Marking Knife
- v. Broom or vacuum for cleaning up sawdust
- vi. Hand Square and Level

c. Consumables

- i. Fasteners
 - 1. Brad nails
 - 2. Screws
- ii. Wood Putty or Filler (Match the color of your wood species or stain)
- iii. Door Shims
- iv. Rags

d. Personal Skills

- i. While we make the sauna as easy to craft as possible, you will need some skills to properly install this sauna. You will need to know how to correctly operate all the above listed tools, how to sand edges flush, how to set benches and trim flush and level, and how to fill fastener holes with putty and sand them flat.

7. Receiving and Inventory of the freight

- a. Receiving of the freight is the GC, owner, or project coordinators responsibility. A standard sauna might come with two crates, a 48" x 94" x 48" Crate with all the wood inside, and a shorter 24" x 48" x 96" Door crate. Actual Crate sizes will vary depending on project.

-
- Electrical connection should be 12" from the floor, centered and behind the heater
In-Take VENT required under the heater - 5" from the floor
- 120V Pigtails for light, 12" Below Ceiling
- 9' 2"
- 10' 10"
- 3' 6 1/2"
- 3' 0"
- 9' 2"
- 10' 10"
- B1
- B2
- B3
- B4
- Removable for ADA
- SAUNA ROOM BENCHES
- B1 - W20" L90" H18"
- B2 - W20" L87" H18"
- B3 - W20" L43" H18" (Removable)
- B4 - W20" L66" H18"

Diagram 1.A.5 – Layouts (Left) and Cutsheet

Section 2: The Build

1. Vapor barrier

- a. The Vapor Barrier will come in 4' x 10' Sheets. Apply sheets horizontally starting from the left of the door. Use staples to fasten the sheets to the plywood. Be sure to go around the whole perimeter of the sheet, as well as put several rows down the middle so the sheet is tight against the wall. Do the walls first then move to the ceiling. Holes for electrical, ventilation, and fire sprinkler requirements will need to cut in the vapor barrier using the utility knife.


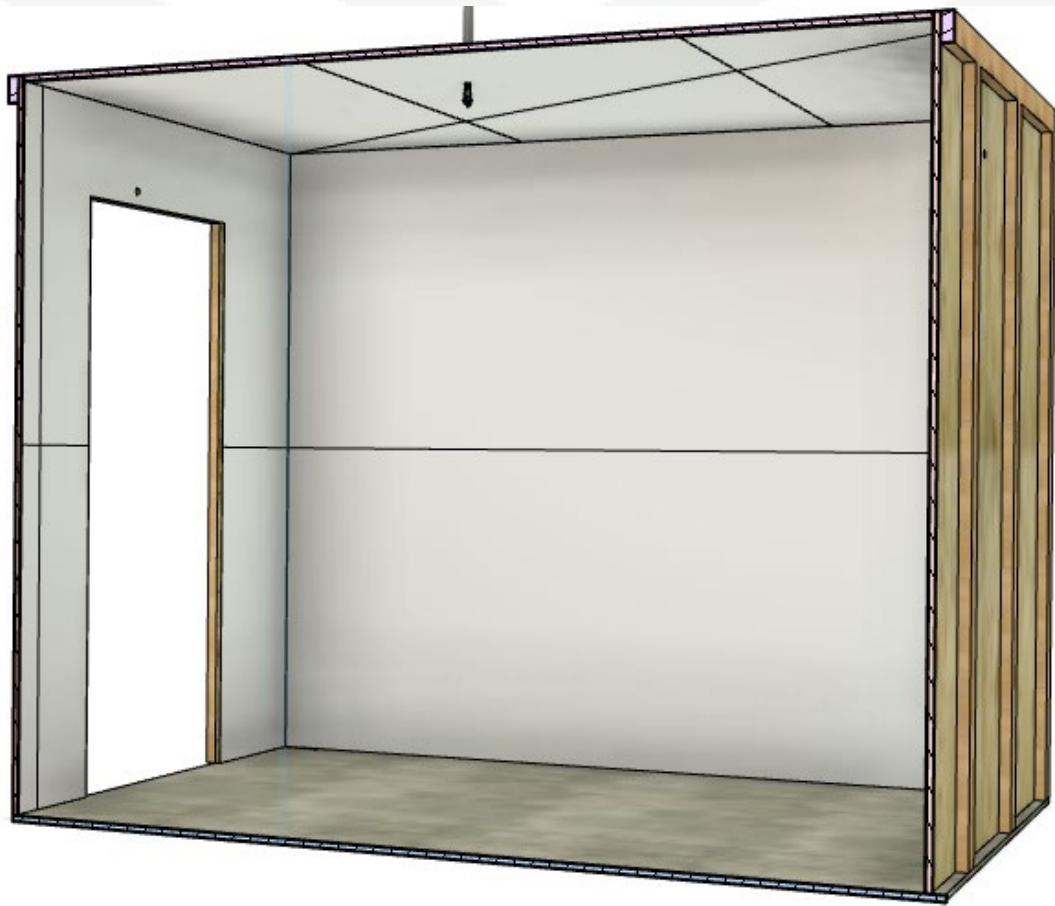


Diagram 2.A.1 – Vapor barrier applied

2. Ceiling Tongue and Groove Paneling

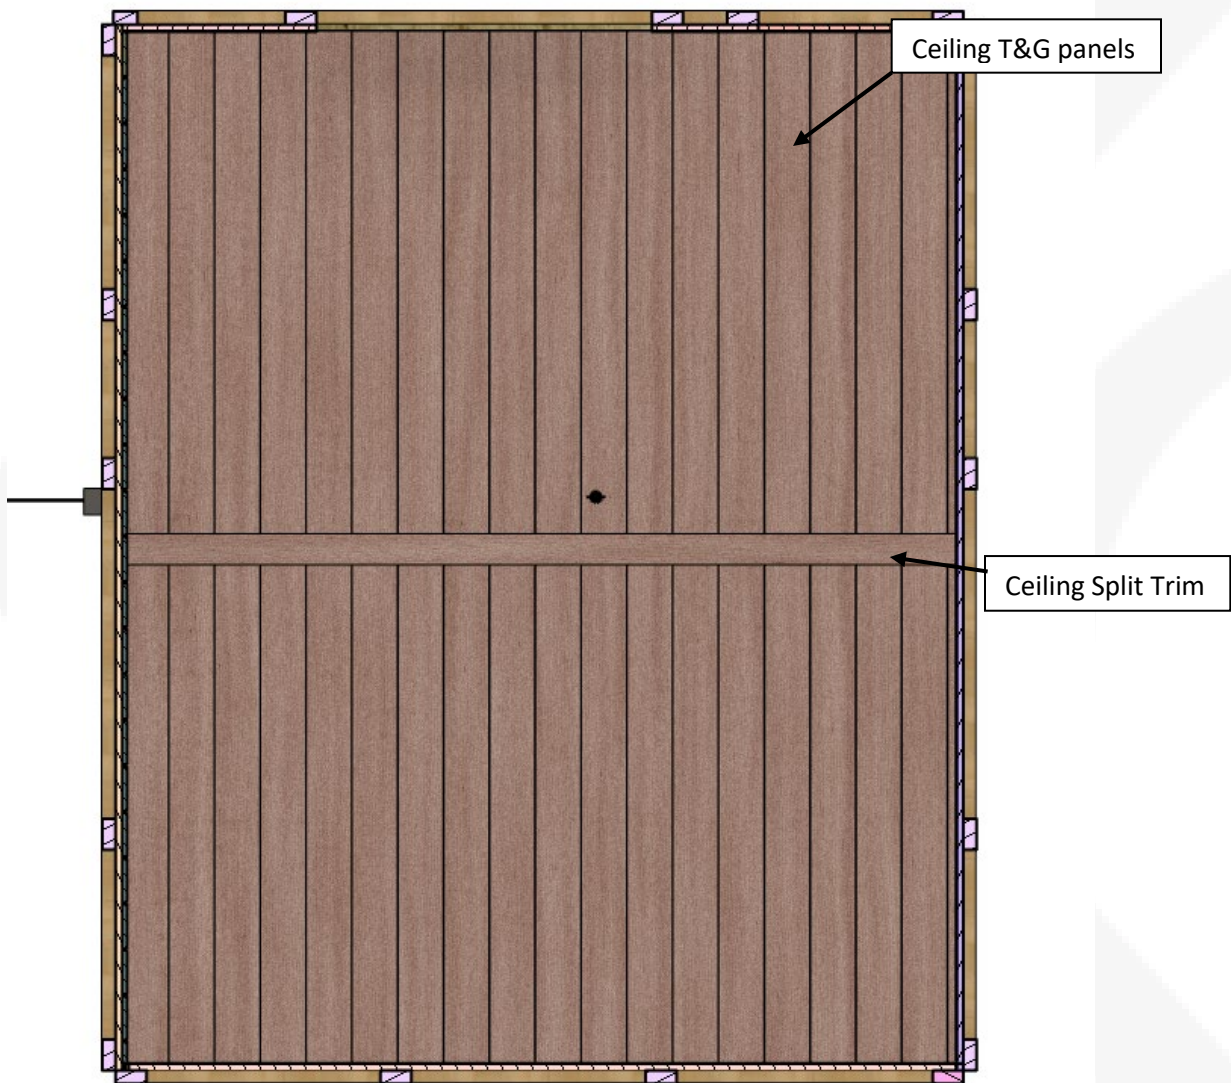

-Brad Nailing the T&G.

-Start at the wall, place a T&G Board leaving an 1/8" gap to the wall. Slide the "female" side of the panel against the wall, and brad nail in place at the angle shown. Ensure the brad nail is fully set as shown in the section view. Place brad nails along the length every 12-18 inches. Slide the next panel over

top of the last panel, interlocking the tongue and groove, and concealing the brad nail. Repeat the same fastening procedure all the way down. Ceilings are often split to accommodate for the long length of the material. The split will be along the long axis of the room. Try and keep the boards evenly spaced across the split, and then cover the gap using the Split Ceiling Trim. A custom cut width panel will need to be ripped for the last panel.



Diagram 2.A.3 – Tongue and Groove Detail

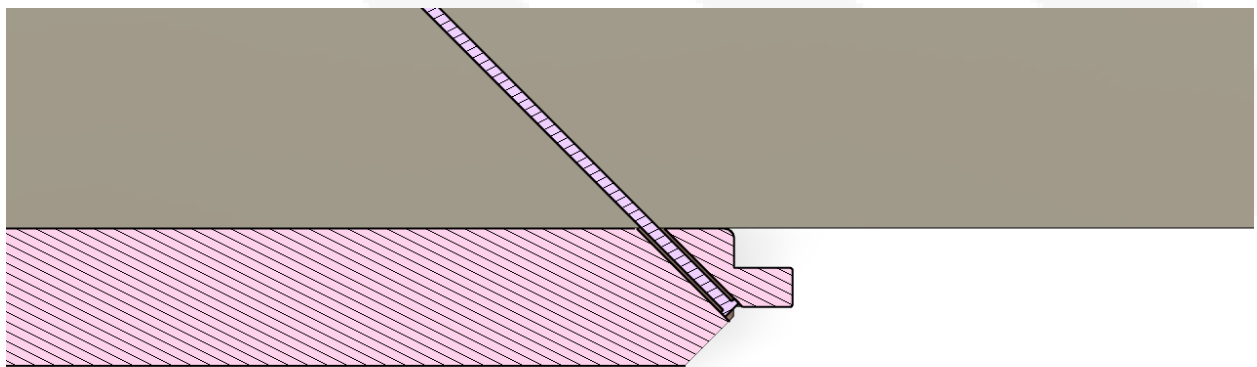


Diagram 2.A.4 – Tongue and Groove Section

3. Wall Tongue and Groove Paneling



Diagram 2.A.2 – Wall T&G Paneling

-The walls will be split into an Upper 60" section and a Lower 35" section, with the seam being covered by the Split Wall Trim. The Lower Paneling is applied first, the upper paneling second, and the trim last. Follow the same process as the ceiling T&G.

8. Ceiling Medallions and Ceiling Trim

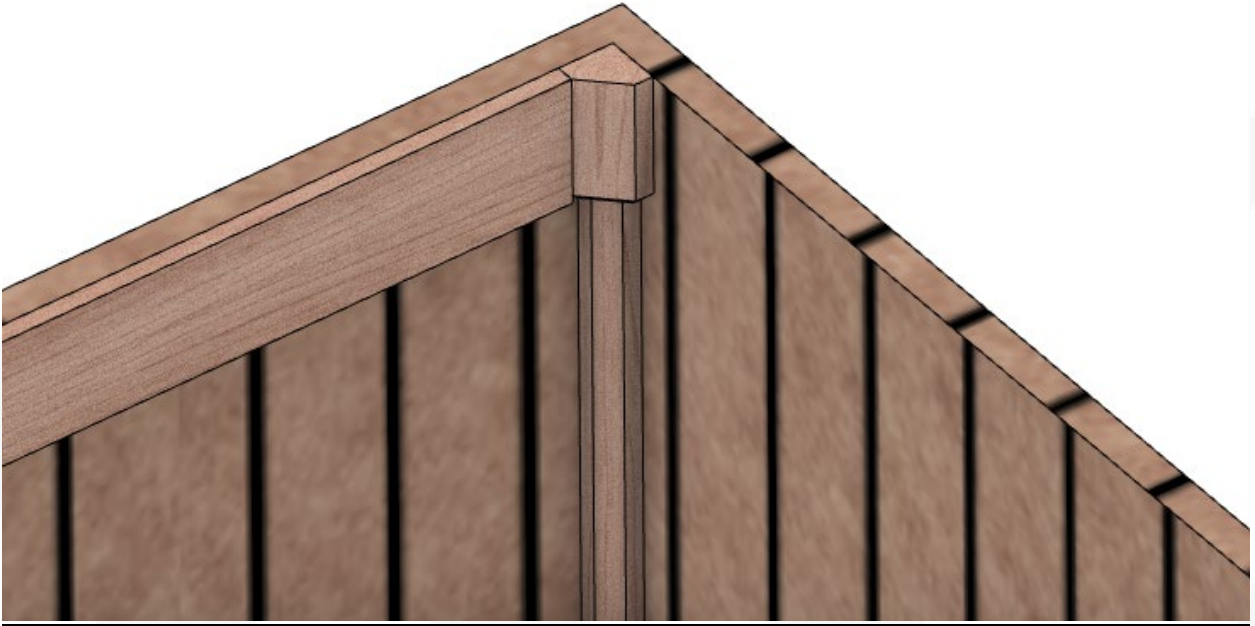


Diagram 2.A.3 – Corner Medallion,
Ceiling Trim, Corner Trim


- 1. Brad Nail the corner medallions into place.
- 2. Brad Nail the ceiling trim into place, ensuring it reaches from corner medallion to corner medallion.

9. Benches


- Consult the layout supplied with your sauna to see the intended bench locations.
- Benches are sent long so that they can be cut in the field to fit. To trim a bench length, remove the end cross brace, cut the remaining boards to desired length, then reattach the end cross brace to the new end.

- Bench tops are removable to allow for cleaning underneath.

-1. Start with flipping the bench over, and attaching the legs, skirting, and wall mounts as necessary. The legs will attach where the cross-braces are. If the bench bumps up to a wall, use the wall brackets instead of the legs.

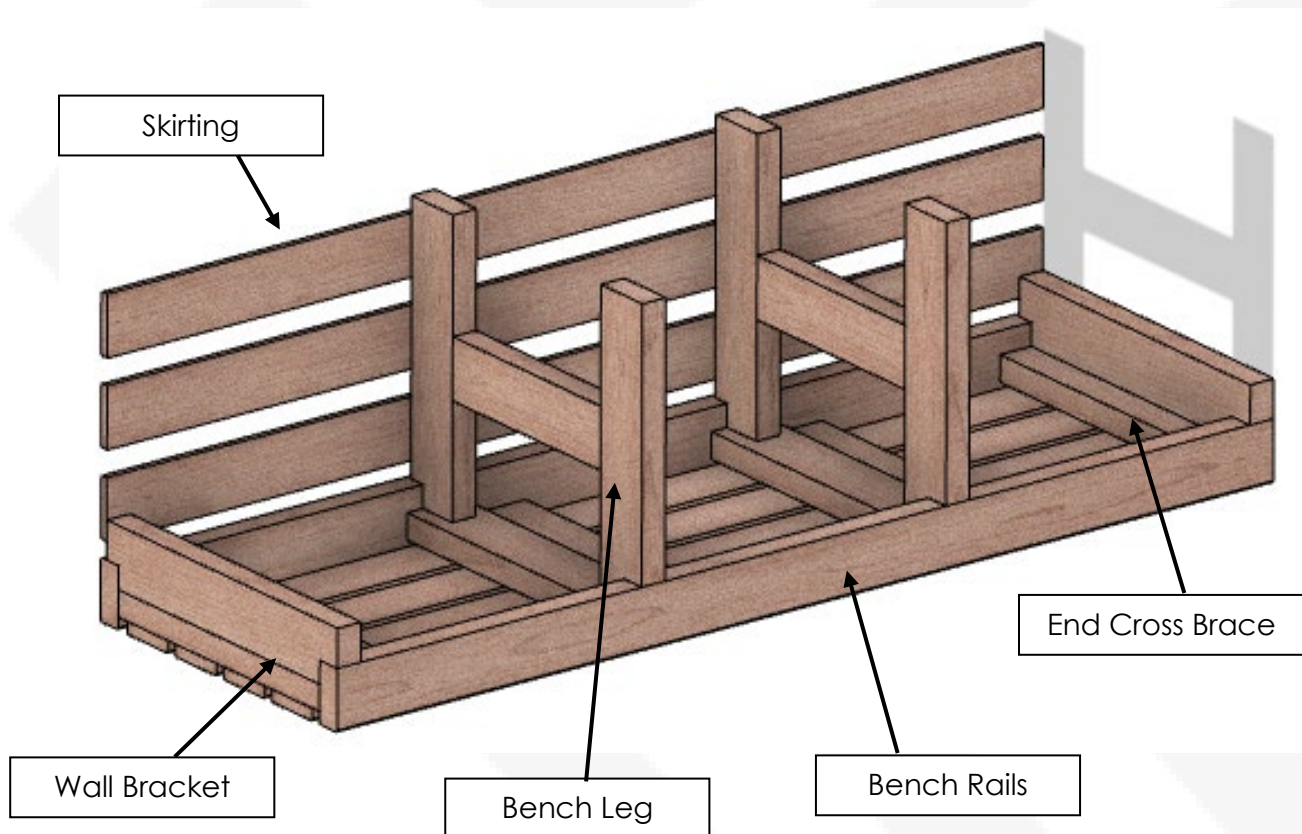


-2. Flip the assembled bench back over and slide into position. Set the bench level, then screw the wall brackets into the wall. As well screws can be ran through the bench rails into the wall for extra stability.

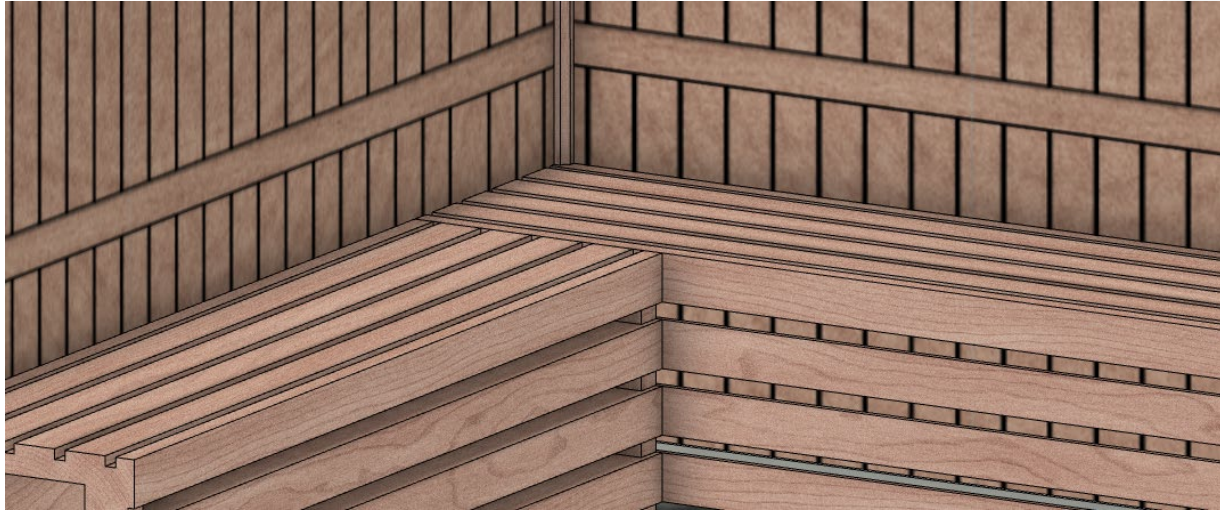

10. Corner and Base Trim

-1. Brad Nail the corner trim into place. The corner trim will run the full length of the wall. Corner Trim does not go behind the benches.

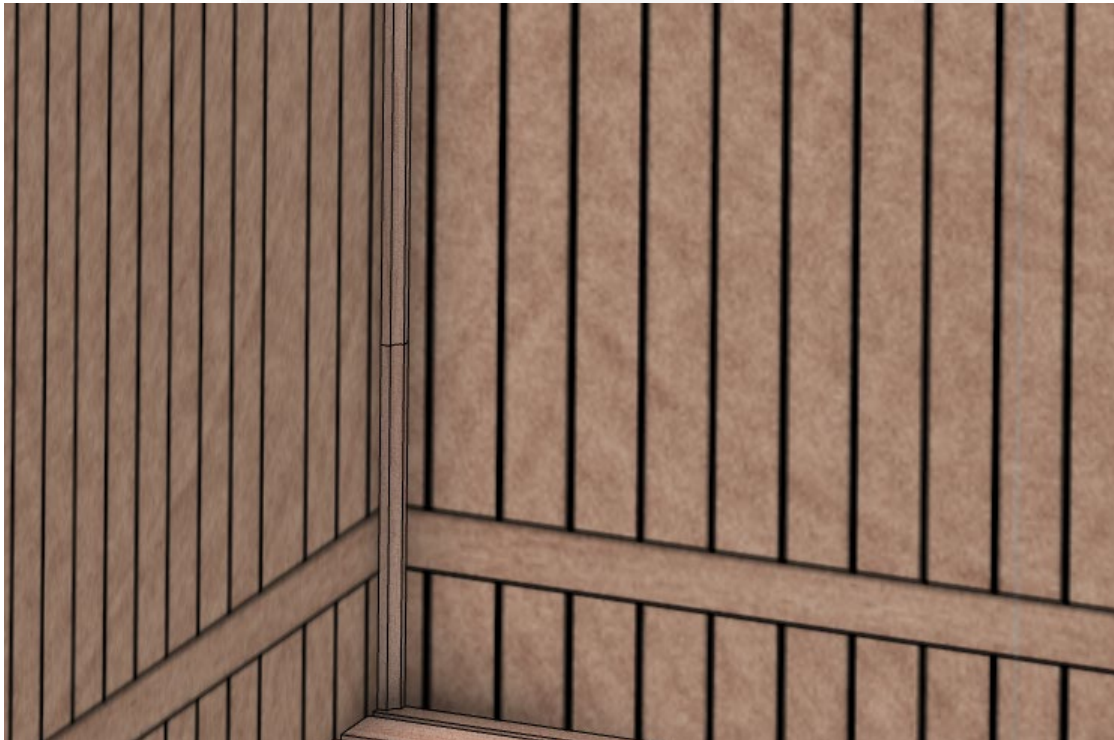


-Brad nail the base trim into place. The base trim will not go behind benches.



11. Heater Guard Rail

The heater should be mounted on the wall before the heater guard rail is built. This will ensure the electrical connections, intake vent, and guard rail are all centered on the heater. Follow the **Scandia Heater Installation Guide** for heater mounting, electrical connections and conduit location, and heater control box mounting.

- 1. Follow the spacing required based on the **Scandia Heater Installation Guide** for your heater guard rail, as different size heaters
- 2. Screw the horizontal boards to the vertical post, then attach the guard rail to the wall.

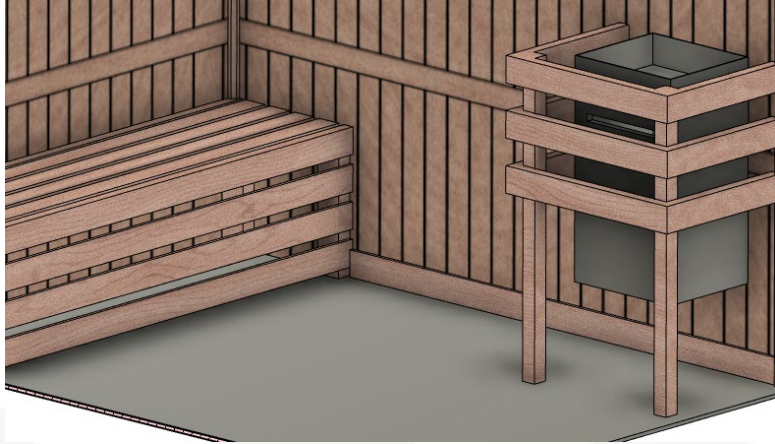


12. Door

-The door must swing outwards in a sauna.

-The door must have a 1 inch opening at the bottom for ventilation

1. Screw the door jamb to the door rough opening.

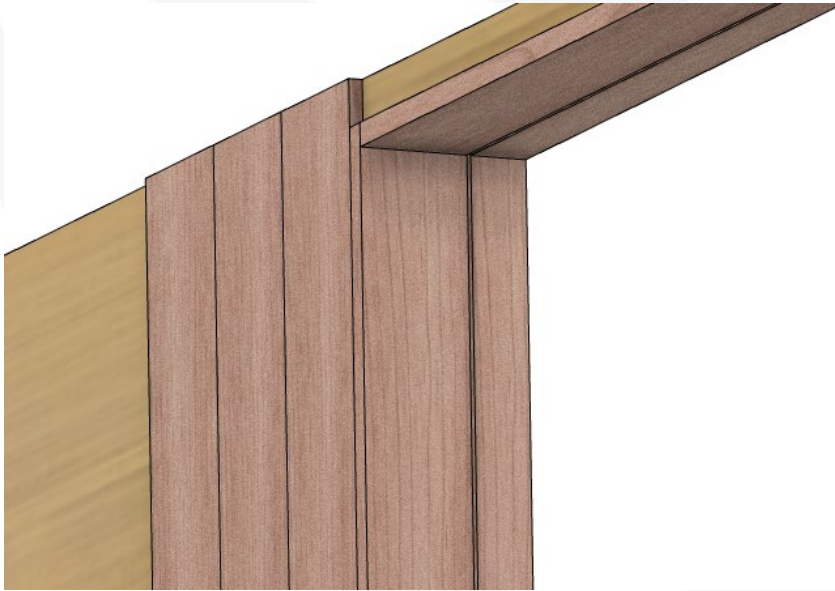

2. Mount the door inside of the door jamb, using screws to hang the hinges.
3. Screw the door stop into the door jamb in a position to allow the door to fully close
4. Brad nail the door casings onto the perimeter to hide the door jamb and door stop.




13. Flooring

- TruTile and Cedar Duckboard are the two available flooring options
- Flooring does not go underneath the benches
- NEVER put flooring underneath the heater or inside the heater guard rail.


9a. Tru Tile

- Tru Tile comes in 1'x1' interlocking squares.
- Start in the doorway, using the supplied transition to lead up to the Tru Tile.
- Trim the tiles to size using a utility knife
- Connect the interlocking tiles, using a mallet to pound them together to ensure a tight connection.

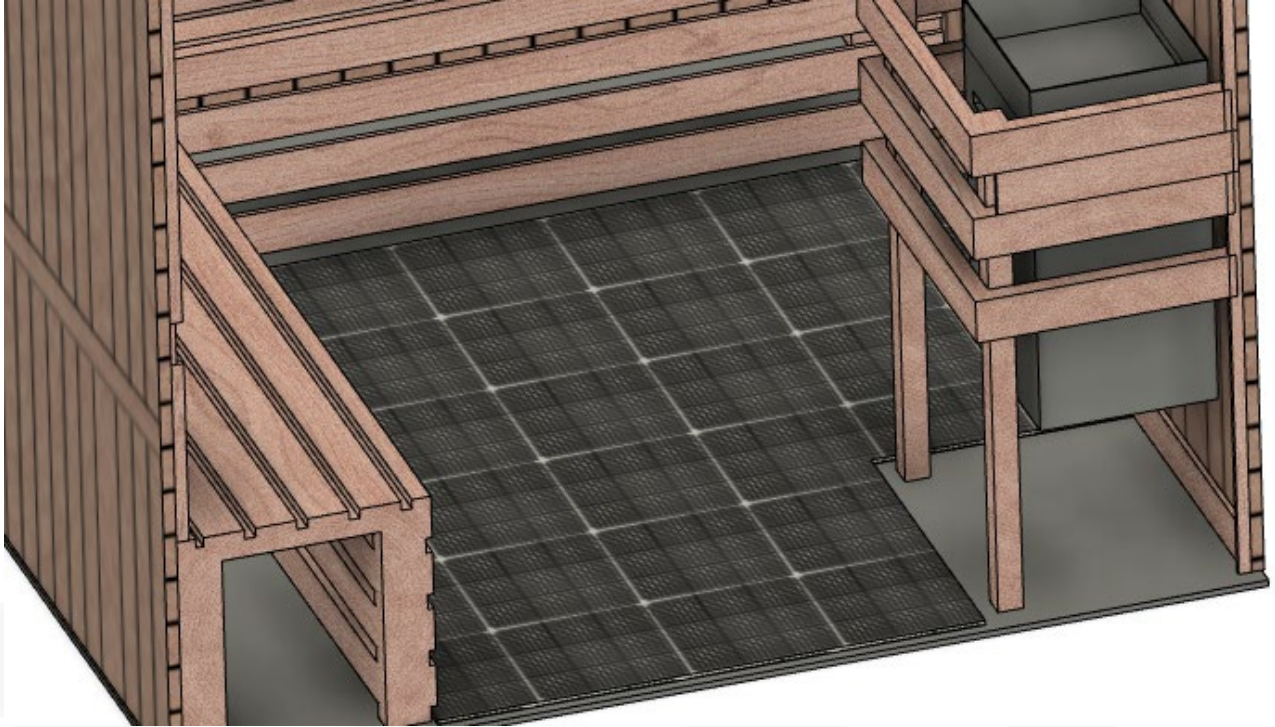

9b. Cedar Duckboard

- Duckboard comes in 2' x 2' tiles
- Start in the doorway to ensure a neat transition, using the supplied threshold or transition to correct for elevation.
- Rip the duckboard to the necessary size using a skillsaw
- Place the duckboards on the floor, rotating each one 90 degrees to create a checkerboard pattern using shims as necessary to ensure it sits flat.

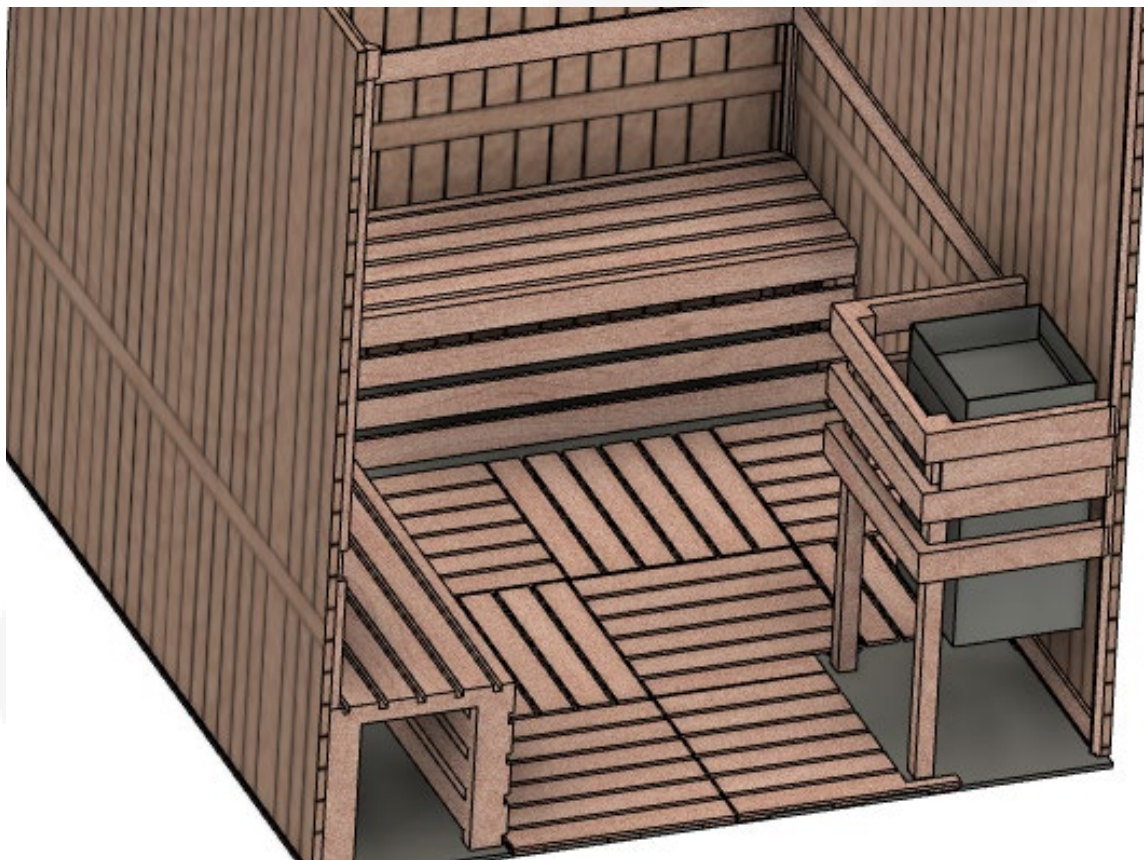

14. Enjoy your sauna!