# **Transmission Characteristics of Optical Fibers**

### 1. Introduction

- One of the important properties of optical fiber is signal attenuation. It is also known as
  fiber loss or signal loss. The signal attenuation of fiber determines the maximum distance
  between transmitter and receiver. The attenuation also determines the number of
  repeaters required, maintaining repeater is a costly affair.
- Another important property of optical fiber is distortion mechanism. As the signal pulse
  travels along the fiber length it becomes broader. After sufficient length the broad pulses
  starts overlapping with adjacent pulses. This creates error in the receiver. Hence the
  distortion limits the information carrying capacity of fiber.

### 2. Attenuation

- Attenuation is a measure of decay of signal strength or loss of light power that occurs as light pulses propagate through the length of the fiber.
- In optical fibers the attenuation is mainly caused by two physical factors absorption and scattering losses. Absorption is because of fiber material and scattering due to structural imperfection within the fiber. Nearly 90 % of total attenuation is caused by Rayleigh scattering only.
- Micro bending of optical fiber also contributes to the attenuation of signal. The rate at which light is absorbed is dependent on the wavelength of the light and the characteristics of particular glass. Glass is a silicon compound; by adding different additional chemicals to the basic silicon dioxide the optical properties of the glass can be changed.
- The Rayleigh scattering is wavelength dependent and reduces rapidly as the wavelength of the incident radiation increases.
- The attenuation of fiber is governed by the materials from which it is fabricated, the manufacturing process and the refractive index profile chosen. Attenuation loss is measured in dB/km.

#### 2.1. Attenuation Units



As attenuation leads to a loss of power along the fiber, the output power is significantly less than the couple's power. Let the couples optical power is p(0) i.e. at origin (z = 0). Then the power at distance z is given by,

$$P(z) = P(0)e^{-x_{y}z}$$

Where, αp is fiber attenuation constant (per km).


$$\alpha_{p} = \frac{1}{z} \ln \left[ \frac{P(0)}{P(z)} \right]$$

$$\alpha_{dB/km} = 10 \cdot \frac{1}{z} \log \left[ \frac{P(0)}{P(z)} \right]$$

$$\alpha_{dB/km} = 4.343 \quad \alpha_{p} \text{ per km}$$

This parameter is known as fiber loss or fiber attenuation.

Attenuation is also a function of wavelength. Optical fiber wavelength as a function of Wavelength is shown in Fig. 2.1.1.

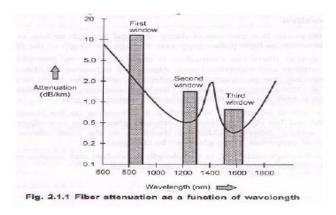

**Example 2.1.1:** A low loss fiber has average loss of 3 dB/km at 900 nm. Compute the length over which – a) Power decreases by 50 % b) Power decreases by 75 %.

Solution:  $\alpha = 3 \text{ dB/km}$ 

a) Power decreases by 50 %.

$$\frac{p(0)}{p(z)} = 50 \% = 0.5$$

 $\alpha$  is given by,

$$\alpha = 10 \cdot \frac{1}{z} \log \left[ \frac{P(0)}{P(z)} \right]$$
$$3 = 10 \cdot \frac{1}{z} \log \left[ 0.5 \right]$$

$$z = 1 \text{ km}$$

b) Power decreases by 75 %.

$$\frac{P(0)}{P(z)} = 25 \% = 0.25$$

$$3 = 10 \times \frac{1}{2} \log[0.25]$$

$$z = 2 \text{ km}$$

Since power decrease by 75 %.

**Example 2.1.2:** When mean optical power launched into an 8 km length of fiber is 12  $\mu$ W, the mean optical power at the fiber output is 3  $\mu$ W. Determine –

- 1) Overall signal attenuation in dB.
- 2) The overall signal attenuation for a 10 km optical link using the same fiber with splices at 1 km intervals, each giving an attenuation of 1 dB.

### **Solution**:

**Given**: z = 8 km

$$1P(0) = 120 \mu W$$

$$P(z) = 3 \mu W$$

1) Overall attenuation is given by,

$$\alpha = 10 \cdot \log \left[ \frac{P(0)}{P(z)} \right]$$

$$\alpha = 10 \cdot \log \left[ \frac{120}{3} \right]$$

$$\alpha = 16.02 \, dB$$

2) Overall attenuation for 10 km,

Attenuation per km

$$\propto_{dB} = \frac{16.02}{2} = \frac{16.02}{8} = 2.00 \text{ dB/km}$$

Attenuation in 10 km link =  $2.00 \times 10 = 20 \text{ dB}$ 

In 10 km link there will be 9 splices at 1 km interval. Each splice introducing attenuation of 1 dB.

Total attenuation = 20 dB + 9 dB = 29 dB

**Example 2.1.4:** A continuous 12 km long optical fiber link has a loss of 1.5 dB/km.

- i) What is the minimum optical power level that must be launched into the fiber to maintain as optical power level of  $0.3 \mu W$  at the receiving end?
- ii) What is the required input power if the fiber has a loss of 2.5 dB/km?

[July/Aug-2007, 6 Marks]

### **Solution:**

**Given data:** z = 12 km

 $\alpha = 1.5 \text{ dB/km}$ 

$$P(0) = 0.3 \mu W$$

i) Attenuation in optical fiber is given by,

$$\alpha = 10 \times \frac{1}{z} \log \left( \frac{P(0)}{P(z)} \right)$$

$$1.5 = 10 \times \frac{1}{12} \log \left( \frac{0.3 \, \mu W}{P(z)} \right)$$

$$\log \left( \frac{0.3 \, \mu W}{P(z)} \right) = \frac{1.5}{0.833}$$

$$= 1.80$$

$$\left( \frac{0.3 \, \mu W}{P(z)} \right) = 10^{1.8}$$

$$P(z) = \left( \frac{0.3 \, \mu W}{10^{1.8}} \right) = \frac{0.3}{63.0}$$

 $P(z) = 4.76 \times 10^{-9}W$ 

Optical power output = 
$$4.76 \times 10^{-9} \text{ W}$$

ii) Input power = ? P(0)

When  $\alpha = 2.5 \text{ dB/km}$ 

$$\alpha = 10 \times \frac{1}{z} \log \left( \frac{P(0)}{P(z)} \right)$$

$$2.5 = 10 \times \frac{1}{z} \log \left( \frac{P(0)}{4.76 \times 10^{-9}} \right)$$

$$\log \left( \frac{P(0)}{4.76 \times 10^{-9}} \right) = \frac{2.5}{0.833} = 3$$

$$\frac{P(0)}{4.76 \times 10^{-9}} = 10^3 = 1000$$

$$P(0) = 4.76 \mu W$$
Input power= 4.76  $\mu W$ 

- Absorption loss is related to the material composition and fabrication process of fiber.
   Absorption loss results in dissipation of some optical power as hear in the fiber cable.
   Although glass fibers are extremely pure, some impurities still remain as residue after purification. The amount of absorption by these impurities depends on their concentration and light wavelength.
- Absorption is caused by three different mechanisms.
  - 1) Absorption by atomic defects in glass composition.
  - 2) Extrinsic absorption by impurity atoms in glass mats.
  - 3) Intrinsic absorption by basic constituent atom of fiber.


# 3. Absorption by Atomic Defects

Atomic defects are imperfections in the atomic structure of the fiber materials such as
missing molecules, high density clusters of atom groups. These absorption losses are
negligible compared with intrinsic and extrinsic losses.

• The absorption effect is most significant when fiber is exposed to ionizing radiation in nuclear reactor, medical therapies, space missions etc. The radiation dames the internal structure of fiber. The damages are proportional to the intensity of ionizing particles. This results in increasing attenuation due to atomic defects and absorbing optical energy. The total dose a material receives is expressed in rad (Si), this is the unit for measuring radiation absorbed in bulk silicon.

$$1 \text{ rad } (Si) = 0.01 \text{ J.kg}$$

The higher the radiation intensity more the attenuation as shown in Fig 2.2.1.

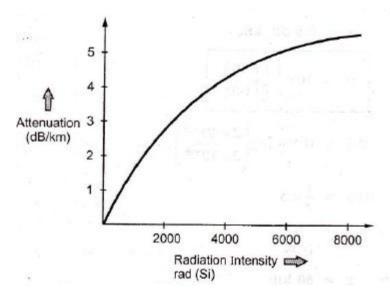

# **Extrinsic Absorption**

- Extrinsic absorption occurs due to electronic transitions between the energy level and because of charge transitions from one ion to another. A major source of attenuation is from transition of metal impurity ions such as iron, chromium, cobalt and copper. These losses can be upto 1 to 10 dB/km. The effect of metallic impurities can be reduced by glass refining techniques.
- Another major extrinsic loss is caused by absorption due to OH (Hydroxil) ions impurities dissolved in glass. Vibrations occur at wavelengths between 2.7 and 4.2 μm. The absorption peaks occurs at 1400, 950 and 750 nm. These are first, second and third overtones respectively.
- Fig. 2.2.2 shows absorption spectrum for OH group in silica. Between these absorption peaks there are regions of low attenuation.




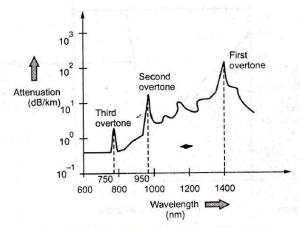


Fig. 2.2.2 Absorption spectra for OH group

# **Intrinsic Absorption**

- Intrinsic absorption occurs when material is in absolutely pure state, no density variation and in homogeneities. Thus intrinsic absorption sets the fundamental lower limit on absorption for any particular material.
- Intrinsic absorption results from electronic absorption bands in UV region and from atomic vibration bands in the near infrared region.
- The electronic absorption bands are associated with the band gaps of amorphous glass materials. Absorption occurs when a photon interacts with an electron in the valene band and excites it to a higher energy level. UV absorption decays exponentially with increasing wavelength (λ).
- In the IR (infrared) region above 1.2 μm the optical waveguide loss is determined by presence of the OH ions and inherent IR absorption of the constituent materials. The inherent IR absorption is due to interaction between the vibrating band and the electromagnetic field of optical signal this results in transfer of energy from field to the band, thereby giving rise to absorption, this absorption is strong because of many bonds present in the fiber.
- Attenuation spectra for the intrinsic loss mechanism in pure Ge is shown in Fig. 2.2.3.



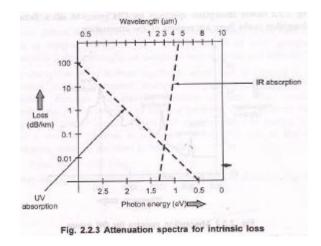

• The ultraviolet loss at any wavelength is expressed as,

$$\alpha_{WV} = \frac{184.2}{46.6 \text{ M} + 60} \times 10^{-2} \times 0^{\left(\frac{4.65}{\lambda}\right)}$$

where, x is mole fraction of GeO<sub>2</sub>.

 $\lambda$  is operating wavelength.

αuv is in dB/km.

The loss in infrared (IR) region (above 1.2 μm) is given by expression:

$$\alpha_{18} = 7.81 \times 10^{11} \times e^{\left(\frac{-48.48}{\lambda}\right)}$$


The expression is derived for GeO2-SiO2 glass fiber.

# 4. Rayleigh Scattering Losses

- Scattering losses exists in optical fibers because of microscopic variations in the material
  density and composition. As glass is composed by randomly connected network of
  molecules and several oxides (e.g. SiO2, GeO2 and P2O5), these are the major cause of
  compositional structure fluctuation. These two effects results to variation in refractive
  index and Rayleigh type scattering of light.
- Rayleigh scattering of light is due to small localized changes in the refractive index of the core and cladding material. There are two causes during the manufacturing of fiber.
- The first is due to slight fluctuation in mixing of ingredients. The random changes because of this are impossible to eliminate completely.
- The other cause is slight change in density as the silica cools and solidifies. When light ray strikes such zones it gets scattered in all directions. The amount of scatter depends on the size of the discontinuity compared with the wavelength of the light so the shortest



wavelength (highest frequency) suffers most scattering. Fig. 2.3.1 shows graphically the relationship between wavelength and Rayleigh scattering loss.

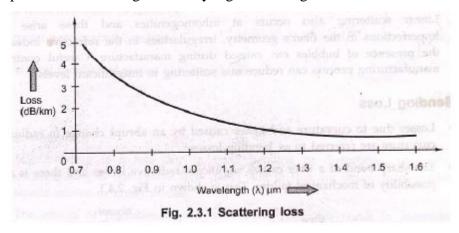

Scattering loss for single component glass is given by,

$$\alpha_{\text{scat}} = \frac{8\pi^2}{3\lambda^4} (n^2 - 1)^2 k_B T_f \beta_T \text{ nepers}$$

where, n = Refractive index

kB = Boltzmann's constant

 $\beta$ T = Isothermal compressibility of material

Tf = Temperature at which density fluctuations are frozen into the glass as it solidifies (Fictive temperature)

Another form of equation is

$$\alpha_{\text{scat}} = \frac{8\pi^8}{3\lambda^4} \text{ n}^8 \text{ p}^2 \text{ k}_B \text{ T}_f \beta_T \text{ nepers}$$

where, P = Photoelastic coefficient

Scattering loss for multi component glasses is given by,

$$\alpha_{\text{soat}} = \frac{6\pi^3}{3\lambda^4} (\delta_n^2)^2 \delta v$$

where,  $\delta_n^2 = \text{Mean square refractive index fluctuation}$ 

 $\delta \mathbf{v} = \text{Volume of fiber}$ 

Multimode fibers have higher dopant concentrations and greater compositional fluctuations. The overall losses in this fiber are more as compared to single mode fibers.


## **Mie Scattering:**

Linear scattering also occurs at in homogeneities and these arise from imperfections in the fiber's geometry, irregularities in the refractive index and the presence of bubbles etc. caused during manufacture. Careful control of manufacturing process can reduce mie scattering to insignificant levels.

# 5. Bending Loss

Losses due to curvature and losses caused by an abrupt change in radius of curvature are referred to as 'bending losses.'

The sharp bend of a fiber causes significant radiative losses and there is also possibility of mechanical failure. This is shown in Fig. 2.4.1.

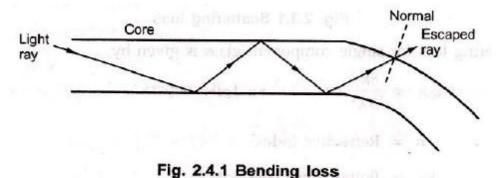

As the core bends the normal will follow it and the ray will now find itself on the wrong side of critical angle and will escape. The sharp bends are therefore avoided. The radiation loss from a bent fiber depends on -

Field strength of certain critical distance xc from fiber axis where power is lost through radiation.

The radius of curvature R. The higher order modes are less tightly bound to the fiber core, the higher order modes radiate out of fiber firstly. For multimode fiber, the effective number of modes that can be guided by curved fiber is given expression:

$$N_{eff} = N_{\infty} \left\{ 1 - \frac{\alpha + 2}{2\alpha\Delta} \left[ \frac{2\alpha}{R} + \left( \frac{2}{2n_0 k R} \right)^{2/3} \right] \right\}$$

where,

 $\alpha$  is graded index profile.



 $\Delta$  is core – cladding index difference.

n2 is refractive index of cladding.


k is wave propagation constant.

 $N\infty$  is total number of modes in a straight fiber.

$$N_{\infty} = \frac{\alpha}{\alpha + 2} (n_1 k a)^2 \Delta$$

## **Microbending**

- Microbending is a loss due to small bending or distortions. This small micro bending is not visible. The losses due to this are temperature related, tensile related or crush related.
- The effects of microbending on multimode fiber can result in increasing attenuation (depending on wavelength) to a series of periodic peaks and troughs on the spectral attenuation curve. These effects can be minimized during installation and testing. Fig. 2.4.2 illustrates microbening.

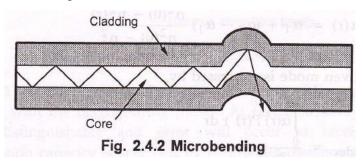


## **Macrobending**

- The change in spectral attenuation caused by macrobending is different to micro bending.

  Usually there are no peaks and troughs because in a macrobending no light is coupled back into the core from the cladding as can happen in the case of microbends.
- The macrobending losses are cause by large scale bending of fiber. The losses are eliminated when the bends are straightened. The losses can be minimized by not exceeding the long term bend radii. Fig. 2.4.3 illustrates macrobending.



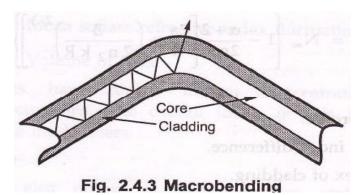

# **Core and Cladding Loss**

- Since the core and cladding have different indices of refraction hence they have different attenuation coefficients  $\alpha 1$  and  $\alpha 2$  respectively.
- For step index fiber, the loss for a mode order (v, m) is given by,

$$\alpha_{vm} = \alpha_1 \frac{p_{core}}{p} + \alpha_2 \frac{p_{cladding}}{p}$$

For low-order modes, the expression reduced to

$$\propto_{vm} = \propto_1 + (\propto_2 + \propto_1) \frac{\mathbf{p}_{\text{cladding}}}{\mathbf{p}}$$

where,  $\frac{\mathbf{p}_{core}}{\mathbf{p}}$  and  $\frac{\mathbf{p}_{cladding}}{\mathbf{p}}$  are fractional powers.

• For graded index fiber, loss at radial distance is expressed as,

$$\propto (r) = \propto_1 + (\propto_2 - \propto_1) \frac{n^2(0) - n^2(r)}{n^2(0) - n_2^2}$$

The loss for a given mode is expressed by,

$$\alpha_{\text{Graded Index}} = \frac{\int_{0}^{\infty} \kappa(r) P(r) r dr}{\int_{0}^{\infty} P(r) r dr}$$

Where, P(r) is power density of that model at radial distance r.

# 6. Signal Distortion in Optical Waveguide

The pulse gets distorted as it travels along the fiber lengths. Pulse spreading in fiber is referred as dispersion. Dispersion is caused by difference in the propagation times of light rays that takes different paths during the propagation. The light pulses travelling down the fiber encounter dispersion effect because of this the pulse spreads out in time domain. Dispersion

limits the information bandwidth. The distortion effects can be analyzed by studying the group velocities in guided modes.

## **Information Capacity Determination**

Dispersion and attenuation of pulse travelling along the fiber is shown in Fig. 2.6.1

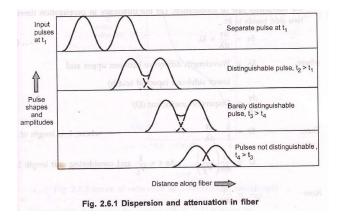


Fig. 2.6.1 shows, after travelling some distance, pulse starts broadening and overlap with the neighboring pulses. At certain distance the pulses are not even distinguishable and error will occur at receiver. Therefore the information capacity is specified by bandwidth distance product (MHz. km). For step index bandwidth distance product is 20 MHz. km and for graded index it is 2.5 MHz. Km.

### **Group Delay**

Consider a fiber cable carrying optical signal equally with various modes and each mode contains all the spectral components in the wavelength band. All the spectral components travel independently and they observe different time delay and group delay in the direction of propagation. The velocity at which the energy in a pulse travels along the fiber is known as group velocity. Group velocity is given by,

$$V_g = \frac{\partial w}{\partial g}$$

Thus different frequency components in a signal will travel at different group velocities and so will arrive at their destination at different times, for digital modulation of carrier, this results in dispersion of pulse, which affects the maximum rate of modulation. Let the difference in propagation times for two side bands is  $\delta\tau$ .



$$\delta \tau = \frac{d\tau}{d\lambda} \times \delta \lambda$$

where,

$$\frac{dv}{d\lambda}$$
 = Dispersion coefficient (D)

Then

 $D = \frac{1}{L} \cdot \frac{dv}{d\lambda}$  where, L is length of fiber.

$$D = \frac{d}{d\lambda} \left( \frac{1}{v_s} \right)$$

As  $\tau = \frac{1}{v_g}$  and considering unit length L = 1.

$$\frac{1}{V_S} = \frac{d\beta}{d\omega}$$

$$\frac{1}{V_{s}} = \frac{d\lambda}{d\omega} x \frac{d\beta}{d\lambda}$$


$$\frac{1}{V_g} = \frac{-\lambda^2}{2\pi c} \times \frac{d\beta}{d\lambda}$$

$$D = \frac{d}{d\lambda} \left( \frac{-\lambda^2}{2\pi \sigma} \cdot \frac{d\beta}{d\lambda} \right)$$

### **Material Dispersion**

Material dispersion is also called as chromatic dispersion. Material dispersion exists due to change in index of refraction for different wavelengths. A light ray contains components of various wavelengths centered at wavelength  $\lambda 10$ . The time delay is different for different

wavelength components. This results in time dispersion of pulse at the receiving end of fiber. Fig. 2.6.2 shows index of refraction as a function of optical wavelength.

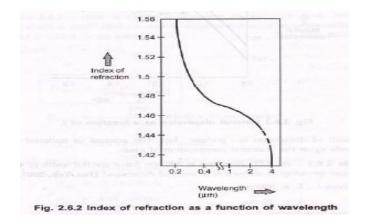

The material dispersion for unit length (L = 1) is given by

$$D_{max} = \frac{-\lambda}{c} x \frac{d^2 n}{d\lambda^2}$$


Where, c = Light velocity

 $\lambda$  = Center wavelength

$$\frac{d^{n}n}{d\lambda^{n}}$$
 = Second derivative of index of refraction w.r.t wavelength

Negative sign shows that the upper sideband signal (lowest wavelength) arrives before the lower sideband (highest wavelength).

A plot of material dispersion and wavelength is shown in Fig. 2.6.3

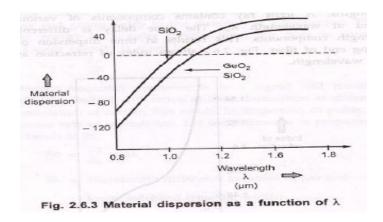

The unit of dispersion is: ps/nm. Km. the amount of material dispersion depends upon the chemical composition of glass.

**Example 2.6.1:** An LED operating at 850 nm has a spectral width of 45 nm. What is the pulse spreading in ns/km due to material dispersion? [Jan./Feb.-2007, 3 Marks]

### **Solution:**

**Given**:  $\lambda = 850 \text{ nm}$ 

 $\sigma = 45 \text{ nm}$ 

R.M.S pulse broadening due to material dispersion is given by,

 $\sigma m = \sigma LM$ 

Considering length L = 1 meter

Material dispersion constant 
$$D_{max} = \frac{-\lambda}{c} \cdot \frac{d^2n}{d\lambda^2}$$

For LED source operating at 850 nm,

$$\left| \lambda^2 \frac{d^2 n}{d\lambda^2} \right| = 0.025$$

$$M = \frac{1}{c\lambda} \left| \lambda^2 \frac{d^2n}{d\lambda^2} \right| = \frac{1}{(3 \times 10^2) (950)} \times 0.025$$

M = 9.8 ps/nm/km

$$\sigma_{\rm m} = 45 \text{ x } 1 \text{ x } 9.8 = 441 \text{ ps/km}$$

$$\sigma_{\rm m} = 441 \text{ ns/km}$$

**Example 2.6.2:** What is the pulse spreading when a laser diode having a 2 nm spectral width is used? Find the material-dispersion-induced pulse spreading at 1550 nm for an LED with a 75 nm spectral width? [Jan./Feb.-2007, 7 Marks]

### **Solutions:**

**Given:** 
$$\lambda = 2 \text{ nm}$$

$$\sigma = 75$$

$$D_{\rm mat} = \frac{1}{c\lambda} \left| \lambda^2 \cdot \frac{d^2 n}{d\lambda^2} \right|$$

$$D_{mat} = \frac{1}{(3 \times 10^{5}) \times 2} \times 0.03 = 50 \text{ ps/nm/km}$$

$$\sigma_{m} = 2 \times 1 \times 50 = 100 \text{ ns/km}$$
For LED
$$D_{mat} = \frac{0.025}{(3 \times 10^{5}) \times 1550} = 53.76 \text{ ps nm}^{-1} \text{km}^{-1}$$

$$\sigma_{m} = 75 \times 1 \times 53.76$$

$$\sigma_{m} = 4.03 \text{ ns/km}$$

### **Waveguide Dispersion**

- Waveguide dispersion is caused by the difference in the index of refraction between the core and cladding, resulting in a 'drag' effect between the core and cladding portions of the power.
- Waveguide dispersion is significant only in fibers carrying fewer than 5-10 modes. Since
  multimode optical fibers carry hundreds of modes, they will not have observable
  waveguide dispersion.
- The group delay  $(\tau wg)$  arising due to waveguide dispersion.



$$(\tau_{wg}) = \frac{L}{\sigma} \left[ n_2 + n_2 \Delta \frac{d (kb)}{dk} \right]$$

Where, b = Normalized propagation constant

 $k = 2\pi / \lambda$  (group velocity)

Normalized frequency V,

$$V = ka(n_1^2 - n_2^2)^{\frac{1}{2}}$$

$$V = ka n_2 \sqrt{2\Delta} \text{ (For small } \Delta\text{)}$$

$$\tau_{wg} = \frac{L}{\sigma} \left[ n_2 + n_2 \Delta \frac{d(v_b)}{dV} \right]$$

The second term

is waveguide dispersion and is mode dependent term..

As frequency is a function of wavelength, the group velocity of the energy varies with frequency. The produces additional losses (waveguide dispersion). The propagation constant (b) varies with wavelength, the causes of which are independent of material dispersion.

## **Chromatic Dispersion**

The combination of material dispersion and waveguide dispersion is called chromatic dispersion. These losses primarily concern the spectral width of transmitter and choice of correct wavelength.

A graph of effective refractive index against wavelength illustrates the effects of material, chromatic and waveguide dispersion.

Material dispersion and waveguide dispersion effects vary in vary in opposite senses as the wavelength increased, but at an optimum wavelength around 1300 nm, two effects almost cancel each other and chromatic dispersion is at minimum. Attenuation is therefore also at minimum and makes 1300 nm a highly attractive operating wavelength.

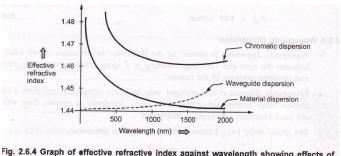


Fig. 2.6.4 Graph of effective refractive index against wavelength showing effects of chromatic, waveguide and material dispersion

## **Modal Dispersion**

As only a certain number of modes can propagate down the fiber, each of these modes carries the modulation signal and each one is incident on the boundary at a different angle, they will each have their own individual propagation times. The net effect is spreading of pulse, this form of dispersion is called modal dispersion.

- Modal dispersion takes place in multimode fibers. It is moderately present in graded
   Index fibers and almost eliminated in single mode step index fibers.
- Modal dispersion is given by,

$$\Delta t_{\text{model}} = \frac{n_1}{c} \left( \frac{\Delta}{1 - \Delta} \right)$$

where  $\Delta t \mod a = Dispersion$ 

n1 = Core refractive index

Z = Total fiber length

c = Velocity of light in air

 $\Delta$  = Fractional refractive index

$$\left(\frac{n_1-n_2}{n_4}\right)$$

$$\Delta t_{\text{model}} = \frac{(NA^2)Z}{2n_1 c}$$

The modal dispersion  $\Delta$ tmodal describes the optical pulse spreading due to modal effects optical pulse width can be converted to electrical rise time through the relationship.

$$t_{r \, mod} = 0.44 \, (\Delta t_{model}) \pi r^2$$

$$\begin{split} \sigma_{wg} &= \left| \frac{d\tau_{wg}}{d\lambda} \right| \sigma_{\lambda} \\ &= L \left| D_{wg}(\lambda) \right| \sigma_{\lambda} \\ &= \frac{V}{\lambda} \left| \frac{d\tau_{wg}}{d\lambda} \right| \sigma_{\lambda} \\ &= \frac{n_{B}L\Delta\sigma_{g}}{\sigma\lambda} \left[ V \frac{d^{2}(Vb)}{dV^{2}} \right] \\ D_{wg}(\lambda) &= \frac{-n_{2}\Delta}{c\lambda} \left[ V \frac{d^{2}(Vb)}{dV^{2}} \right] \end{split}$$

## **Signal distortion in Single Mode Fibers**

The pulse spreading  $\sigma$ wg over range of wavelengths can be obtained from derivative of group delay with respect to  $\lambda$ .

$$\sigma_{wg} = \left| \frac{d\tau_{wg}}{d\lambda} \right| \sigma_{\lambda}$$

$$\begin{split} &= L \left| D_{wg}(\lambda) \right| \sigma_{\lambda} \\ &= \frac{V}{\lambda} \left| \frac{d\tau_{wg}}{d\lambda} \right| \sigma_{\lambda} \\ &= \frac{n_0 L \Delta \sigma_g}{\sigma \lambda} \left[ V \frac{d^2 \langle Vb \rangle}{dV^2} \right] \end{split}$$

$$D_{ws}(\lambda) = \frac{-n_2 \Delta}{c \lambda} \left[ V \frac{d^2(Vb)}{dV^2} \right]$$



This is the equation for waveguide dispersion for unit length.

**Example 2.6.3**: For a single mode fiber n2 = 1.48 and  $\Delta = 0.2$  % operating at A = 1320 nm, compute the waveguide dispersion if

$$\frac{d^2(Vb)}{dv^2} = 0.26.$$

**Solution :** n2 = 1.48

 $\Delta = 0.2$ 

 $\lambda = 1320 \text{ nm}$ 

Waveguide dispersion is given by,

$$D_{ws}(\lambda) = \frac{-n_2 \Delta}{c \lambda} \left[ v \frac{d^2(Vb)}{dV^2} \right]$$
$$= \frac{-1.46 \times 0.2}{3 \times 10^6 \times 1320} [0.20]$$
$$= -1.943 \text{ picosec/nm. km.}$$

## **Polarization Mode Dispersion (PMD)**

Different frequency component of a pulse acquires different polarization state (such as linear polarization and circular polarization). This results in pulse broadening is known as **polarization mode dispersion** (PMD).

PMD is the limiting factor for optical communication system at high data rates. The effects of PMD must be compensated.

### **Pulse Broadening in GI Fibers**

The core refractive index varies radially in case of graded index fibers, hence it supports multimode propagation with a low intermodal delay distortion and high data rate over long distance is possible. The higher order modes travelling in outer regions of the core, will travel faster than the lower order modes travelling in high refractive index region. If the index profile is carefully controlled, then the transit times of the individual modes will be identical, so eliminating modal dispersion.

The r.m.s pulse broadening is given as:



$$\sigma = \left(\sigma_{intermodal}^2 + \sigma_{intermodal}^2\right)^{1/2}$$

where,

 $\sigma_{intermodal} - R.M.S$  pulse width due to intermodal delay distortion.

σ<sub>intermodal</sub> – R.M.S pulse width resulting from pulse broadening within each mode.

The intermodal delay and pulse broadening are related by expression given by Personick

$$\sigma_{\text{intermodal}} = (\langle \tau_g^2 \rangle - \langle \tau_g \rangle^2)^{1/2}$$

Where  $\tau g$  is group delay.

From this the expression for intermodal pulse broadening is given as:

$$\alpha_{\text{intermodal}} = \frac{\text{LN}_1 \Delta}{2c} \cdot \frac{\alpha}{\alpha + 1} \left( \frac{\alpha + 2}{3 \alpha + 2} \right)^{1/2} \\
\left[ c_1^2 + \frac{4c_1 c_2(\alpha + 1)}{2\alpha + 1} + \frac{16\Delta^2 c_2^2(\alpha + 1)^2}{(8\alpha + 2)(3\alpha + 2)} \right]^{1/2} \\
c_1 = \frac{\alpha - 2 - E}{\alpha + 2} \text{ and } c_2 = \frac{3\alpha - 2 - 2c}{2(\alpha + 2)}$$

The intramodal pulse broadening is given as:

$$\sigma_{intramodal}^{2} = \left(\frac{\sigma \lambda}{\lambda}\right)^{2} \left(\left(\lambda \frac{d\tau g}{d\lambda}\right)^{2}\right)$$

Where  $\sigma\lambda$  is spectral width of optical source.

Solving the expression gives:

$$\sigma_{intramodal}^{2} = \frac{L}{c} \cdot \frac{\sigma \lambda}{\lambda} \left[ \left( -\lambda^{2} \frac{d^{2} n_{1}}{d\lambda^{2}} \right)^{2} - N_{1} c_{1} \Delta \right]$$

$$\left(2\lambda^{2} \frac{d^{2}n_{1}}{d\lambda^{2}}, \frac{\alpha}{\alpha+1} - N_{1}c_{1}\Delta \frac{4\alpha^{2}}{(\alpha+2)(3\alpha+2)}\right)^{1/2}$$

# **Recommended Questions:**

- 1. Briefly explain material dispersion with suitable sketch?
- 2 .Give expression of pulse broadening in graded index fiber?.
- 3. Elaborate dispersion mechanism in optical fibers?
- 4. Differentiate between intrinsic and extrinsic absorption? [May/June-2006, 4 Marks]
- 5. Derive an expression for the pulse spread due to material dispersion using group delay concept? [May/June-2006, 4 Marks, May-2007, 8 Marks]
- 6. Explain the significance of measure of information capacity? [May-2007, 6 Marks]
- 7. Describe the material dispersion and waveguide Dispersion? [May/June-2008, 6 Marks]
- 8. Discuss Bending Loss?[Dec/Jan-2008, 04 Marks]
- 9. Explain absorption losses? [May/June-2010, 6 Marks, Dec-2010, 6marks].
- 10.Describe attenuation mechanism?[Dec-2011,6Marks,Dec-2012,6Marks]

