EXPERIMENT 1: INTRODUCTION TO QBOT 2E FOR QUARC

The objective of this introductory exercise is to explore the hardware and software related to Quanser QBot 2e Mobile Platform. You will learn how the QBot 2e is actuated, what types of sensors are available, and how you can communicate with the device in order to send commands and receive sensory data.

Topics Covered

- · QBot 2e Hardware Components
- · QBot 2e Software and Communication



1 Background

The purpose of this lab is to get you started with the Quanser QBot 2e Mobile Platform and familiarize you with the basic concepts related to the product including sensors, actuators, and the QBot 2e software components.

1.1 QBot 2e Main Hardware Components

The Quanser QBot 2e Mobile Platform consists of two central drive wheels mounted on a common axis that bisects the robot as shown in Figure 1.1a. This drive configuration is known as differential drive. Castors at the front and back of the robot stabilize the platform without compromising movement. The two drive wheels are independently driven forward and backward in order to actuate the robot. This approach to mobile robot wheel geometry is very common due to its simplicity and maneuverability.

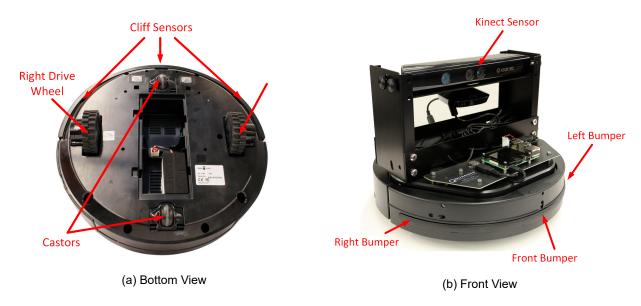


Figure 1.1: Main QBot 2e Hardware Components

The motion of each wheel is measured using encoders, and the robot's orientation, or yaw angle, are estimated using the integrated gyro. For more information on the Kinematics of the QBot 2e, and how you can generate wheel commands to achieve specific motion trajectories, refer to the Forward/Inverse and Differential Kinematics laboratory experiments. You will also learn how the measured sensory information is used for odometric localization.

In addition to the encoders and gyro, the QBot 2e comes with a Microsoft Kinect for vision, shown in Figure 1.1b, that outputs color image frames (RGB) as well as depth information. You can process RGB and depth data for various purposes including visual inspection, 2D and 3D occupancy grid mapping, visual odometry, etc. For more information on these concepts and more, refer to the Computer Vision laboratory experiments.

The QBot 2e also comes with integrated bump sensors (left, right and central), and cliff sensors (left, right, and central) as shown in Figure 1.1a and Figure 1.1b. These sensors can be used in a control algorithm to avoid obstacles, or prevent damage to the robot.

1.2 QBot 2e Software and Communication

The QBot 2e for QUARC leverages Quanser QUARC Rapid Control Prototyping software which seamlessly integrates with MATLAB/Simulink Software to provide real-time communication and interfacing to the components of the QBot 2e. QUARC extends the code generation capabilities of Simulink to the QBot 2e as an external real-time target. Using QUARC, you can rapidly prototype any algorithm and quickly evaluate it on the device.

To communicate with the QBot 2e, the following QUARC blocks are used:

- 1. Hardware In the Loop (HIL) Initialize block: The HIL Initialize block configures the drivers and hardware interface for the QBot 2e
- 2. HIL Read/Write: The HIL Read/Write blocks are used to read sensory data and drive the motors
- 3. Video3D Initialize: Used to initialize the Kinect sensor. Maximum frame-rate and resolution are set in this block.
- 4. Video3D Capture: Capture RGB, depth, and other information by changing the stream type.
- 5. Video Compressed Display: Transmits compressed input data (RGB or depth) from QBot 2e to the PC and displays them on the monitor.

Other than the aforementioned blocks, the "Host Initialize" block can be used to make use of external input devices such as a keyboard (Host Keyboard) or joystick (Host Game Controller). These blocks can be seen in the supplied model for the In-Lab portion of this laboratory experiment.



2 In-Lab Exercise

2.1 Wheel Drive Mode

In this experiment, you will command the left and right wheels independently and observe the motion of the robot and vision data from the Kinect sensor. The supplied model for this part of the lab is called <code>QBot2e_Keyboard_Teleop_Wheel.mdl</code>, shown in Figure 2.1. In this model, we use the HIL Initialize block to configure the interface options for the QBot 2e, Kinect Initialize for the Kinect sensor, and Host Initialize for the keyboard interface. If you double click on the QBot 2e Basic Motor Commands and Sensor Measurement subsystem, and then <code>QBot2e_IO_Basic</code>, you will find <code>HIL_Write</code> and <code>HIL_Read</code> blocks used to drive motors and read from the sensors. Take time to explore the model. You can right-click on the blocks and select help to find more useful information regarding each block.

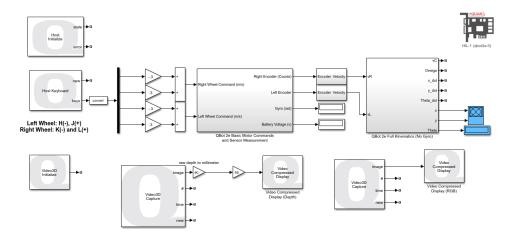


Figure 2.1: Snapshot of the QBot2e_Keyboard_Teleop_Wheel.mdl model.

The two *Video3D Capture* blocks are used to read the depth and RGB data from the Kinect sensors. We then use the *Video Compressed Display* blocks to display these images.

The keyboard controls for this experiments are as follows:

- Left wheel command: H (-) and J (+)
- Right wheel command: K (-) and L (+)

After turning on the device, and connecting to the Quanser_UVS-5G wifi network, follow these steps:

- 1. Compile the supplied model and run it.
- 2. Double-click on the XY Figure, Video Compressed Display (Depth) and Video Compressed Display (RGB) blocks.
- 3. Use the keyboard to command the robot.
- 4. Describe how the motion of the left/right wheels relate to the actual motion of the robot (forward/backward motion, left/right turn, etc.)
- 5. Stop the model.

2.2 Normal Vehicle Drive Mode

In this experiment, you will drive the robot in a conventional manner where the robot commands correspond to move forward/backward, and turn left/right, similar to the way you would control any vehicle. The controller model for this exercise, shown in Figure 2.2, is called <code>QBot2e_Keyboard_Teleop_Normal.mdl</code>. The QUARC blocks used in this model are similar to the ones described above.

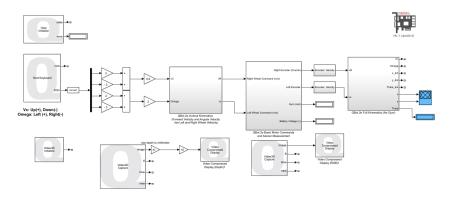


Figure 2.2: Snapshot of the QBot2e_Keyboard_Teleop_Normal.mdl model.

Two customized blocks are also used that apply the inverse kinematics and forward kinematics models of the device, the details of which are presented in the Kinematics laboratory experiment. Keyboard controls for this model are as follows:

- Linear velocity command: Up (+) and Down (-)
- Angular velocity command: Left (+) and Right (-)

After turning on the device and connecting to the *Quanser_UVS-5G* wifi network, following these steps to run the model:

- 1. Open the supplied model, compile the model and run it.
- Double-click on the XY Figure, Video Compressed Display (Depth) and Video Compressed Display (RGB) blocks.
- 3. Use the keyboard keys to command the robot. Up arrow to move forward, down arrow to move backward, left arrow to turn left, and the right arrow key to turn right.
- 4. Observe the RGB and depth images, as well as the XY figure, and report your observations.
- 5. Describe the benefits of controlling the vehicle in normal mode.
- 6. Stop the model.



© 2019 Quanser Inc., All rights reserved.

Quanser Inc. 119 Spy Court Markham, Ontario L3R 5H6 Canada info@quanser.com

Phone: 1-905-940-3575 Fax: 1-905-940-3576

Printed in Markham, Ontario.

For more information on the solutions Quanser Inc. offers, please visit the web site at: http://www.quanser.com

This document and the software described in it are provided subject to a license agreement. Neither the software nor this document may be used or copied except as specified under the terms of that license agreement. Quanser Inc. grants the following rights: a) The right to reproduce the work, to incorporate the work into one or more collections, and to reproduce the work as incorporated in the collections, b) to create and reproduce adaptations provided reasonable steps are taken to clearly identify the changes that were made to the original work, c) to distribute and publically perform the work including as incorporated in collections, and d) to distribute and publicly perform adaptations. The above rights may be exercised in all media and formats whether now known or hereafter devised. These rights are granted subject to and limited by the following restrictions: a) You may not exercise any of the rights granted to You in above in any manner that is primarily intended for or directed toward commercial advantage or private monetary compensation, and b) You must keep intact all copyright notices for the Work and provide the name Quanser Inc. for attribution. These restrictions may not be waved without express prior written permission of Quanser Inc.