NetXPTO - LinkPlanner

29 de Agosto de 2017

# Conteúdo

1	Intro	oduction	2
2		ulator Structure System	<b>3</b>
3	Dev	elopment Cycle	4
4	Visu	alizer	5
5	Case	Studies	6
	5.1	QPSK Transmitter	6
	5.2	Quantum Noise	8
	5.3	Continuos Variable Quantum Transmission System	14
	5.4	Simplified Coherent Receiver	24
		5.4.1 Tx side	25
		5.4.2 Rx side	25
6	Libr	ary	26
	6.1	Add	27
	6.2	Binary source	28
	6.3	Clock	32
	6.4	Coupler 2 by 2	34
	6.5	Decoder	35
	6.6	Discrete to continuous time	38
	6.7	Homodyne receiver	40
	6.8	IQ modulator	44
	6.9	Local Oscillator	46
	6.10	MQAM mapper	48
		MOAM transmitter	51

# Introduction

## **Simulator Structure**

LinkPlanner is a signals open-source simulator.

The major entity is the system.

A system comprises a set of blocks.

The blocks interact with each other through signals.

## 2.1 System

You can run the System

## **Development Cycle**

The NetXPTO-LinkPlanner has been developed by several people using git as a version control system. The NetXPTO-LinkPlanner repository is located in the GitHub site http://github.com/netxpto/linkplanner. The more updated functional version of the software is in the branch master. Master should be considered a functional beta version of the software. Periodically new releases are delivered from the master branch under the branch name Release<a href="Year">Year</a><a href="Year">

# Visualizer

visualizer

## **Case Studies**

## 5.1 QPSK Transmitter

This system simulates a QPSK transmitter. A schematic representation of this system is shown in figure 5.1.



Figura 5.1: QPSK transmitter block diagram.

#### **System Input Parameters**

Parameter: sourceMode

**Description:** Specifies the operation mode of the binary source.

Accepted Values: PseudoRandom, Random, DeterministicAppendZeros, DeterministicCyclic.

**Parameter:** patternLength

**Description:** Specifies the pattern length used my the source in the PseudoRandom mode.

Accepted Values: Integer between 1 and 32.

Parameter: bitStream

Description: Specifies the bit stream generated by the source in the DeterministicCyclic and

DeterministicAppendZeros mode.

**Accepted Values:** "XXX..", where X is 0 or 1.

**Parameter:** bitPeriod

**Description:** Specifies the bit period, i.e. the inverse of the bit-rate.

**Accepted Values:** Any positive real value.

**Parameter:** *iqAmplitudes* 

**Description:** Specifies the IQ amplitudes.

**Accepted Values:** Any four par of real values, for instance  $\{\{1,1\},\{-1,1\},\{-1,-1\},\{1,-1\}\}\$ , the first

value correspond to the "00", the second to the "01", the third to the "10" and

the forth to the "11".

**Parameter:** numberOfBits

**Description:** Specifies the number of bits generated by the binary source.

**Accepted Values:** Any positive integer value.

Parameter: numberOfSamplesPerSymbol

**Description:** Specifies the number of samples per symbol.

**Accepted Values:** Any positive integer value.

**Parameter:** rollOffFactor

**Description:** Specifies the roll off factor in the raised-cosine filter.

**Accepted Values:** A real value between 0 and 1.

Parameter: impulseResponseTimeLength

**Description:** Specifies the impulse response window time width in symbol periods.

**Accepted Values:** Any positive integer value.

#### 5.2 Quantum Noise

#### Introduction

This document describes a simple emission and detection system that uses coherent states as it's means?? of transmission???.

The transmitted information consists in a binary sequence which is ??translated?? in a sequence of coherent states. In this simulation, the used constellation is formed by the states  $\{|\alpha\rangle, |i\alpha\rangle, |-\alpha\rangle, |-i\alpha\rangle\}$ , in which  $\alpha$  is defined as  $\langle n\rangle = |\alpha|^2$  ( $\langle n\rangle$  is the expected number of photons in a state). (METER MELHOR)

One of the main effects studied in this system is quantum noise, which is an intrinsic effect?? to coherent states(VER MARK FOX). In principle???? (VER REFERENCIAS) the variance of a coherent state is given by  $\Delta X_1 \Delta X_2 = \frac{1}{4}$ .

But, given that we combine two photocurrents to obtain an output current, then the total noise will have a combined value of SOMETHING??? Procurar referencias.

Therefore, assuming Gaussian?? (WHY GAUSSIAN?) shot noise, for each quadrature we want  $Var(X_i) = \frac{1}{4}$ ????? (TENHO DE PROCURAR REFERENCIAS)

In this simulation, we introduce quantum noise in the photodiodes. We know that a coherent state has an expected number of photons distributed by a Poisson distribution, which has an average number equal to it's variance. Therefore, when the photodiode detects the power of signal, which is proportional to the number of photons, then it's variance must also be proportional to the number of photons.

In fact the last step in detecting the resulting signal introduces an difference between currents, but that only will increase the variance. Assuming the independence between detections, and it's intrinsic noise (PROCURAR MELHOR PALEIO), then:

$$Var(I_{out}) = Var(I_1) + Var(I_2)$$

Therefore, the best result we can achieve will be  $Var(X) = \frac{1}{4}$ ???? (PROCURAR PALEIO SOBRE ISTO)

#### **Functional Description**

The simulation setup is described by diagram in figure 5.2. We start by generating a state from one of the four available ones.???? Then, the signal is received in a Hybrid

Detector??? where the signal is compared with a local oscillator giving four different signals in it's output. Two of those signals are detected by a photodiode which output will be the difference of the two photocurrents. The other two signals will be also be detected by another photodiode, which will obtain the other quadrature of the signal.????? (TEM QUE FICAR MELHOR EXPLICADO).

System Blocks	netxpto Blocks
-	MQAM
-	LocalOscillator
-	Hybrid??
-	Photodiode??
-	Sampler ??



Figura 5.2: Overview of the optical system being simulated.

## Required files

Header Files

File	Description
netxpto.h	Generic purpose simulator definitions.
m_qam_transmitter.h	_
local_oscillator.h	Generates continuous coherent signal.
optical_hybrid.h	—
photodiode.h	—
sampler.h	_
sink.h	Closes any unused signals.

## Source Files

File	Description
netxpto.cpp	Generic purpose simulator definitions.
m_qam_transmitter.cpp	_
local_oscillator.cpp	Generates continuous coherent signal.
optical_hybrid.cpp	_
photodiode.cpp	_
sampler.cpp	_
sink.cpp	Closes any unused signals.

## **System Input Parameters**

This system takes into account the following input parameters:

System	Description
Parameters	
numberOfBitsGener	a <b>Gi</b> ves the number of bits to be simulated
bitPeriod	Sets the time between adjacent bits
wavelength	Sets the wavelength of the local oscillator in the MQAM????
samplesPerSymbol	Establishes the number of samples each bit in the string is given
localOscillatorPowe	rßets the optical power, in units of W, of the local oscillator inside
	the MQAM
localOscillatorPowe	ræets the optical power, in units of W, of the local oscillator used for
	Bob's measurements
localOscillatorPhase	Sets the initial phase of the local oscillator used in the detection
transferMatrix	Sets the transfer matrix of the beam splitter used in the homodyne
	detector
responsivity	Sets the responsivity of the photodiodes used in the homodyne
	detectors
bufferLength	Sets the length of the buffer used in the signals
iqAmplitudeValues	Sets the amplitude of the states used in the MQAM????
shotNoise	Chooses if quantum shot noise is used in the simulation
samplesToSkip	Sets the number of samples to skip when writing out some of the
	signal files.

## Inputs

This system takes no inputs.

#### **Outputs**

The system outputs the following objects:

**Parameter:** Signals:

**Description:** Binary Sequence used in the MQAM;  $(S_0)$  **Description:** Local Oscillator used in the MQAM;  $(S_1)$  **Description:** Local Oscillator used in the detection;  $(S_2)$  **Description:** Optical Hybrid Outputs;  $(S_3, S_4, S_5, S_6)$ 

**Description:** In phase Photodiode output; (S<sub>7</sub>) **Description:** Quadrature Photodiode output; (S<sub>8</sub>)

**Description:** In phase Sampler output;  $(S_9)$ 

**Description:** Quadrature Sampler output;  $(S_{10})$ 

#### **Simulation Results**

The objective of this simulation was to get the (quantum noise???) associated to the detection of coherent states.



Figura 5.3: Simulation of a constellation of 4 states (n = 100)

We expect that the variance is invariant with the number of photons sent from Alice. The plot in 5.4 show that the simulation also shows this invariance with the number of photons.



Figura 5.4: Simulation of the variance of n.

We can conclude that the expected variance will give us  $Var(X) = \frac{1}{2}$ . The results obtained in our simulations are in accordance with the theoretical prevision???

## **Known Problems**

1. —-

## 5.3 Continuos Variable Quantum Transmission System

In this section a continuous varible quantum transmission system is analyzed. The results here presented follow closely the [1]. In [1], the security of a continuous variable quantum key distribution (CV-QKD) system is studied theoretically, here we complete that theoretical study with simulations results.



Figura 5.5: State constellation

The state constellation used in the system is presented in Figure 5.5. The emitter (usually named Alice) is going to use two basis, the  $45^{\rm o}$  base and the  $-45^{\rm o}$  base. In the  $45^{\rm o}$  base, Alice sends one of two values, 1 and -1, which correspond to the states  $|\alpha\rangle$  and  $|-\alpha\rangle$ . In the  $-45^{\rm o}$  base, Alice can also send one of two values, 1 and -1, which correspond to the states  $|-i\alpha\rangle$  and  $|i\alpha\rangle$ . At the end Alice is going to send one of the four states  $|\alpha\rangle$ ,  $|-\alpha\rangle$ ,  $|-i\alpha\rangle$ , and  $|i\alpha\rangle$ , with equal probability.

Because we don't know  $\grave{a}$  prior which state is going be transmitted, neither which basis is going to be used, and to incorporate our "ignorance" in the system description, we can work with the density operator. The density operator is a proper tool to describe "statistical mixtures". A "statistical mixtures" is one state, from a possible set, but we don't know which state it is. There is no state superposition.

Since all states have the same probability of occurring, the state density operator is given by:

$$\hat{\rho} = \frac{1}{4} \left( |\alpha\rangle \langle \alpha| + |-\alpha\rangle \langle -\alpha| + |i\alpha\rangle \langle i\alpha| + |-i\alpha\rangle \langle -i\alpha| \right). \tag{5.1}$$

The probability to detect at the receiver the state  $|\alpha\rangle$  is given by

$$P(\alpha) = \langle \alpha | \, \hat{\rho} \, | \alpha \rangle = \frac{1}{4}. \tag{5.2}$$

Note that the density operator is equivalent to the wave function in terms of the system description.

From the receiver perspective, i.e. from the Bob perspective, and after knowing the base used by Alice. The density operator can be reduce to,

$$\hat{\rho}_1 = \frac{1}{2} \left( |\alpha\rangle \langle \alpha| + |-\alpha\rangle \langle -\alpha| \right), \tag{5.3}$$

$$\hat{\rho}_2 = \frac{1}{2} \left( |i\alpha\rangle \langle i\alpha| + |-i\alpha\rangle \langle -i\alpha| \right). \tag{5.4}$$

where 1 corresponds to the  $45^{\circ}$  base and -1 corresponds to  $-45^{\circ}$ .

#### **Single Base Homodyne Detection**

The probability of obtaining a quadrature  $\hat{X}_{\phi} = \hat{X}_1 \cos \phi + \hat{X}_2 \sin \phi$  when measuring the coherent state  $|\alpha\rangle$  is given by the following gaussian distribution:

$$|\langle X_{\phi} | \alpha \rangle|^2 = \sqrt{\frac{2}{\pi}} e^{-2(X_{\phi} - \alpha \cos \phi)^2}, \tag{5.5}$$

We can define the "correct"and "wrong"basis measurement probability density, respectively, as:

$$\langle X_i | \hat{\rho}_j | X_i \rangle = \begin{cases} \frac{1}{\sqrt{2\pi}} \left( e^{-2(X_i - \alpha)^2} + e^{-2(X_i + \alpha)} \right), & i = j \\ \sqrt{\frac{2}{\pi}} e^{-2X_i^2}, & i \neq j \end{cases}$$
(5.6)

The post selection efficiency (PSE) can be defined as the probability of a measurement in the correct basis yields a result that satisfies the limit value  $X_0$ :

$$P(X_{0}, \alpha) = \int_{-\infty}^{-X_{0}} \langle X_{1} | \hat{\rho}_{1} | X_{1} \rangle dX_{1} + \int_{X_{0}}^{\infty} \langle X_{1} | \hat{\rho}_{1} | X_{1} \rangle dX_{1}$$

$$= \frac{1}{2} \left[ \operatorname{erfc}(\sqrt{2}(X_{0} + \alpha)) + \operatorname{erfc}(\sqrt{2}(X_{0} - \alpha)) \right].$$
(5.7)

The bit error rate (BER) is the normalized probability of, after choosing the correct basis, obtaining the wrong bit value:

$$Q(X_0, \alpha) = \frac{1}{P(X_0, \alpha)} \int_{-\infty}^{-X_0} |\langle X_i | \alpha \rangle| dX_i = \frac{\operatorname{erfc}\left(\sqrt{2}(X_0 + \alpha)\right)}{2P(X_0, n)}$$
(5.8)

#### **Double Homodyne setup**

In our proposed double homodyne protocol both quadratures are measured simultaneously, as such the concept of correct and wrong basis measurements has no value. Our protocol also makes use of a locally generated Local Oscillator (LO), obtained from a different laser than the one used to generate the signal, thus we have to take into account the phase drift between both lasers. High intensity reference pulses are sent periodically to allow for an



Figura 5.6: BER and PSE in function of  $\alpha$  for the single homodyne setup.  $X_0 = 1$  was used

estimation of the phase drift. The double homodyne setup requires the signal to be divided into the two utilized detectors, so each measurement is made on a coherent state with half the amplitude of the incoming signal  $\alpha \to \frac{\alpha}{\sqrt{2}}$ 

For each incoming pulse we measure quadratures  $X_{\phi}$  and  $Y_{\phi}$ .  $\phi$  has contributions from both the encoded angle,  $\theta$ , and the phase difference between lasers,  $\epsilon$ , we assume  $\phi = \theta + \epsilon$ . On the reference pulses no phase is encoded, that is  $\theta = 0$ , thus  $\epsilon$  can be estimated. Assuming  $\epsilon$  doesn't change between a reference pulse and the following signal pulse, the measured quadratures can be cast into the originally sent quadratures  $X_{\theta}$  and  $Y_{\theta}$  via:

$$X_{\theta} = X_{\phi} \cos \epsilon - Y_{\phi} \sin \epsilon$$

$$Y_{\theta} = X_{\phi} \sin \epsilon + Y_{\phi} \sin \epsilon$$
(5.9)

Assuming an announcement of the coding basis, the density operators (5.3) and (5.4) still apply. We can now define the probability density of obtaining results  $X_{\theta}$  and  $Y_{\theta}$ , assuming

a state in the  $X_1$  base was sent, as:

$$\langle X_{\theta} | \hat{\rho}_1 | X_{\theta} \rangle = \frac{\sqrt{\frac{2}{\pi}}}{4} \left( e^{-2\left(x_{\theta} - \frac{\alpha}{\sqrt{2}}\cos\theta\right)^2} + e^{-2\left(x_{\theta} + \frac{\alpha}{\sqrt{2}}\cos\theta\right)^2} \right), \tag{5.10}$$

$$\langle Y_{\theta}|\hat{\rho}_{1}|Y_{\theta}\rangle = \frac{\sqrt{\frac{2}{\pi}}}{4} \left( e^{-2\left(y_{\theta} - \frac{\alpha}{\sqrt{2}}\sin\theta\right)^{2}} + e^{-2\left(y_{\theta} + \frac{\alpha}{\sqrt{2}}\sin\theta\right)^{2}} \right). \tag{5.11}$$

Now each state needs to satisfy two limit values,  $X_0$  and  $Y_0$ , to be accepted. Thus, the PSE is now defined as:

$$P_{DH}(X_{0}, Y_{0}, \alpha) = \int_{-\infty}^{-X_{0}} \langle X_{\theta} | \hat{\rho}_{1} | X_{\theta} \rangle dx_{\theta} \int_{-\infty}^{-Y_{0}} \langle Y_{\theta} | \hat{\rho}_{1} | Y_{\theta} \rangle dy_{\theta} + \int_{X_{0}}^{\infty} \langle X_{\theta} | \hat{\rho}_{1} | X_{\theta} \rangle dx_{\theta} \int_{Y_{0}}^{\infty} \langle Y_{\theta} | \hat{\rho}_{1} | Y_{\theta} \rangle dy_{\theta}$$

$$= \frac{1}{4} \left\{ \text{erfc} \left[ \sqrt{2} \left( X_{0} - \frac{\alpha}{\sqrt{2}} \cos \theta \right) \right] + \text{erfc} \left[ \sqrt{2} \left( X_{0} + \frac{\alpha}{\sqrt{2}} \cos \theta \right) \right] \right\}$$

$$\left\{ \text{erfc} \left[ \sqrt{2} \left( Y_{0} - \frac{\alpha}{\sqrt{2}} \sin \theta \right) \right] + \text{erfc} \left[ \sqrt{2} \left( Y_{0} + \frac{\alpha}{\sqrt{2}} \sin \theta \right) \right] \right\},$$

$$(5.12)$$

The DH subscript denotes Double Homodyne. In a somewhat similar manner, the BER is now defined as:

$$Q_{DH}(X_{0}, Y_{0}, \alpha) = \frac{1}{P_{DH}} \left( \int_{-\infty}^{-X_{0}} \left| \langle X_{\theta} | \frac{\alpha}{\sqrt{2}} \rangle \right|^{2} dx_{\theta} \int_{-\infty}^{-Y_{0}} \left| \langle Y_{\theta} | \frac{\alpha}{\sqrt{2}} \rangle \right|^{2} dy_{\theta} + \int_{X_{0}}^{\infty} \left| \langle X_{\theta} | - \frac{\alpha}{\sqrt{2}} \rangle \right|^{2} dx_{\theta} \int_{Y_{0}}^{\infty} \left| \langle Y_{\theta} | - \frac{\alpha}{\sqrt{2}} \rangle \right|^{2} dy_{\theta} \right)$$

$$= \frac{1}{2P_{DH}} \operatorname{erfc} \left[ \sqrt{2} \left( X_{0} + \frac{\alpha}{\sqrt{2}} \cos \theta \right) \right] \operatorname{erfc} \left[ \sqrt{2} \left( Y_{0} + \frac{\alpha}{\sqrt{2}} \sin \theta \right) \right],$$
(5.13)

note that, in this definition for BER, only values  $\theta \in \left[0, \frac{\pi}{2}\right]$  make sense (the sent state was  $\alpha$ ).

#### **Functional Description**

Simplified diagrams of the systems being simulated are presented in Figures 5.8a. and 5.8b. Two optical signals are generated, one with a constant power level of 10 dBm and the other with power in multiples of the power corresponding to a single photon per sampling time  $(6.4078e\times10^{-13}\,\mathrm{W}$  for a sampling time of 200 ns). The two signals are mixed, with a Balanced Beam Splitter in the single homodyne case and with a 90° Optical Hybrid in the double homodyne one, and are subsequently evaluated with recourse to Homodyne Receivers.

System Blocks	netxpto Blocks
Local Oscillator	LocalOscillator
Homodyne Receiver	I_HomodyneReceiver
Balanced Beam Splitter	BalancedBeamSplitter
90° Optical Hybrid	OpticalHybrid



- (a) PSE in function of  $\alpha$  and  $\theta$  for the double (b) BER in function of  $\alpha$  and  $\theta$  for the double homodyne setup.  $X_0=1$  was used
  - Figura 5.7: Theoretical results for double homodyne setup.



Figura 5.8: Block diagrams of both simulation results presented in this report.

## Required files

#### Header Files

File	Description
netxpto.h	Generic purpose simulator definitions.
local_oscillator.h	Generates continuous coherent signal.
balanced_beam_splitter.h	Mixes the two input signals into two outputs.
optical_hybrid.h	Mixes the two input signals into four outputs.
homodyne_reciever.h	Performs coherent detection on the input signal.
sink.h	Closes any unused signals.

#### Source Files

File	Description
netxpto.cpp	Generic purpose simulator definitions.
local_oscillator.cpp	Generates continuous coherent signal.
balanced_beam_splitter.cpp	Mixes the two input signals into two outputs.
optical_hybrid.cpp	Mixes the two input signals into four outputs.
homodyne_reciever.cpp	Performs coherent detection on the input signal.
sink.cpp	Closes any unused signals.

## **System Input Parameters**

This system takes into account the following input parameters:

System Parameters	Description
numberOfBitsGenerat	ed Gives the number of bits to be simulated
bitPeriod	Sets the time between adjacent bits
samplesPerSymbol	Establishes the number of samples each bit in the string is given
localOscillatorPower_	dB&ets the optical power, in units of dBm, at the reference output
localOscillatorPower2	Sets the optical power, in units of W, of the signal
localOscillatorPhase1	Sets the initial phase of the local oscillator used for reference
localOscillatorPhase2	Sets the initial phase of the local oscillator used for signal
transferMatrix	Sets the transfer matrix of the beam splitter used in the
	homodyne detector
responsivity	Sets the responsivity of the photodiodes used in the homodyne
	detector
amplification	Sets the amplification of the trans-impedance amplifier used in
	the homodyne detector
electricalNoiseAmplit	udeSets the amplitude of the gaussian thermal noise added in the
	homodyne detector
shotNoise	Chooses if quantum shot noise is used in the simulation

## Inputs

This system takes no inputs.

## Outputs

The single homodyne system outputs the following objects:

Parameter: Signals:

**Description:** Local Oscillator Optical Reference;  $(S_1)$  **Description:** Local Oscillator Optical Signal;  $(S_2)$ 

**Description:** Beam Splitter Outputs;  $(S_3, S_4)$ 

**Description:** Homodyne Detector Electrical Output; (S<sub>5</sub>)

The double homodyne system outputs the following objects:

**Parameter:** Signals:

**Description:** Local Oscillator Optical Reference;  $(S_1)$  **Description:** Local Oscillator Optical Signal;  $(S_2)$ 

**Description:** 90° Optical Hybrid Outputs;  $(S_3, S_4, S_5, S_6)$ **Description:** Homodyne Detector Electrical Output;  $(S_7)$ 

#### **Simulation Results**

#### Single homodyne results

The numerical results presented in Figure 5.9 were obtained with the simulation described by the block diagram in Figure 5.8a. Theoretical results are a direct trace of (5.8). One can see that the numerical results adhere quite well to the expected curve.

#### Double homodyne results

The numerical results presented in Figure 5.10 were obtained with the simulation described by the block diagram in Figure 5.8b. Theoretical results are a direct trace of (5.13) with  $\theta = \frac{\pi}{4}$ . One can see that the numerical results adhere quite well to the expected curve.

#### **Known Problems**

- 1. Homodyne Super-Block not functioning
- 2. 90° Optical Hybrid PDF needs to be written



Figura 5.9: BER in function of  $\alpha$  for the single homodyne setup.  $X_0=0$  was used



Figura 5.10: BER in function of  $\alpha$  for the double homodyne setup.  $X_0=0$  was used

# **Bibliografia**

[1] Ryo Namiki and Takuya Hirano. Security of quantum cryptography using balanced homodyne detection. *Physical Review A*, 67(2):022308, 2003.

BIBLIOGRAFIA 24

## 5.4 Simplified Coherent Receiver

**Student Name** : Romil Patel **Starting Date** : August 16, 2017

Goal : Develop a simplified structure (low cost) for a coherent

receiver, that can be used in coherent PON, inter-data center connections, or metropolitan networks (optical path lengths

should be < 100 km).

In recent days, homodyne detection has been discussed and investigated a lot due to the advancement in the DSP in the electrical domain. However, a major drawback of homodyne detection is the incoming signal should be separated into inphase and quadrature (I/Q) signals in the optical domain. Therefore, it demands more hardware to accommodate the requirement of the signal separation in the optical domain. For instance, 4 balanced photodetectors with double hybrid structures and 4-channel ADCs are required. On the other hand, heterodyne receiver simplifies the detection scheme to some extent with the requirement of having only half of photodetectors and ADC.

Such coherent detection scheme constitute the solution for the medium-to-long-reach application; however, the cost of coherent receiver becomes a major obstacle in the case of short-reach links applications like PON, inter-data-center communications, metropolitan network etc. In order to get rid of higher cost and to make the transceiver more efficiently applicable in short-reach links, a new architecture of optical receiver has been proposed which combines the advantages of coherent transmission and cost effectiveness of direct detection. The working principle of the receiver is based on the famous Kramers-Kronig(KK) relationship. It facilitates digital post-compensation of linear propagation impairments which is highly efficient in terms of spectral occupancy and energy consumptions.

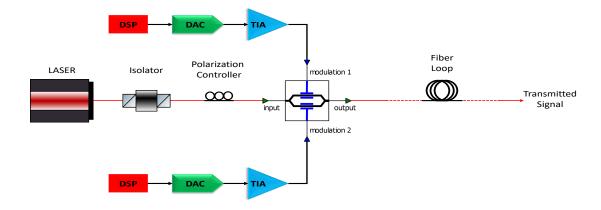


Figura 5.11: Simplified Coherent Transceiver

BIBLIOGRAFIA 25

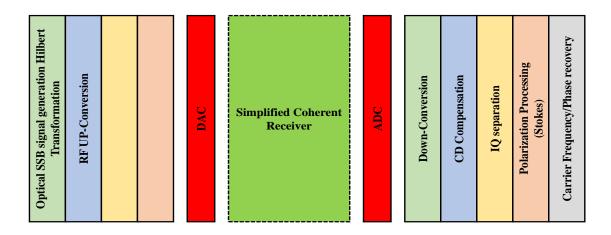


Figura 5.12: Tx/Rx DSP main subsystem

#### **5.4.1** Tx side

Dual polarization(DP) DP-QPSK/DP-16QAM signals (1.25 Gbaud) to be generated at the Tx through an IQ modulator (Figure 5.12) driven by DAC mounted in a FPGA. Polarization-division multiplexing is emulated by dividing the signal in two signals using an optical splitter, where a delay of 12 symbols is applied in order to decorrelate the two polarization tributaries and then, both signals are joined orthogonally employing a polarization beam combiner (PBC).

#### **5.4.2** Rx side

At the receiver side, signal is coherently detected using a simplified coherent receiver and a local oscillator. The optical signal is then converted into the electrical domain using two balanced photodetector (BPD), or alternatively four photodetector, and amplified by a transimpedance amplifier (TIA). Following that, the signals are sampled by two 8-bit 2.5 GSa/s ADC and the this digitized signal sent to the FPGA (Virtex-7) where all post-detection DSP implemented in real-time.

Library

## **6.1** Add

## **Input Parameters**

This block takes no parameters.

## **Functional Description**

This block accepts two signals and outputs one signal built from a sum of the two inputs. The input and output signals must be of the same type.

## **Input Signals**

Number: 2

**Type**: Real, Complex or Complex\_XY signal (ContinuousTimeContinuousAmplitude)

## **Output Signals**

Number: 1

**Type**: Real, Complex or Complex\_XY signal (ContinuousTimeContinuousAmplitude)

## 6.2 Binary source

This block generates a sequence of binary values (1 or 0) and it can work in four different modes:

1. Random

3. DeterministicCyclic

2. PseudoRandom

4. DeterministicAppendZeros

This blocks doesn't accept any input signal. It produces any number of output signals.

## **Input Parameters**

Parameter: mode{PseudoRandom}

(Random, PseudoRandom, DeterministicCyclic, DeterministicAppendZeros)

**Parameter:** probabilityOfZero{0.5}

 $(real \in [0,1])$ 

**Parameter:** patternLength{7}

(integer  $\in$  [1,32])

**Parameter:** bitStream{"0100011101010101"}

(string of 0's and 1's)

**Parameter:** numberOfBits{-1}

(long int)

**Parameter:** bitPeriod{1.0/100e9}

(double)

#### **Methods**

BinarySource(vector\Signal \*\rangle &InputSig, vector\Signal \*\rangle &OutputSig) :Block(InputSig, OutputSig){};

void initialize(void);
bool runBlock(void);

void setMode(BinarySourceMode m) BinarySourceMode const getMode(void)

void setProbabilityOfZero(double pZero)

double const getProbabilityOfZero(void)

void setBitStream(string bStream)

```
string const getBitStream(void)

void setNumberOfBits(long int nOfBits)

long int const getNumberOfBits(void)

void setPatternLength(int pLength)

int const getPatternLength(void)

void setBitPeriod(double bPeriod)

double const getBitPeriod(void)
```

#### **Functional description**

The *mode* parameter allows the user to select between one of the four operation modes of the binary source.

**Random Mode** Generates a 0 with probability *probabilityOfZero* and a 1 with probability 1-probabilityOfZero.

**Pseudorandom Mode** Generates a pseudorandom sequence with period  $2^{patternLength}$  – 1.

**DeterministicCyclic Mode** Generates the sequence of 0's and 1's specified by *bitStream* and then repeats it.

**DeterministicAppendZeros Mode** Generates the sequence of 0's and 1's specified by *bitStream* and then it fills the rest of the buffer space with zeros.

#### **Input Signals**

Number: 0

**Type:** Binary (DiscreteTimeDiscreteAmplitude)

## **Output Signals**

**Number:** 1 or more

**Type:** Binary (DiscreteTimeDiscreteAmplitude)

#### **Examples**

#### Random Mode

**PseudoRandom Mode** As an example consider a pseudorandom sequence with patternLength=3 which contains a total of  $7(2^3-1)$  bits. In this sequence it is possible to find every combination of 0's and 1's that compose a 3 bit long subsequence with the exception of 000. For this example the possible subsequences are 010, 110, 101, 100, 111, 001 and 100 (they appear in figure 6.1 numbered in this order). Some of these require wrap.

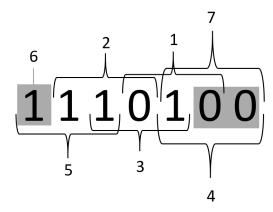


Figura 6.1: Example of a pseudorandom sequence with a pattern length equal to 3.

**DeterministicCyclic Mode** As an example take the *bit stream '0100011101010101'*. The generated binary signal is displayed in.

**DeterministicAppendZeros Mode** Take as an example the *bit stream '0*100011101010101'. The generated binary signal is displayed in 6.2.

#### Sugestions for future improvement

Implement an input signal that can work as trigger.

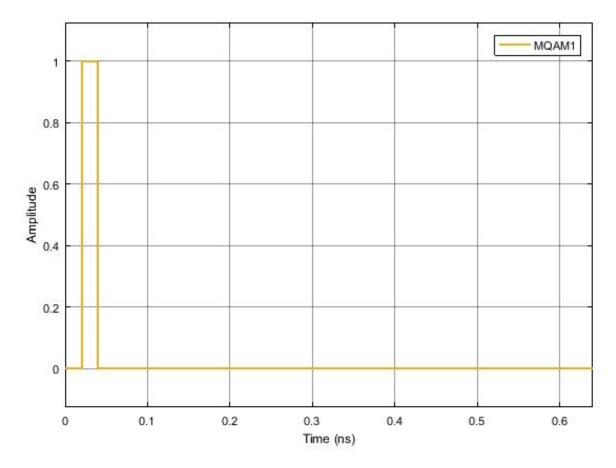


Figura 6.2: Binary signal generated by the block operating in the *Deterministic Append Zeros* mode with a binary sequence 01000...

## 6.3 Clock

This block doesn't accept any input signal. It outputs one signal that corresponds to a sequence of Dirac's delta functions with a user defined *period*.

#### **Input Parameters**

```
Parameter: period{ 0.0 };

Parameter: samplingPeriod{ 0.0 };

Methods

Clock()

Clock(vector<Signal *> &InputSig, vector<Signal *> &OutputSig) :Block(InputSig, OutputSig)

void initialize(void)

bool runBlock(void)

void setClockPeriod(double per)
```

## **Functional description**

void setSamplingPeriod(double sPeriod)

## **Input Signals**

Number: 0

## **Output Signals**

Number: 1

**Type:** Sequence of Dirac's delta functions. (TimeContinuousAmplitudeContinuousReal)

## **Examples**

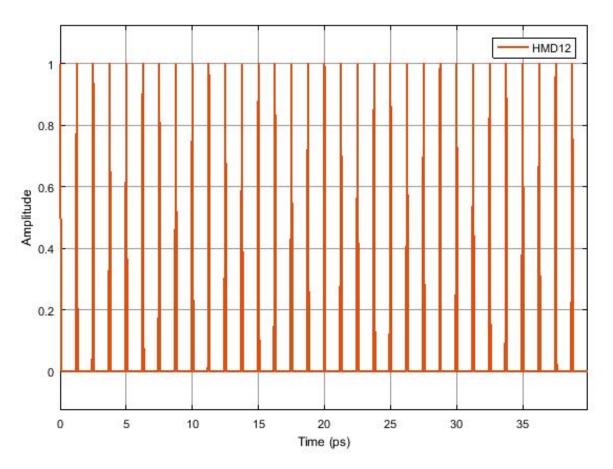


Figura 6.3: Example of the output signal of the clock

## Sugestions for future improvement

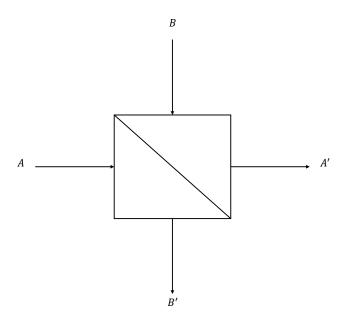


Figura 6.4: 2x2 coupler

## 6.4 Coupler 2 by 2

In general, the matrix representing 2x2 coupler can be summarized in the following way,

$$\begin{bmatrix} A' \\ B' \end{bmatrix} = \begin{bmatrix} T & iR \\ iR & T \end{bmatrix} \cdot \begin{bmatrix} A \\ B \end{bmatrix}$$
 (6.1)

Where, A and B represent inputs to the 2x2 coupler and A' and B' represent output of the 2x2 coupler. Parameters T and R represent transmitted and reflected part respectively which can be quantified in the following form,

$$T = \sqrt{1 - \eta_R} \tag{6.2}$$

$$R = \sqrt{\eta_R} \tag{6.3}$$

Where, value of the  $\sqrt{\eta_R}$  lies in the range of  $0 \le \sqrt{\eta_R} \le 1$ .

It is worth to mention that if we put  $\eta_R = 1/2$  then it leads to a special case of "Balanced Beam splitter" which equally distribute the input power into both output ports.

#### 6.5 Decoder

This block accepts a complex electrical signal and outputs a sequence of binary values (0's and 1's). Each point of the input signal corresponds to a pair of bits.

#### **Input Parameters**

```
Parameter: t_integer m{4}

Parameter: vector<t_complex> iqAmplitudes{{1.0, 1.0},{-1.0, 1.0},{-1.0, -1.0},{1.0, -1.0}};

Methods

Decoder()

Decoder(vector<Signal *> &InputSig, vector<Signal *> &OutputSig) :Block(InputSig, OutputSig)

void initialize(void)

bool runBlock(void)

void setM(int mValue)

void getM()

void setIqAmplitudes(vector<t_iqValues> iqAmplitudesValues)

vector<t_iqValues>getIqAmplitudes()
```

#### **Functional description**

This block makes the correspondence between a complex electrical signal and pair of binary values using a predetermined constellation.

To do so it computes the distance in the complex plane between each value of the input signal and each value of the *iqAmplitudes* vector selecting only the shortest one. It then converts the point in the IQ plane to a pair of bits making the correspondence between the input signal and a pair of bits.

## **Input Signals**

Number: 1

**Type:** Electrical complex (TimeContinuousAmplitudeContinuousReal)

## **Output Signals**

Number: 1

**Type:** Binary

## **Examples**

As an example take an input signal with positive real and imaginary parts. It would correspond to the first point of the *iqAmplitudes* vector and therefore it would be associated to the pair of bits 00.



Figura 6.5: Example of the output signal of the decoder for a binary sequence 01. As expected it reproduces the initial bit stream

# Sugestions for future improvement

#### 6.6 Discrete to continuous time

This block converts a signal discrete in time to a signal continuous in time. It accepts one input signal that is a sequence of 1's and -1's and it produces one output signal that is a sequence of Dirac delta functions.

# **Input Parameters**

```
Parameter: numberOfSamplesPerSymbol{8} (int)
```

#### **Methods**

```
DiscreteToContinuousTime(vector<Signal *> &inputSignals, vector<Signal *> &outputSignals):Block(inputSignals, outputSignals){};

void initialize(void);

bool runBlock(void);

void setNumberOfSamplesPerSymbol(int nSamplesPerSymbol)

int const getNumberOfSamplesPerSymbol(void)
```

# **Functional Description**

This block reads the input signal buffer value, puts it in the output signal buffer and it fills the rest of the space available for that symbol with zeros. The space available in the buffer for each symbol is given by the parameter <code>numberOfSamplesPerSymbol</code>.

#### **Input Signals**

```
Number: 1
```

**Type**: Sequence of 1's and -1's. (DiscreteTimeDiscreteAmplitude)

### **Output Signals**

Number : 1

**Type**: Sequence of Dirac delta functions (ContinuousTimeDiscreteAmplitude)

### Example



Figura 6.6: Example of the type of signal generated by this block for a binary sequence 0100...

# 6.7 Homodyne receiver

This block of code simulates the reception and demodulation of an optical signal (which is the input signal of the system) outputing a binary signal. A simplified schematic representation of this block is shown in figure 6.7.

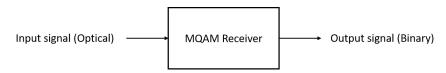


Figura 6.7: Basic configuration of the MQAM receiver

# **Functional description**

This block accepts one optical input signal and outputs one binary signal that corresponds to the M-QAM demodulation of the input signal. It is a complex block (as it can be seen from figure 6.8) of code made up of several simpler blocks whose description can be found in the *lib* repository.

In can also be seen from figure 6.8 that there's an extra internal (generated inside the homodyne receiver block) input signal generated by the *Clock*. This block is used to provide the sampling frequency to the *Sampler*.

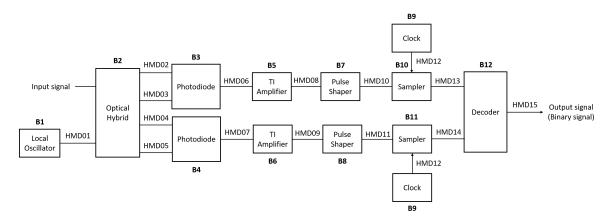


Figura 6.8: Schematic representation of the block homodyne receiver.

#### Input parameters

This block has some input parameters that can be manipulated by the user in order oto change the basic configuration of the receiver. Each parameter has associated a function that allows for its change. In the following table (table 6.2) the input parameters and corresponding functions are summarized.

Input parameters	Function	Туре	Accepted values
IQ amplitudes	setIqAmplitudes	Vector of	<b>Example</b> for a 4-qam
		coordinate	mapping: { { 1.0, 1.0 },
		points in the	{ -1.0, 1.0 }, { -1.0, -1.0 },
		I-Q plane	{ 1.0, -1.0 } }
Local oscillator	setLocalOscillatorOpticalPower_dB	ndouble(t_real)	Any double greater
power (in dBm)			than zero
Local oscillator	setLocalOscillatorPhase	double(t_real)	Any double greater
phase			than zero
Responsivity of the	setResponsivity	double(t_real)	∈ [0,1]
photodiodes			
Amplification (of	setAmplification	double(t_real)	Positive real number
the TI amplifier)			
Noise amplitude	setNoiseAmplitude	double(t_real)	Real number greater
(introduced by the			than zero
TI amplifier)			titati zeto
Samples to skipe	setSamplesToSkip	int(t_integer)	
Save internal signals	setSaveInternalSignals	bool	True or False
Sampling period	setSamplingPeriod	double	Givem by
			symbolPeriod/samplesPer\$

Tabela 6.1: List of input parameters of the block MQAM receiver

#### Methods

```
HomodyneReceiver(vector<Signal *> &inputSignal, vector<Signal *> &outputSignal) (constructor)
```

void setIqAmplitudes(vector<t\_iqValues> iqAmplitudesValues)

vector<t\_iqValues> const getIqAmplitudes(void)

void setLocalOscillatorSamplingPeriod(double sPeriod)

void setLocalOscillatorOpticalPower(double opticalPower)

void setLocalOscillatorOpticalPower\_dBm(double opticalPower\_dBm)

void setLocalOscillatorPhase(double lOscillatorPhase)

void setLocalOscillatorOpticalWavelength(double lOscillatorWavelength)

void setSamplingPeriod(double sPeriod)

 $void\ setResponsivity (t\_real\ Responsivity)$ 

void setAmplification(t\_real Amplification)

 $void\ set Noise Amplitude (t\_real\ Noise Amplitude)$ 

 $void\ setImpulseResponseTimeLength (int\ impResponseTimeLength)$ 

void setFilterType(PulseShaperFilter fType)

void setRollOffFactor(double rOffFactor)

void setClockPeriod(double per)

void setSamplesToSkip(int sToSkip)

# **Input Signals**

Number: 1

Type: Optical signal

# **Output Signals**

Number: 1

**Type:** Binary signal

# Example

Sugestions for future improvement

# 6.8 IQ modulator

This blocks accepts one inupt signal continuous in both time and amplitude and it can produce either one or two output signals. It generates an optical signal and it can also generate a binary signal.

# **Input Parameters**

Parameter: outputOpticalPower{1e-3}

(double)

Parameter: outputOpticalWavelength{1550e-9}

(double)

**Parameter:** outputOpticalFrequency{speed\_of\_light/outputOpticalWavelength}

(double)

#### Methods

IqModulator(vector<Signal \*> &InputSig, vector<Signal \*> &OutputSig) :Block(InputSig,
OutputSig){};

```
void initialize(void);
bool runBlock(void);
void setOutputOpticalPower(double outOpticalPower)
void setOutputOpticalPower_dBm(double outOpticalPower_dBm)
void setOutputOpticalWavelength(double outOpticalWavelength)
void setOutputOpticalFrequency(double outOpticalFrequency)
```

#### **Functional Description**

This block takes the two parts of the signal: in phase and in amplitude and it combines them to produce a complex signal that contains information about the amplitude and the phase.

This complex signal is multiplied by  $\frac{1}{2}\sqrt{outputOpticalPower}$  in order to reintroduce the information about the energy (or power) of the signal. This signal corresponds to an optical signal and it can be a scalar or have two polarizations along perpendicular axis. It is the signal that is transmited to the receptor.

The binary signal is sent to the Bit Error Rate (BER) meaurement block.

### **Input Signals**

Number: 2

 $\begin{tabular}{lll} \textbf{Type} : & Sequence & of & impulses & modulated & by & the & filter \\ (Continuous Time Contious Amplitude)) & & & & \\ \end{tabular}$ 

# **Output Signals**

Number: 1 or 2

**Type**: Complex signal (optical) (ContinuousTimeContinuousAmplitude) and binary signal (DiscreteTimeDiscreteAmplitude)

## Example



Figura 6.9: Example of a signal generated by this block for the initial binary signal 0100...

#### 6.9 Local Oscillator

This block simulates a local oscillator which can have shot noise or not. It produces one output complex signal and it doesn't accept input signals.

### **Input Parameters**

```
Parameter: opticalPower{ 1e-3 }
Parameter: wavelength{ 1550e-9 }
Parameter: frequency{ SPEED_OF_LIGHT / wavelength }
Parameter: phase{ 0 }
Parameter: samplingPeriod{ 0.0 }
Parameter: shotNoise{ false }
```

#### **Methods**

```
LocalOscillator()

LocalOscillator(vector<Signal *> &InputSig, vector<Signal *> &OutputSig)
:Block(InputSig, OutputSig){};

void initialize(void);

bool runBlock(void);

void setSamplingPeriod(double sPeriod);

void setOpticalPower(double oPower);

void setOpticalPower_dBm(double oPower_dBm);

void setWavelength(double wlength);

void setPhase(double lOscillatorPhase);
```

#### **Functional description**

void setShotNoise(bool sNoise);

This block generates a complex signal with a specified phase given by the input parameter *phase*.

It can have shot noise or not which corresponds to setting the *shotNoise* parameter to True or False, respectively. If there isn't shot noise the output of this block is given by  $0.5 * \sqrt{OpticalPower} * ComplexSignal$ . If there's shot noise then a random gaussian distributed noise component is added to the *OpticalPower*.

# **Input Signals**

Number: 0

# **Output Signals**

Number: 1

Type: Optical signal

# Examples

Sugestions for future improvement

# 6.10 MQAM mapper

This block does the mapping of the binary signal using a *m*-QAM modulation. It accepts one input signal of the binary type and it produces two output signals which are a sequence of 1's and -1's.

#### **Input Parameters**

```
Parameter: m{4}
```

(m should be of the form  $2^n$  with n integer)

**Parameter:** iqAmplitudes{{ 1.0, 1.0 }, { -1.0, 1.0 }, { -1.0, -1.0 }, { 1.0, -1.0 }}

#### Methods

```
MQamMapper(vector<Signal *> &InputSig, vector<Signal *> &OutputSig)
:Block(InputSig, OutputSig) {};

void initialize(void);

bool runBlock(void);

void setM(int mValue);

void setIqAmplitudes(vector<t_iqValues> iqAmplitudesValues);
```

#### **Functional Description**

In the case of m=4 this block atributes to each pair of bits a point in the I-Q space. The constellation used is defined by the *iqAmplitudes* vector. The constellation used in this case is ilustrated in figure 6.10.

#### **Input Signals**

```
Number: 1
```

**Type**: Binary (DiscreteTimeDiscreteAmplitude)

#### **Output Signals**

Number: 2

**Type** : Sequence of 1's and -1's (DiscreteTimeDiscreteAmplitude)

#### Example

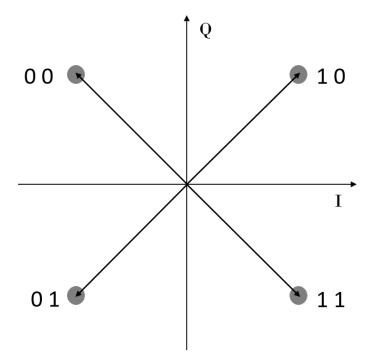


Figura 6.10: Constellation used to map the signal for m=4



Figura 6.11: Example of the type of signal generated by this block for the initial binary signal 0100...

# 6.11 MQAM transmitter

This block generates a MQAM optical signal. It can also output the binary sequence. A schematic representation of this block is shown in figure 6.12.



Figura 6.12: Basic configuration of the MQAM transmitter

# **Functional description**

This block generates an optical signal (output signal 1 in figure 6.13). The binary signal generated in the internal block Binary Source (block B1 in figure 6.13) can be used to perform a Bit Error Rate (BER) measurement and in that sense it works as an extra output signal (output signal 2 in figure 6.13).

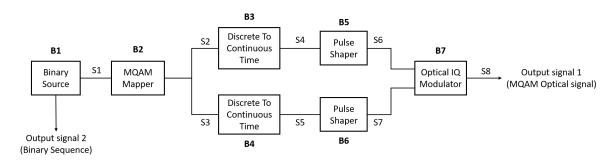


Figura 6.13: Schematic representation of the block MQAM transmitter.

# Input parameters

This block has a special set of functions that allow the user to change the basic configuration of the transmitter. The list of input parameters, functions used to change them and the values that each one can take are summarized in table 6.2.

Input parameters	Function	Туре	Accepted values
Mode	setMode()	string	PseudoRandom Random DeterministicAppendZero DeterministicCyclic
Number of bits generated	setNumberOfBits()	int	Any integer
Pattern length	setPatternLength()	int	Real number greater than zero
Number of bits	setNumberOfBits()	long	Integer number greater than zero
Number of samples per symbol	setNumberOfSamplesPerSymb	o <b>l()</b> t	Integer number of the type $2^n$ with n also integer
Roll of factor	setRollOfFactor()	double	∈ [0,1]
IQ amplitudes	setIqAmplitudes()	Vector of coordinate points in the I-Q plane	Example for a 4-qam mapping: { { 1.0, 1.0 }, { -1.0, 1.0 }, { -1.0, -1.0 },
Output optical power	setOutputOpticalPower()	int	Real number greater than zero
Save internal signals	setSaveInternalSignals()	bool	True or False

Tabela 6.2: List of input parameters of the block MQAM transmitter

#### Methods

```
MQamTransmitter(vector<Signal *> &inputSignal, vector<Signal *> &outputSignal); (constructor)
```

void set(int opt);
void setMode(BinarySourceMode m)
BinarySourceMode const getMode(void)
void setProbabilityOfZero(double pZero)
double const getProbabilityOfZero(void)
void setBitStream(string bStream)
string const getBitStream(void)

void setNumberOfBits(long int nOfBits) long int const getNumberOfBits(void) void setPatternLength(int pLength) int const getPatternLength(void) void setBitPeriod(double bPeriod) double const getBitPeriod(void) void setM(int mValue) int const getM(void) void setIqAmplitudes(vector<t\_iqValues> iqAmplitudesValues) vector<t\_iqValues> const getIqAmplitudes(void) void setNumberOfSamplesPerSymbol(int n) int const getNumberOfSamplesPerSymbol(void) void setRollOffFactor(double rOffFactor) double const getRollOffFactor(void) void setSeeBeginningOfImpulseResponse(bool sBeginningOfImpulseResponse) double const getSeeBeginningOfImpulseResponse(void) void setOutputOpticalPower(t\_real outOpticalPower) t\_real const getOutputOpticalPower(void) void setOutputOpticalPower\_dBm(t\_real outOpticalPower\_dBm) t\_real const getOutputOpticalPower\_dBm(void)

# **Output Signals**

Number: 1 optical and 1 binary (optional)

Type: Optical signal

# Example



Figura 6.14: Example of the binary sequence generated by this block for a sequence 0100...

# Sugestions for future improvement

Add to the system another block similar to this one in order to generate two optical signals with perpendicular polarizations. This would allow to combine the two optical signals and generate an optical signal with any type of polarization.

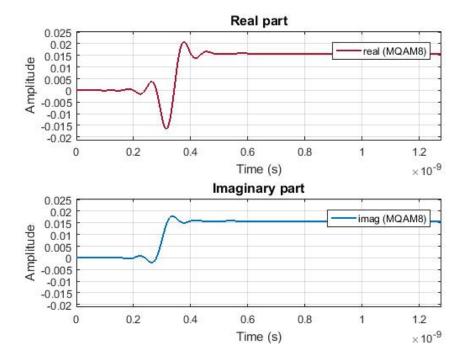


Figura 6.15: Example of the output optical signal generated by this block for a sequence 0100...