# Discrete to Continuous Time

## December 28, 2016

This block converts a signal discrete in time to a signal continuous in time. It accepts one input signal that is a sequence of 1's and -1's and it produces one output signal that is a sequence of Dirac delta functions.

## Input Parameters

• numberOfSamplesPerSymbol{8} (int)

## Methods

DiscreteToContinuousTime(vector<Signal \*> &inputSignals, vector<Signal \*> &outputSignals) :Block(inputSignals, outputSignals){};

```
\label{lock} void\ initialize(void); \\ bool\ runBlock(void); \\ void\ setNumberOfSamplesPerSymbol(int\ nSamplesPerSymbol)\\ int\ const\ getNumberOfSamplesPerSymbol(void)
```

#### **Functional Description**

This block reads the input signal buffer value, puts it in the output signal buffer and it fills the rest of the space available for that symbol with zeros. The space available in the buffer for each symbol is given by the parameter numberOfSamplesPerSymbol.

#### Input Signals

Number : 1

**Type**: Sequence of 1's and -1's. (DiscreteTimeDiscreteAmplitude)

## **Output Signals**

Number : 1

**Type**: Sequence of Dirac delta functions (ContinuousTimeDiscreteAmplitude)

## Example

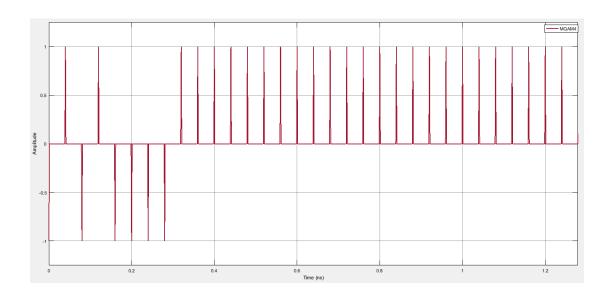


Figure 1: Example of the type of signal generated by this block.