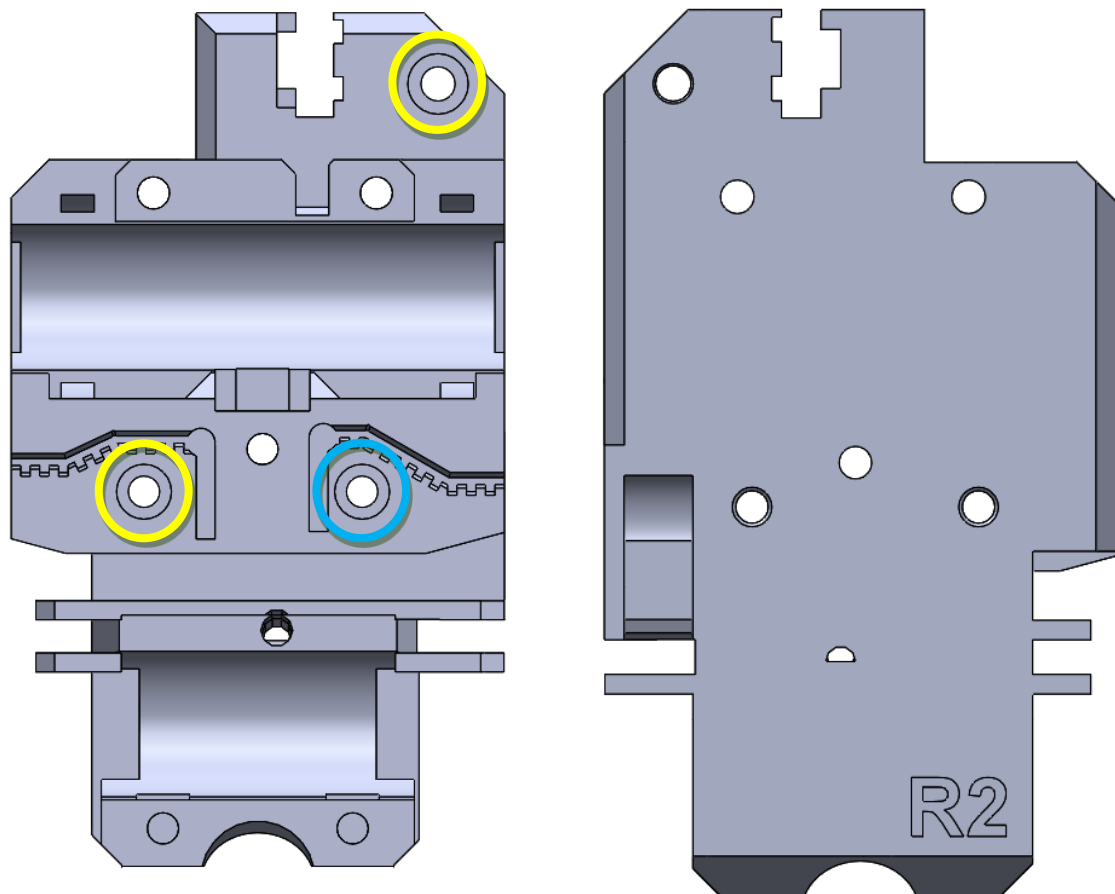# X-Carriage guide

Table of Contents

Introduction

This simple guide to show what fasteners you will need for some of the most popular X-Carriages. The Bondtech kit contains screws suited for the Original Prusa carriage, if you use another carriage different screw lengths and nuts could be necessary.
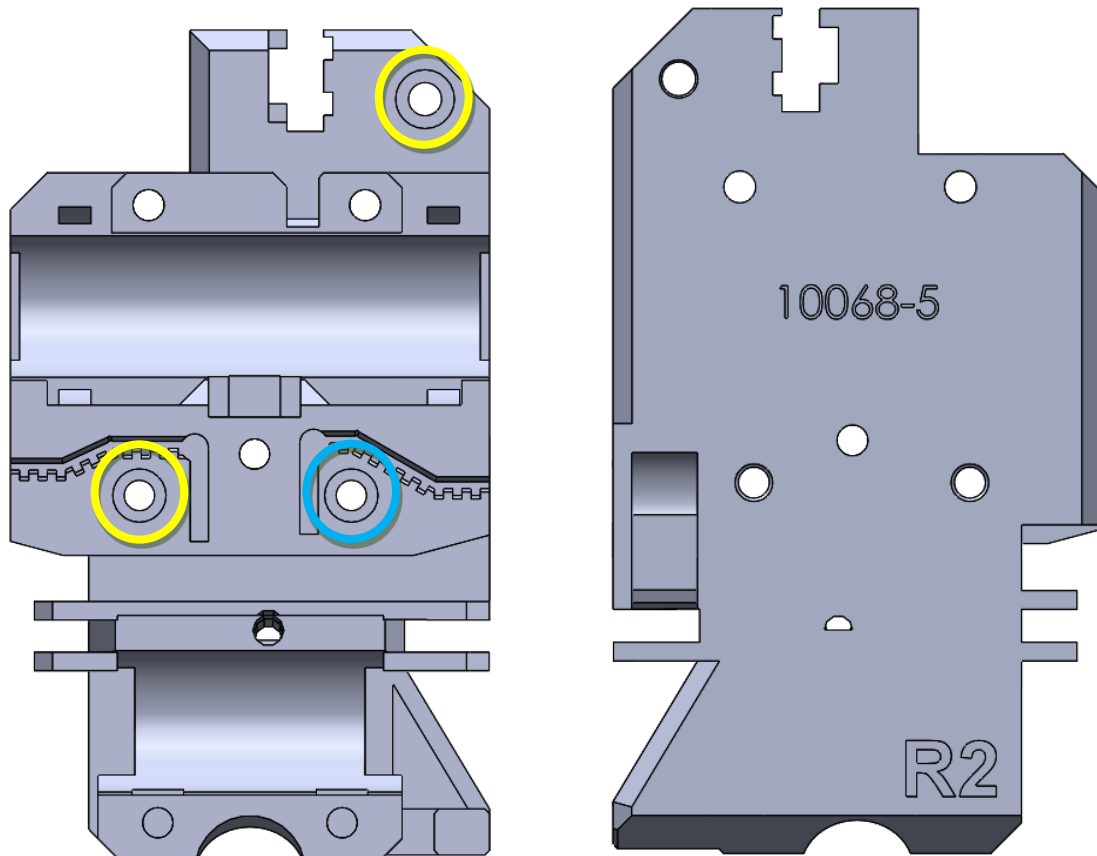
Prusa

Version: X-Carriage_MK3(R2)

- ● M3x40
- ● M3x45

Bondtech

Version: X-Carriage_Modded(R2)_for_Mk2(s)

- M3x40

- M3x45

Bear

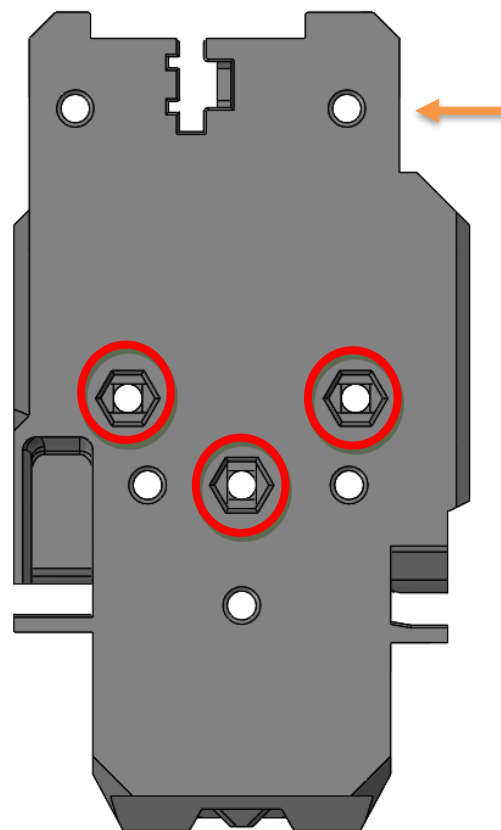Version: Bondtech_x_carriage_mk3
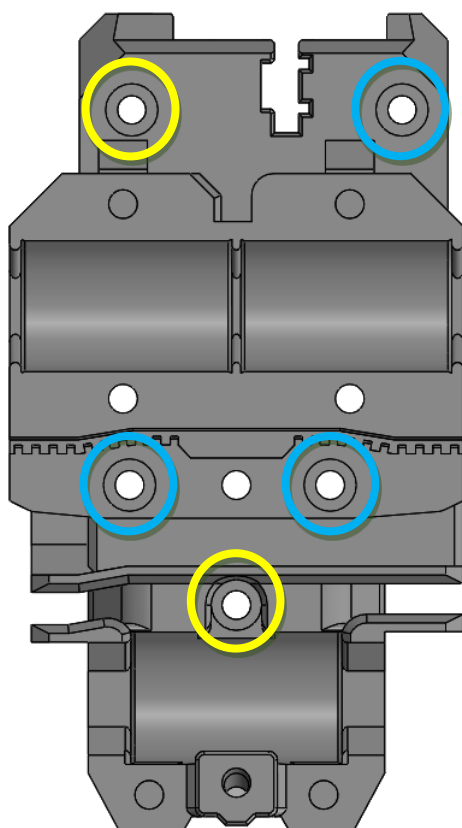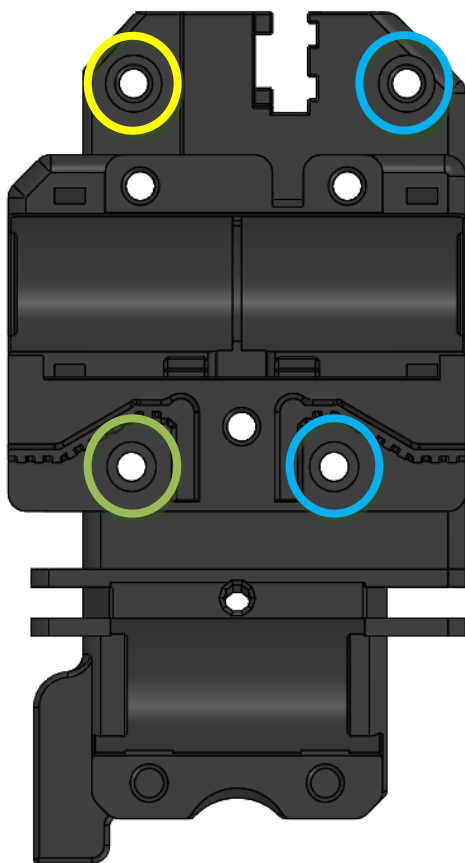
- M3x10 x2
- M3x40 x3

- M3 hex nut x3
- M3 Square nut (Into extruder)
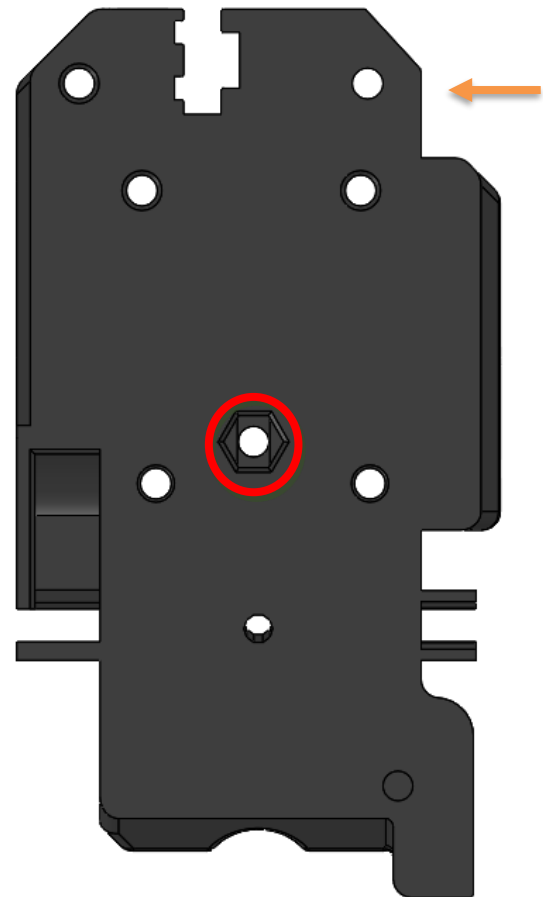
Zaribo

Version: X-Carriage 2.31
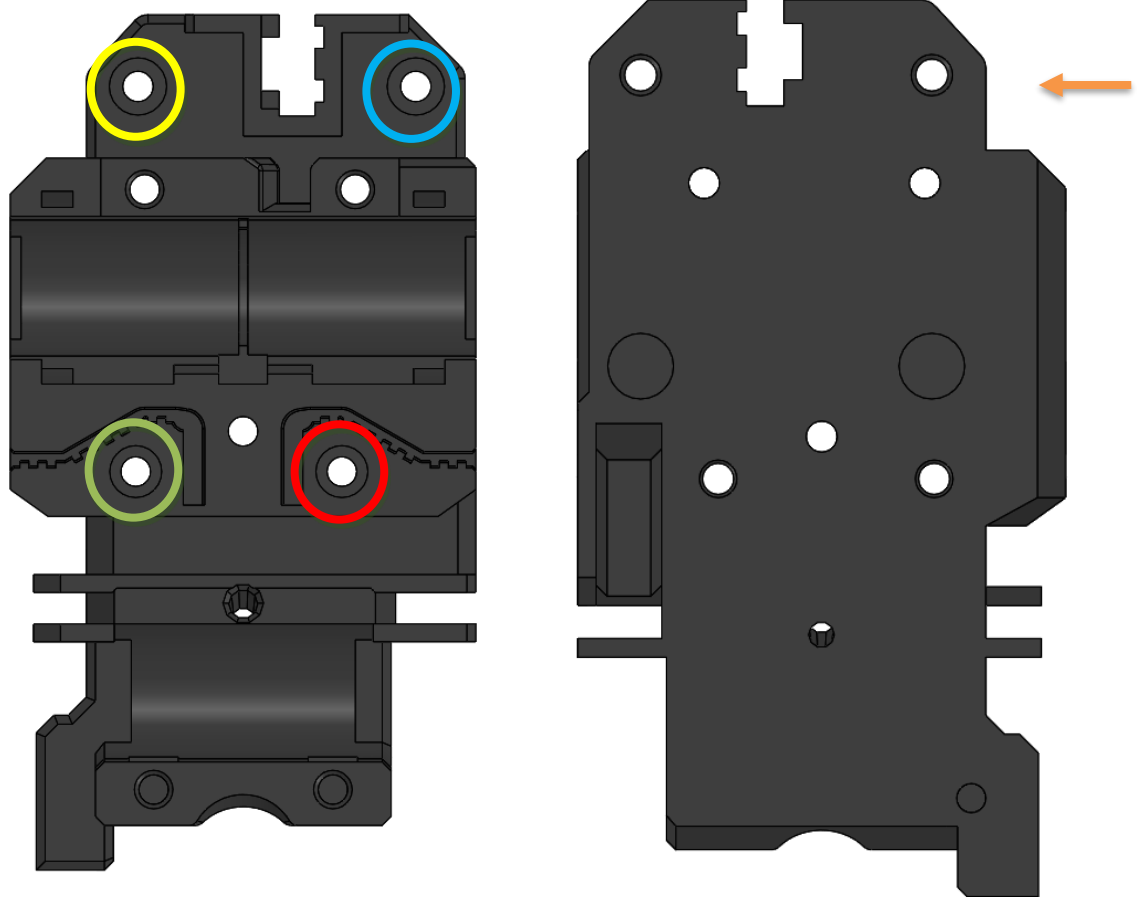

- M3x10

- M3x30

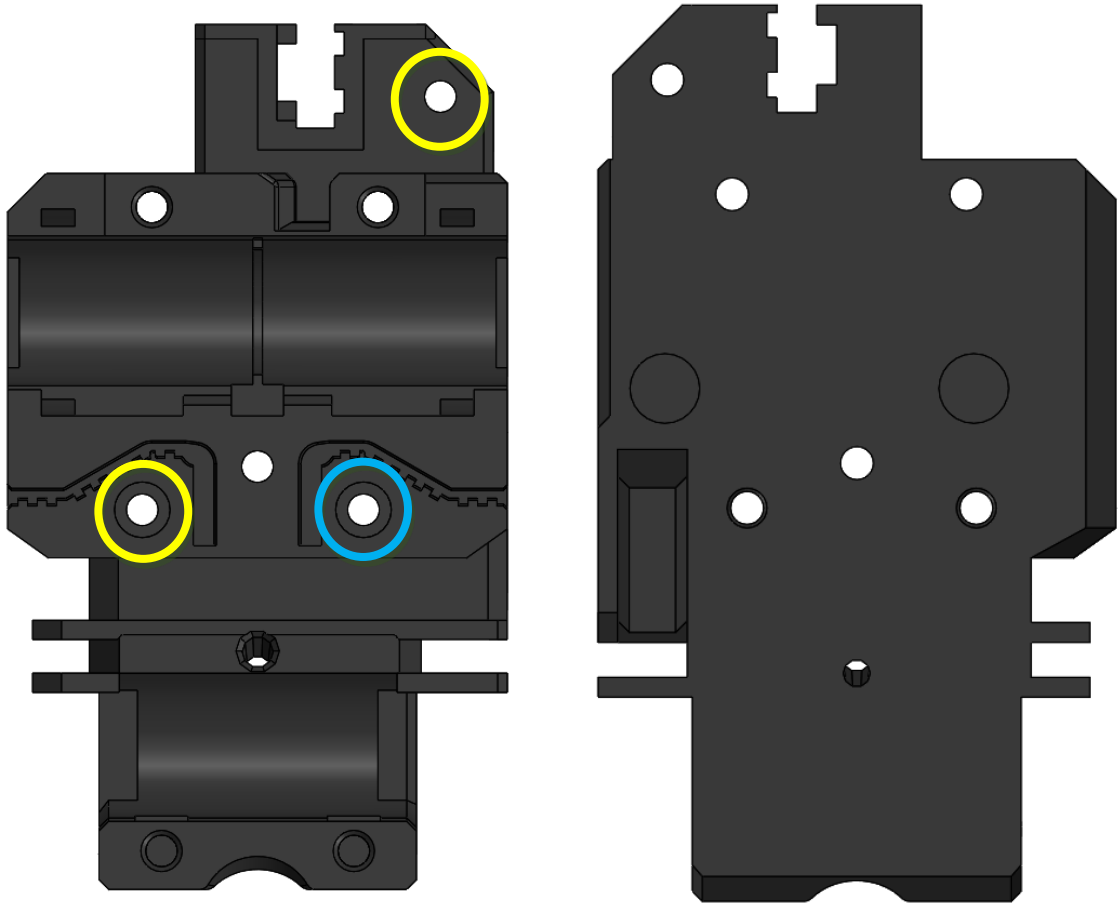- M3x40 x2

- M3 hex nut.

- M3 Square (Into extruder)

Vecko

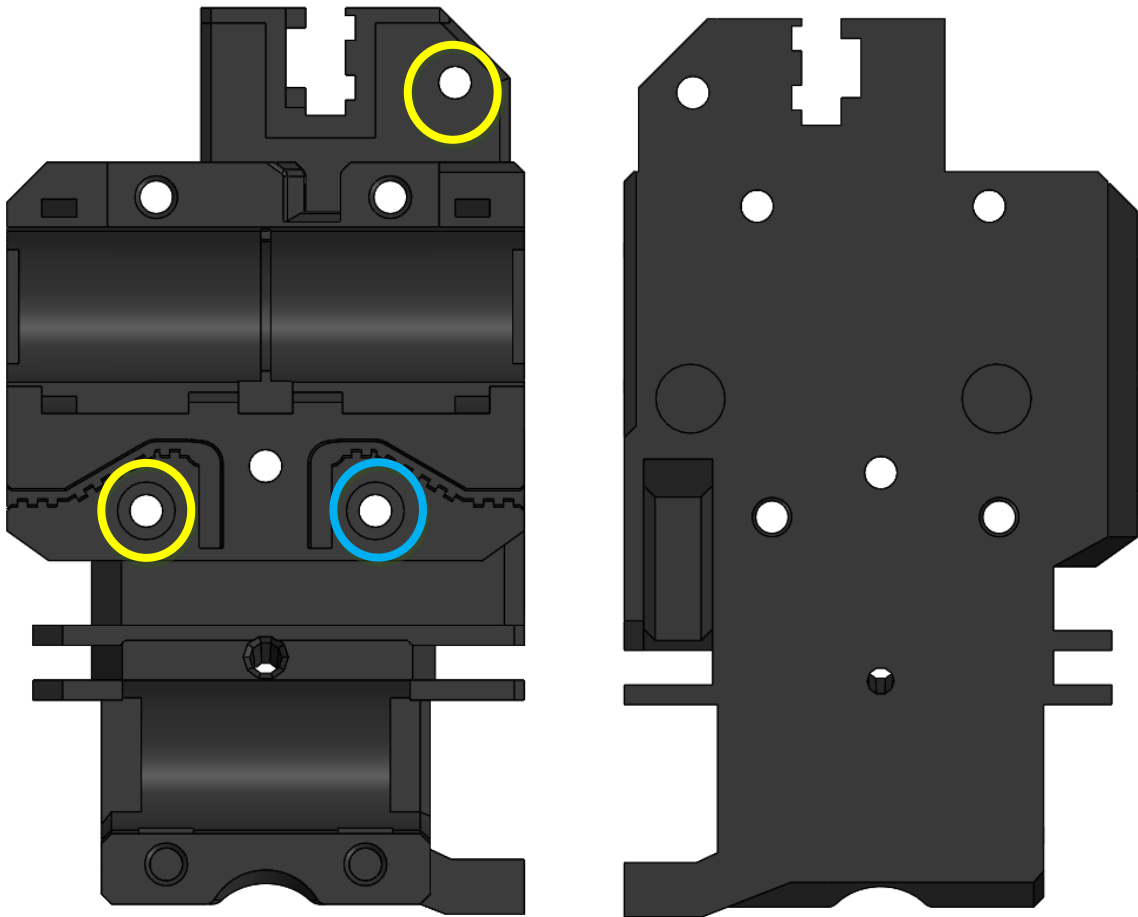## Version: X-Carriage v2

- M3x8
- M3x30
- M3x35
- M3x40

- M3 Square nut (Into extruder)

Version: X-Carriage v2.6S_Mk3

- M3x40

- M3x45

- M3x40
- M3x45

If you have any questions please first read the FAQ (http://www.bondtech.se/en/faq/). If the question still hasn't been answered feel free to contact us by email or our online chat.

BONDTECH

Repslagarvägen 3 J
33153 Värnamo
Sweden

e-mail: support@bondtech.se
phone: +46702220193
paypal: payments@bondtech.se
web: www.bondtech.se
VAT-registration number: SE556995564301