# RP02 REAR DRILL GUIDE

APACHE 2800 | OUTSIDE REAR VIEW | US LETTER 8.5 x 11 in

**PRINT ACTUAL SIZE / 100%**

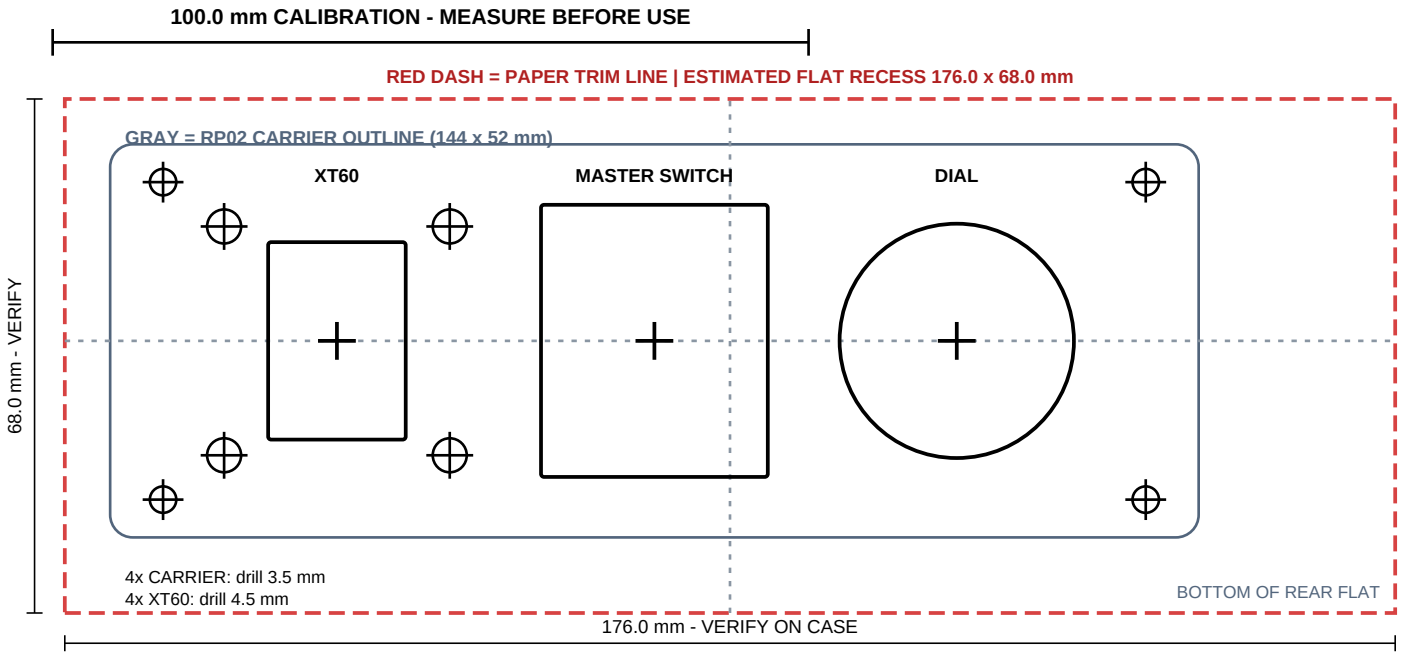


## CUT / DRILL KEY

Solid black outlines: remove case material. Crosses: center-punch locations.
Red dashed outline: cut the PAPER only. Gray outline: final carrier footprint.
Large openings: XT60 18.2 x 26.12; switch 30 x 36; dial body clearance dia 31.
The printed carrier provides the finished 14.6 x 22.52 XT60 opening, 21.96 x 27.42 switch grip, and 9.67 mm dial bushing plus anti-rotation hole. Do not enlarge carrier openings from this sheet.

### STOP GATE - THIS TEMPLATE USES AN APPROXIMATE THIRD-PARTY CASE MODEL

1. Measure the red trim box on paper: 176.0 x 68.0 mm. Reject any scaled print.
2. Cut out the paper, tape it into the real rear recess, then dry-fit the printed carrier and hardware.
3. Confirm no contact with hinge barrels, ribs, lid, tray, fuse cover, nuts, terminals, or wire bends.
4. Drill small pilots first; use suitable plastic-cutting tools and edge support. Deburr and add edge protection.

## INSTALLATION ORDER

A. Verify paper scale and real recess size. B. Mark only the four 3.5 mm carrier centers.
C. Temporarily locate the carrier with removable tape or two pilot holes; recheck lid and hinge clearance.
D. Transfer component openings; cut undersize, then file/ream to fit. E. Install grommets/edge protection as needed.
F. Fit XT60, switch and dial to the carrier before final mounting; keep the case unpowered during all work.



25.0 mm square



**CUTTING THE CASE VOIDS ITS ORIGINAL ENVIRONMENTAL RATING UNLESS THE FINAL INSTALLATION IS SEALED AND TESTED.**