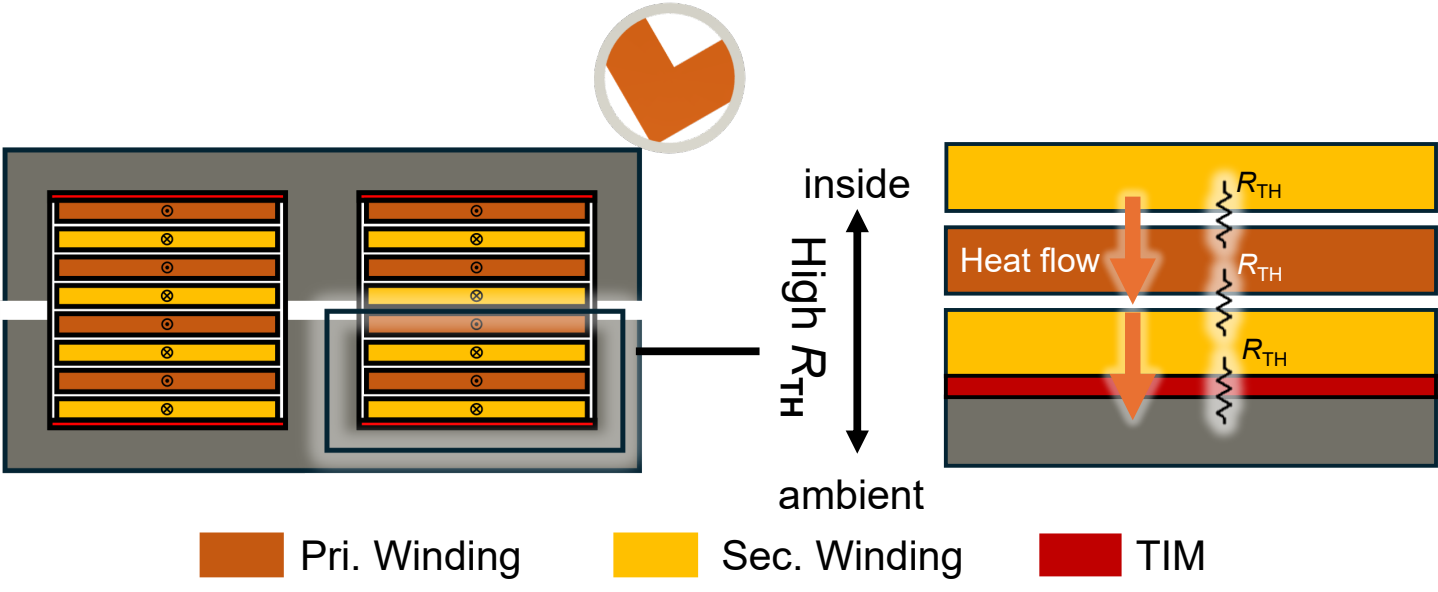

inside
High R_{TH}
ambient
Heat flow
R_{TH}
R_{TH}
R_{TH}
Pri. Winding
Sec. Winding
TIM