



Chapter 1

Introduction

Chapter 1 Objectives

Computer organization and architecture.

Units of measure common to computer systems.

Computer as a layered system.

Components von Neumann architecture and the function of basic computer components.

1.1 Overview

Why study computer organization and architecture?

- Design better programs, including system software such as compilers, operating systems, and device drivers.
- Optimize program behavior.
- Evaluate (benchmark) computer system performance.
- Understand time, space, and price tradeoffs.

1.1 Overview

Computer organization

- physical aspects of computer systems.
- E.g., circuit design, control signals, memory types.
- How does a computer work?

Computer architecture

- Logical aspects of system as seen by the programmer.
- E.g., instruction sets, instruction formats, data types, addressing modes.
- How do I design a computer?

1.2 Computer Components



 Principle of Equivalence of Hardware and Software:


– Anything that can be done with software can also be done with hardware, and anything that can be done with hardware can also be done with software.*

^{*} Assuming speed is not a concern.

1.2 Computer Components

 At the most basic level, a computer is a device consisting of three pieces:

- A processor to interpret and execute programs
- A memory to store both data and programs
- A mechanism for transferring data to and from the outside world.

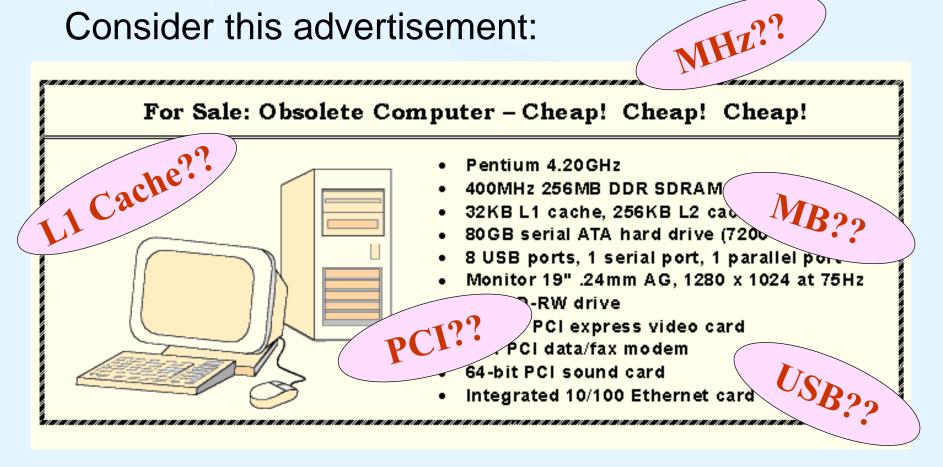

What does it all mean??

Measures of capacity and speed:

- Kilo- (K) = 1 thousand = 10^3 and 2^{10}
- Mega- (M) = 1 million $= 10^6$ and 2^{20}
- Giga- (G) = 1 billion = 10^9 and 2^{30}
- Tera- (T) = 1 trillion = 10^{12} and 2^{40}
- Peta- (P) = 1 quadrillion = 10^{15} and 2^{50}



- Hertz = clock cycles per second (frequency)
 - -1MHz = 1,000,000Hz
 - Processor speeds are measured in MHz or GHz.
- Byte = a unit of storage
 - $1KB = 2^{10} = 1024$ Bytes
 - $-1MB = 2^{20} = 1,048,576$ Bytes
 - Main memory (RAM) is measured in MB
 - Disk storage is measured in GB for small systems, TB for large systems.

Measures of time and space:

- Milli- (m) = 1 thousandth = 10^{-3}
- Micro- $(\mu) = 1$ millionth = 10^{-6}
- Nano- (n) = 1 billionth = 10^{-9}
- Pico- (p) = 1 trillionth = 10^{-12}
- Femto- (f) = 1 quadrillionth = 10^{-15}

- Millisecond = 1 thousandth of a second
 - Hard disk drive access times are often 10 to 20 milliseconds.
- Nanosecond = 1 billionth of a second
 - Main memory access times are often 50 to 70 nanoseconds.
- Micron (micrometer) = 1 millionth of a meter
 - Circuits on computer chips are measured in microns.

Cycle time is the reciprocal of clock frequency.

A bus operating at 133MHz has a cycle time of 7.52 nanoseconds:

133,000,000 cycles/second = 7.52 ns/cycle

Now back to the advertisement ...

The microprocessor is the "brain" of the system. It executes program instructions. This one is a Pentium (Intel) running at 4.20GHz.

nputer – Cheap! Cheap!

- Pentium 4.20GHz
- 400MHz 256MB DDR SDRA
- 32K/B L1 cache, 256KB L2
- 80 B serial ATA hard drive
- 8/USB ports, 1 serial port,
- Monitor 19" .24mm AG, 12l


28MB PCI express video

48x CD-RW drive

A system bus moves data within the computer. The faster the bus the better. This one runs at 400MHz.

odem ard Ethernet

- Large main memory capacity means you can run larger programs with greater speed than computers having small memories.
- **RAM** = *random access memory*. Time to access contents is independent of its location.
- Cache is a type of temporary memory that can be accessed faster than RAM.

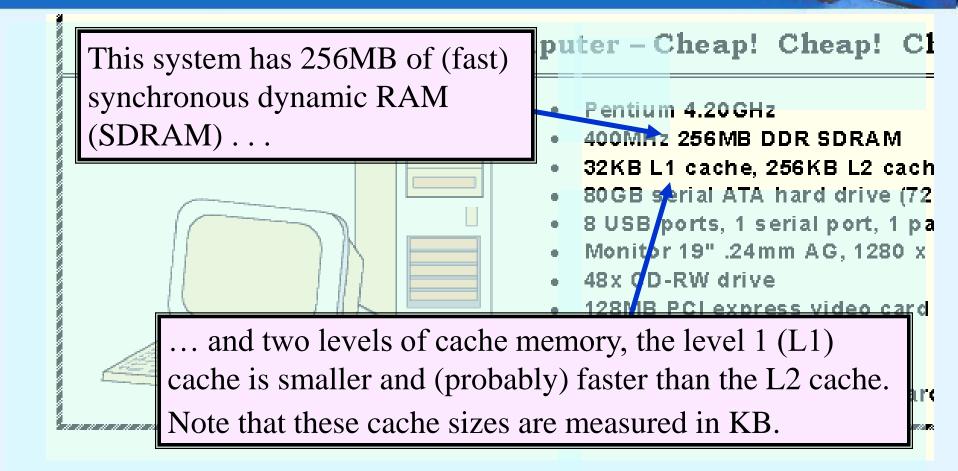

Hard disk capacity determines the amount of data and size of programs you can store.

- Cheap! Cheap! Cheap!


htium 4.20GHz

- 400MHz 256MB DDR SDRAM
- 32KB L1 cache, 256KB L2 cache
- 80GB serial ATA hard drive (7200 RPM)
- 💶 8 💋 SB ports, 1 serial port, 1 parallel port
- Monitor 19" .24mm AG, 1280 x 1024 at 75Hz
- #8x CD-RW drive

This one can store 80GB. 7200 RPM is the rotational speed of the disk. Generally, the faster a disk rotates, the faster it can deliver data to RAM. (There are many other factors involved.)

ATA stands for *advanced technology attachment*, which describes how the hard disk interfaces with (or connects to) other system components.

neap!

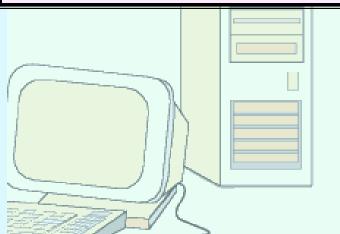

THE PROPERTY OF THE PROPERTY O

- 32KB Li cache, 256KB L2 cache
- 80GB serial ATA hard drive (7200 RPM)
- 8 USB ports, 1 serial port, 1 parallel port
- Monitor 19" .24mm AG, 1280 x 1024 at 75Hz
- 48x CD-RW drive
- 128MB PCI express video card
- 56k PCI data/fax modem
- 64-bit PCI sound card

A CD can store about 650MB of data. This drive supports rewritable CDs, CD-RW, that can be written to many times.. 48x describes its speed.

Ports allow movement of data between a system and its external devices.

Cheap! Cheap! Cheap!

ium 4.20GHz



- 32KB L1 cache, 256KB L2 cache
- 80GB serial ATA hard drive (7200 RPM)
- 8 USB ports, 1 serial port, 1 parallel port
- Monitor 19" .24mm AG, 1280 x 1024 at 75Hz
- 48x CD-RW drive
 - 128MB PCI express video card
- 56K PCI data/fax modem
- 64-bit PCI sound card

Integrated 10/100 Ethernet card

This system has ten ports.

- Serial ports send data as a series of pulses along one or two data lines.
- Parallel ports send data as a single pulse along at least eight data lines.
- USB, Universal Serial Bus, is an intelligent serial interface that is self-configuring. (It supports "plug and play.")



System buses can be augmented by dedicated I/O buses. PCI, *peripheral component interface*, is one such bus.

ap! Cheap! Cheap!

20GHz

6MB DDR SDRAM

Licache, 256KB L2 cache

- 80GB serial ATA hard drive (7200 RPM)
- 8 USB ports, 1 serial port, 1 parallel port
- Monitor 19" .24mm AG, 1280 x 1024 at 75Hz
- 48x CD-RW drive
- 128MB PCI express video card
 - 56K PCI data/fax modem
 - 64-bit PCI sound card
- Integrated 10/100 Ethernet card

This system has three PCI devices: a video card, a sound card, and a data/fax modem.

The number of times per second that the image on a monitor is repainted is its *refresh rate*. The *dot pitch* of a monitor tells us how clear the image is.

Cheap!

This one has a dot pitch of 0.24mm and a refresh rate of 75Hz.

• 80 GB serial ATA hard drive (7200 RPM)
8 USB ports, 1 serial port, 1 parallel port
• Monitor 19" .24mm AG, 1280 x 1024 at 75Hz
• 48x CD-RW drive
• 128MB PCI express video card
• 56K PCI data/fax modem
• 64-bit PCI sound card
• Integrated 10/100 Ethernet card


The video card contains memory and programs that support the monitor.

 The evolution of computing machinery has taken place over several centuries. The evolution of computers is usually classified into different generations according to the technology of the era.

- Generation Zero: Mechanical Calculating Machines (1642 - 1945)
 - Calculating Clock Wilhelm Schickard (1592 1635).
 - Pascaline Blaise Pascal (1623 1662).
 - Difference Engine Charles Babbage (1791 1871),
 also designed but never built the Analytical Engine.
 - Punched card tabulating machines Herman Hollerith (1860 - 1929).

Hollerith cards were commonly used for computer input well into the 1970s.

 The First Generation: Vacuum Tube Computers (1945 - 1953)

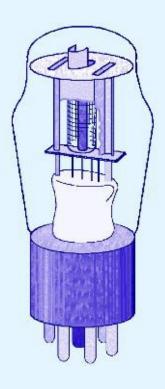


- Atanasoff Berry Computer (1937 1938) solved systems of linear equations.
- John Atanasoff and Clifford Berry of Iowa State University.

- The First Generation: Vacuum Tube Computers (1945 - 1953)
 - Electronic Numerical Integrator and Computer (ENIAC) by John Mauchly and J.
 Presper Eckertat the University of Pennsylvania, 1946
 - The IBM 650 first mass-produced computer.



 The Second Generation: Transistorized Computers (1954 - 1965)

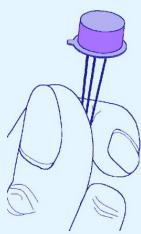

- IBM 7094 (scientific) and 1401 (business)
- Digital Equipment Corporation (DEC) PDP-1
- Univac 1100
- Control Data Corporation 1604.
- . . . and many others.

- The Third Generation: Integrated Circuit Computers (1965 - 1980)
 - IBM 360
 - DEC PDP-8 and PDP-11
 - Cray-1 supercomputer
 - . . . and many others.
- By this time, IBM had gained overwhelming dominance in the industry.
 - Computer manufacturers of this era were characterized as IBM and the BUNCH (Burroughs, Unisys, NCR, Control Data, and Honeywell).

- The Fourth Generation: VLSI Computers (1980 - ????)
 - Very large-scale integrated circuits (VLSI) have more than 10,000 components per chip.
 - Enabled the creation of microprocessors.
 - The first was the 4-bit Intel 4004.
 - Later versions, such as the 8080, 8086, and 8088
 spawned the idea of "personal computing."

- Moore's Law (1965)
 - Gordon Moore, Intel founder
 - "The density of transistors in an integrated circuit will double every year."
- Contemporary version:
 - "The density of silicon chips doubles every 18 months."

But this "law" cannot hold forever ...



Rock's Law

- Arthur Rock, Intel financier
- "The cost of capital equipment to build semiconductors will double every four years."
- In 1968, a new chip plant cost about \$12,000.

At the time, \$12,000 would buy a nice home in the suburbs.

An executive earning \$12,000 per year was "making a very comfortable living."



Rock's Law

 In 2005, a chip plants under construction cost over \$2.5 billion.


\$2.5 billion is more than the gross domestic product of some small countries, including Belize, Bhutan, and the Republic of Sierra Leone.

For Moore's Law to hold, Rock's Law must fall,
 or vice versa. But no one can say which will give out first.

 Writing complex programs requires a "divide and conquer" approach, where each program module solves a smaller problem.

 Complex computer systems employ a similar technique through a series of virtual machine layers.

- Each virtual machine layer is an abstraction of the level below it.
- The machines at each level execute their own particular instructions, calling upon machines at lower levels to perform tasks as required.
- Computer circuits ultimately carry out the work.

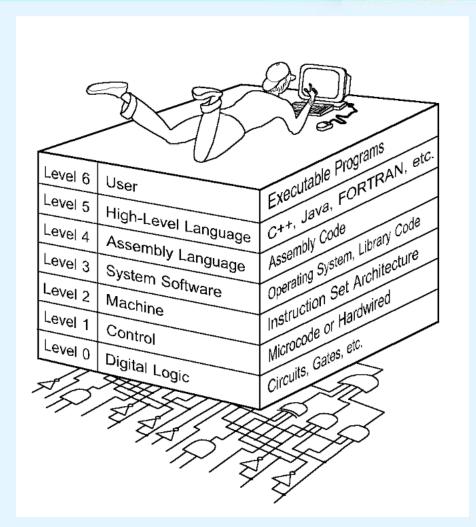

- Level 6: The User Level
 - Program execution and user interface level.
 - The level with which we are most familiar.
- Level 5: High-Level Language Level
 - The level with which we interact when we write programs in languages such as C, Pascal, Lisp, and Java.

- Level 4: Assembly Language Level
 - Acts upon assembly language produced from Level 5, as well as instructions programmed directly at this level.
- Level 3: System Software Level
 - Controls executing processes on the system.
 - Protects system resources.
 - Assembly language instructions often pass through Level 3 without modification.

- Level 2: Machine Level
 - Also known as the Instruction Set Architecture (ISA) Level.
 - Consists of instructions that are particular to the architecture of the machine.
 - Programs written in machine language need no compilers, interpreters, or assemblers.

1.6 The Computer Level Hierarchy



- A control unit decodes and executes instructions and moves data through the system.
- Control units can be microprogrammed or hardwired.
- A microprogram is a program written in a low-level language that is implemented by the hardware.
- Hardwired control units consist of hardware that directly executes machine instructions.

1.6 The Computer Level Hierarchy

- Level 0: Digital Logic Level
 - This level is where we find digital circuits (the chips).
 - Digital circuits consist of gates and wires.
 - These components implement the mathematical logic of all other levels.



 On the ENIAC, all programming was done at the digital logic level. Programming the computer involved moving plugs and wires.


 A different hardware configuration was needed to solve every unique problem type.

Configuring the ENIAC to solve a "simple" problem required many days labor by skilled technicians.


- The invention of stored program computers has been ascribed to a mathematician, John von Neumann, who was a contemporary of Mauchley and Eckert.
- Stored-program computers have become known as von Neumann Architecture systems.

- Today's stored-program computers have the following characteristics:
 - Three hardware systems:
 - A central processing unit (CPU)
 - A main memory system
 - An I/O system
 - The capacity to carry out sequential instruction processing.
 - A single data path between the CPU and main memory.
 - This single path is known as the *von Neumann* bottleneck.


- This is a general depiction of a von Neumann system:
- These computers employ a fetchdecode-execute cycle to run programs as follows . . .

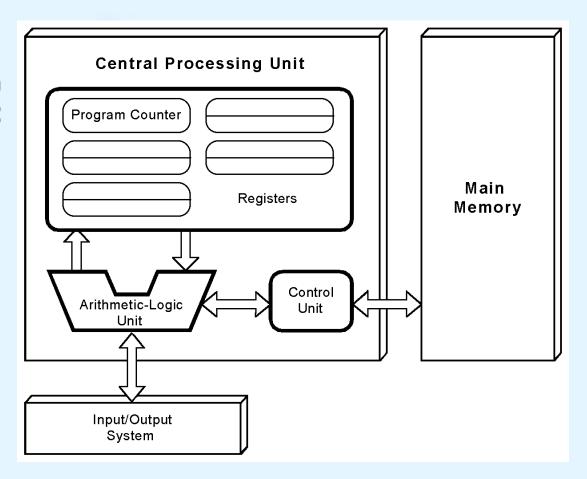


 The control unit fetches the next instruction from memory using the program counter to determine where the instruction is located.

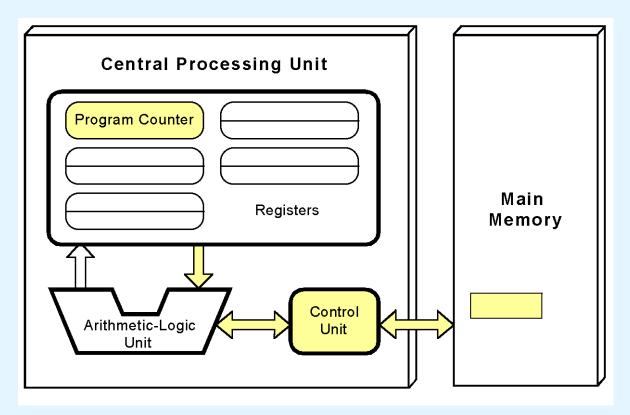


The instruction is decoded into a language that the ALU can understand.

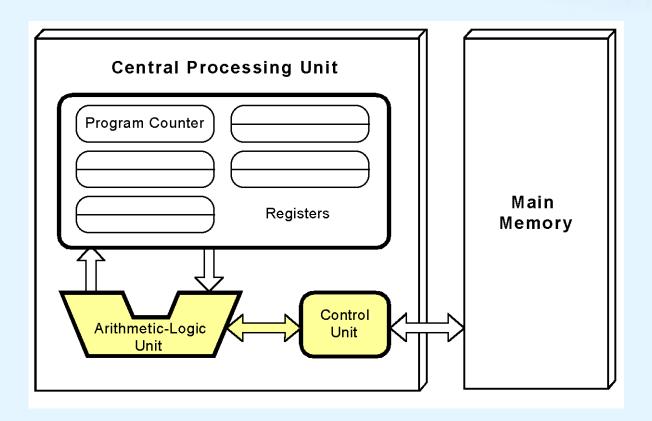

 Any data operands required to execute the instruction are fetched from memory and placed into registers within the CPU.

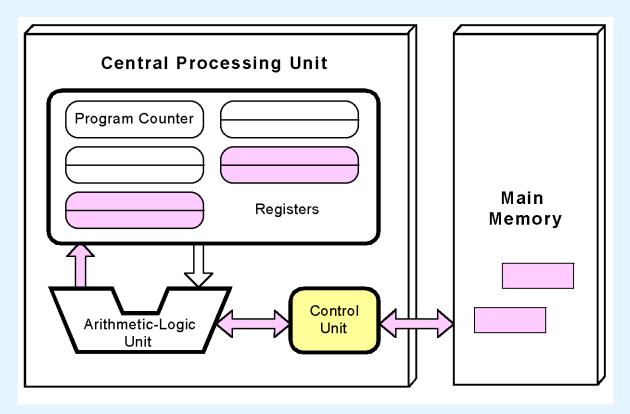

 The ALU executes the instruction and places results in registers or memory.

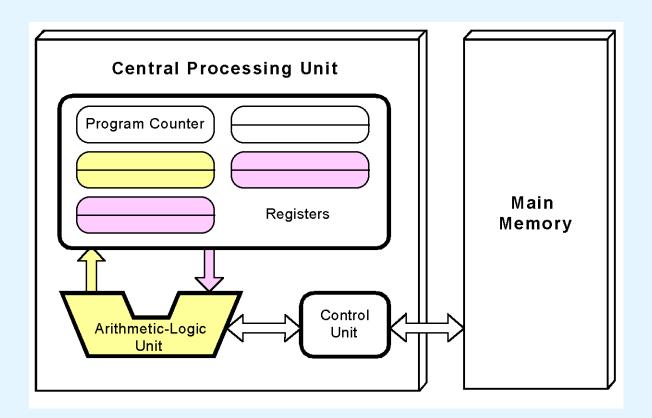

- Conventional stored-program computers have undergone many incremental improvements over the years.
- These improvements include adding specialized buses, floating-point units, and cache memories, to name only a few.
- But enormous improvements in computational power require departure from the classic von Neumann architecture.
- Adding processors is one approach.

- In the late 1960s, high-performance computer systems were equipped with dual processors to increase computational throughput.
- In the 1970s supercomputer systems were introduced with 32 processors.
- Supercomputers with 1,000 processors were built in the 1980s.
- In 1999, IBM announced its Blue Gene system containing over 1 million processors.

- Parallel processing is only one method of providing increased computational power.
- DNA computers, quantum computers, and dataflow systems. At this point, it is unclear whether any of these systems will provide the basis for the next generation of computers.

Leonard Adleman is often called the inventor of DNA computers. His article in a 1994 issue of the journal **Science** outlined how to use DNA to solve a well-known mathematical problem, called the "**traveling salesman**" problem. The goal of the problem is to find the shortest route between a number of cities, going through each city only once. As you add more cities to the problem, the problem becomes more difficult. Adleman chose to find the shortest route between seven cities. DNA computing is still in its infancy.

Conclusion

 This chapter has given you an overview of the subject of computer architecture.