
## WALL MAILBOX PERSONALIZED PLAQUE INSTRUCTIONS

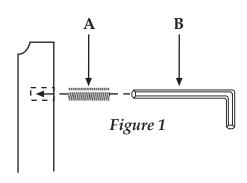



A - Threaded Studs - 2

B - Allen Wrench - 1

C - Address Plaque - 1

D - Acorn Nuts - 2

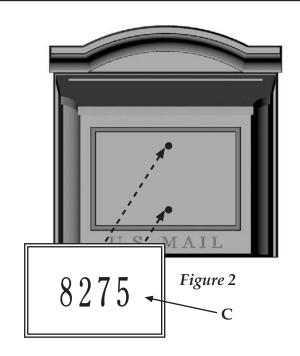

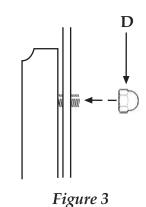

WP04-045 © 2004 WHITEHALL PRODUCTS

Visit our Web Site at: www.whitehallproducts.com

AW-364

## To attach your Personalized Address Plaque to your Whitehall Wall Mailbox:

- 1) Locate screw position marks on top and bottom center; front of mailbox body.
- 2) Drill holes through the mailbox walls with No. 7 or 3/16" drill.
- 3) Insert threaded studs (A) into the back side of the address plaque. Tighten with allen wrench (B). (See Figure 1)
- 4) Position the address plaque (C) so the studs are pushed through the holes in the front mailbox wall and the plaque is located within the border. (See Figure 2)
- 5) Using the acorn nuts provided (D), secure the plaque from the inside of the mailbox. (See Figure 3) (Pliers or a small socket wrench are helpful)

## Cleaning Instructions:

Whitehall Mailboxes and Accessories are made of hand-cast aluminum with tough finishes to withstand exposure to the elements. To clean your Whitehall Product, use a non-abrasive detergent and water with a cloth, sponge, or soft brush. The simulated weathered bronze cannot be brightened by polishing. This hand-painted finish should retain its finish for many years without special attention.