



GOOD DIRECTIONS, INC.

ASSEMBLY INSTRUCTIONS CUPOLA MOUNT INSTALLATION – COTTAGE SIZE WEATHERVANES


1. ASSEMBLING TWO PART ROD

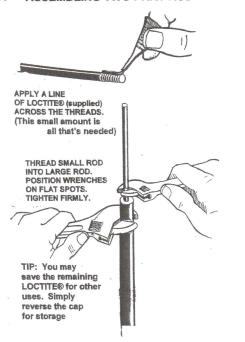

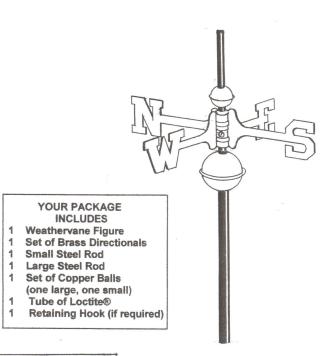


2.

SLIDE LARGE BALL DOWN TO JUNCTION OF THE LARGE AND SMALL ROD. 4. SLIDE SMALL BALL ON RODREST ON DIRECTIONALS

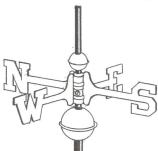

CUPOLA ROOF

3. INTERLOCK DIRECTIONALS... SLIDE ON ROD



West goes left of North **5.** Slide weathervane onto rod.



Slide weathervane and retaining hook* onto rod simultaneously.

Tighten set screw.

*Retaining hook included with and required for 3-dimension figures only. GOOD DIRECTIONS CUPOLAS ARE "WEATHERVANE READY" WITH INTERNAL MOUNTING BRACKET INSIDE ROOF.

THE WEATHERVANE ROD IS SECURED IN ROOF SECTION BEFORE THE FINAL ASSEMBLY OF CUPOLA.