



CC61RL/CC62RL/CC63RL INSTALLATION CUT SHEET

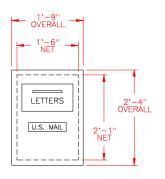

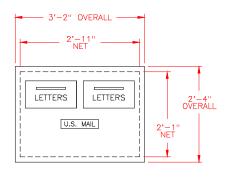

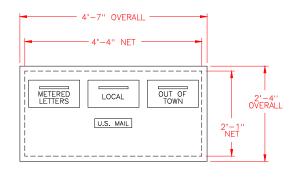

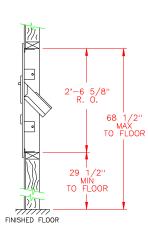

MATERIALS:

-HOPPERS: 1/4" ALUMINUM -FRONT PLATE: 1/4" ALUMINUM

FINISHES:

- -CLEAR ANODIZE -GOLD ANODIZE
- -BROWN POWDER COAT

CONSTRUCTION: WELDED

HOPPER OPENING:

-12 1/2" WIDE x 6" HI

ENGRAVING:

-1 1/8" HI (AS SHOWN) -OPTIONAL, AS SPECIFIED

TRIM: OPTIONAL, MATCHING FINISH.

INSTALLATION NOTES:

- FABRICATE WALL OPENING AT DESIRED LOCATION TO ROUGH OPENING DIMENSIONS AS SHOWN.
- 2. DRILL HOLES IN MOUNTING BRACKETS APPROXIMATELY 1/2 INCH FROM
- REAR EDGE OF BRACKET.

 3. INSERT COLLECTION UNIT INTO OPENING AND DRILL MOUNTING HOLES INTO OPENING AT SIDE, TOP AND BOTTOM PANEL HOLE LOCATIONS.
- 4. IF NECESSARY, INSERT ANCHORS INTO MOUNTING HOLES.
- 5. MOUNT COLLECTION UNIT USING #8 SCREWS.



5935 CORPORATE DRIVE
MANHATTAN KANSAS 66503

CS2005

5-14-01