

Free Standing Roll-a-Bouts


2300 Series Installation Instructions

Thank you for selecting Salsbury's 2300 series Free Standing Roll-a-Bouts. We are confident that the quality and construction of this product will provide years of maintenance free use.

Installation Instructions

1. Place the Roll-a-Bout enclosure upright on flat surface.
2. Open the rear door and starting at the bottom, load 5 aluminum mailbox modules (or 1 lower brass mailbox module if 2350).
3. Load 1 upper mailbox (only on 2350), **making sure it is pushed all the way forward.**
4. On model 2300, all 5 aluminum mailbox modules should have the rear flange placed within the notch of the supporting angle brackets on the Roll-a-Bouts.
5. Close rear door and engage hasp and padlock eye. Lock with standard padlock if so desired.

2300 / 2350 Free Standing Roll-a-Bouts

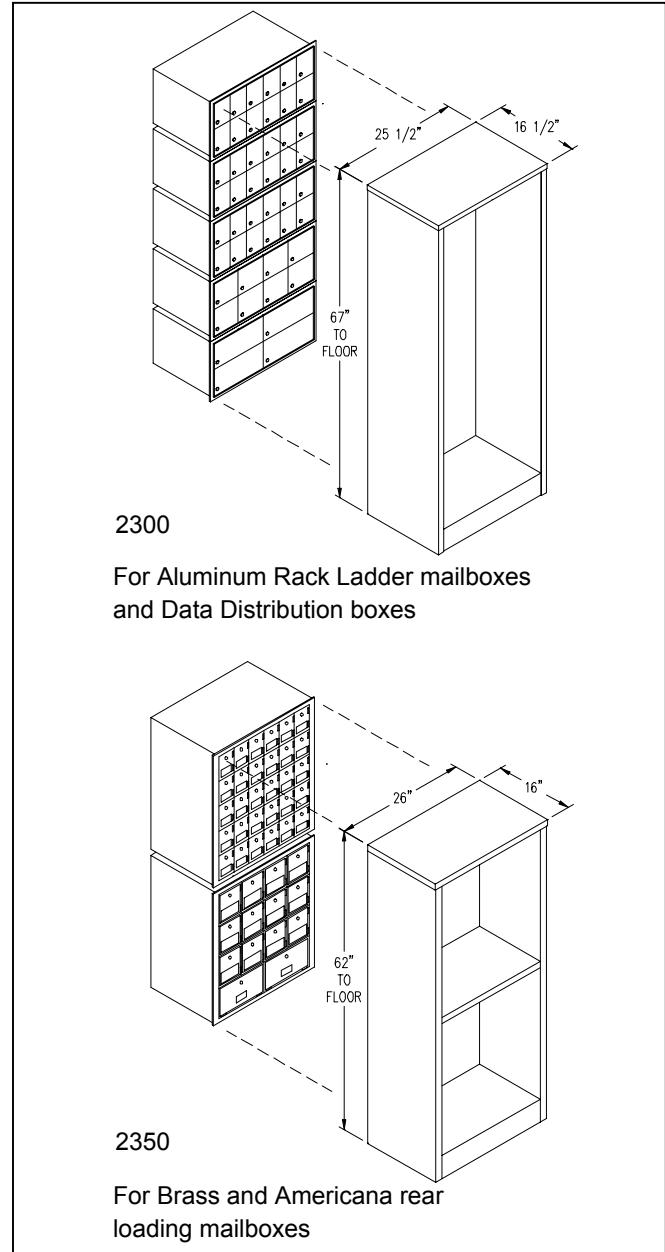

Note: order mailboxes separately