


2600 DIRECTORY INSTALL

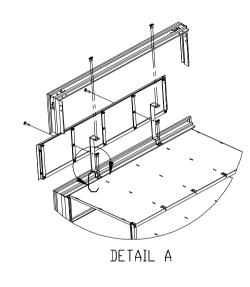



- NOTES:

 1. SCREW MOUNTING BRACKETS TO TOP OF BOX TRIM AS SHOWN IN DETAIL C-C

 2. SLIDE DIRECTORY TRIM DOWN ONTO MOUNTING BRACKETS AND ATTACH WITH SCREWS AS SHOWN IN DETAIL A-A

 3. SLIDE DIRECTORY INTO TRIM AND ATTACH WITH LONG SCREWS INTO MOUNTING BRACKETS AS SHOWN.
- DIRECTORY LABELS MAY BE CHANGED BY BACKING OUT THE LONG MOUNTING SCREWS PARTIALLY AND SLIDING DIRECTORY OUT FOR CLEARANCE.

