



Carefully unpack the elephantrunk, parts and hardware.

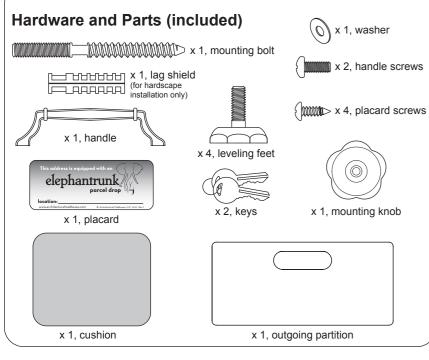

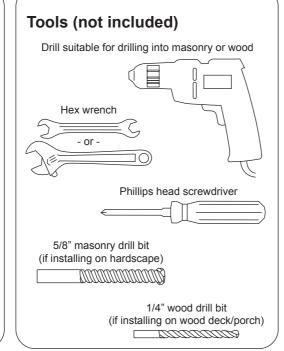


Choose where to locate your elephantrunk

NOTE: The elephantrunk parcel drop is NOT intended to replace a mailbox. Its primary purpose is to receive parcel deliveries.

- The courier must be able to freely access your elephantrunk to make deliveries.
- Choose a protective location, such as on a porch or under an eave, and away from sprinklers.
- You can anchor your elephantrunk to a hardscaped or wooden surface. It will require drilling a hole into the surface, so make sure you
 pick the right location.

elephantrunk installation

- 1 Place your elephantrunk at the desired location with the help of another person.
- Open the bottom door and mark the ground through the hole in the floor.

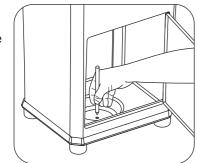


After marking the ground, place the elephantrunk aside before continuing.

4 Drill a hole where you marked the ground:

For hardscape (for example, stone walkway or concrete pad), drill a hole 2.5" deep at the mark with a 5/8" masonry bit.

For wood (for example, deck or porch), drill a pilot hole 2" deep at the mark using a 1/4" wood bit.

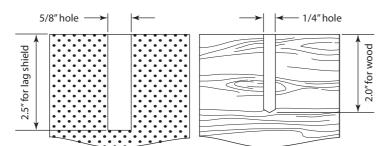


For hardscape:
Remove any debris
from the hole and insert
the lag shield so it is
flush with the surface.
Screw the mounting bolt
into the lag shield.


For wood:
Screw the
mounting bolt
directly into the
surface.

Use the hex portion at the center of the bolt to screw it into the hole.

For both installations, screw it all the way so the hex portion is touching the surface.



6 Carefully screw the four leveling feet into the bottom of each leg about half way.

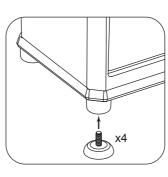


- With help, lift the elephantrunk over the installed bolt, aligning the bolt through the hole in the floor. DO NOT secure in place with the mounting knob yet.
- 8 Level the elephantrunk by adjusting the feet up and down.
- Place the washer over the bolt and screw on the mounting knob. The knob only needs to be hand tightened.
 - Over tightening with a tool may damage the floor and invalidate your warranty.
- 10 Place the cushion onto the floor over the mounting knob.
- Open the top door and attach the handle with the two handle screws.

placard installation

- 1 Remove protective plastic coating from the placard.
- Write the location of your elephantrunk onto the placard with a permanent marker.
- Attach the placard to your front entry in a conspicuous location so the courier knows where to deliver your items
- 4 To activate your warranty, register your product at: www.architecturalmailboxes.com/registration

elephantrunk use

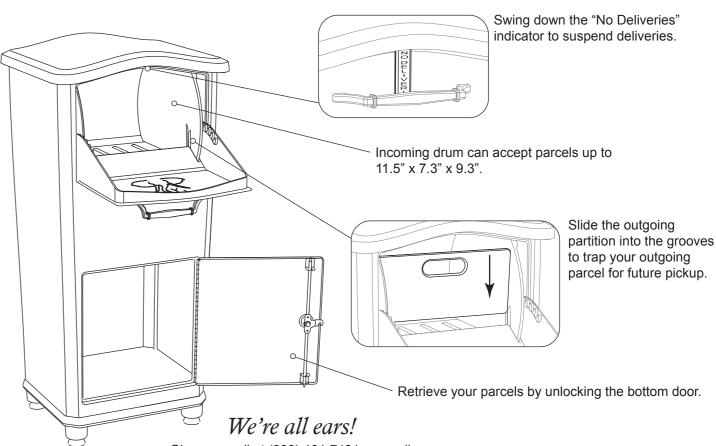

Give us a call at (800) 464-7491 or email et-help@architecturalmailboxes.com with any questions.





Desempaca cuidadosamente las partes y el hardware del elephantrunk.

Hardware y partes (incluidas)

Tarandela

Herramientas (no incluidas)

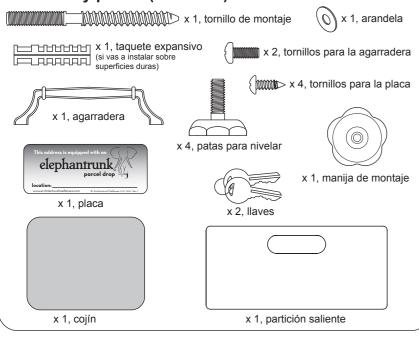

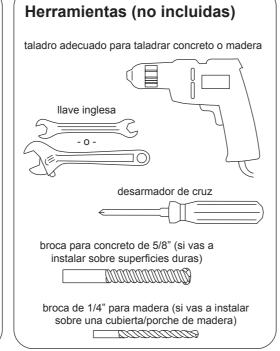


Elige dónde colocar tu elephantrunk

NOTA: NO se pretende que el elephantrunk para recibir paquetes sustituya al buzón. Su objetivo principal es recibir entregas de paquetes.

- El servicio de entregas debe poder tener acceso libre a su elephantrunk para realizar sus entregas.
- Elige una ubicación protegida, tal como sobre un porche o bajo un alero, y lejos de aspersores
- Puedes anclar tu elephantrunk a una superficie dura o de madera. Necesitará que perfores un orificio dentro de la superficie, así que asegúrate de elegir la ubicación correcta.

instalación del elephantrunk

- 1 Coloca tu elephantrunk en el lugar deseado, con la ayuda de alguien más.
- Abre la puerta inferior y marca el suelo a través del orificio en el piso.

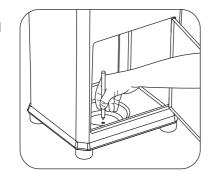



Después que hayas marcado el suelo, haz a un lado el elephantrunk antes de continuar.

4 Perfora un orificio donde marcaste el suelo:


Para superficies duras (por ejemplo, un pasillo de piedra, o un bloque de concreto), taladra un orificio de 2.5" (aprox 6.4 cms.) de profundidad en la marca con una broca de concreto de 5/8".


Para madera (por ejemplo una cubierta o un porche), taladra un orificio piloto de 2" (aprox 5.1 cms.) de profundidad en la marca, usando una broca de madera de 1/4".

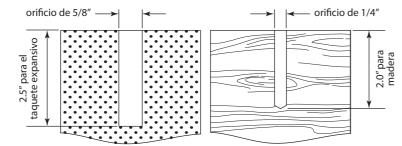

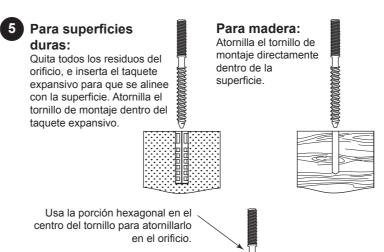

Para ambas instalaciones, atornilla a fondo de manera que la porción hexagonal toque la superficie.



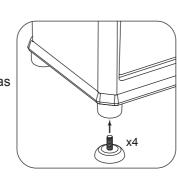


- Con ayuda, levanta el elephantrunk sobre el tornillo instalado alineando el tornillo a través del orificio en el piso. NO lo fijes en el lugar con la manija de montaje aún.
- 8 Nivela el elephantrunk ajustando las patas hacia arriba y abajo.
- 9 Coloca la arandela sobre el tornillo y atornilla la manija de montaje. La manija solamente requiere apretarse con la mano.
 - Si la aprietas demasiado con una herramienta puedes dañar el piso e invalidar tu garantía.
- Coloque el cojín sobre el piso sobre la manija de montaje.
- Abra la puerta superior y adjunte la agarradera con los dos tornillos de la agarradera.

instalación de la placa

- 1 Quita la cubierta protectora de plástico de la placa.
- 2 Escribe la ubicación de tu elephantrunk sobre la placa con un marcador permanente.
- Adjunta la placa a tu entrada delantera en una ubicación claramente visible para que el mensajero sepa dónde colocar tus artículos.
- 4 Para activar tu garantía, registra tu producto en: www.architecturalmailboxes.com/registration

uso del elephantrunk

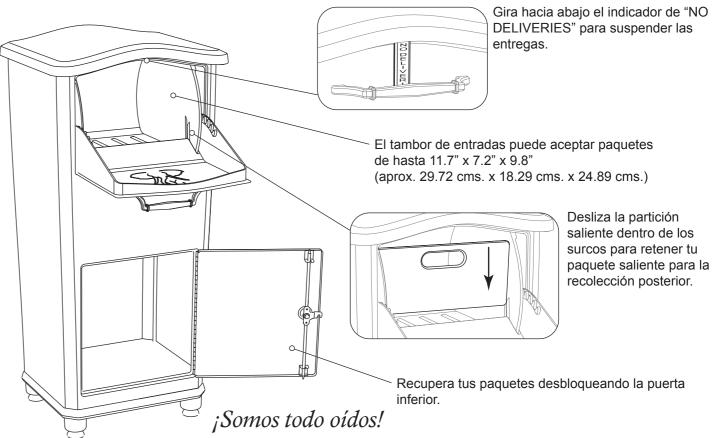

Llámanos al (800) 464-7491 o envíanos un correo electrónico a et-help@architecturalmailboxes.com con cualquier pregunta.