

**ITEA2 Project** Call 6 11025 2012 - 2015

Work-Package 3: "Modeling"

# openETCS System Architecture and Design Specification

Third iteration: Scope of openETCS ITEA2 Functions

Baseliyos Jacob, Bernd Hekele, Marc Behrens, David Mentre, Jos Holtzer, Jan Welvaarts, Vincent Nuhaan and Jacob Gärtner

November 2014



#### Funded by:















This page is intentionally left blank

Work-Package 3: "Modeling"

OETCS TK-01-01 November 2014

# openETCS System Architecture and Design Specification

Third iteration: Scope of openETCS ITEA2 Functions

# Document approbation

Lead author:	Technical assessor:	Quality assessor:	Project lead:
location / date	location / date	location / date	location / date
signature	signature	signature	signature
Jakob Gärtner	[assessor name]	Izaskun de la Torre	Klaus-Rüdiger Hase
(LEA Engineering / DB Netz)	([affiliation])	(SQS)	(DB Netz)

Baseliyos Jacob, Bernd Hekele

DB Netz AG Völckerstrasse 5 D-80959 München Freimann, Germany

Marc Behrens

DLR

**David Mentre** 

Mitsubishi Electric R&D Centre Europe

Jos Holtzer, Jan Welvaarts, Vincent Nuhaan

NS

Jacob Gärtner

LEA Engineering



OETCS TK-01-01 iii

**Abstract:** This document gives an introduction to the architecture of openETCS. The functional scope is tailored to cover the functionality required for the openETCS demonstration as a target of the ITEA2 project: the Utrecht Amsterdam use-case. It has to be read as an add-on to the models in SysML, Scade and to additional reading referenced from the document.

Disclaimer: This work is licensed under the "openETCS Open License Terms" (oOLT) dual Licensing: European Union Public Licence (EUPL v.1.1+) AND Creative Commons Attribution-ShareAlike 3.0 – (cc by-sa 3.0)

THE WORK IS PROVIDED UNDER OPENETCS OPEN LICENSE TERMS (OOLT) WHICH IS A DUAL LICENSE AGREEMENT INCLUDING THE TERMS OF THE EUROPEAN UNION PUBLIC LICENSE (VERSION 1.1 OR ANY LATER VERSION) AND THE TERMS OF THE CREATIVE COMMONS PUBLIC LICENSE ("CCPL"). THE WORK IS PROTECTED BY COPYRIGHT AND/OR OTHER APPLICABLE LAW. ANY USE OF THE WORK OTHER THAN AS AUTHORIZED UNDER THIS OLT LICENSE OR COPYRIGHT LAW IS PROHIBITED.

BY EXERCISING ANY RIGHTS TO THE WORK PROVIDED HERE, YOU ACCEPT AND AGREE TO BE BOUND BY THE TERMS OF THIS LICENSE. TO THE EXTENT THIS LICENSE MAY BE CONSIDERED TO BE A CONTRACT, THE LICENSOR GRANTS YOU THE RIGHTS CONTAINED HERE IN CONSIDERATION OF YOUR ACCEPTANCE OF SUCH TERMS AND CONDITIONS.

http://creativecommons.org/licenses/by-sa/3.0/

http://joinup.ec.europa.eu/software/page/eupl/licence-eupl

# **Modification History**

Version	Section	Modification / Description	Author
0.1	Document	Initial document providing the structure	Baseliyos Jacob
0.2	Document	Workshop Results included and some pretty- printing	Bernd Hekele

# **Table of Contents**

Modification History			
Figures and Tablesvii			
1	Intro	duction	. 1
	1.1	Motivation	. 1
	1.2	Objectives	. 2
	1.3	Roles, responsibilities and tasks	. 2
	1.4	Process	. 3
	1.5	Assumption and Preconditions	. 4
	1.6	Functions ERTMS/ETCS	. 5
	1.7	openETCS Architecture: History and Iterations	. 5
		1.7.1 First Iteration Functional Scope: The Minimum OBU Kernel Function	. 5
		1.7.2 How to find the functions of the First Iteration in the Architecture	. 6
Glo	ossary	y	. 7
	1.8	Data dictionary	. 9
2	Inpu	t Documents	10
3	Prod	luct Backlog	11
4	Arch	nitecture description (by layers)	12
	4.1	Introduction to the Architecture	12
		4.1.1 Abstract Hardware Architecture	12
		4.1.2 Definition of the reference abstract hardware architecture	12
		4.1.3 Reference abstract software architecture	13
	4.2	Functional breakdown	14
		4.2.1 F1: openETCS application programming interface (API) Runtime System and Input to	
		the EVC)	
		4.2.1.2 openETCS Model Runtime System	
		4.2.1.4 Message based interface (BTM, RTM)	
		4.2.1.5 Interfaces to the Time System	
		4.2.1.6 Interfaces to the Odometry System	
		4.2.1.7 Interfaces to the Coonletry System	
		4.2.1.8 Output Interfaces of the openETCS API TO other Units of the OBU	
		4.2.2 Receive messages / check consistency	
		4.2.2.1 Short Description of Functionality	
		4.2.2.2 Input	
		4.2.2.3 Output	
		4.2.2.4 Data	
		4.2.2.5 Reference to the SRS (or other requirements)	
		4.2.2.6 Functionality	
		4.2.3 Build coordinate system and calculate train position	
		4.2.4 Store inputs from the TIU	
		4.2.5 Store inputs from the Driver Machine Interface (DMI)	

	4	2.6 Filtering (Mode/Level) - One packet per type	25
	4	2.7 Store data (direct orders, balise group (BG) lists, NV, track data, procedure parameters, confirmations)	25
	4	2.8 Update location based data structures	
		2.9 Manage specific location based data:	
		2.10 Build and update MRSP and list of targets at LRBG	
		2.11 Profile supervision, i.e. BCM and ceiling speed supervision (active for FS, OS and LS)	
	7	4.2.11.1 Movement supervision	
		4.2.11.2 Area Supervision	
		4.2.11.3 Update procedure status (including commanding actions towards driver, radio or	۲۱
		RBC)	27
		4.2.11.4 Mode/Level management	27
		4.2.11.5 DMI management	27
		4.2.11.6 RBC communication	28
		4.2.11.7 TIU communication	28
		4.2.11.8 JRU and Specific Transmission Module (STM) management: not applicable for Utrecht-Amsterdam	28
	4	2.12 Filter Track informationen	
		4.2.12.1 Interfaces	29
		4.2.12.2 SysML Model	29
5 D	esign	description	30
5	5.1 D	stailed functional description	30
5	.2 D	cumentation of design	30
5	5.3 S	CADE Model	32
Appe	ndix A	: Restrictions on Interfaces to openETCS OBU	33
А	\.1 Tr	ack to Train Interface	33
Α	.2 T	J Interfaces	34
	Α	2.1 Input to openETCS	34
		2.2 Output from openETCS	
Appe	ndix:	References	36

OETCS TK-01-01 vii

# Figures and Tables

# **Figures**

Figure 1. Reference abstract hardware architecture	12
Figure 2. Reference abstract software architecture	
Figure 3. openETCS API Highlevel View	
Figure 4. Filter In and out	
Figure 5. SysML Filter	29
Figure 6. Decision	
Tables	
Table 2. Overview over input	19
Table 3. Possible values for the input RadioPresent	20
Table 4. Overview over output	21
Table 5. Possible values for the output AcknowledgementRequired	21
Table 6. Possible values for the output AcknowledgementRequired	22
Table 7. Pessible values for the output Connect i onStatus	22

OETCS TK-01-01	viii

# 1 Introduction

### 1.1 Motivation

The openETCS work package 3 (WP3) aims to provide – amongst others - the software architecture for the openETCS kernel in order to eventually build the software itself. WP3 partner has put great effort in the openETCS software design, thus far without making definite choices on the software architecture itself respective of functional breakdown and data structures of the openETCS kernel. Since the project planning foresees in the production of a reference software to be used as a demonstrator by June 2014, it is of paramount importance that a design freeze of the openETCS kernel architecture be finalized shortly but no later than November 2014.

In compliance with the agreements made during the last WP 3 meeting at the 10.09.2014 in Brussels, DB has taken the initiative to design the aforesaid architecture including of functional breakdown and data structures in order to safeguard a timely delivery of these products. Furthermore, DB has ensured that these developments are focused on including end user requirements so as to develop a design in conformity with the needs and requirements of the operators. Specialists of DB and NS have cooperated together with other partners in WP3 to produce this document.

As referred to above, the architecture description has to be finalized in the month of November 2014. This version of the document is a draft version, demonstrating the general directions and philosophy of the architectural design, the functional breakdown of the software and the data structures. The design is focused on maximum efficiency in order to maximize on RAMS performance of the end product.

This document, named second iteration, is a draft document and will be developed until a complete architecture.

Since this is a work in progress, any remarks referring to the improvement of the document, including reporting errors, are more than welcome. Any additional work done thus far on the subject by other WP3 partners will be incorporated in this document as long as it is aligned with and consistent or complementary to the fundamental viewpoints advocated in this document after a review in respect to the openETCS process. At the same time, any contributions to the integration of which will demand discussion or changes of the fundamentals as proposed in this document, will be discarded with . Only in this way the ITEA2 project is able to meet its objectives as mentioned above. There will be two workshops in which there is due time and opportunities to fine-tune this document and its contents. Any comments will be addressed there.

It is urgent to definitely finalize the architecture on a short notice and therefore this document will rather prescribe than describe the openETCS architecture, functional decomposition of the system and the data structures within the limits as stated above. The document is divided in two parts, i.e.:

• A description of the general architecture of the openETCS OnBoard Kernel (software) including data structures prepared by NS....

• A description of the functional decomposition of the openETCS OBU (software) in alignment with the general architecture prepared by DB.....

Furthermore, this document describes the preconditions on which said descriptions are based on, the status and planning of upcoming activities and the main objectives of DB and NS as the End User. Wherever necessary, reference will be made to documents that underline the agreements that have been made during the openETCS architecture design process and the activities and meetings of WP3.

# 1.2 Objectives

The prime objective of WP3 is to produce a rapid prototype for the openETCS reference system that can function as a demonstrator in collaboration with WP 4 and WP 5 for the openETCS approach and will be used as such in the final phase of the project. That phase is the first half of 2015. This objective is defined as ...

# **High level Objectives of this work:**

«any further general statements on the ITEA2 objectives, like...»

- Work on a model bases approach and process for effective collaborative work within an international ETCS developer team as stated above, the project needs a definite architecture design by the end of 2014. This document targets:
- Defining the general design and conditions of the openETCS architecture, functional breakdown and data structures;
- Providing the guidelines for discussion during the workshops that are planned in October and November 2014 that will result in the final and decisive version of this document;
- Being the 'platform' for finalization i.e. whatever be the products or results of the workshops shall be integrated in this document. Apart from these general objectives, the document means to provide for the materials that will enable WP3 partners to improve the efficiency of the Work Package activities:
- The comprehensive architecture design shall enable splitting the work load according to the building blocks defined by the architecture and allocate strictly compartmented work parcels or activities to WP3 partners.
- Doing so will enable WP3 to avoid any double work
- Compartmenting the work load according to the functional building blocks as defined by the architecture will enable efficient planning of activities, be it individually or the integrated WP3 planning for the coming period, aiming at a just in time delivery of all results and products;
- Each partner that is responsible for one of the work parcels shall abide by the requirements in terms of quality and timeliness as defined by this document and prior documents and agreements made within the ITEA2 project.

# 1.3 Roles, responsibilities and tasks

In this section, the roles and responsibilities of the WP3 partners are confirmed, especially where they divert from what has been agreed upon at the start of WP3:

• First of all, in the last WP 3 meeting in Brussels on 10.09.2014 DB proposed to take over the lead of the architecture design and functional breakdown. At the subsequent weekly scrum

meeting on 12.09.2014, it was agreed upon by all participants that DB will take over the lead (see Appendix . . . );

- •Planning: Alstom as WP 3 leader will remain to be responsible for the planning and the allocation of the defined tasks to the different partners
- •Roles: Alstom will also coordinate the work and safeguard that the defined results will be delivered according to the quality requirements that are agreed within the ITEA2 project and the schedule and the milestones that will be agreed upon during the coming workshops;
- •All WP3 partners will deliver the results or products according to planning as will be agreed upon during the said workshops.

In the interest of a swift production of the critical documentation of which this version is a draft, specific tasks will be defined in terms of concrete results to be delivered, the timeframes in which these results must be produced and the partner who shall be responsible for that specific result and the planning. This is to safeguard the timely delivery. The process will be described in the next sections.

#### 1.4 Process

- Alstom as WP 3 leader will be responsible for planning
- Time and quality aspects should be respected
- openETCS tools and methodology must be respected

Most of the operational requirements to WP3 in the last phases of the ITEA2 project have been described in the former paragraphs. This section will describe the process which has to lead to the final result: the reference software to be used in the demonstrator next year, more specifically the final description of the openETCS architecture including the data structures and its functional decomposition. The process will run as follows:

- DB will supervise the development of the first 'firm' draft of the specified products, 'firm' meaning that changes can only be made within the framework of these products and not to the fundamentals of these products as described in this document;
- DB will supervise the preparation of the two workshops that are proposed by Alstom and aim at defining the final and definite architecture, data structures and functional decomposition. It will make proposals for a planning of the critical tasks that remain to be done;
- Alstom will lead the two workshops following the preparations and the instructions of DB. Since all participants are intrinsically involved in the development work and tend to immerse themselves in technical discussions, for productivity purposes it is proposed to make use of a (non-technical) moderator that will be made responsible for coordinating the meeting, the discussions and the team efforts according of the agenda.
- Also for productivity reasons, introductory presentations will be restricted to the contents and setup of this document since all prior efforts have to be merged with this document and not the other way around. Following a general introduction into the work that has been so far, the other contributions will be scrutinized on their consistency with this document and any useful sections will be merged with this document.
- During the workshops, there will be ample room reserved for enhancing this document, using other documents pertaining to the same field of work that have been delivered by other partners. Only material that is aligned with the general philosophy and structures proposed by this document, will be integrated;

• In case conflicting views emerge over the benefits and value of certain contributions, at the very moment that parties conclude that they have conflicting views, these will be listed in an inventory for later discussion. The moderator shall note any such conflicts on the said inventory. Conflicting views will be treated at the end of each workshop whenever there is sufficient time or will be treated in a separate meeting that will be chaired by DB as coordinator of the ITEA2 project.

- The workshop shall be attended by a secretary provided for by DB who is responsible for making the workshop minutes. Within a week after each workshop these minutes shall be distributed among the partners that have cooperated in the workshop and be reviewed by those.
- The main objective of the workshops shall be the finalization of this document. In order to reach the specified result, the remaining tasks shall be identified and split into separate tasks or work parcels. Every task or work parcel will be allotted to one single responsible partner. Responsibility relates to the timely delivery of the defined result and according to quality requirements;
- Alstom, as WP3 leader, will be responsible for the planning, allocation of tasks or work parcels to partners and will ensure timely delivery of results;
- In case there will be tasks or work packages that cannot be finalized during the workshops or will be identified during the workshops and do not fit in the actual planning, these will be allotted in such a way that deadlines are perfectly clear and acknowledged by the party that is responsible for the results, fit within the general requirements of the project and are agreed upon in writing and executed by the responsible partners according to agreement;
- DB as partner that has integral responsibility for both the ITEA2 project and responsible as well for the architecture etc., is entitled to interfere take over the role as leader / coordinator in case the workshops prove to be insufficiently productive;
- All output will be such, that it can be integrated in this document. It is the responsibility of DB to integrate the results and to deliver the final and definite version of this document.
- The document concept will follow the openETCS process and tools (LaTex and Git-hub).

# 1.5 Assumption and Preconditions

- All future contributions shall be fully aligned an compliant the finalized and approved document
- Alls documents produced by the partners are requested to be compliant and merge to this document; other contributions will be discarded

The workshops are all about working as swift, as efficient and as productive as possible and make full use of the potential made available for these workshops by the partners. It is expected that the partners in the workshops will have the express intention to:

- Contribute to the workshops with the intention to finalize the openETCS architecture;
- Provide resources according to the agreements made prior to the Workshops;
- Focus primarily on getting concrete results regardless of methodological issues that might arise. Where necessary or opportune, classical project management methodology will be applied;
- Provide full transparency with respect to experience, knowledge base and information touching the subjects to be treated in the workshops;
- Document on paper or electronically all output of the workshops and integrate these with the underlying document;
- Restrict discussions only to topics that have an immediate impact on the content or the quality of the end product: the improved version of this document.

#### 1.6 Functions ERTMS/ETCS

The ERTMS / ETCS system was developed with a view to interoperability of trains on the different European rail networks. It is divided into "tracks" - and "board" finishes and shall establish a mutual message operation, by beacons or through a "radio" - The transmission system (in this case a mobile telephone network GSM-R) is performed. It defines several operating levels, and the system must also interfaces with the existing monitoring systems of the trains (using STM) have. The ERTMS / ETCS system provides the transport operator (the track) the choice of conditions concerning the use and operation. The train must therefore may go with different operating conditions on routes. Thus has the onboard equipment but must be implemented, to the interoperability of the train to ensure on the other networks. These functions must therefore correspond to one standard: the system requirement specification (SRS) (version 3.3.0).

application functions, which have two different species of origin: defined in the SRS: here one finds in particular the speed monitoring- and transfer functions; these functions must be implemented in full accordance with the SRS; they can in indeed be on any network on which the train is used; these functions are described below in Section ??;

Moreover, there are functions to adapt to the train: so, for example, the processing a "separation distance" in the airborne equipment trigger: This is dependent on the distribution of functions between the Control monitoring equipment (which the ERTMS / ETCS), and the other CCS Systems.

# 1.7 openETCS Architecture: History and Iterations

The openETCS Architecture and Design is implemented in iterations [?]. The current step (second iteration) is based on a step to implement the kernel functions of the ETCS system [1]. For a better understanding of the scope the Iteration is described in the following.

#### 1.7.1 First Iteration Functional Scope: The Minimum OBU Kernel Function

The openETCS first iteration architecture and the design of the openETCS OBU software as mainly specified in [2] UNISIG Subset\_026 version\_3.3.0.

The appropriate functionality has been divided into a list of functions of different complexity (see the WP3 function list [3]).

All these functions are object of the openETCS project and have to be analysed from their requirements and subsequently modelled and implemented. With limited manpower, a reasonable selection and order of these functions is required for the practical work that allows the distribution of the workload, more openETCS participants to join and leads to an executable—limited—kernel function as soon as possible.

While the first version of this document focuses on the first version of the limited kernel function, it is intended to grow in parallel to the growing openETCS software.

The first objective of the first iteration was

• "Make the train run as soon as possible, with a very minimum functionality, and in the form of a rapid prototype."

This does not contradict the openETCS goal to conform to EN50128.

• After a phase of prototyping, the openETCS software shall be implemented in compliance to EN50128 for SIL4 systems.

# 1.7.2 How to find the functions of the First Iteration in the Architecture

The functions will be merged with the new architecture. Wherever a function has already been in the scope it will be marked as "first iteration".

# Glossary

Description
an abstraction that is defined by the description of an interface and the behaviour of the interface.
One or more balises which are treated as having the same reference location on the track.
A telegram contains one header and an identified and coherent set of packets. A message maybe comprised of one or several telegrams.
On board equipment for intermittent transmission between track and train. It shall be able to receive telegrams from a balise.
ERTMS train-borne device to enable communication between ETCS and/or GSM-R and the train driver.
Computer device for the onboard ETCS.
The functions required of a radio network coupled with the message protocols that provide an acceptably safe communications channel between track side and train borne equipment's
Device to record all actions and exchanges relating to the movement of trains sufficient for off line analysis of all events leading to an incident.
It is the first balise group met and correctly read, when the linking information is not known by the train borne equipment. It is the last linked balise group found at the expected location and correctly read when the linking information is known by the train borne equipment. The LRBG is used as a common reference between the train borne and track side equipments in levels 2 and 3  Data defining the distance between groups of balises and the action to be taken if a balise group is not detected within given limits.

Notation	Description
location	Location describes a position in terms of topological relations.
Loop Transmission Module	Train borne equipment that reads the track mounted loop data.
odometry	The process of measuring the train?s movement along the track. Used for speed measurement and distance measurement.
on-board unit	on-board equipment for ETCS and the ETCS-related GSM-R.
orientation	
radio message	The Radio Block Centre (RBC) sends electronic messages to, and receives electronic messages from, ETCS onboard equipment on trains within the area which the RBC is controlling. These messages are transmitted via GSM-R data radio
service brake	Train stopping, from a given speed, at such a deceleration that the passengers do not suffer discomfort or alarm or at an equivalent deceleration in the case of non-passenger trains.
Specific Transmission Module	The train borne equipment of the ERTMS / ETCS must be able to be interfaced with the train borne equipment of an existing train supervision system. The Specific Transmission Module shall perform a translation function between these systems and the ERTMS / ETCS.
system requirement specification	Specification describing the technical properties of a piece of equipment based on a corresponding functional requirement specification.
Systems Modeling Language	The Systems Modeling Language (SysML) is general purpose visual modeling language for systems engineering applications. SysML is defined as a dialect of the Unified Modeling Language (UML) standard, and supports the specification, analysis, design, verification and validation of a broad range of systems and systems-of-systems. These systems may include hardware, software, information, processes, personnel, and facilities.
Train Interface Unit	The unit that provides the interface between the train borne equipment and the train. It is likely to be unique to a class of train.

**Notation** 

**Description** 

train position

information related to the position of a train on the railway infrastructure.

Missing Terms: SR Staff Responsible Mode SH Shunting Mode RIU: Radio In-fill Unit

# 1.8 Data dictionary

concept for the data dictionary  $\dots$ 

# 2 Input Documents

See Wiki page on ....

https://github.com/openETCS/modeling/wiki/Input-Documents-Repository

# 3 Product Backlog

See on:

# 4 Architecture description (by layers)

### 4.1 Introduction to the Architecture

#### 4.1.1 Abstract Hardware Architecture

For proper understanding of openETCS API and of constraints imposed on both sides of the API, we need to define a *reference abstract hardware architecture*. This hardware architecture is "abstract" is the sense that the actual vendor specific hardware architecture might be totally different of the abstract architecture described in this chapter. For example, several units might be grouped together on the same processor.

However the actual vendor specific architecture shall fulfil all the requirements and constraints of this reference abstract hardware architecture and shall not request additional constraints.

#### 4.1.2 Definition of the reference abstract hardware architecture

The reference abstract hardware architecture is shown in figure 1.

The reference abstract hardware architecture is made of a bus on which are connected *units* defining the on-board unit (OBU):

- European Vital Computer (EVC);
- Train Interface Unit (TIU);
- odometry (ODO);
- DMI;
- STM;
- Balise Transmission Module (BTM);
- Loop Transmission Module (LTM): Not part of this openETCS implementation;
- EURORADIO;

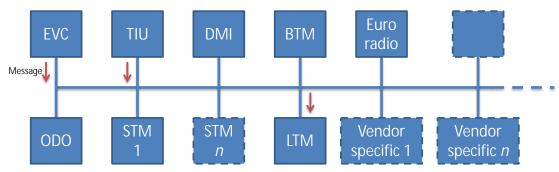


Figure 1. Reference abstract hardware architecture

• Juridical Recording Unit (JRU): Not part of this openETCS implementation;

Elements not being part of this implementation are marked.

Those units shall working concurrently. They shall exchange information with other units through asynchronous message passing.

#### 4.1.3 Reference abstract software architecture

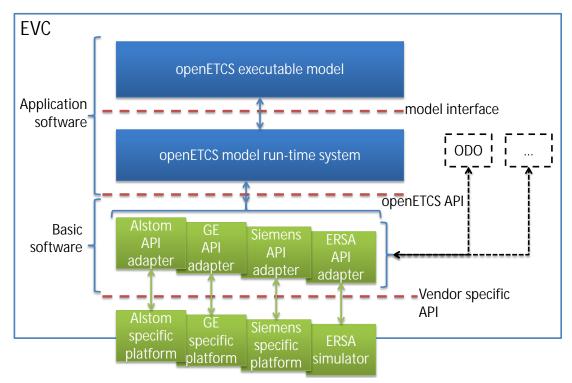


Figure 2. Reference abstract software architecture

The *reference abstract software architecture* is shown in figure 2. This architecture is made of following elements:

- *openETCS executable model* produced by the [4] Scade Model. It shall contain the program implementing core ETCS functions;
- *openETCS model run-time system* shall help the execution of the openETCS executable model by providing additional functions like encode/decode messages, proper execution of the model through appropriate scheduling, re-order or prioritize messages, etc.
- *Vendor specific API adapter* shall make the link between the Vendor specific platform and the openETCS model run-time system. It can buffer message parts, encode/decode messages, route messages to other EVC components, etc.
- All above three elements shall be included in the EVC;
- *Vendor specific platform* shall be all other elements of the system, bus and other units, as shown in figure 1.

We have thus three interfaces:

• *model interface* is the interface between openETCS executable model and openETCS model run-time system.

- *openETCS API* is the interface between openETCS model run-time system and Vendor specific API adapter.
- *Vendor specific API* is the interface between Vendor specific API adapter and Vendor specific platform. This interface is not publicly described for all vendors. You can find the Alstom implementation as an example.

The two blocks openETCS executable model and openETCS model run-time system are making the *Application software* part. This Application software might be either openETCS reference software or vendor specific software.

The Vendor specific API adapter is making the Basic software part.

#### 4.2 Functional breakdown

# 4.2.1 F1: openETCS API Runtime System and Input to the EVC)

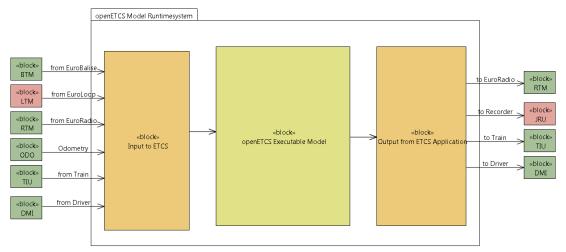


Figure 3. openETCS API Highlevel View

Figure 3 shows the structure of API with respect of the software architecture. Input boxes and output boxes not implemented in this stage are marked as red, other interfaces are marked as green. The System covers functions for processing Inputs from other Units, functions for processing Outputs to other functions and a basic runtime system. Inputs are used to feed the input to the executable model before calling it, outputs are used for collecting information provided by the executable model to be passed to the relevant interfaces after the execution cycle has finished.

## 4.2.1.1 Principles for Interfaces (openETCS API)

Information is exchanged *messages* in an asynchronous way. A message is a set of information corresponding to an event of a particular unit, e.g. a balise received from the BTM. The possible kind of messages are described in chapter ??.

The information is passed to the executable model as parmeters to the snychronous call of a procedure (Interface to the executable model). Since the availability of input messages to the application is not guaranteed the parts of the interfaces are defined with a "present" flag. In

addition, fields of input arraysquite often is of variable size. Implementation in the concrete interface in this use-case is the use of a "size" parameter and a "valid"-flag.

# 4.2.1.2 openETCS Model Runtime System

The openETCS model runtime system also provides:

- Input Functions From other Units
  In this entity messages from other connected units are received.
- Output Functions to other Units
  The entity writes messages to other connected units.
- Conversation Functions for Messages (Bitwalker)

The conversion function are triggered by Input and Ouput Functions. The main task is to convert input messages from an bit-packed format into logical ETCS messages (the ETCS language) and Output messages from Logical into a bit-packed format. The logical format of the messages is defined for all used types in the openETCS data dictonary.

Variable size elements in the Messages are converted to fixed length arrays with an used elements indicator.

Optional elements are indicated with an valid flag. The conversion routines are responsible for checking the data received is valid. If faults are detected the information is passed to the openETCS executable model for further reaction.

# Model Cycle

The version management function is part of the message handling. This implies, conversions from other physical or logical layouts of messages are mapped onto a generic format used in the EVC. Information about the origin version of the message is part of the messages.

The executable model is called in cycles. In the cycle

- First the received input messages are decoded
- The input data is passed to the executable model in a predefined order. (**Details for the interface to be defined**).
- Output is encoded according to the SRS and passed to the buffers to the units.

# 4.2.1.3 Input Interfaces of the openETCS API From other Units of the OBU

Interfaces are defined in the Scade project APITypes (package API\_Msg\_Pkg.xscade).

In the interfaces the following principles for indicating the quality of the information is used:

Indicator	Туре	Purpose
present	bool	True indicates the component has been changed compared to the previous call of the routine
valid	bool	True indicates the component is valid to be used.
validated	bool	True indicates the component has been validated.

In the next table we can see the interfaces being used in the openETCS system. Details on the interfaces are defined further down.

Unit	Name	Processing Function	Description
BTM	Balise Telegram	Receive Messages	
DMI			
EURORADIO	Communication Management	Communication Management	
EURORADIO	Radio Messages	Receive Messages	
ODO	Odometer	All Parts	
TIME	Time system of the OBU	All Parts	
Startup			
TIU	Train Data	All Parts	

Infrmation in the following sections gives an more detailed overview of the structure of the interfaces.

# 4.2.1.4 Message based interface (BTM, RTM)

Balise Message (Track to Train)

Message Name	Optional Packets	Restrictions in the current scope
Balise Telegram	3: National Values 41: Level Transition Order 42: Session Management 45: Radio Network registration 46: Conditional Level Transition Order 65: Temporary Speed Restriction 72: Packet for sending plain text messages 137: Stop if in Staff Responsible 255: End of Information	Used in Scenario

Balise Telegram	0, 2, 3, 5, 6, 12, 16, 21, 27, 39, 40, 41,	Not Used in Scenario
	42, 44, 45, 46, 49, 51, 52, 65, 66, 67, 68,	
	69, 70, 71, 72, 76, 79, 80, 88, 90, 131,	
	132, 133, 134, 135, 136, 137, 138, 139,	
	141, 145, 180, 181, 254	

# Radio Messages (Track to Train)

Message Name	Optional Packets	Restrictions in the current scope	
2: SR Authorisation	63: List of Balises in SR Authority	Message Not Supported	
3: Movement Authority	<ul><li>21: Gradient Profile</li><li>27: International Static Speed Profile</li><li>49: List of balises for SH Area</li><li>80: Mode profile</li><li>plus common optional packets</li></ul>	a	
9: Request To Shorten MA	49: List of balises for SH Area 80: Mode profile		
24: General Message	From RBC: 21: Gradient Profile 27: International Static Speed Profile plus common optional packets From RIU: 44, 45, 143, 180, 254	Messages from RIU are not supported	
28: SH authorised	3, 44, 49		
33: MA with Shifted Location Reference	<ul><li>21: Gradient Profile</li><li>27: International Static Speed Profile</li><li>49: List of balises for SH Area</li><li>80: Mode profile</li><li>plus common optional packets</li></ul>		
37: Infill MA	5, 21, 27, 39, 40, 41, 44, 49, 51, 52, 65, 66, 68, 69, 70, 71, 80, 88, 138, 139	Message Not Supported	
List of common optional parameters	3, 5, 39, 40, 51, 41, 42, 44, 45, 52, 57, 58, 64, 65, 66, 68, 69, 70, 71, 72, 76, 79, 88, 131, 138, 139, 140, 180		

# 4.2.1.5 Interfaces to the Time System

The interface types are defined in the OBU\_Basic\_Types\_Pkg Package. The system time is defined in the basic software.

The system TIME is provided to the executable model at the begin of the cycle. It is not refreshed during the cycle. The time provided to the application is equal to 0 at power-up of the EVC (it is not a "UTC time" nor a "Local Time"), then must increase at each cycle (unit = 1 msec), until it reaches its maximum value (i.e current EVC limitation = 24 hours)

• TIME (T\_internal\_Type, 32-bit INT)
Standardized system time type used for all internal time calculations: in ms. The time is defined as a cyclic counter: When the maximum is exceeded the time starts from 0 again.

# 4.2.1.6 Interfaces to the Odometry System

The interface types are defined in the OBU\_Basic\_Types\_Pkg Package. The odometer gives the current information of the positing system of the train. In this section the structure of the interfaces are only highlighted. Details, including the internal definitions for distances, locations speed and time are implemented in the package.

- Odometer (odometry\_T)
  - valid (bool)
     valid flag, i.e., the information is provided by the ODO system and can be used.
  - timestamp (T\_internal\_Type)
     of the system when the odometer information was collected. Please, see also general
     remarks on the time system.
  - Coordinate (odometryLocation\_T)
    - \* nominal (L\_internal\_Type) [cm]
    - \* min (L\_internal\_Type) [cm]
    - \* max (L\_internal\_Type) [cm]

The type used for length values is a 32 bit integer. Min and max value give the interval where the train is to be expected. The bounderies are determined by the inaccuracy of the positioning system. All values are set to 0 when the train starts.

- speed (V\_internal\_Type) [km/h] General Speed of the train
- acceleration (A\_internal\_Type)[0.01 m/s2],
   Standardized acceleration type for all internal calculations: in
- motionState (Enumeration)
   indicates whether the train is in motion or in no motion
- motionDirection (Enumeration)
   indicates the direction of the train, i.e., CAB-A first, CAB-B first or unknown.

# 4.2.1.7 Interfaces to the Train Interfaces (TIU)

The following information is based on the implementation of the Alstom API. The interface is organised in packets. The packets of the Alstom implementation are listed in the appendix to this document.

The description of interfaces needed for the current scope will be added according to the use.

#### 4.2.1.8 Output Interfaces of the openETCS API TO other Units of the OBU

From Function Name		To Unit	Description
Radio Output Message		EURORADIO	

Communication Management	EURORADIO	
Driver Information	DMI	
Train Data	TIU	

Packets: to be completed

Radio Messages to be completed

# 4.2.2 Receive messages / check consistency

# 4.2.2.1 Short Description of Functionality

The block "Receive messages / check consistency" is responsible for receiving Eurobalise-telegrams and Euroradio-messages from the API and perform several consistency checks on the input.

The block collects the telegrams of balises in order to build balise group messages. Euroradio messages are always delivered as a whole message. After receiving, building and checking a message, the message is delivered to the output of the module for further processing by other modules.

# 4.2.2.2 Input

Note: Only radio functionality covered!

For providing the output, the module needs different input data flows. An overview is provided in table 2

Index	Input name	Input type
0	rtmMessage	<pre>&lt; will be defined by API &gt;</pre>
1	apiConsistencyError	bool
2	lastRelevantEventTimestamp	T_internal_Type
3	t_NVContact	T_internal_Type
4	reset	bool

Table 2. Overview over input

### Input 0: rtmMessage

The Euroradio-/Eurobalise-message is originated from the openETCS-API. The API is described in the section ??.

In the current implementation, only messages with normal priority are used in the system. Emergency messages will not be processed.

In the model, the output of the API will be received at the inputs rtmMessage and apiConsistencyError of the model.

The input not only transfers the radio message but also information, if a message is present and if this message was decoded correctly and passed the lowlevel checks performed by the API.

The radio message itself consists of a header and a payload-part. The header part contains all variables of the message. The payload-part consists of all packets in the message.

For the demonstrator scenario (Utrecht-Amsterdam), the following messages and packets are to be expected by the model:

- Messages from RBC: 2, 3, 6, 8, 15, 24, 27, 32, 39, 41
- Packets from RBC: 3, 5, 15, 21, 27, 41, 42, 57, 58, 65, 68, 72, 80

**TODO:** Balise-channel

# Input 1: apiConsistencyError

If the API detects a consistency error in the transmitted message, this error is reported to the model by the input apiConsistencyError.

Possible errors detectable by the API are:

- CRC-error
- Value range of variable exceeded

Value	Interpretation	
true	The API detected a consistency error.	
false	No consistency error was detected by the API.	

Table 3. Possible values for the input apiConsistencyError

### Input 2: lastRelevantEventTimestamp

For monitoring the safe radio connection, it's necessary, that the time between two packets is less than the value of T\_NVCONTACT.

In situations like level-changes or announced radioholes, not the timestamp of the last message is relevant for comparison, but the timestamp of the last relevant event. This can be e.g. the timestamp of the level change or the timestamp of the moment, when the train was passing the end of the radiohole.

For performing this check, the timestamp of the last relevant event is provided to the model as an T\_internal\_Type-type.

# Input 3: t\_NVContact

For monitoring the safe radio connection, the national value T\_NVCONTACT is needed as an input.

#### Input 4: reset

To delete all data stored in the module (e.g. collected balise-telegrams, which do not yet form a complete message), a reset input can be used. If the input is set to true, all data kept in the module is deleted and no input is accepted.

Value	Interpretation
true	All data kept in the module is deleted and no input is accepted.
false	No action. Data at input is accepted.

Table 4. Possible values for the input reset

# 4.2.2.3 Output

Note: Only radio functionality covered

The output of the module provides the received and processed Euroradio and Eurobalise messages. The module combines messages both from Eurobalises and from Euroradio to one common dataflow.

Additionally, status information is provided. The status information consists of the following data:

- Information, if the message has to be rejected in case of a consistency error, includeing further information about the error.
- Information, if an acknowledgement has to be sent to the RBC for the message
- Information about the radio connection. None or one of the following notifications:
  - Confirmation for establishing a connection or reconnection
  - Notification, that a established connection was lost, including the origin of the failure
  - Notification, that a connection could not be (re)established after 3 attempts, includeing the origin of the failure
  - Notification, that a connection could not be re-established after 3 attempts, includeing the origin of the failure

An overview over the output dataflows is provided in table 4.

Since the situation can occur, that a Euroradio-message and a Eurobalise-message are delivered to the output in the same cycle of the module, the output consists of a structure of both data types. Dependant on the input and the processing of the message, the output can contain

- **0** Euroradio-message and **0** Eurobalise-message
- 1 Euroradio-message and 0 Eurobalise-message
- **0** Euroradio-message and **1** Eurobalise-message

# • 1 Euroradio-message and 1 Eurobalise-message

To mark, in which elements valid data is available, the elements can be marked with valid-flags (see specification of the datatypes).

Index	Output name	Output type
0	MessageOutputSlot1	checkedMessage_T
1	MessageOutputSlot2	checkedMessage_T

Table 5. Overview over output

# Output 0: checkedMessage\_T

The type checkedMessage\_T consists of the fields described in table ??.

Index	Element name	Element type
0	valid	bool
1	rejected	bool
2	rejectionReason	Boolean-Array (to be defined)
3	acknowledgementRequired	bool
4	radioConnectionStatus	Enumeration
5	receivedMessage	receivedMessage_T

Table 6. Fields of the checkedRadioMessage\_T-type

**Element 0: valid** The valid-flag specifies, if the data in this element is valid or if it has to be ignored while processing.

Value	Interpretation	
false	The data in this element is not valid and has to be ignored.	
true	The data in this element is valid and has to be processed by the following models.	

Table 7. Possible values for the output valid

**Element 1: rejected** The output rejected is giving information if the current message was rejected. The value of the flag is the result of the consistency check.

Value	Interpretation
false	The message at output receivedMessage is consistent and was not rejected.
true	During the consistency check, consistency errors were detected and the message was
	rejected.

Table 8. Possible values for the output rejected

**Element 2: rejectedReason** In case of an inconsistent message, the output rejectedReason is giving information to the system, which problem occured. This information also has to be sent to the RBC as an error report.

**Element 3: acknowledgementRequired** The acknowledgementRequired-dataflow indicates, whether the reception of the message has to be acknowledged to the RBC.

Value	Interpretation
true	An acknowledgement has to be sent to the RBC for the current message delivered at output receivedMessage
false	No acknowledgement has to be sent for the current message delivered at output receivedMessage

Table 9. Possible values for the output AcknowledgementRequired

**Element 4: radioConnectionStatus** The output ConnectionStatus is used, when the RTM reports problems with the radio connection. The output is derived from the Alstom-API. The output can be one of the following values:

Value	Interpretation
CONNECTION_CONFIRMATION	Confirmation for establishing a connection or reconnection
CONNECTION_LOST	Notification, that a established connection was lost
CONNECTION_FAILURE	Notification, that a connection could not be (re-)established after 3 attempts, includeing the origin of the failure
CONNECTION_NOT_ESTABLISHED	Notification, that a connection could not be re-established after 3 attempts, includeing the origin of the failure

Table 10. Possible values for the output radioConnectionStatus

**Element 5: receivedMessage** The element receivedMessage consists of the type receivedMessage\_T combines both balise and radio messages to one common datatype. This datatype contains all variables and packets, which are possible for the given scenario.

Name	Datatype	Description	
source	Enumeration	Defines, if this is a Euroradio or Eurobalise message.	
BG_Common_Header	BG_Header_T	Header of Eurobalise message	
Radio_Common_Header	Radio_TrackTrain_Header_T	Header of Euroradio message	
Packets	structure of possible packets	-	

Table 11. Structure of receivedMessage\_T

The Eurobalise-common-header BG\_Header\_T consists of the fields described in table ??. The structure corresponds to the structure defined in the SRS chapter 8.4.2.1. Some fields were removed since they are not needed anymore for further processing after building messages from separate telegrams.

Name	Datatype	Origin	
q_updown	Q_UPDOWN	Eurobalise-Header	
m_version	M_VERSION	Eurobalise-Header	
q_media	Q_MEDIA	Eurobalise-Header	
n_total	N_TOTAL	Eurobalise-Header	
m_mcount	M_MCOUNT	Eurobalise-Header	
nid_c	NID_C	Eurobalise-Header	
nid_bg	NID_BG	Eurobalise-Header	
q_link	Q_LINK	Eurobalise-Header	

Table 12. Structure of BG\_Header\_T

The Euroradio-common-header Radio\_TrackTrain\_Header\_T consists of the fields described in table ??. The structure corresponds to the structure defined in the SRS chapter 8.4.4.6.1. The structure contains all variables required by possible NID\_MESSAGE values for the given scenario.

Field No.	Name	Datatype	Origin
-	nid_message	NID_MESSAGE	Euroradio-Header
-	1_message	L_MESSAGE	Euroradio-Header
-	t_train	T_TRAIN	Euroradio-Header
-	m_ack	M_ACK	Euroradio-Header
-	nid_lrbg	NID_LRBG	Euroradio-Header
-	q_scale	Q_SCALE	Messages 2, 33
-	d_sr	D_SR	Message 2
-	t_sh_rqst	T_TRAIN	Message 28
-	d_ref	D_REF	Message 33

Table 13. Structure of Radio\_TrackTrain\_Header\_T

**Note:** Packet 44 not used (applications outside the ERTMS/ETCS system are not supported by this implementation).

# 4.2.2.4 Data

The timestamp of the last received message via Euroradio has to be stored in an internal data structure.

An internal data structure to temporarily store balise telegrams for building messages is needed.

# 4.2.2.5 Reference to the SRS (or other requirements)

Note: Only radio functionality covered

#### **Euroradio**

- SRS subset 26, chapter 8.4.4: Rules for Euroradio messages
- SRS subset 26, chapter 3.16: Data consistency

# 4.2.2.6 Functionality

Note: Only radio functionality covered for checks

**Receive Euroradio from API** The first stage of the module is the reception of Euroradiomessages and Eurobalise-Telegrams from the openETCS-API. At each cycle the following conditions can occur:

- 1. No new Euroradio-message or Eurobalise-telegram is available.
- 2. A new Euroradio-message is available
- 3. A new Eurobalise-telegram is available
- 4. A new Euroradio-message and a new Eurobalise-telegram is available.

#### Content checks

- The computed length of the message must be equal to the value in L\_MESSAGE. (SRS 8.4.4.2.1)
- The whole message must be complete and contains all necessary fields. (SRS 8.16.1.1)
- The message must respect the ETCS language. (SRS 8.16.1.1)
- The variables of the message does not contain invalid values. (SRS 8.16.1.1)
- Check if the specified priority of message is equal to the priority with which the message was received. (SRS 3.16.3.1.3.1)

# **Timing checks**

- Check if the timestamp of a message is greater than the timestamp of the former message (SRS 3.16.3.3.3)
- If a message contains the timestamp "Unknown", check if this message is part of the initiation of the communication session. (SRS 3.16.3.3.4)
- Perform the check with the current packet n:  $T_TRAIN_n \le T_TRAIN_{n-1} + T_NVCONTACT$  (SRS 3.16.1.1). This ensures, that the packet was received in due time.

# **Actions for inconsistent messages**

- If a message is not consistent, it shall be rejected. (SRS 3.16.3.1.1.1)
- The RBC shall be informed, when a message was rejected (SRS 3.16.3.1.1.2). Therefore an error report must be sent (packet number 4).
- If the RBC requested an ACK for a received message, the ACK shall be sent. (SRS 3.16.3.5)
- This module will not trigger the reaction for an interrupted radio connection to the RBC.
   The reaction sepcified by M\_NVCONTACT will be triggered by the RBC session management module.

The check by the Euroradio-protocol (3.16.3.1.1) will not be performed by the model, but on a lower level (RTM or openETCS-API).

Safe connection supervision is not in the scope of this module. This functionality will be implemented by the "Manage Radio communication" module. The "Receive message and check consistency"-module will provide the necessary status data about the connection as an output.

# 4.2.3 Build coordinate system and calculate train position

- Update the coordinate system when a new BG is detected (taking into account detected "balise 1" from not completed BG's), i.e. backward - Calculation of position of passed BG's.
- Management of multiple detected BG's
- Relate the (location based) information in received messages to the reference system
- Update train position at LRBG
- Update the train position with the distance driven since last update (or reset to LRBG position)

### 4.2.4 Store inputs from the TIU

- Store status inputs (sleeping indicator etc.)
- Store changed train data
- Store brake status (e.g. in the handling of brake testing).
- Store status of on-board systems (for displaying to the driver)
- Isolation
- Passive shunting

# 4.2.5 Store inputs from the DMI

- Store received acknowledgement and inputs in the "DMI request buffer" (includes "data-entry")

# 4.2.6 Filtering (Mode/Level) - One packet per type

# ISSUE: HOW MANY PKT 44, 65 AND 66 PER MESSAGE ARE MAXIMALLY SUP-PORTED?

- Check on announced and immediate level transition orders in the messages to be filtered (needed for further criteria for filtering, to decide if the data shall be stored in the transition buffer).

- Filter data stored in the transition buffer according to the current level (what to do if similar information is available in the new message??). Data can be rejected, accepted or kept in the transition buffer. (Filtering according to new level will be done directly afterwards in the next cycle)

- Filter new received messages according to the current level (new level will be done in the next cycle as according to SRS data first has to be filtered according to old level and afterwards to new level). Data can be rejected, accepted or stored in the transition buffer.
- Filter (level) accepted data according to originating RBC (supervising or other). Information from BG's, loops or RIU is not filtered with this filter.
- Filter (level and RBC) accepted data according to the current mode (only reject or accept)

# 4.2.7 Store data (direct orders, BG lists, NV, track data, procedure parameters, confirmations)

- Store direct and conditional orders
- Store BG lists for SH and SR
- Store National Values, including procedure status information
- Store new received track data (version, etc.)
- Store procedure parameters

#### 4.2.8 Update location based data structures

- Overwrite location based data from a given location on-wards (reference location given in the message)
- Insert "Locations" in the data structure, in the order the "Locations" will be passed.

#### 4.2.9 Manage specific location based data:

- movement authority (MA) list of sections, message 37, packet 12 (level 1), message 3, packet 15 (level 2), 16 (repositioning, i.e. extending the current section), message 33 (??), packet 70 (route suitability), message 9 (request to shorten MA), packet 90 (track ahead free leads to MA request) minimum number of elements to be stored: 6
- list of announced BG's linking information: packet 5 minimum number of elements to be stored: 30
- adhesion factor: packet 71; only one element
- the "gradient profile" (in: pkt 21) minimum number of elements to be stored: 50
- Speed profiles: packet 27 (SSP) (the worst case can be determined at reception)
- Packet 13 minimum number of elements to be stored: 50
- Speed restrictions and non-continuous speed profiles: packet 51 (axle load profile), packet 52 (permitted braking distance), packets 65/66 (TSR), packet 88 (level crossing, incl. stop condition to be reset at standstill). minimum number of elements to be stored: TSR: 30, axle load: 30, permitted braking distance: 5, level crossing: 10.
- Reversing area's: packets 138, 139 minimum number of elements to be stored: 1
- Mode dependent speeds: message 2 and packet 80 minimum number of elements to be stored: 6
- Level transitions: packet 41 minimum number of elements to be stored: (see ss26, 5.10.1.6): 1
- RBC transitions: packet 131
- Radio infill area entry or exit: packet 133
- Loop announcement: packet 134

- DMI information: packets 72,76 (text messages), packet 79 (geographical position information), message 34 (track ahead free request) minimum number of elements to be stored: fixed text: 5, free text: 5, geographical position:

- Track conditions (to be passed to the TIU and displayed at the DMI): packet 39 (traction system), packet 40 (current limitation), packet 68 (diverse track conditions), packet 69 (platform conditions). Pkt 139 minimum number of elements to be stored: 20, + 1 for change power supply + 1 for platform conditions, + 1 for current limitation
- Route suitability: minimum number of elements to be stored: 3
- Big Metal Mass: Technical information (to be used for BG-filtering): packet 67 (ignore BG integrity) minimum number of elements to be stored: 5
- Virtual balise covers: minimum number of elements to be stored: 10
- list of position report locations. In: pkt. 58 minimum number of elements to be stored: 15
- Announced national values. In: pkt 3 minimum number of elements to be stored: 1 If new national values are announced, then those can lead to more restrictive braking curves. Therefore a speed restriction has to be calculated for the location where the values become valid, based on the targets in advance of this point.

#### 4.2.10 Build and update MRSP and list of targets at LRBG

- Overlay speed restrictions (one by one) over the resulting SSP as received from "build location based data".
- Close the resulting profile with the "end of authority" or "limit of authority" as delivered by "MA-management" resulting in the MRSP at the LRBG. (in on-sight or limited supervision mode, those may not be available)
- Select list of "speed reductions"
- Evaluate (backwards) which targets are relevant, resulting in the list of most restrictive targets at the LRBG.
- Relocate targets (beyond this location) to the "minimum border crossing location", i.e. the minimum safe location where National values are changed, and add the minimum resulting speed at this location to the list of targets.
- Reasoning: new national values might cause more conservative braking curves which otherwise could lead to an intervention at the border.

# 4.2.11 Profile supervision, i.e. BCM and ceiling speed supervision (active for FS, OS and LS)

- Update MRSP for distance driven, i.e. lower the distance to all speed decreases with the maximum distance driven since last update, lower the distance to all speed increases with the minimum distance driven since last update, reorder the distances in the list if locations to lower and to increase changed order.
- Determine the local maximum speed
- Update the list of targets, i.e. lower the distance to all targets with the maximum distance driven since last update (order will not change) and select the current most restrictive target (always the first in the list)
- braking curve monitoring; calculate the braking curves to the most restrictive target, taking into account gradients
- ceiling speed supervision; monitor against the local maximum speed.

#### 4.2.11.1 Movement supervision

- Roll away protection

#### 4.2.11.2 Area Supervision

In shunting, post trip, reversing and staff responsible an area (plus in some cases ceiling speed) is protected. In unfitted only a speed. The way the area is protected differs per mode therefore a function shall be available for each mode:

- area supervision in shunting (taking into account a list of BG's to be passed)
- area supervision in staff responsible (taking into account a list of BG's to be passed and/or a distance)
- reversing area supervision
- post trip supervision (only reverse movement).

# 4.2.11.3 Update procedure status (including commanding actions towards driver, radio or RBC)

- SoM:
- EoM
- Enter shunting by driver or track side command override
- Enter "on sight"
- Enter "staff responsible"
- level transitions
- Manage train trip
- Exit shunting
- Passive shunting
- Change train orientation
- Splitting/combining
- Stopping in rear of LX level crossing
- Changing train data (not by the driver)
- Handling track conditions (including indications): not applicable for Amsterdam-Utrecht
- Limited supervision entry: not applicable for Amsterdam-Utrecht
- release brakes (after trip)
- handle track ahead free request

#### 4.2.11.4 Mode/Level management

- Manage all conditions for level changes except the direct transitions (handled in filtering): F41
- Manage all conditions for mode changes (except msg 16 if that leads to a mode change): F42

#### 4.2.11.5 DMI management

- update the MRSP at the LRBG and construct the DMI image
- collect BCM results
- Check displaying of location dependent txt messages
- Calculate geographical position based on stored track-km references

- Display required ack-requests, T.A.F. requests etc.
- Display mode and level information

#### 4.2.11.6 RBC communication

- Manage confirmation requests.
- Report train position
- sent train data for validation
- provide acknowledgements on data reception

#### 4.2.11.7 TIU communication

- Communicate track conditions
- Brake test procedure.

### 4.2.11.8 JRU and STM management: not applicable for Utrecht-Amsterdam

#### 4.2.12 Filter Track informationen

#### 4.2.12.1 Interfaces

**Input from:** Receive MSG Check Consistency and Coordinate System and Train Position **Output to:** Build Data structure and Location Based/ Build Data Structures Drivers

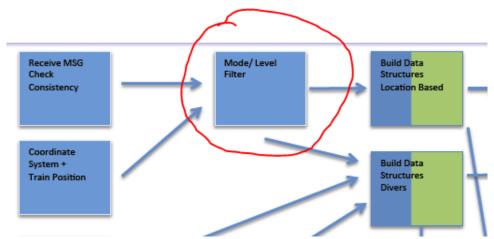


Figure 4. Filter In and out

#### 4.2.12.2 SysML Model

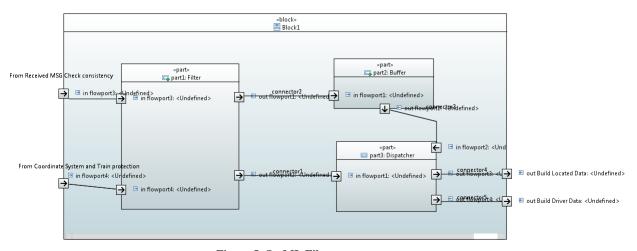


Figure 5. SysML Filter

# 5 Design description

## 5.1 Detailed functional description

Reference to SRS: § 4.8.1, § 4.8.2, § 4.8.3, § 4.8.4

## 5.2 Documentation of design

§ 4.8.1.6 Messages will be buffered, if...

Number			1			Onh	oard operating	n level	-
Packet 3	Number	Package/Variables	Information	From RBC	0				3
2   Packet 5   Loney   No.   R[1]   R[2]   A   A   A   A   A   A   A   A   A									
2	1	Packet 3	National Values						
Specific Process   Specific Pr	2	Packet 5	Linking						
A   Packet 12, 15   Movement Author)   No   R(1)   R(1)	-	Tuckets							
A   Packet 12, 15   Moormer Author)   No   R[1]   R[1]   A    R[1]   R[1]   S   Packet 60   Packet 40   St one   R   No   R[1]   R[1]	3	V_Main Packet 12	Signalling Related Speed Restriction	No	R [1]	R [1]	Α	R [1]	R [1]
S				Yes					
Packet 69   Packet 10   Packet 11   Packet 12   Packet 13   Packet 14   Packet 14   Packet 15   Packet 15   Packet 15   Packet 17   Packet 16   Packet 17   Packet 16   Packet 17   Packet 17   Packet 17   Packet 18   Packet 17   Packet 18   Pack									
Packet 15			+ (optional) List of Balises for	No	R [1]	R [1]	A [4]	R [1]	R [1]
Packet 15		Facket 45	SH area	Yes	R (2)	R [2]	R [2]	A [3] [4] [5]	A (3) (4) (5)
S	7	Packet 16	Repositioning Information	No					
Packet 27									- 11
9	8	Packet 21	Gradient Profile						
10	9	Packet 27	International SSP	No		R [1]			
11   Packet 41   Leve Translator Color   No.   A   A   A   A   A   A   A   A   A	40	0.1.55							
11	10	Packet 51	Axie Load speed profile						
12	11	Packet 41	Level Transition Order	No	A	A	A	A	A
12			Conditional Level Townsides						
13	12	Packet 46			A [11]	A [11]	A [11]	A [11]	A [11]
14	13	Packet 42	Session Management		Α.	Α	Δ	Α	
15	13	1 00,000 72	, some magazitatis						
15	14	Packet 45	Radio Network registration						
16	10	Dacket E7	MA Paruart Parameters		A	A	A	A	A
Package 63 + Message Radio 2 + (optional) Packet 49	13	Facket 37	mo recipies r unumerora		A	A	A	A	A
Package 63 + Message Radio 2 + (optional phacket 49   Set Authorassion + legisload)   Set of Billions in SR mode   Yest   R   R   A   A   A   A   A	16	Packet 58	Position Report parameters						
17   (optional) Packet 49		0.1.00.14		Yes	A	A	A	A	A
18	17		SR Authorisation + (optional) List of Balises in SR mode	No					
19		(.,		Yes	R	R	R	A [3]	A [3]
19	18	Packet 137	Stop if in SR mode		R	R	A	A	A
Packet 65			SR distance information from						
Packet 65   Temporary Speed Resirction   No	19	D_SR in Packet 13	loop		R	R	A	R	R
Packet 66   Versporary Speed Relations   No.   A   R[2]   R[2]   A   D   A   D	20	Parket 65	Temporary Speed Restriction		Α	R (1) (2)	Α	A (8)	A [8]
Ves   R(D)   R	25	1 delect 05	1 1 1 1 1						
Ves   R(D)   R	21	Packet 66	Temporary Speed Restriction	No	A	R [1] [2]	A	A	A
Montables in L2D   No   No   No   No   No   No   No   N			Revocation	Yes					
Packet 141	22	Package 64	Inhibition of revocable TSRs from balises in L2/3	No					
Yes				Yes	R [2]		R [2]	Α	Α
24	23	Packet 141	Default Gradient for TSR		A	R [1] [2]	A	Α	Α
Packet 71	24	Packet 70	Route Suitability Data		R [1]	R [1]	Α	R [1]	R [1]
Yes   Right   Right				Yes	R [2]	R [2]	R [2]	A [3]	A [3]
26	25	Packet 71	Adhesion Factor						
27	26	Packet 72	Plain Text Information	100					
Next   R   R   R   R   R   R   R   R   R									
28	27	Packet 76	Fixed Text Information						
Packet 131   RBC Transition Coder   RPC   RT(2)   RT(2)   R (2)   R	28	Packet 79	Geographical Position						
Next						R [2]			
30   Packet 132   Darger for SH information   No	29	Packet 131	RBC Transition Order						
Ves	30	Packet 132	Danger for SH information						
32   Packet 133   Rado Infili Area information   No   R   R   A   R   T   R   T									
Packet 133   Rado Infil Area efformation   No.   R   R   A   R   R   R	31	Package 135	Stop Shunting on desk opening		A	А	Α	Α	Α
Vea	2-	0.1							0.00
33   Package 42   Season Management with registrooming RU   Yes   No   R   R   A   R   R	32	Packet 133	Ť		R	R	A	R [1]	R [1]
Ves	33	Package 42	Session Management with		R	R	А	R	R
Assignment of Co-ordinate   No.   No.			neignbouring KiU						
Assignment of Co-ordinate   No   No   A [10]	34	Packet 134	EOLM information		А	A	А	A	Α
System   S	9-		Assignment of Co-ordinate						
36   Packet 136   Intil Location Reference   No.   R   R   A   R.[1]   R.[1]	35	Messager 45	system		A (10)	A (10)	A (10)	A (10)	A (40)
137   Packet 39, Packet 68   Track Conditions excluding big   No   R[1]   R[1]   A   R[1]   R[1]   R[2]   R[3]   A   A   A   A   A   A   A   A   A	36	Packet 136	Infill Location Reference						
37   Palluset 35y, Palluset 06   metal masses   No			Ť						
38 Packet 67 Track condition big metal No A A A A A	37	Packet 39, Packet 68	Track Conditions excluding big metal masses	No	R [1]	R [1]	A	R [1]	R [1]
masses			Yeards are did						_
Yes	38	Packet 67	masses		А	A	А	Α	Α
			1	Yes					

Figure 6. Decision

5.3	CCAI		Model
ວ.ວ	SCAI	UE	woaei

# Appendix A: Restrictions on Interfaces to openETCS OBU

The following summarizes restrictions in the scope of implementation of the openETCS OBU. The chosen restrictions are valid for the current scope of the modelling work. They are based on the functions needed to cover the use-case of Utrecht-Amsterdam line.

#### A.1 Track to Train Interface

Track to Train Interface: Packets Received and The Coverage in openETCS (Section 7.4.1):

Packet Number	Packet Name	Relevant Scope	in
0	Virtual Balise Cover marker		
2	System Version order		
3	National Values		
5	Linking		
6	Virtual Balise Cover order		
12	Level 1 Movement Authority		
13	Staff Responsible distance information from loop		
15	Level 2/3 Movement Authority		
16	Repositioning Information		
21	Gradient Profile		
27	International Static Speed Profile		
39	Track Condition Change of traction system		
40	Track Condition Change of allowed current consumption		
41	Level Transition Order		
42	Session Management		
44	Data used by applications outside the ERTMS/ETCS system.		
45	Radio Network registration		
46	Conditional Level Transition Order		
49	List of balises for SH Area		
51	Axle load Speed Profile		
52	Permitted Braking Distance Information		
57	Movement Authority Request Parameters		
58	Position Report Parameters		

63	List of Balises in SR Authority
64	Inhibition of revocable TSRs from balises in L2/3
65	Temporary Speed Restriction
66	Temporary Speed Restriction Revocation
67	Track Condition Big Metal Masses
68	Track Condition
69	Track Condition Station Platforms
70	Route Suitability Data
71	Adhesion Factor
72	Packet for sending plain text messages
76	Packet for sending fixed text messages
79	Geographical Position Information
80	Mode profile
88	Level crossing information
90	Track Ahead Free up to level 2/3 transition location
131	RBC transition order
132	Danger for Shunting information
133	Radio infill area information
134	EOLM Packet
135	Stop Shunting on desk opening
136	Infill location reference
137	Stop if in Staff Responsible
138	Reversing area information
139	Reversing supervision information
140	Train running number from RBC
141	Default Gradient for Temporary Speed Restriction
143	Session Management with neighbouring Radio Infill Unit
145	Inhibition of balise group message consistency reaction
180	LSSMA display toggle order
181	Generic LS function marker
254	Default balise, loop or RIU information

## A.2 TIU Interfaces

The following information is based on the structure given by the Alstom API.

## A.2.1 Input to openETCS

Packet Number	Packet Name	Relevant Scope	in
0	Inputs from train devices		
1	Plain text message		
2	Fixed text message		
3	brake models		
4	Not used		
5	Not used		
6	Test and failure detection		
7	STMs specific behaviour		
8	Specific from MVB (Specific to Alstom implementation)		
12	Diagnostic		
13	Inhibition Level (Specific to Alstom implementation)		

## A.2.2 Output from openETCS

Packet Number	Packet Name	Relevant Scope	in
0	Commands		
1	Track conditions		
2	Odometric data		
3	Other information		
4	Train type		
5	Track condition change of traction power		
6	Location reference update		
7	Sporadic commands		
8	STMs states		
9	Train information		
10	Doors control section		
11	Track description deletion information		
14	Gradients		

# Appendix: References

[1] openETCS Product Owner. WP3 Product Backlog, Selection of First Iteration. https://github.com/openETCS/SRS-Analysis/labels/backlog%20item.

- [2] ERA. System Requirements Specification, SUBSET-026, v3.3.0 edition, March 2012.
- [3] openETCS WP3-team. openETCS Working Result: List of ETCS Functions, November 2013. https://github.com/openETCS/SRS-Analysis/blob/master/System%20Analysis/List\_Functions.xlsx.
- [4] openETCS. openETCS SCADE model, 2014. https://github.com/openETCS/modeling/tree/master/model/Scade/System.