


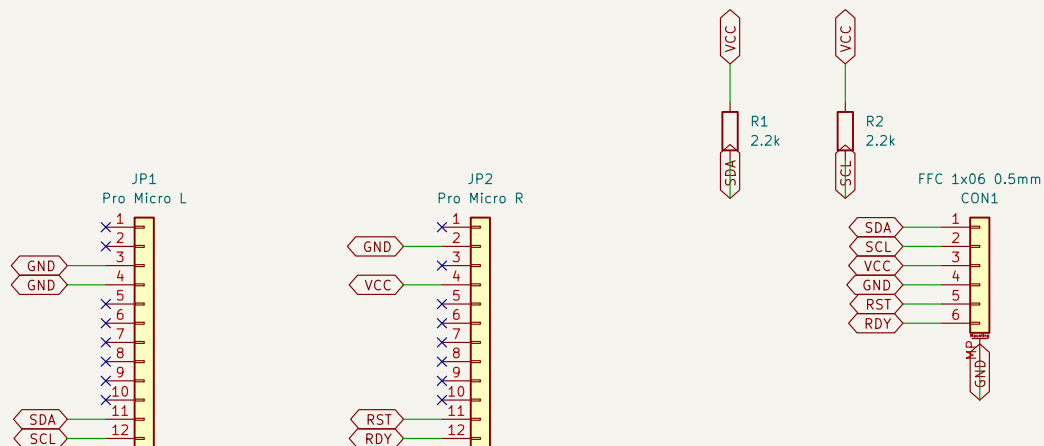

JP1 / JP2 reproduce the nice!nano v2 (Pro Micro) footprint one for one.
Every pin not listed below is a bare pass-through: plated hole, no copper attached.

JP1.11 D8 / P1.04 -> SDA JP2.12 D10 / P0.11 -> RDY
JP1.12 D9 / P0.09 -> SCL JP2.11 D16 / P1.06 -> RST
JP1.3, JP1.4, JP2.2 -> GND JP2.4 VCC (3.3V) -> VCC

CON1 is wired as the MIRROR of the trackpad's own connector, because the FFC cable reverses the conductor order end to end. TPS43 J1 (datasheet rev 1.06, Aug 2025) is 1:RDY 2:NRST 3:GND 4:VDDHI 5:SCL 6:SDA, so CON1 pin N carries TPS43 pin 7-N. VERIFY the cable before assembly: ring out pin 1 to pin 6 with a meter. If it is a straight-through cable instead, this board is wrong and must be re-fabbed.

R1/R2 are the 2.2k I2C bus pull-ups. CON1 MP is the pair of mechanical solder tabs, tied to GND. B.Cu is a GND plane carrying the VCC, SCL-to-R2 and RST crossings.

Nets: GND VCC SDA SCL RDY RST. All other Pro Micro pins pass through.
nice!nano v2 pass-through with Azoteq TPS43 trackpad breakout

Sheet: /

File: temper-tps43-interposer.kicad_sch

Title: Temper TPS43 Interposer

Size: A4

Date:

Rev: 1.0

KiCad E.D.A. 10.0.5

Id: 1/1