


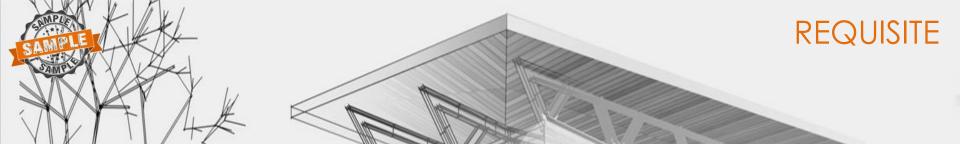

"Architecture is inhabited sculpture" -Constantin Brancusi



Name Mr. Vikrant Parmar

Address Chandigarh

Space Architectural – Residential

Permissible built up area 560 Sq ft

Rooms Farmhouse

Theme Traditional

Budget INR 15,00,000 – INR 20,00,000

Specific Need a cozy , small, cottage with an

requirements attic and a small veranda. Indian

traditional.

Box Selected Terra box

Number of boxes 1









### **Z TAGS**

Z1	Floor tile
Z2	Veranda floor tile
Z3	Sanitary fixture
Z4	C.P fittings










## WORKING FLOOR PLAN

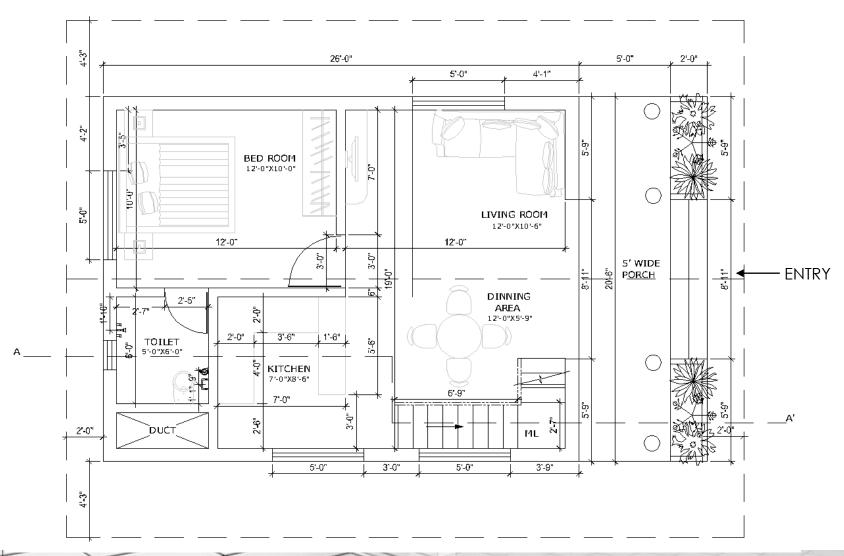








## WORKING ATTIC PLAN

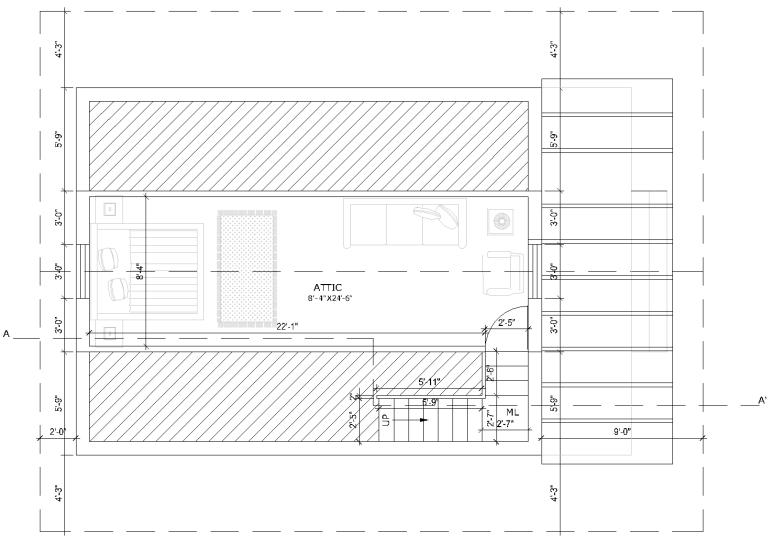

















## **ELEVATIONS**



3.

Elevation B

7'8"

#### **Z TAGS**

Z5	Window frame
Z6	Door frame
<b>Z</b> 7	Roof tiles
Z8	Wooden posts
Z9	Exterior paint






LEVEL + 2'-0"(PLINTH)

LEVEL + 0'-0"(GROUND)

LEVEL +9'-11"(EAVE)





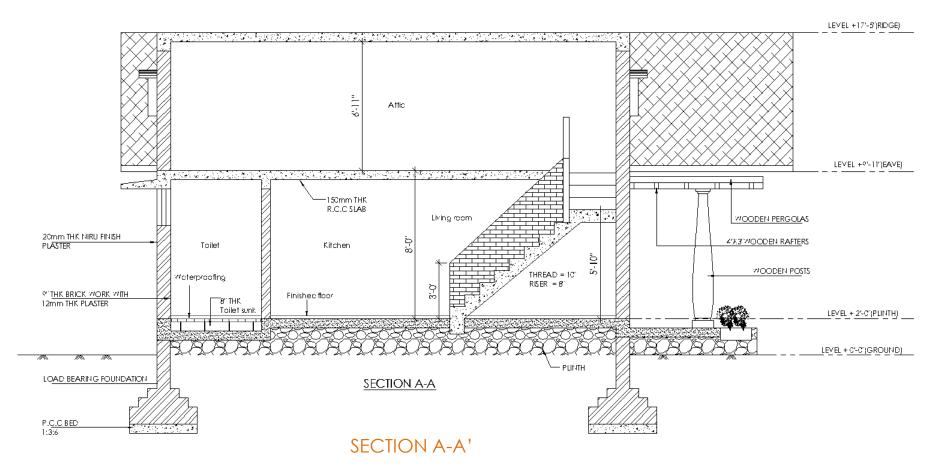


Note: Structural details subject to vary as per soil conditions and respective climate conditions







## PROJECT MAP

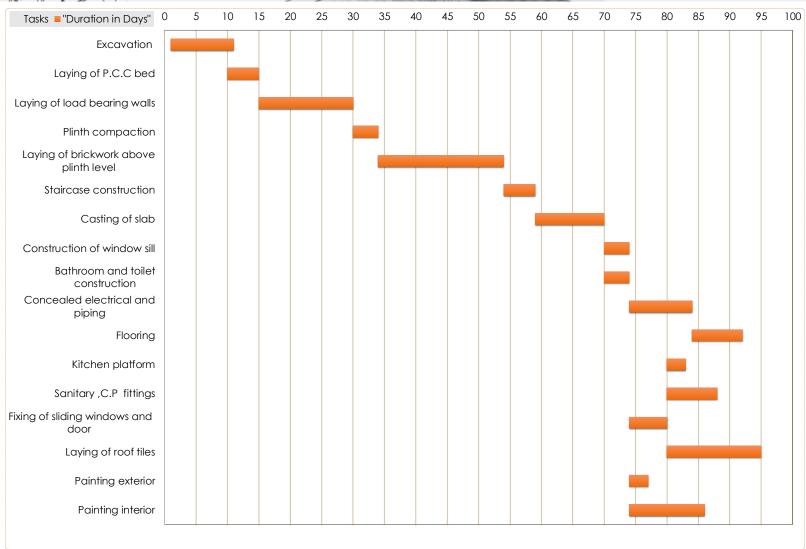





# SHOPPING LIST

Sr.no.	Pictures	Partner	Туре	Model (Hyperlink)
1- Z1		Nitco	Internal tiles	<u>Duracottura</u>
2-72		Nitco	External tiles	<u>Asterix beige</u>
3	$\Diamond$	Asian paints	Internal paints	<u>Royale</u>
4-79	$\Diamond$	Asian paints	External paints	Apex ultima
5-Z3	0	Hindware	W.C	Cornice





# SHOPPING LIST

Sr.no.	Pictures	Partner	Туре	Model (Hyperlink)
6-Z3	•	Hindware	Washbasin	<u>Ebello</u>
7-Z4	•—	Jaguar	Bottle trap	<u>Bottle trap</u>
8-Z4		Pepper Fry	Nahani trap	<u>Klaxon nahani trap</u>
9-Z4		Jaguar	Flush valve	<u>Metropole flush</u> <u>valve</u>
10-Z4		Jaguar	Single lever tall tap	Single lever tall tap






# SHOPPING LIST

Sr.no.	Pictures	Partner	Туре	Model (Hyperlink)
11-Z4		Jaguar	Bib cock	<u>Bib cock</u>
12-74		Jaguar	Hot and cold mixer	Hot and cold mixer
13-Z5	The State of the S	Fenesta	Window	<u>Fenesta</u>
14-Z6		Fenesta	Door	<u>Fenesta</u>
15-Z7		Btiles	Roof tiles	Clay tiles
16-Z8		Collectors corner	wooden posts	<u>collectors corner</u>



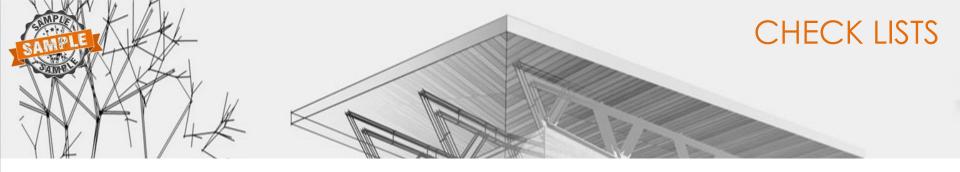

#### Check list before commencing work

- ✓ Check FSI of the plot
- ✓ Check permissible built up area as per FSI
- ✓ Check the soil conditions before commencing work
- ✓ All necessary approvals should be in place
- ✓ Appointment of contractor
- ✓ There should not be any tree cutting on the site.
- ✓ Drawings made as per N.B.C, also local byelaws to be crosschecked.
- ✓ All drawings must be consulted with structural engineer before construction





