A Section through the closed tool, mid-length

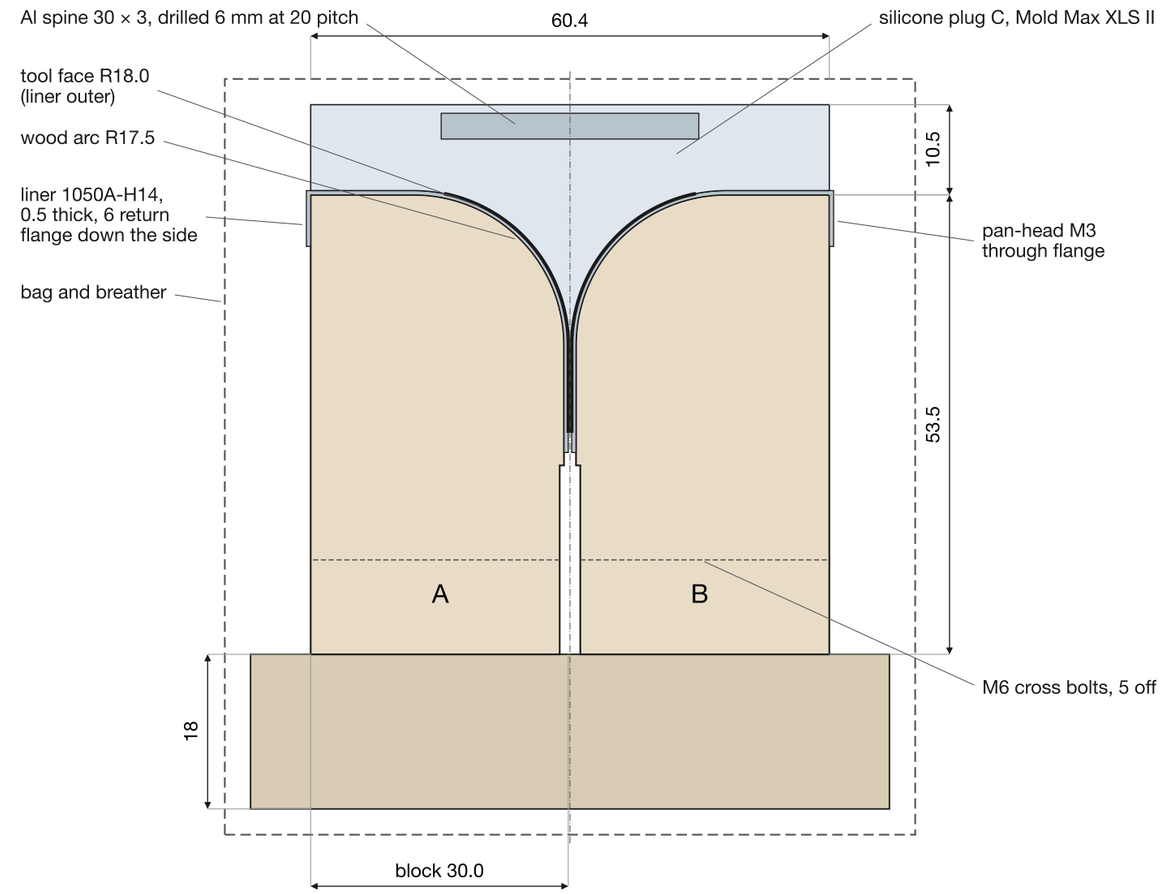

B Root detail, enlarged

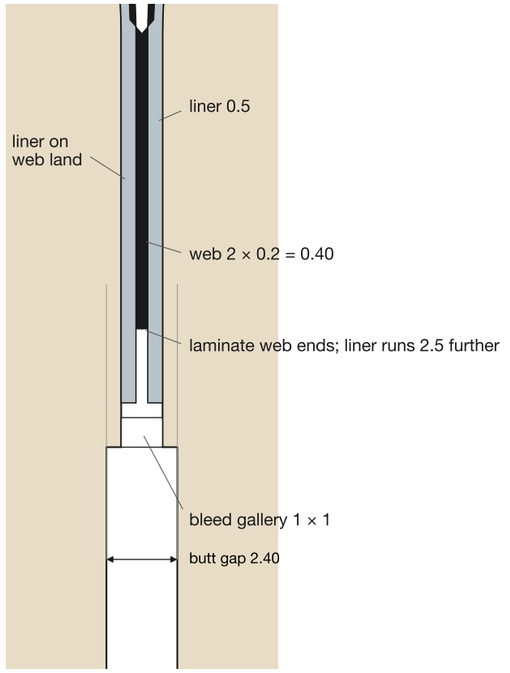

The 0.36 stops sit between the liner faces, at the trim ends only (see C).

D Liner blank, flat, 2 per tool

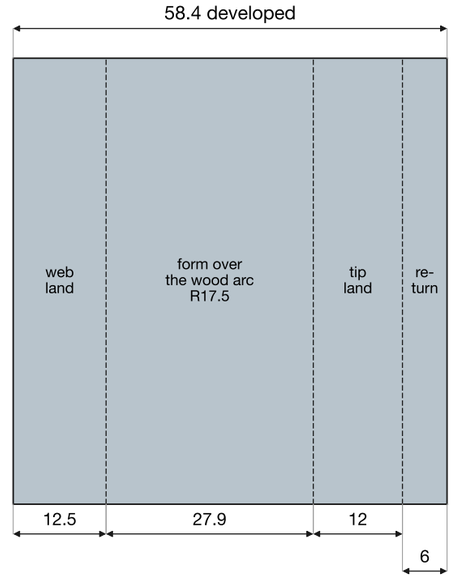

length 390; 60 shown. Pre-form over a R14.8 former, fit cold on the block to a 0.1 feeler, trim ends flush.

Coupon blocks, 5 pairs, 60 long, all in one cure

tool face	wood arc	what it tests
R15.2	R14.7	spring-in by Radford's thick-laminate formula (calculated)
R16.5	R16.0	halfway between rows 1 and 3
R18.0	R17.5	spring-in as Leclerc measured (part R = 0.835 × tool R, test data)
R19.6	R19.1	spring-in as a fixed change in curvature
R18.0	R18.0, bare	same as row 3, no liner: does the liner change the part?

C Plan of block A from above; B mirrors. Drill both blocks together

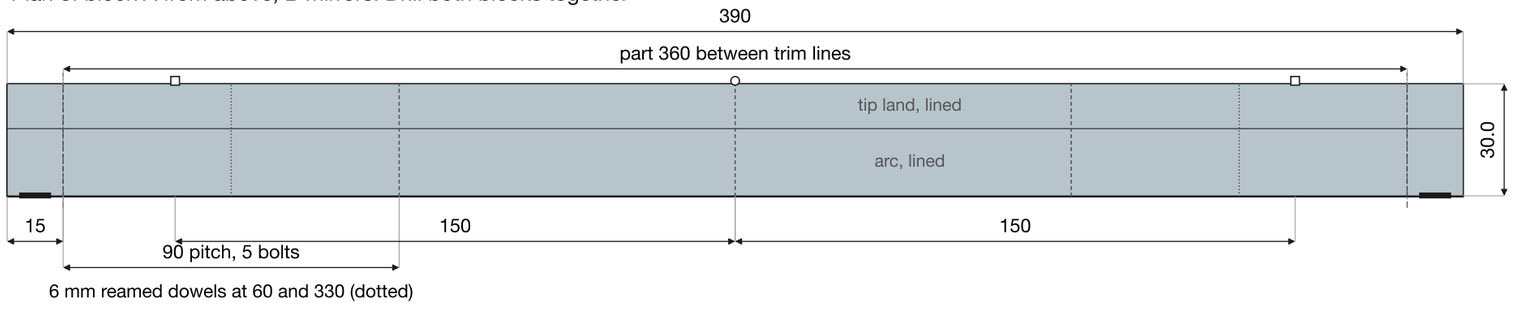

M3 pan head in the return flange, outer face: round hole at mid-length (circle), 3 mm slots either side (squares)

0.36 stops (black), web land, outside the trim lines

NOTES

1 Wood: one 35 mm phenolic birch strip per block, no glueline. Rough, bake to constant mass, finish, seal.
2 Liner: 1050A-H14, 0.5 mm, micrometer at 3 points (reject spread > 0.02). Not bonded. FEP under it on the web lands, Frekote elsewhere. Measure the friction coefficient (μ) in a 130 °C pull test first; if it is above 0.15 use 5754-H22.
3 Long blocks: rough the arc only until the coupons are read. Finish all arcs on CNC; no stock cutter matches.
4 Plug C: cast on the closed, lined pair over a measured 0.22-0.25 mm spacer. 24 h cure at room temperature.
5 FEP on the tip lands, and under the liner on the web lands. Nothing across the V.
6 Tolerances: web lands flat 0.05 over 390 and parallel 0.05; arc radius ±0.05; root tangent, no step.

Svarog TRAC boom mould, v5

Thomas van Pul | ICSS Project Svarog | 2 Nov 2026

Dimensions in mm, do not scale | A3 | sheet 1 of 1 | supersedes v4