K-101	P-101 A/B	F-101	B-101	R-201	SH-201	E-201	E-202	E-203	T-301	E-204	E-205	T-302
Main Air Blower	Sulfur Pumps	Sulfur Furnace + H-101 Start-up Burner	Waste Heat Boiler	SO2 Converter, 5 Beds	Steam Superheater	Hot Interpass Exchanger	Cold Interpass Exchanger	Economizer (IPA)	Intermediate Absorber (IPA)	Economizer (Bed 5)	Economizer (FAT)	Final Absorber (FAT)

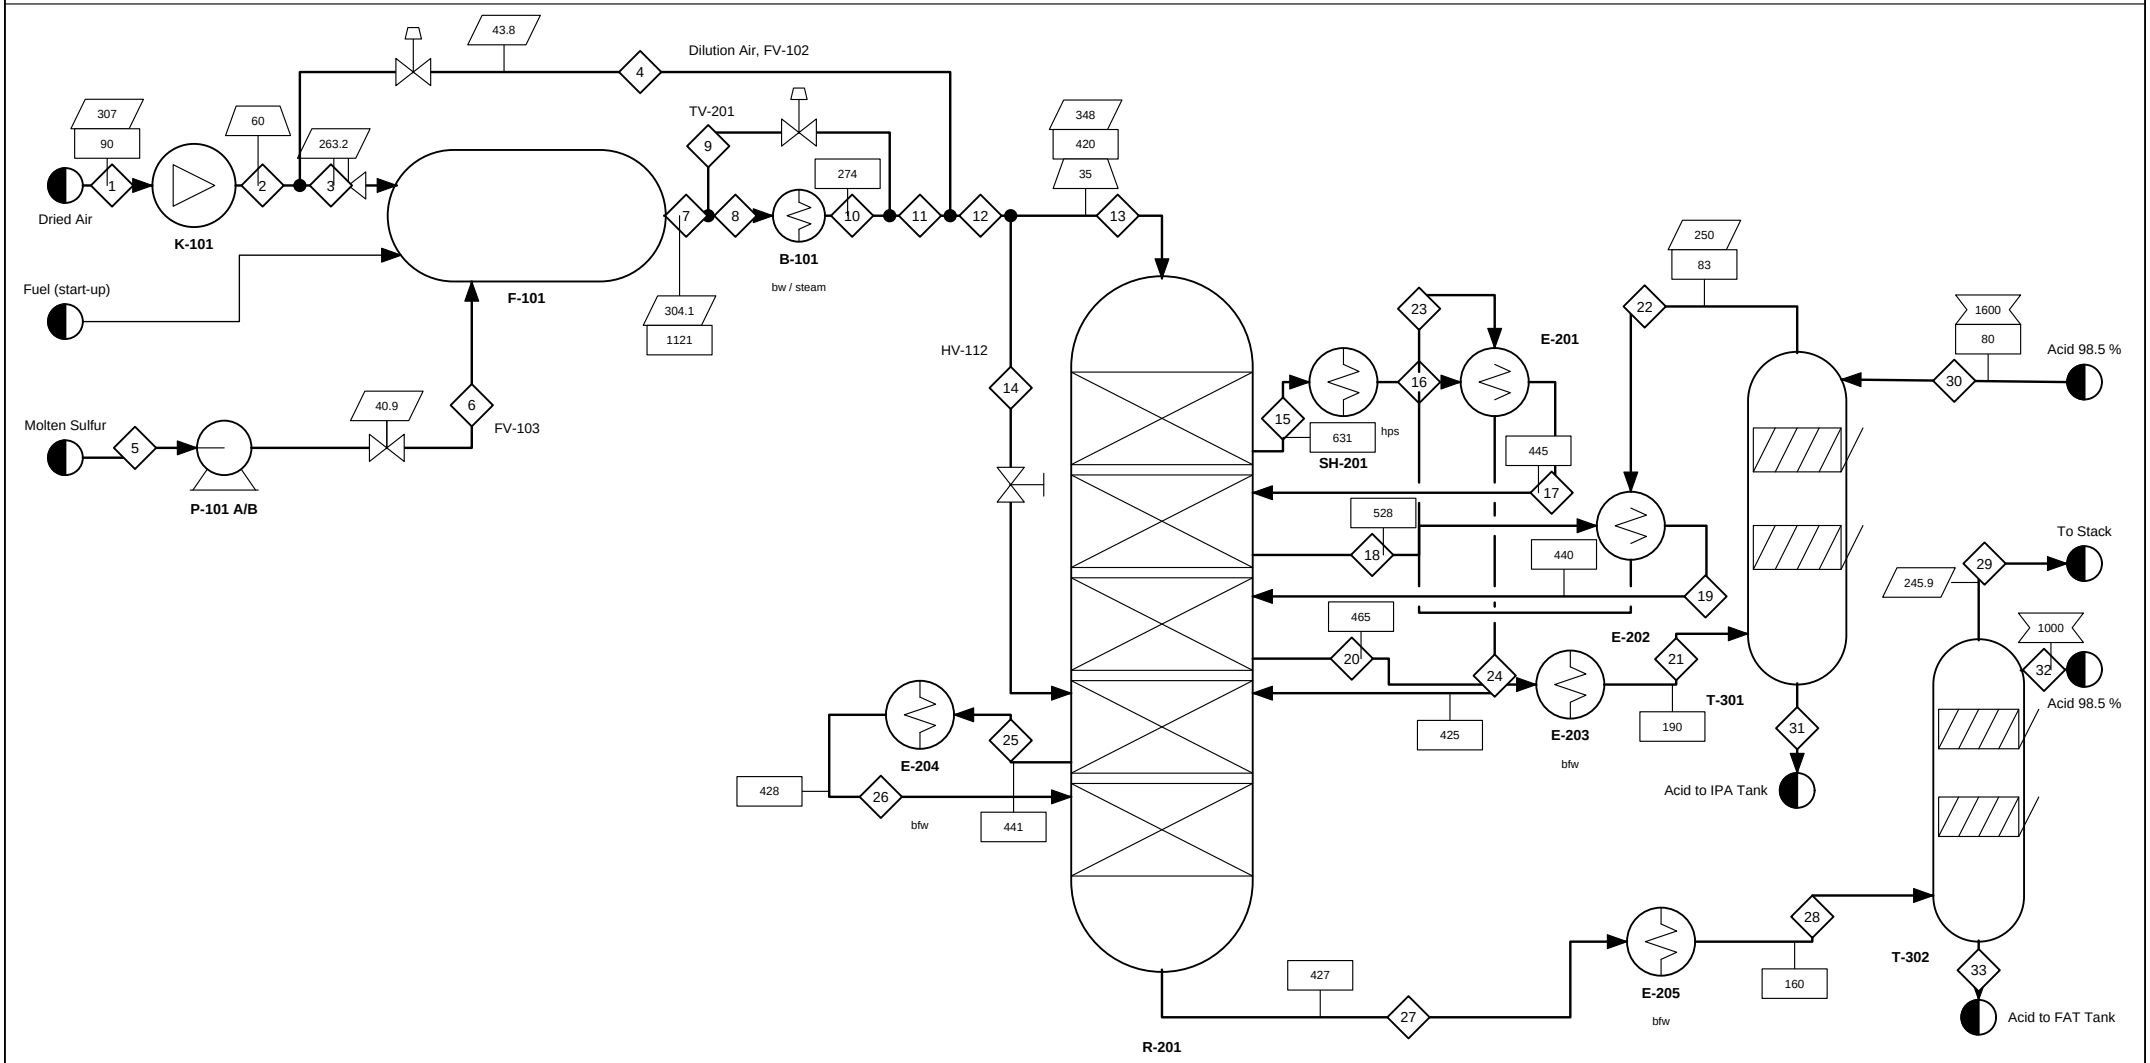

NOTES

1. Flows t/h; T °C; P kPa g; acid m³/h. Design point of the simulator model.
2. Bypasses TV-211/221/231/241/251 around E-201, E-202, SH-201, E-204, E-203 set the bed inlet temperatures; see P&ID.
3. HV-112 start-up line is locked closed in operation.

LEGEND

Mass Flow (t/h) · Liquid Flow (m³/h) · Temperature (°C) · Pressure (kPa g) · Process Line · Utility Line

Block Valve · Control Valve · Process Input / Output · Stream Number · Line Crossing · Blower / Fan

Centrifugal Pump · Vessel / Drum · Heat Exchanger · Packed-Bed Reactor · Packed Column

SO3 CONVERTER VER 1 · OPERATOR TRAINING SIMULATOR

PROCESS FLOW DIAGRAM

SO2 CONVERTER SECTION — SULFUR-BURNING H2SO4 PLANT, 125 t/h

DRAWING No.	REV.	SIZE	SHEET
PFD-201	0	A4	1 OF 1
DRAWN	**CHECKED**	**SCALE**	**DATE**
Apinan Soottitantawat		NTS	2026-10-19