


Computer Organization and Architecture

Designing for Performance

11th Edition

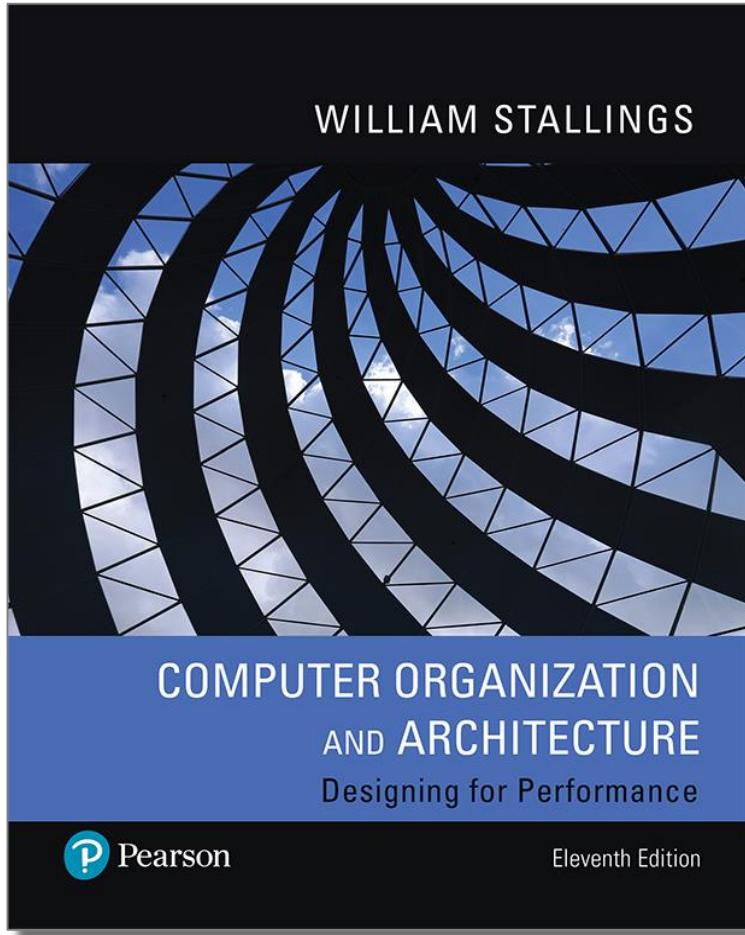


Chapter 1

Basic Concepts and Computer Evolution

Computer Architecture

Computer Organization

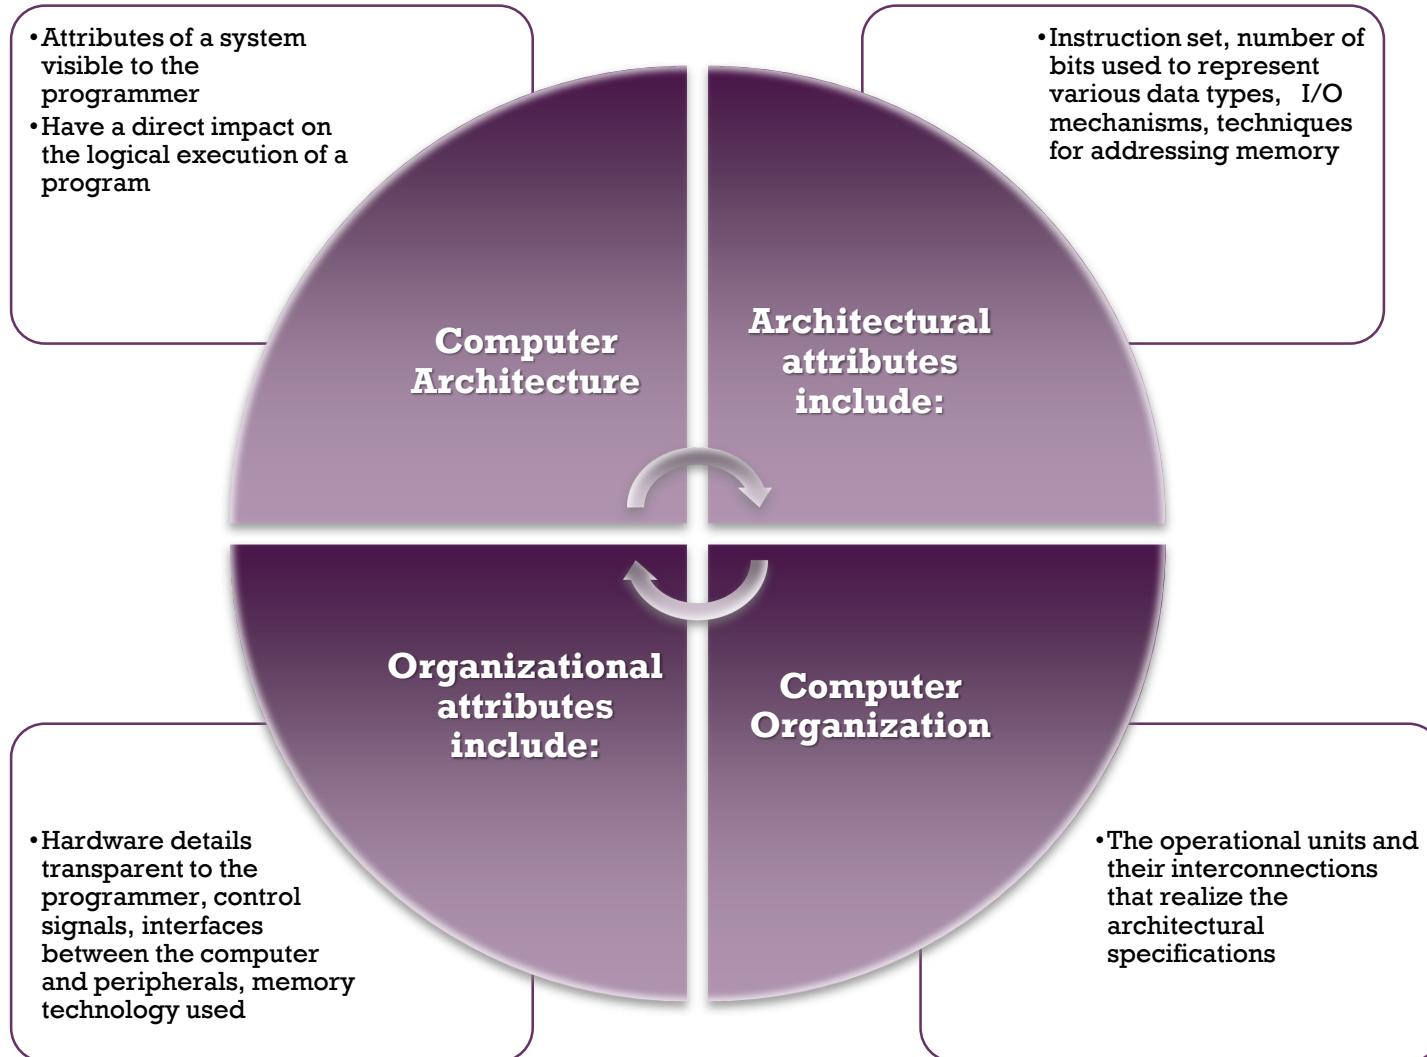

IBM System 370 Architecture

- IBM System/370 architecture
 - Was introduced in 1970
 - Included a number of models
 - Could upgrade to a more expensive, faster model without having to abandon original software
 - New models are introduced with improved technology, but retain the same architecture so that the customer's software investment is protected
 - Architecture has survived to this day as the architecture of IBM's mainframe product line

Structure and Function

- Hierarchical system
 - Set of interrelated subsystems
- Hierarchical nature of complex systems is essential to both their design and their description
- Designer need only deal with a particular level of the system at a time
 - Concerned with structure and function at each level
- Structure
 - The way in which components relate to each other
- Function
 - The operation of individual components as part of the structure

Function

- There are four basic functions that a computer can perform:
 - Data processing
 - Data may take a wide variety of forms and the range of processing requirements is broad
 - Data storage
 - Short-term
 - Long-term
 - Data movement
 - Input-output (I/O) - when data are received from or delivered to a device (peripheral) that is directly connected to the computer
 - Data communications – when data are moved over longer distances, to or from a remote device
 - Control
 - A control unit manages the computer's resources and orchestrates the performance of its functional parts in response to instructions

Structure

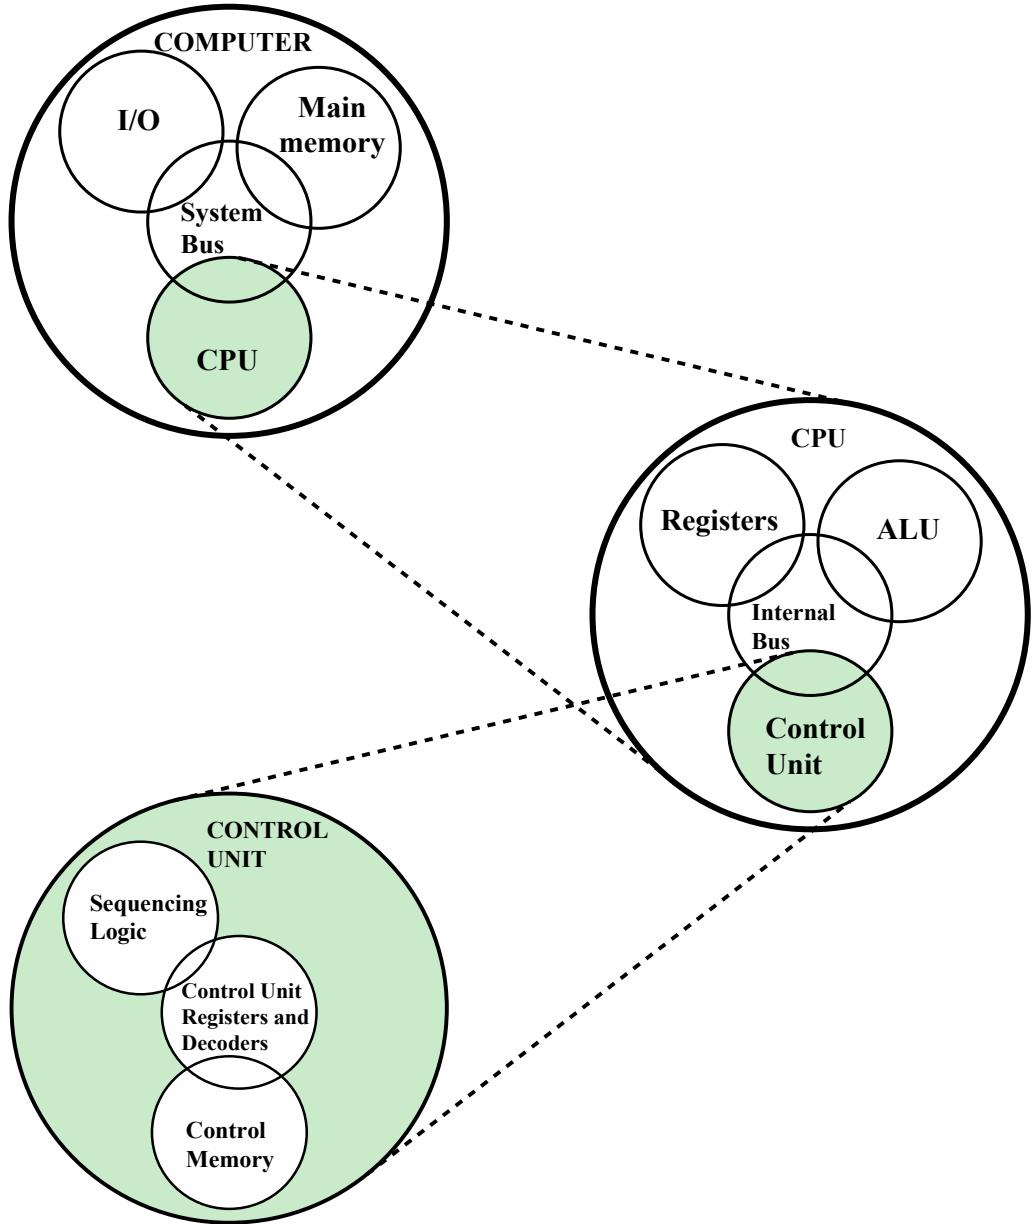


Figure 1.1 The Computer: Top-Level Structure

There are four main structural components of the computer:

- CPU – controls the operation of the computer and performs its data processing functions
- Main Memory – stores data
- I/O – moves data between the computer and its external environment
- System Interconnection – some mechanism that provides for communication among CPU, main memory, and I/O

CPU

Major structural components:

- Control Unit
 - Controls the operation of the CPU and hence the computer
- Arithmetic and Logic Unit (ALU)
 - Performs the computer's data processing function
- Registers
 - Provide storage internal to the CPU
- CPU Interconnection
 - Some mechanism that provides for communication among the control unit, ALU, and registers

Multicore Computer Structure

- Central processing unit (CPU)
 - Portion of the computer that fetches and executes instructions
 - Consists of an ALU, a control unit, and registers
 - Referred to as a processor in a system with a single processing unit
- Core
 - An individual processing unit on a processor chip
 - May be equivalent in functionality to a CPU on a single-CPU system
 - Specialized processing units are also referred to as cores
- Processor
 - A physical piece of silicon containing one or more cores
 - Is the computer component that interprets and executes instructions
 - Referred to as a *multicore processor* if it contains multiple cores

Cache Memory

- Multiple layers of memory between the processor and main memory
- Is smaller and faster than main memory
- Used to speed up memory access by placing in the cache data from main memory that is likely to be used in the near future
- A greater performance improvement may be obtained by using multiple levels of cache, with level 1 (L1) closest to the core and additional levels (L2, L3, etc.) progressively farther from the core

Figure 1.2


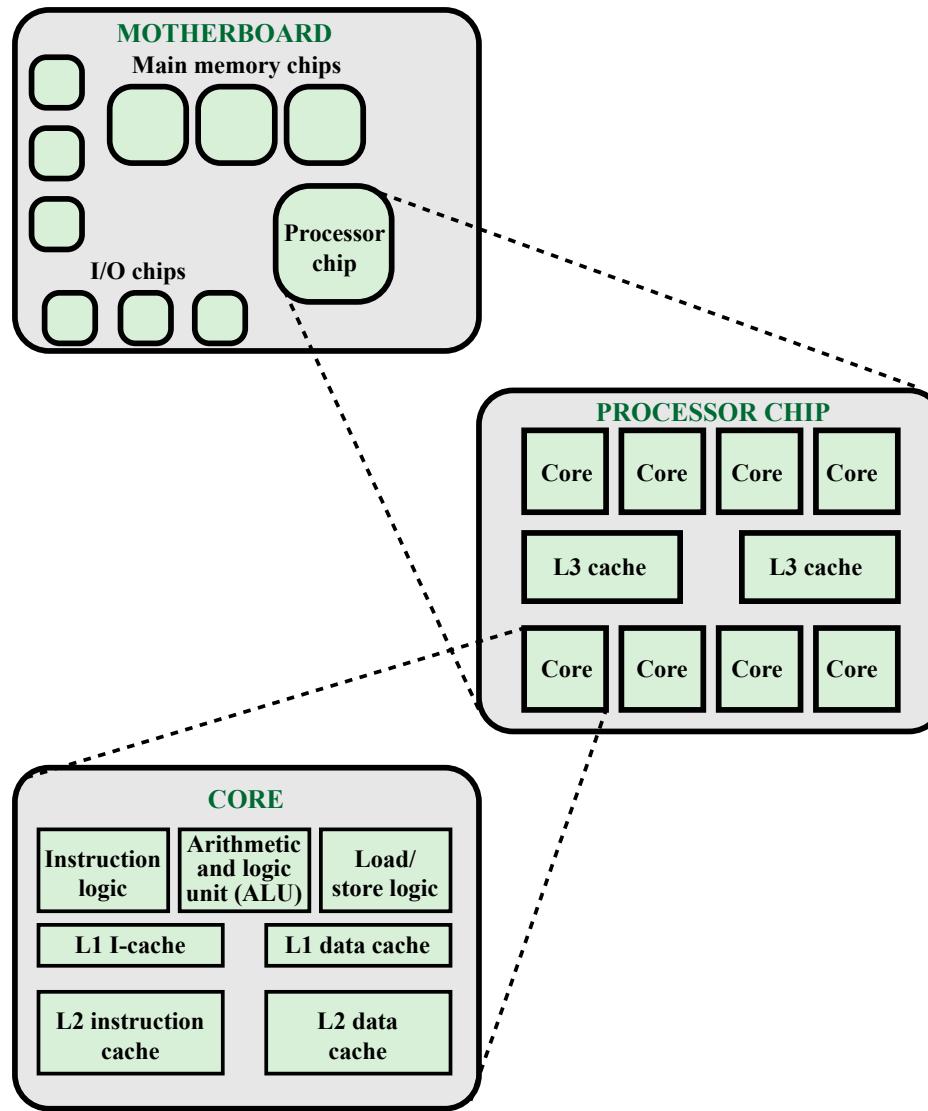


Figure 1.2 Simplified View of Major Elements of a Multicore Computer

Figure 1.3

Motherboard with Two Intel Quad-Core Xeon Processors

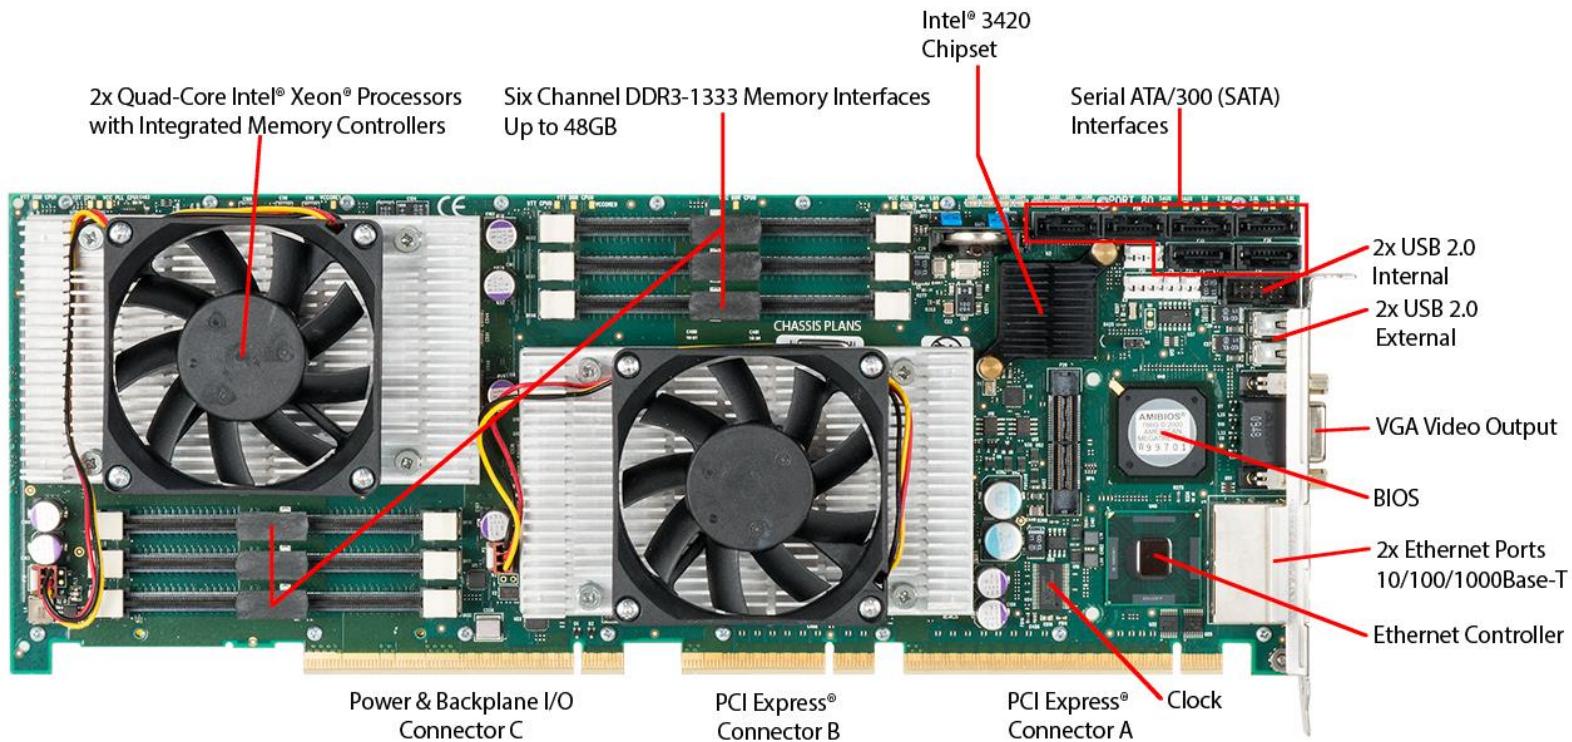

Source: Courtesy of Chassis Plans Rugged Rackmount Computers

Figure 1.4

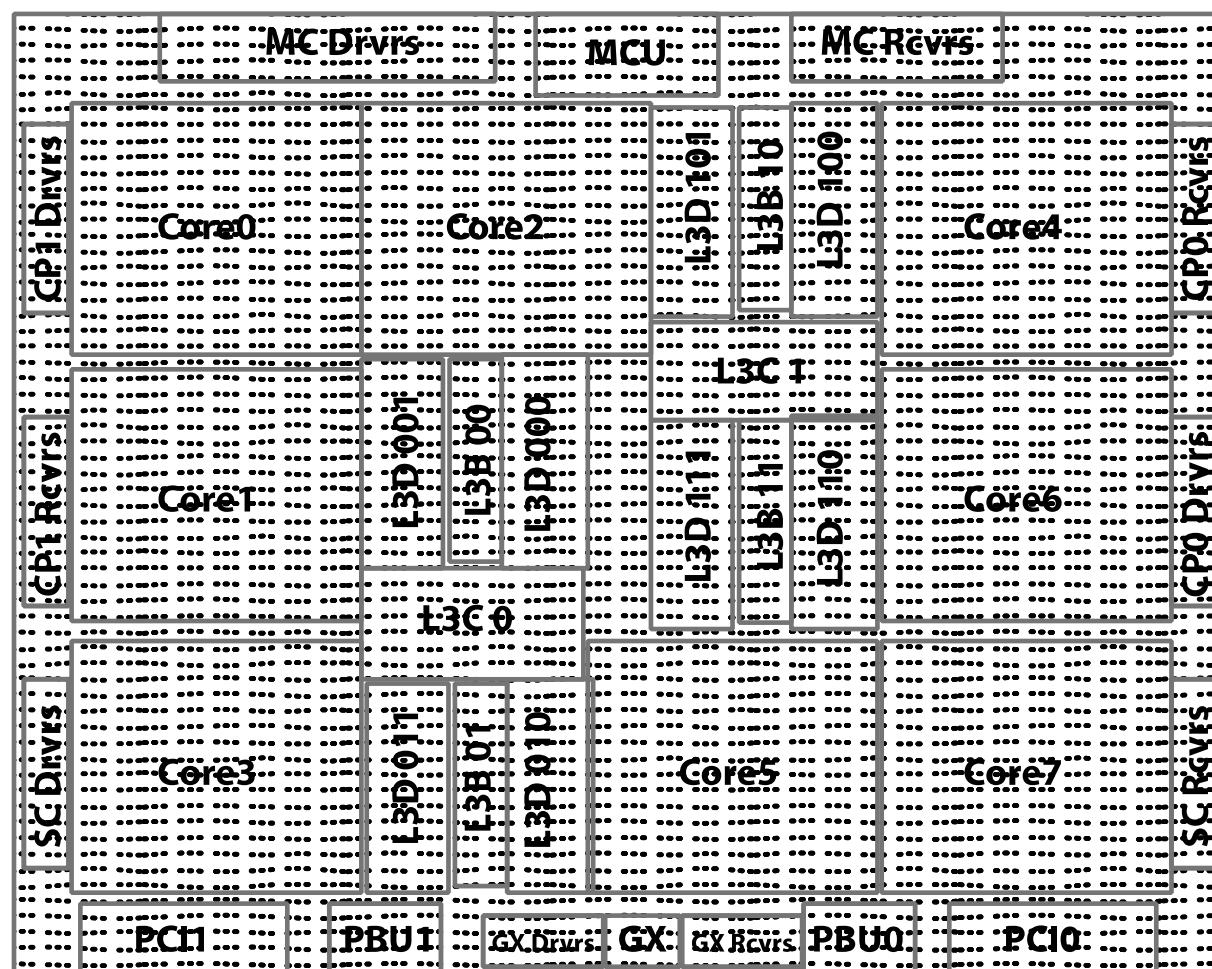


Figure 1.4 IBM z13 Processor Unit (PU) Chip Diagram

Figure 1.5

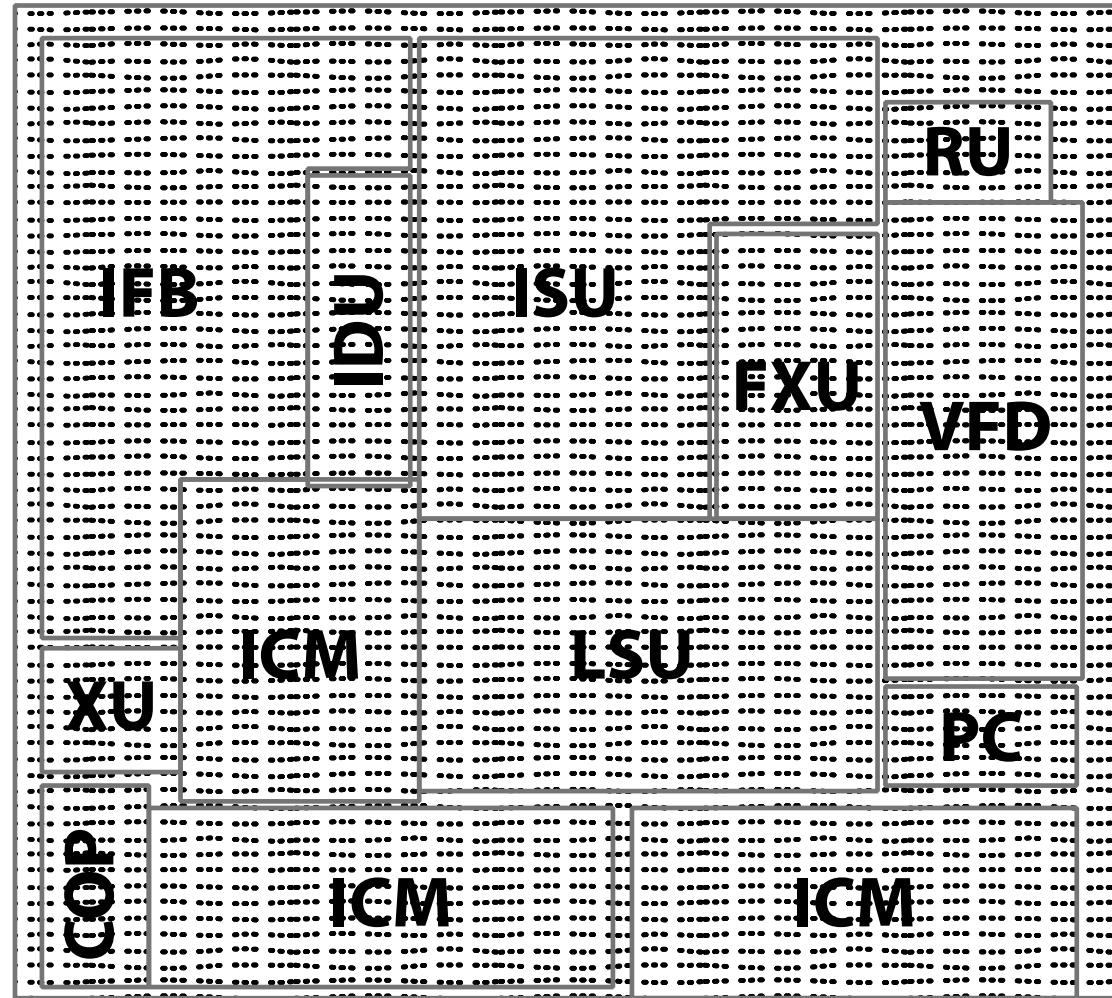



Figure 1.5 IBM z13 Core Layout

History of Computers

First Generation: Vacuum Tubes

- Vacuum tubes were used for digital logic elements and memory
- IAS computer
 - Fundamental design approach was the stored program concept
 - Attributed to the mathematician John von Neumann
 - First publication of the idea was in 1945 for the EDVAC
 - Design began at the Princeton Institute for Advanced Studies
 - Completed in 1952
 - Prototype of all subsequent general-purpose computers

Figure 1.6

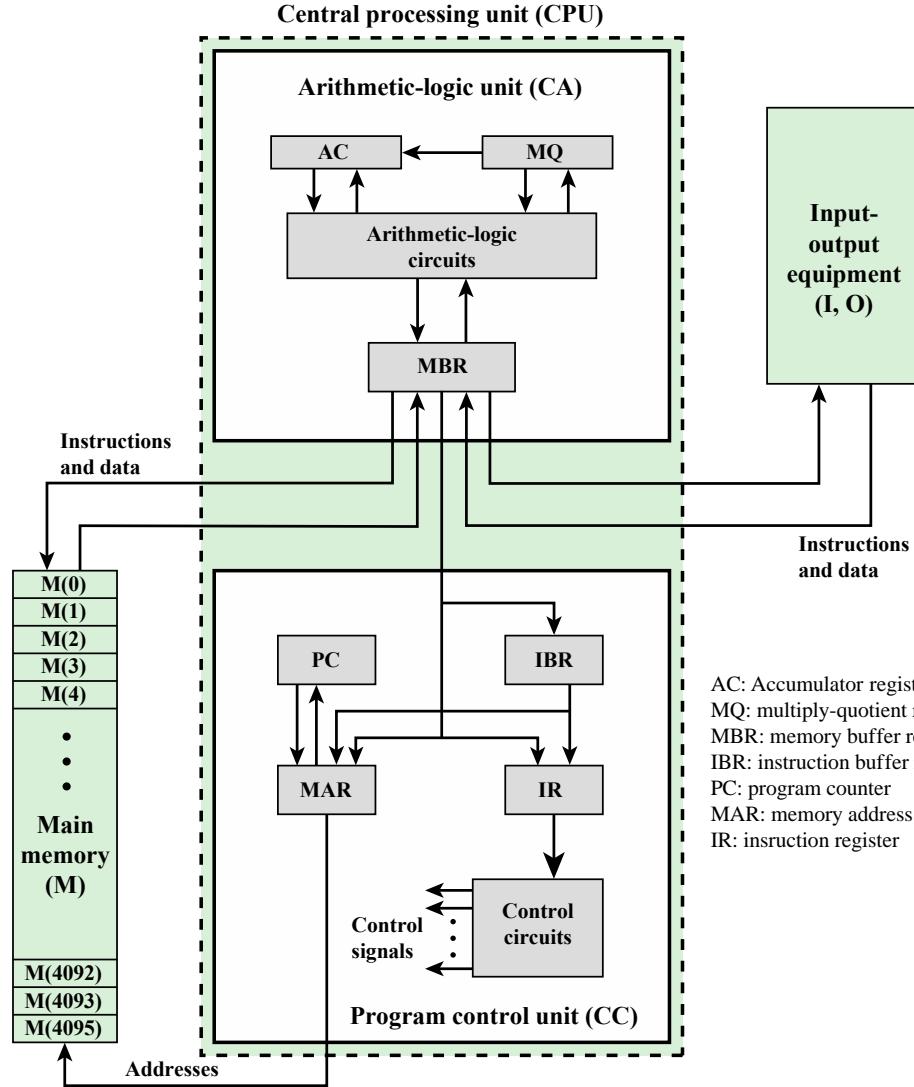

AC: Accumulator register
MQ: multiply-quotient register
MBR: memory buffer register
IBR: instruction buffer register
PC: program counter
MAR: memory address register
IR: instruction register

Figure 1.6 IAS Structure

Figure 1.7

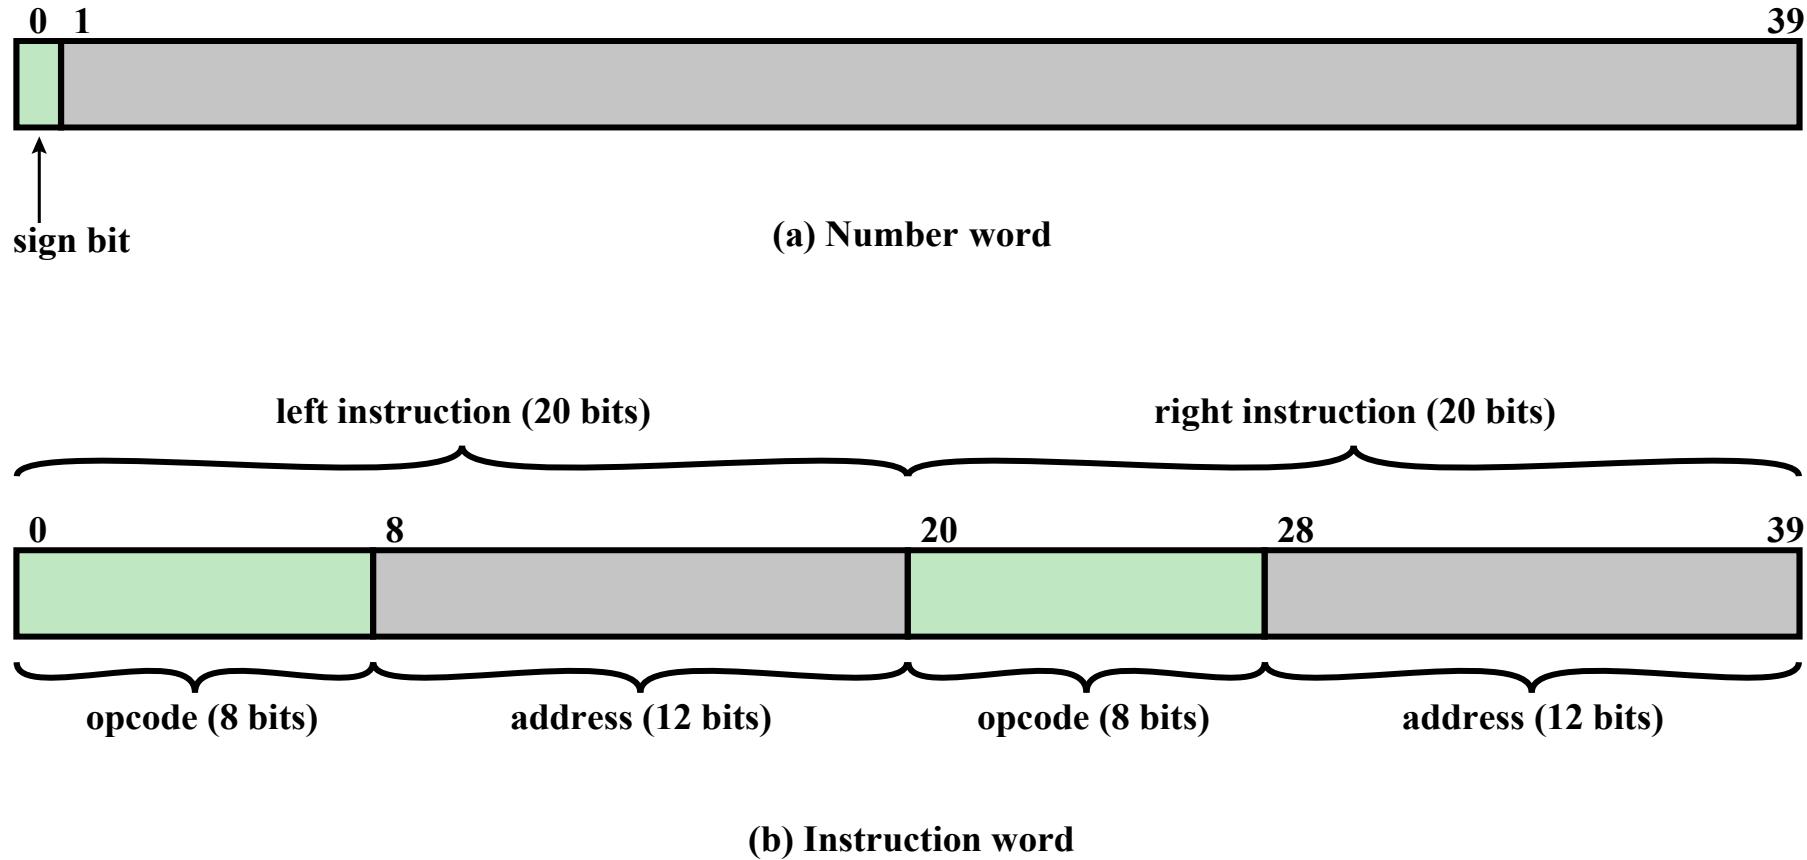


Figure 1.7 IAS Memory Formats

Registers

Memory buffer register (MBR)

- Contains a word to be stored in memory or sent to the I/O unit
- Or is used to receive a word from memory or from the I/O unit

Memory address register (MAR)

- Specifies the address in memory of the word to be written from or read into the MBR

Instruction register (IR)

- Contains the 8-bit opcode instruction being executed

Instruction buffer register (IBR)

- Employed to temporarily hold the right-hand instruction from a word in memory

Program counter (PC)

- Contains the address of the next instruction pair to be fetched from memory

Accumulator (AC) and multiplier quotient (MQ)

- Employed to temporarily hold operands and results of ALU operations

Figure 1.8

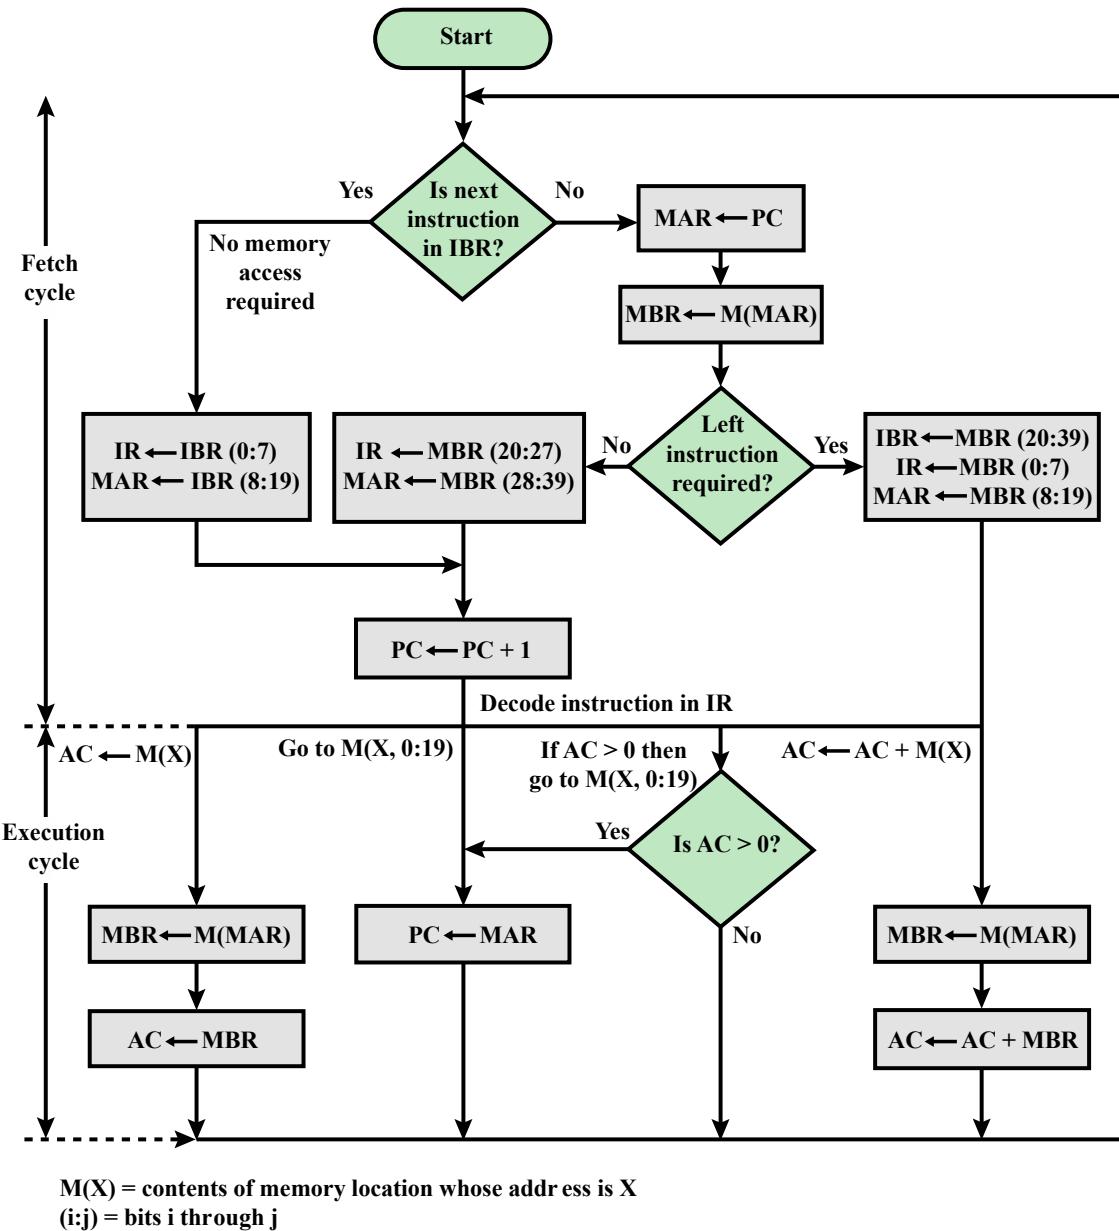


Figure 1.8 Partial Flowchart of IAS Operation

Table 1.1 The IAS Instruction Set

Instruction Type	Opcode	Symbolic Representation	Description
Data transfer	00001010	LOAD MQ	Transfer contents of register MQ to the accumulator AC
	00001001	LOAD MQ,M(X)	Transfer contents of memory location X to MQ
	00100001	STOR M(X)	Transfer contents of accumulator to memory location X
	00000001	LOAD M(X)	Transfer M(X) to the accumulator
	00000010	LOAD -M(X)	Transfer -M(X) to the accumulator
	00000011	LOAD M(X)	Transfer absolute value of M(X) to the accumulator
	00000100	LOAD - M(X)	Transfer - M(X) to the accumulator
Unconditional branch	00001101	JUMP M(X,0:19)	Take next instruction from left half of M(X)
	00001110	JUMP M(X,20:39)	Take next instruction from right half of M(X)
Conditional Branch	00001111	JUMP + M(X,0:19)	Take next instruction from right half of M(X)
	00010000	JUMP + M(X,20:39)	If number in the accumulator is nonnegative, take next instruction from right half of M(X)
Arithmetic	00000101	ADD M(X)	Add M(X) to AC; put the result in AC
	00000111	ADD M(X)	Add M(X) to AC; put the result in AC
	00000110	SUB M(X)	Subtract M(X) from AC; put the result in AC
	00001000	SUB M(X)	Subtract M(X) from AC; put the remainder in AC
	00001011	MUL M(X)	Multiply M(X) by MQ; put most significant bits of result in AC, put least significant bits in MQ
	00001100	DIV M(X)	Divide AC by M(X); put the quotient in MQ and the remainder in AC
	00010100	LSH	Multiply accumulator by 2; that is, shift left one bit position
	00010101	RSH	Divide accumulator by 2; that is, shift right one position
	00010010	STOR M(X,8:19)	Replace left address field at M(X) by 12 rightmost bits of AC
Address modify	00010011	STOR M(X,28:39)	Replace right address field at M(X) by 12 rightmost bits of AC

(Table can be found on page 16 in the textbook.)

Figure 1.9

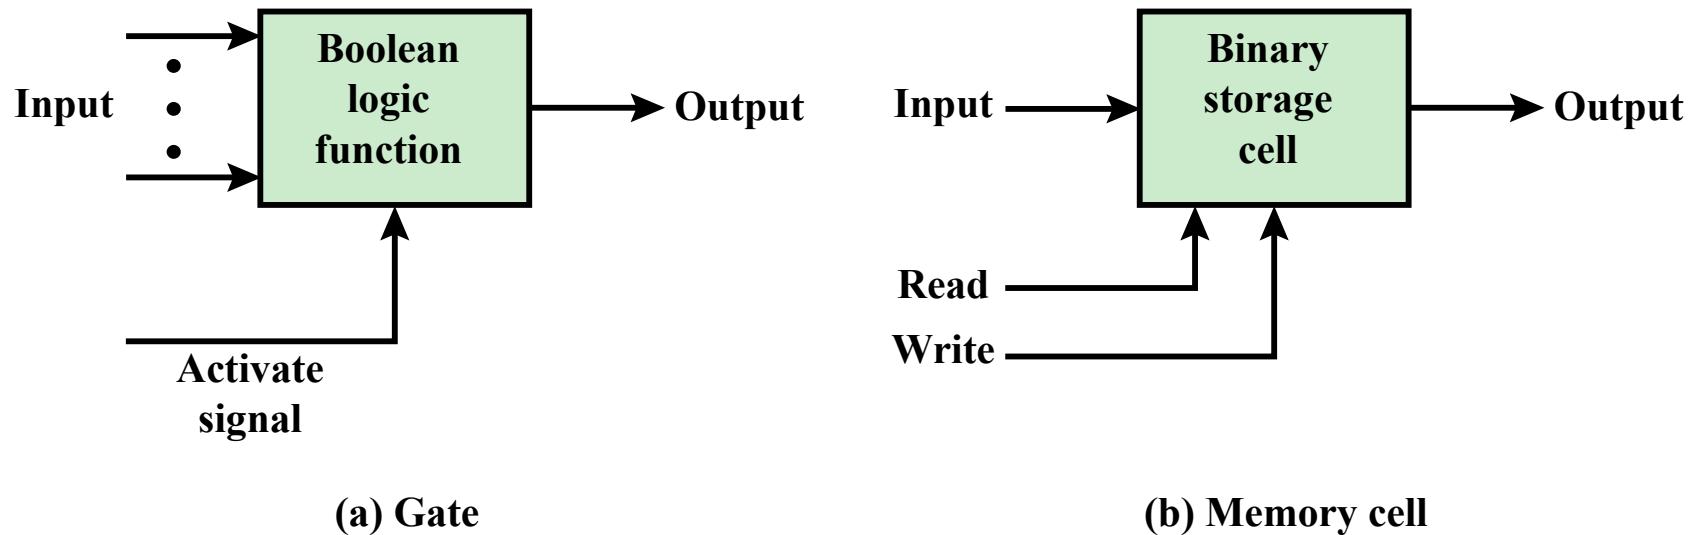


Figure 1.9 Fundamental Computer Elements

Integrated Circuits

- Data storage – provided by memory cells
- Data processing – provided by gates
- Data movement – the paths among components are used to move data from memory to memory and from memory through gates to memory
- Control – the paths among components can carry control signals
- A computer consists of gates, memory cells, and interconnections among these elements
- The gates and memory cells are constructed of simple digital electronic components
- Exploits the fact that such components as transistors, resistors, and conductors can be fabricated from a semiconductor such as silicon
- Many transistors can be produced at the same time on a single wafer of silicon
- Transistors can be connected with a processor metallization to form circuits

Transistors

- The fundamental building block of digital circuits used to construct processors, memories, and other digital logic devices
- Active part of the transistor is made of silicon or some other semiconductor material that can change its electrical state when pulsed
 - In its normal state the material may be nonconductive or conductive
 - The transistor changes its state when voltage is applied to the gate
- Discrete component
 - A single, self-contained transistor
 - Were manufactured separately, packaged in their own containers, and soldered or wired together onto Masonite-like circuit boards

Figure 1.10


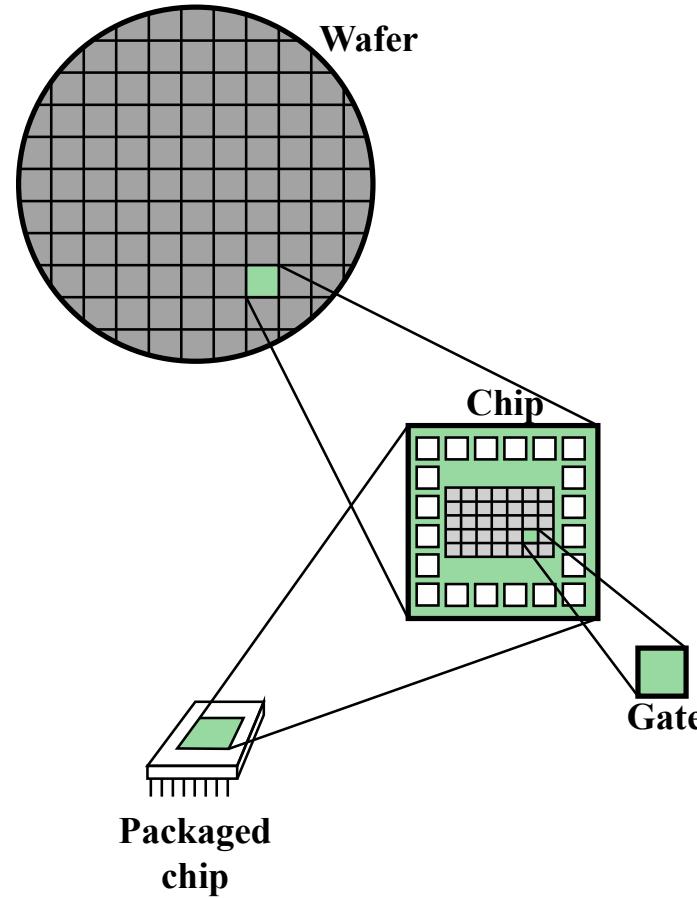


Figure 1.10 Relationship Among Wafer, Chip, and Gate

Figure 1.11



(a) Close-up of packaged chip

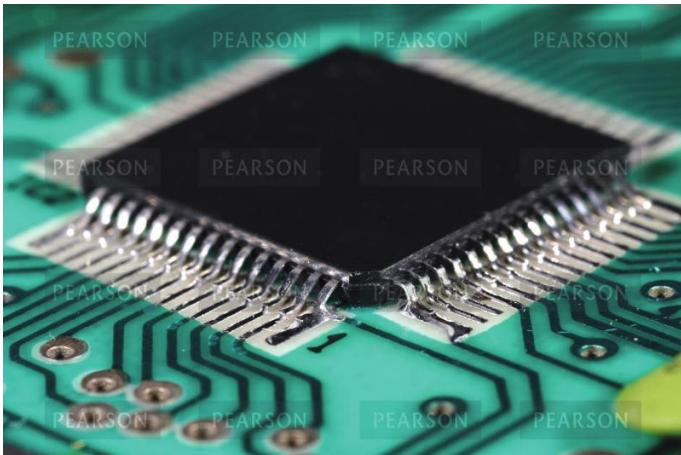

(b) Chip on motherboard

Figure 1.11 Processor or Memory Chip on Motherboard

Figure 1.12

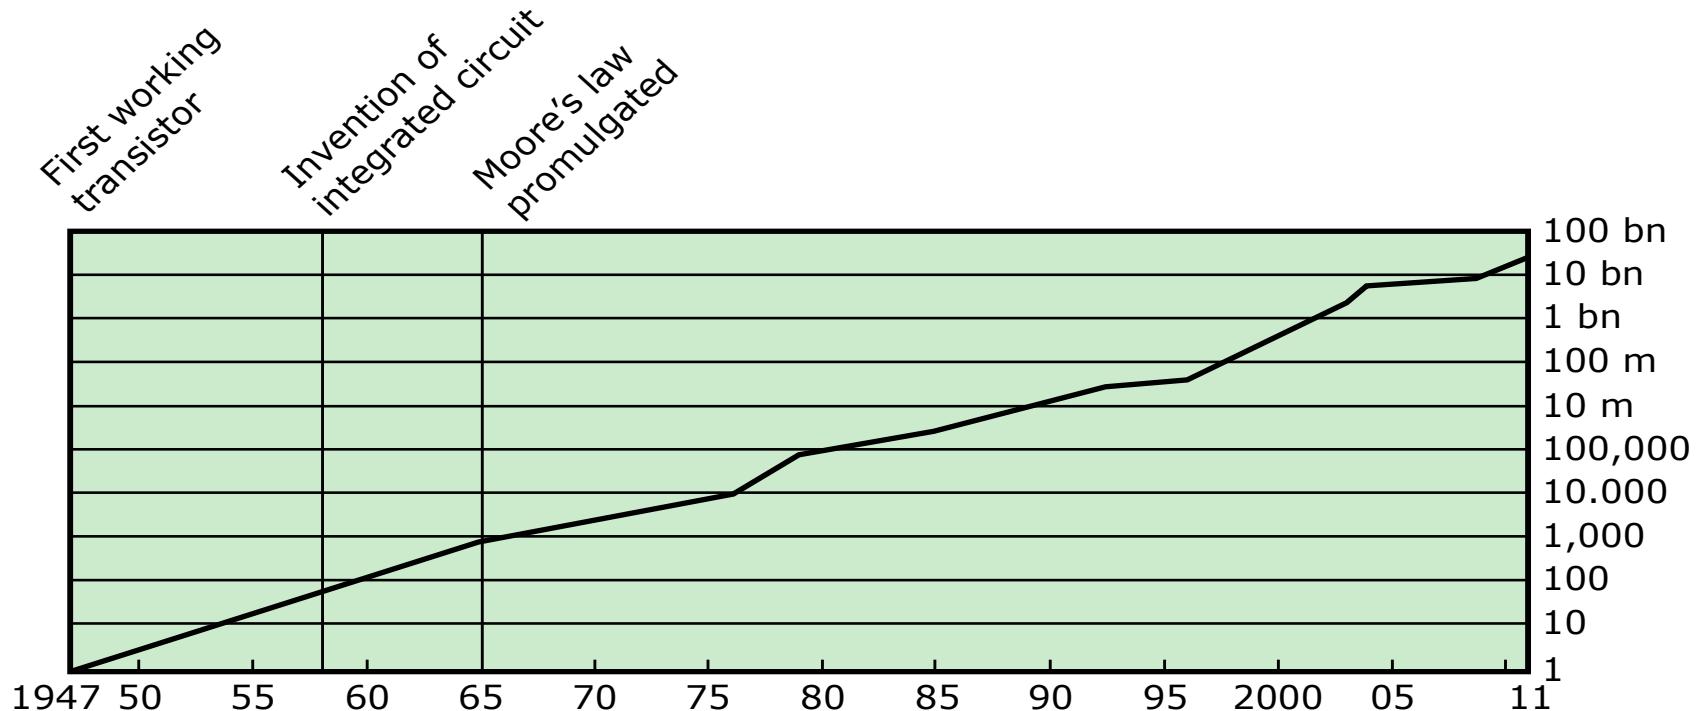


Figure 1.12 Growth in Transistor Count on Integrated Circuits (DRAM memory)

Moore's Law

1965; Gordon Moore – co-founder of Intel

Observed number of transistors that could be put on a single chip was doubling every year

The pace slowed to a doubling every 18 months in the 1970's but has sustained that rate ever since

Consequences of Moore's law:

The cost of computer logic and memory circuitry has fallen at a dramatic rate

The electrical path length is shortened, increasing operating speed

Computer becomes smaller and is more convenient to use in a variety of environments

Reduction in power and cooling requirements

Fewer interchip connections

Evolution of Intel Microprocessors (1 of 4)

	4004	8008	8080	8086	8088
Introduced	1971	1972	1974	1978	1979
Clock speeds	108 kHz	108 kHz	2 MHz	2 MHz, 8 MHz, 10 MHz	5 MHz, 8 MHz
Bus width	4 bits	8 bits	8 bits	16 bits	8 bits
Number of transistors	2,300	3,500	6,000	29,000	29,000
Feature size (μm)	10	8	6	3	6
Addressable memory	640 bytes	16 KB	64 KB	1 MB	1 MB

(a) 1970s Processors

Evolution of Intel Microprocessors (2 of 4)

	80286	386TM DX	386TM SX	486TM DX CPU
Introduced	1982	1985	1988	1989
Clock speeds	6–12.5 MHz	16–33 MHz	16–33 MHz	25–50 MHz
Bus width	16 bits	32 bits	16 bits	32 bits
Number of transistors	134,000	275,000	275,000	1.2 million
Feature size (μm)	1.5	1	1	0.8–1
Addressable memory	16 MB	4 GB	16 MB	4 GB
Virtual memory	1 GB	64 TB	64 TB	64 TB
Cache	–	–	–	8 kB

(b) 1980s Processors

Evolution of Intel Microprocessors (3 of 4)

	486TM SX	Pentium	Pentium Pro	Pentium II
Introduced	1991	1993	1995	1997
Clock speeds	16–33 MHz	60–166 MHz	150–200 MHz	200–300 MHz
Bus width	32 bits	32 bits	64 bits	64 bits
Number of transistors	1.185 million	3.1 million	5.5 million	7.5 million
Feature size (μm)	1	0.8	0.6	0.35
Addressable memory	4 GB	4 GB	64 GB	64 GB
Virtual memory	64 TB	64 TB	64 TB	64 TB
Cache	8 kB	8 kB	512 kB L1 and 1 MB L2	512 kB L2

(c) 1990s Processors

Evolution of Intel Microprocessors (4 of 4)

	Pentium III	Pentium 4	Core 2 Duo	Core i7 EE 4960X	Core i9- 7900X
Introduced	1999	2000	2006	2013	2017
Clock speeds	450–660 MHz	1.3–1.8 GHz	1.06–1.2 GHz	4 GHz	4.3 GHz
Bus width	64 bits	64 bits	64 bits	64 bits	64 bits
Number of transistors	9.5 million	42 million	167 million	1.86 billion	7.2 billion
Feature size (nm)	250	180	65	22	14
Addressable memory	64 GB	64 GB	64 GB	64 GB	128 GB
Virtual memory	64 TB	64 TB	64 TB	64 TB	64 TB
Cache	512 kB L2	256 kB L2	2 MB L2	1.5 MB L2/ 1.5 MB L3	14 MB L3
Number of cores	1	1	2	6	10

(d) Recent Processors

Highlights of the Evolution of the Intel Product Line: (1 of 2)

8080

- World's first general-purpose microprocessor
- 8-bit machine, 8-bit data path to memory
- Was used in the first personal computer (Altair)

8086

- A more powerful 16-bit machine
- Has an instruction cache, or queue, that prefetches a few instructions before they are executed
- The first appearance of the x86 architecture
- The 8088 was a variant of this processor and used in IBM's first personal computer (securing the success of Intel)

80286

- Extension of the 8086 enabling addressing a 16-MB memory instead of just 1MB

80386

- Intel's first 32-bit machine
- First Intel processor to support multitasking

80486

- Introduced the use of much more sophisticated and powerful cache technology and sophisticated instruction pipelining
- Also offered a built-in math coprocessor

Highlights of the Evolution of the Intel Product Line: (2 of 2)

Pentium

- Intel introduced the use of superscalar techniques, which allow multiple instructions to execute in parallel

Pentium Pro

- Continued the move into superscalar organization with aggressive use of register renaming, branch prediction, data flow analysis, and speculative execution

Pentium II

- Incorporated Intel MMX technology, which is designed specifically to process video, audio, and graphics data efficiently

Pentium III

- Incorporated additional floating-point instructions
- Streaming SIMD Extensions (SSE)

Pentium 4

- Includes additional floating-point and other enhancements for multimedia

Core

- First Intel x86 micro-core

Core 2

- Extends the Core architecture to 64 bits
- Core 2 Quad provides four cores on a single chip
- More recent Core offerings have up to 10 cores per chip
- An important addition to the architecture was the Advanced Vector Extensions instruction set



Embedded Systems

- The use of electronics and software within a product
- Billions of computer systems are produced each year that are embedded within larger devices
- Today many devices that use electric power have an embedded computing system
- Often embedded systems are tightly coupled to their environment
 - This can give rise to real-time constraints imposed by the need to interact with the environment
 - Constraints such as required speeds of motion, required precision of measurement, and required time durations, dictate the timing of software operations
 - If multiple activities must be managed simultaneously this imposes more complex real-time constraints

Figure 1.14

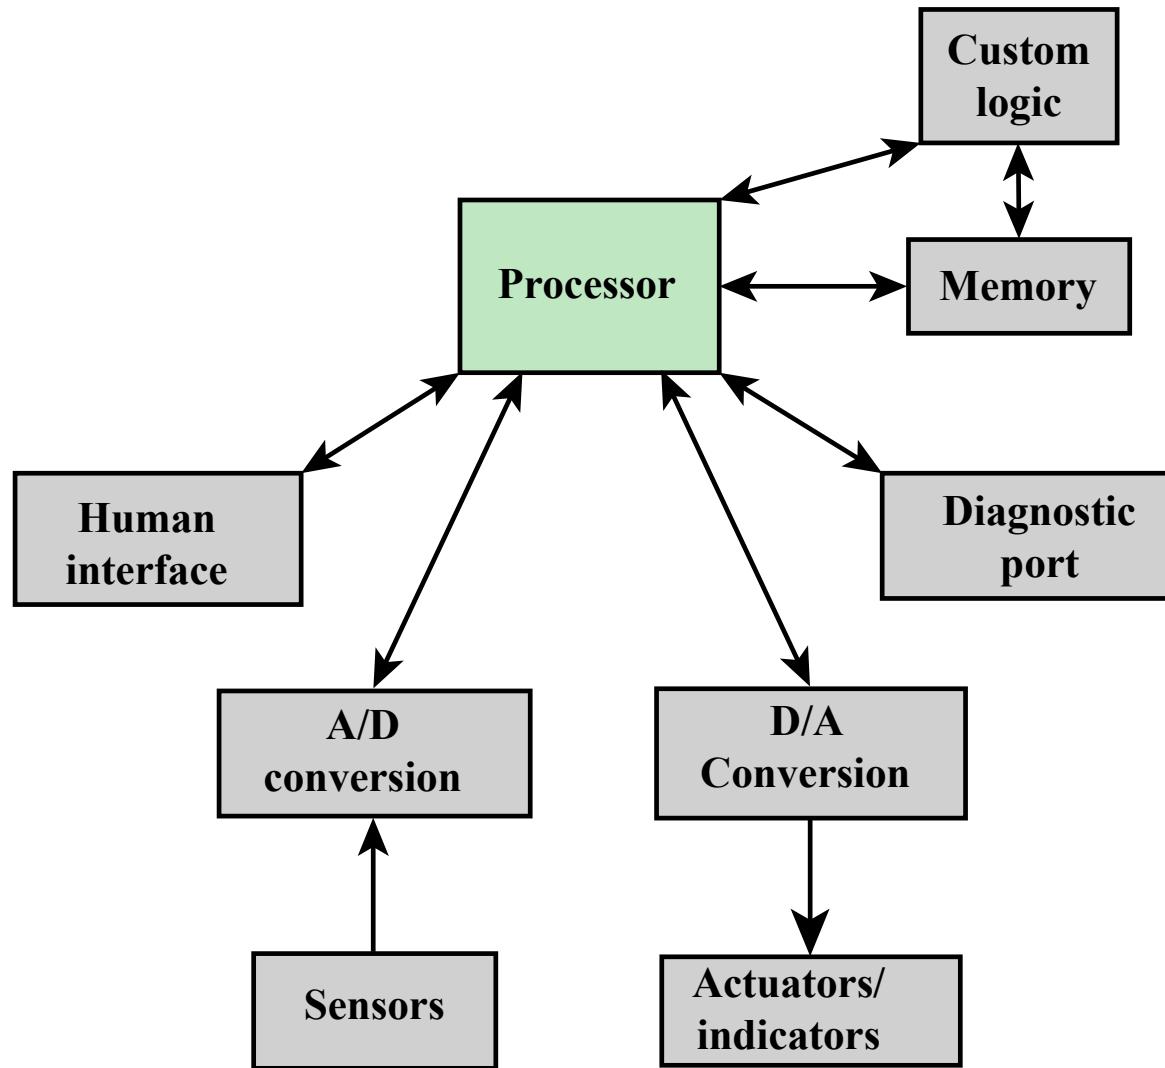


Figure 1.14 Possible Organization of an Embedded System



Refers to a processor architecture that has evolved from RISC design principles and is used in embedded systems

Family of RISC-based microprocessors and microcontrollers designed by ARM Holdings, Cambridge, England

Chips are high-speed processors that are known for their small die size and low power requirements

Probably the most widely used embedded processor architecture and indeed the most widely used processor architecture of any kind in the world

Acorn RISC Machine/Advanced RISC Machine

ARM Products

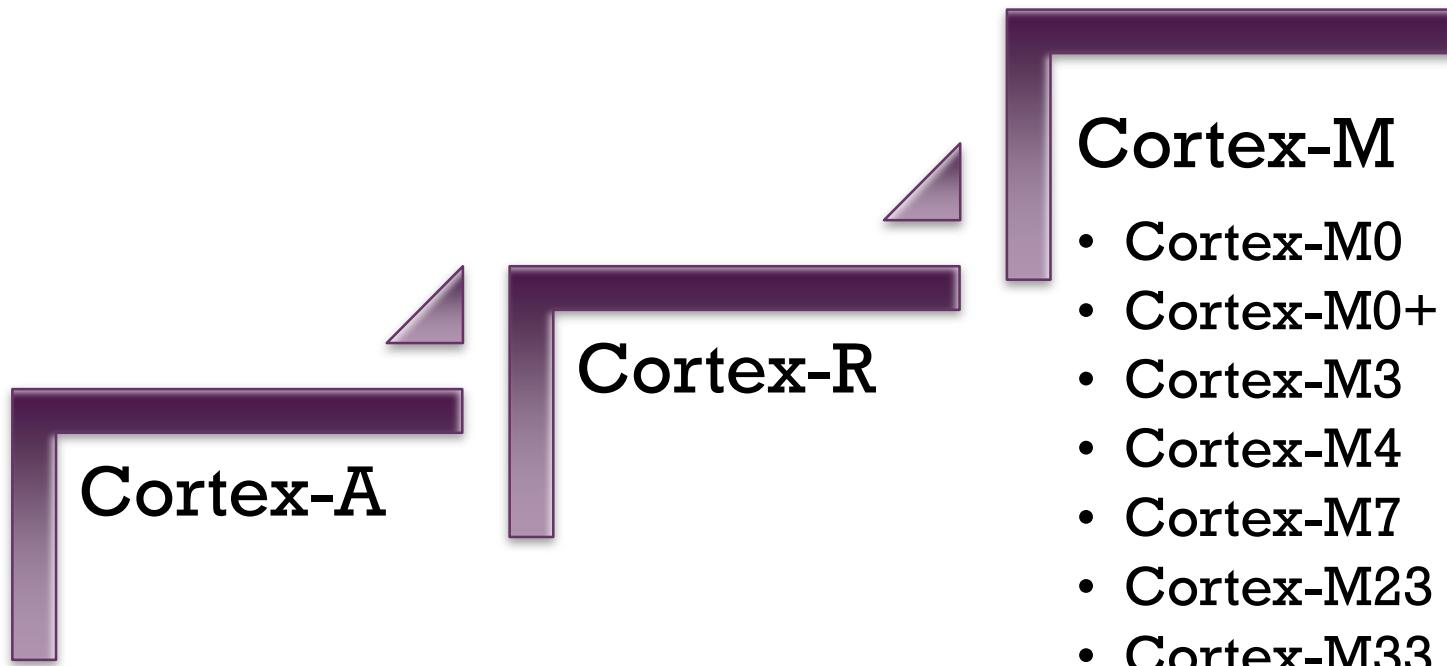


Figure 1.16

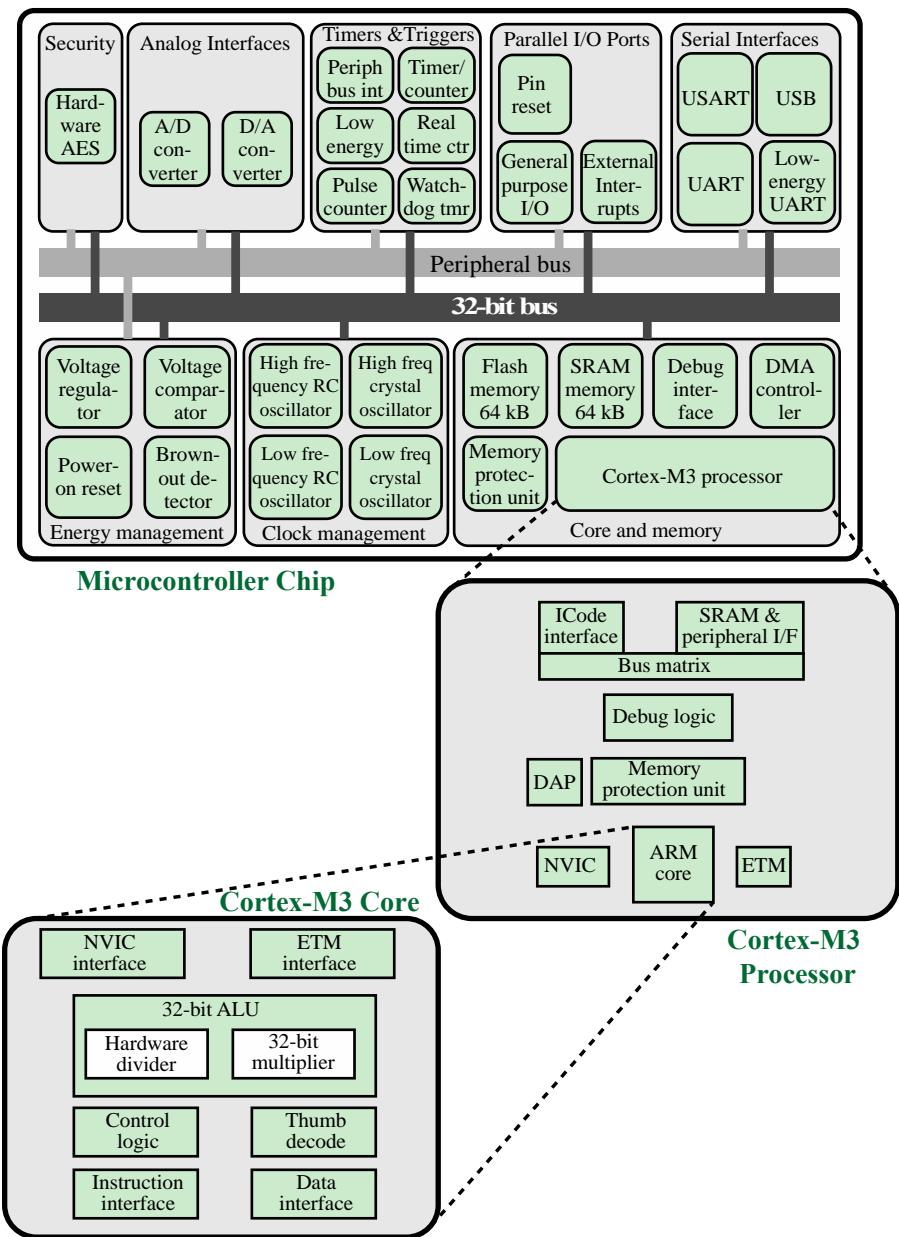


Figure 1.16 Typical Microcontroller Chip Based on Cortex-M3

Summary


Chapter 1

- Organization and architecture
- Structure and function
- The IAS computer
- Gates, memory cells, chips, and multichip modules
 - Gates and memory cells
 - Transistors
 - Microelectronic chips
 - Multichip module
- The evolution of the Intel x86 architecture

Basic Concepts and Computer Evolution

- Embedded systems
 - Embedded operating systems
 - Application processors versus dedicated processors
- ARM architecture
 - ARM evolution
 - Instruction set architecture
 - ARM products

Copyright

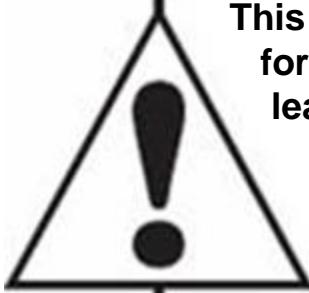

This work is protected by United States copyright laws and is provided solely for the use of instructors in teaching their courses and assessing student learning. Dissemination or sale of any part of this work (including on the World Wide Web) will destroy the integrity of the work and is not permitted. The work and materials from it should never be made available to students except by instructors using the accompanying text in their classes. All recipients of this work are expected to abide by these restrictions and to honor the intended pedagogical purposes and the needs of other instructors who rely on these materials.