Mumbai: 2021



8085 STACKS AND SUBROUTINES

STACKS

A stack is a part of the Memory that operates in LIFO (Last In First Out) manner.

In 8085 the Stack can located anywhere within the 64 KB memory.

The **top of the Stack** is **pointed by** the **SP** (Stack Pointer) register.

P.S.: The SP contains the Address of the top of the Stack and not the top of the Stack.

By initializing SP with any suitable value, the programmer can decide where he/she would like to start the stack. Remember SP gets decremented on every PUSH operation. This means the stack grows upwards. Hence it is advisable to start the stack at a lower location so that it does not overwrite on any other useful information.

VIVA Question: Why is LXI SP, FFFFH preferred?

LXI SP, FFFFH is preferred due to two reasons,

- It gives the Stack max space to grow.
- It prevents the Stack from overwriting on programs in the memory.

Instructions related to stacks

- LXI SP, 16 bit value Eg LXI SP 4000.
- SPHL
- INX SP
- DCX SP
- **PUSH** Rp Eg PUSH B
- POP Rp Eg POP B
- CALL 16 bit address Eg CALL 2000
- RSTn Eg RST1
- RET
- XTHL

Note

In the exam, explain any 2 of the above instructions as an introduction to stacks. Preferably PUSH and POP.



USES of STACKS

Stacks are used in the following ways:

1) To store data during programs

Stack can be used for **storing data by** the **programmer** as the number of General Purpose registers is very less. The programmer, at any point of time during the program, can store data in the stack and then retrieve it later.

Data can be Pushed into the Stack using Push instruction as below:

Eg: **PUSH B**; Contents of BC Pair are pushed onto the top of the stack.

Before		Operation A	After	
		SP ← SP – 1 [SP] ← B SP		
		SP ← SP – 1	В	
SP	XX	[SP] ← C	XX	

Similarly data can also be removed from the stack using the POP operation as:

Eg: POP B; Contents of the top of the stack are popped into BC Pair.

2) To Store return address during CALL instructions

The μP uses the Stack for storing the return address during CALL instruction.

During a CALL instruction, μP first pushes the return address (i.e. the current contents of PC) into the stack and then loads the branch address into PC, to branch to the subroutine.

Inside the subroutine, when the μP gets a RET instruction, it pops back the return address from the stack, and thus successfully returns to the main program.

Eg: CALL 2000

Before	Operation	1	After
SP XX	$\begin{array}{l} SP \; \leftarrow SP-1 \\ [SP] \leftarrow PC_H \\ SP \; \leftarrow SP-1 \\ [SP] \leftarrow PC_L \\ PC \; \leftarrow 2000 \end{array}$	SP	PC _L PC _H XX

Eg: **RET**

Before		Operation	After	•
SP	PC _L PC _H XX	$\begin{array}{c} PC_{L} \leftarrow [SP] \\ SP \leftarrow SP + 1 \\ PC_{H} \leftarrow [SP] \\ SP \leftarrow SP + 1 \end{array}$	SP XX	(



3) To Read/Write the contents of the Flag register

The programmer can Read / Write the contents of the Flag register using the Program Status Word **(PSW)**. The PSW consists of the Accumulator as the higher byte and the Flag register as the lower byte. The PSW is available only for PUSH and POP instructions.

To Read the contents of Flag register

- The programmer pushes PSW into the stack and then pops it into any register pair (BC).
- The contents of the flag register are thus available in the C register (lower register).

Eg:

PUSH PSW				POP B			
	SP	F	;Accumulator and Flag				;Contents of Flag Reg
		Α	;Reg Pushed into Stack				;come into C-Reg and
		XX			SP	XX	;can be read.

To Write into the Flag register

- The programmer loads the appropriate byte into the lower register of a register pair (eg: C reg of BC pair).
- Then the register pair is pushed into the stack.
- These contents are then popped into the PSW, and thus the byte that was originally loaded into C register is now **written** into the Flag register.

Eg:



Note

This is the **ONLY method** by which the programmer can **write into** the **Flag register**.




4) To Pass parameters to a Sub-Routine

The programmer can use the Stack to pass parameters to Sub-Routines.

Before calling the Sub-Routine the **parameter** is **Pushed** into the Stack and then **inside** the **Sub-Routine** the **parameter** is **Popped from** the **Stack**.

Eg:

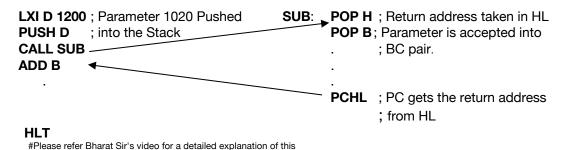

Special Note:

If you are learning this by piracy, then you are not my student. You are simply a thief! #PoorUpbringing

Mumbai: 2021



SUBROUTINES

- Subroutines are parts of a program, which can be re-executed by the programmer.
- Subroutines are Called (invoked) using the CALL instruction; control returns to the main program using the RET instruction.
- Subroutines generally perform tasks, which are used regularly by the program such as numerical calculations, Interrupt Service Routines (ISR) etc.

Subroutines are useful in the following ways:

- 1. Causes Code Re-Usability hence reduces the size of the Program and also saves time.
- 2. Makes the program easy to Maintain as it becomes Modular.

Passing Parameters to Subroutines


Passing parameters to Subroutines is the procedure of passing some values from the main program to the Subroutines. Passing parameters is very important as it **improves the flexibility of the Subroutine**.

In 8085 there are 4 methods of passing parameters to Subroutines.

1) Using Registers

The parameter value to be passed is moved /loaded into the register before calling the SubRoutine. The SubRoutine accesses the value from the same register.

Eg:

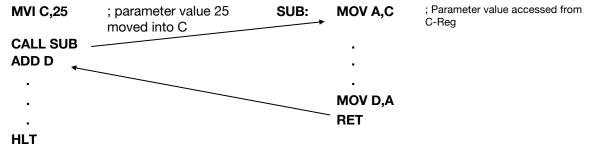

This is the **simplest method** of passing parameters.


The only main **drawback** is that it **occupies** the **general-purpose registers** available to the programmer whish are already very few. **Also** the **number** of parameters passed is **restricted by** the number of **registers available**.



2) Using Memory

The parameter value to be passed is stored into the Memory Location before calling the SubRoutine. The SubRoutine accesses the value from the same memory location.

Eg:

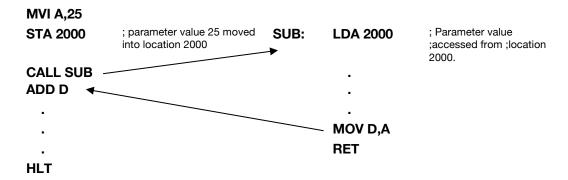

If more parameters are to be passed, then consecutive memory locations can be used (which are plenty), thus eliminating the drawbacks of the previous method.

The **only drawback** here is that the programmer needs to **remember** the **memory locations** associated with each subroutine. When the number of subroutines is large, this can be troublesome.

3) Using Memory Pointer "M"

The parameter value to be passed is moved into the Memory pointer "M" before calling the Subroutine.


© In case of doubts, contact Bharat Sir: Connect with us on our Official WhatsApp number: +919136428051

The HL pair at this point of time may contain any random value.

The SubRoutine accesses the value from M.

Care has to be taken that after the value is put into M the value of **HL pair** should not change until the SubRoutine accesses the value of M.

Eg:

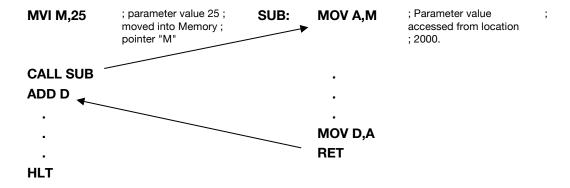



Thus the memory is used but without remembering the memory location.

i.e. In the above example, we still **do not know** the value of **HL** pair, and thus the **address** of the memory location used (thus avoiding the previous drawback).

But, when **more** than one values have to be passed, this method becomes **troublesome**.

4) Using Stack X

The parameter value to be passed is Pushed into the Stack before calling the SubRoutine.

The SubRoutine **Pops** the **passed parameter** from the Stack.

When the μP calls the SubRoutine it **pushes** the **return address** into the stack.

This address appears above the passed parameter in the stack.


Due to the **LIFO** property of the stack we cannot access the passed parameter unless we pop the return address.

Hence inside the SubRoutine firstly, the return address is popped into the HL pair.

Then the **passed parameter** is **popped** into the BC pair.

Now in this case the **RET** instruction **cannot be used** to come back to the main program as the top of the stack no longer contains the return address (as we had taken it out in the HL pair).

Thus the return address is obtained from the HL pair using the **PCHL** instruction which **causes** the control to **return to the main program**.

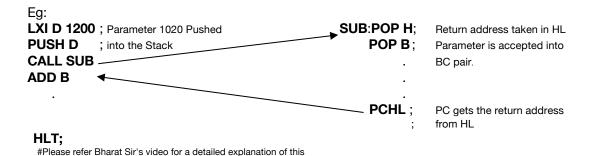

Special Note:

If you are learning this by piracy, then you are not my student. You are simply a thief! #PoorUpbringing


Mumbai: 2021



TYPES OF SUB-ROUTINES


1. Simple Subroutines

When a SubRoutine does not call another SubRoutine it is called a Simple SubRoutine.

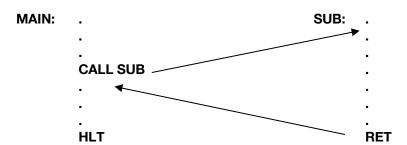


2. Nested Subroutines

When a SubRoutine calls another SubRoutine it is called a Nested SubRoutine.

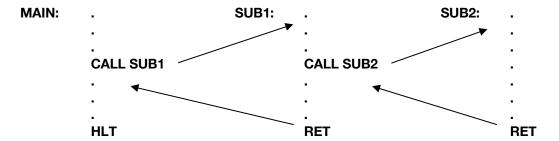

3. Re-entrant Subroutines


When a SubRoutine is re-entered by another SubRoutine it is called a Re-entrant SubRoutine.

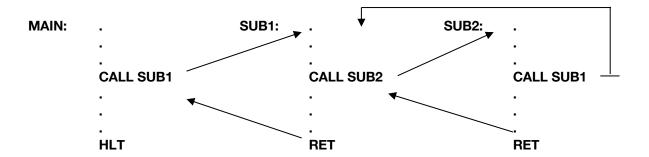



4. Recursive Subroutines

When a SubRoutine calls itself, it is called a Recursive SubRoutine.

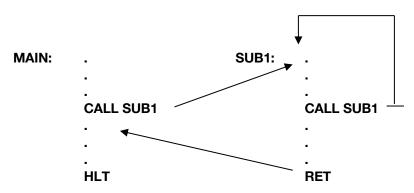

Bharat Acharya Education

Learn...

8085 | 8086 | 80386 | Pentium | 8051 | ARM7 | COA

Fees: 1199/- | Duration: 6 months | Activation: Immediate | Certification: Yes

Free: PDFs of Theory explanation, VIVA questions and answers, Multiple-Choice Questions

Start Learning... NOW!

www.BharatAcharyaEducation.com

Order our Books here...

8086 Microprocessor

Link: https://amzn.to/3qHDpJH

8051 Microcontroller

Link: https://amzn.to/3aFQkXc

Official WhatsApp number:

+91 9136428051