

### University of British Columbia Electrical and Computer Engineering ELEC291/ELEC292

# Project 1 – Reflow Oven Controller

Dr. Jesús Calviño-Fraga P.Eng.

Department of Electrical and Computer Engineering, UBC

Office: KAIS 3024

E-mail: jesusc@ece.ubc.ca

Phone: (604)-827-5387

January 25, 2019

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.


1


# **Objectives**


- Learn about reflow soldering thermal profiles.
- Understand the steps used in the assembling of PCBs with SMT components.
- Understand the components of a reflow oven controller.
- Measure temperature using a thermocouple.
- Control and AC load using a Solid State Relay.


Project 1 - Oven Controller

Sesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

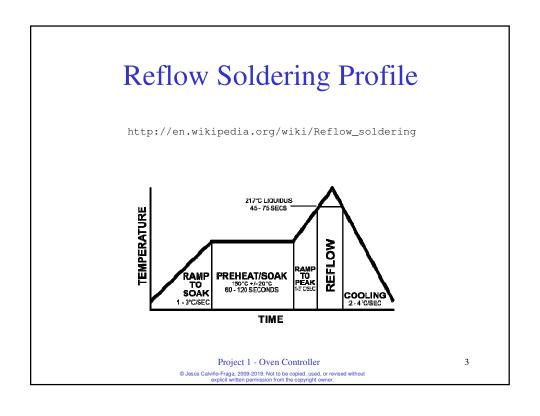

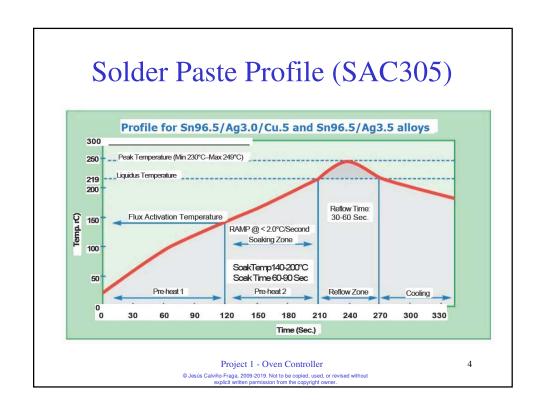

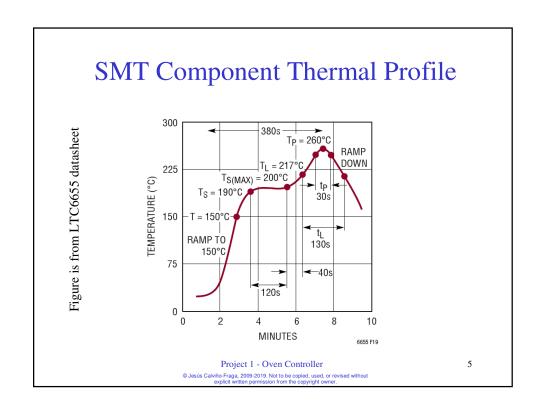

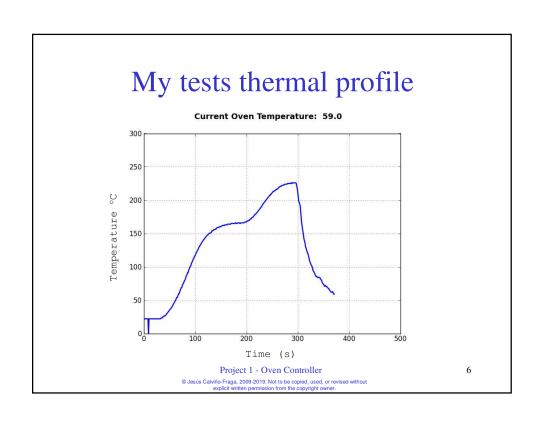

# Warnings:

- Don't let your reflow time be more than 45s or the silk screen may darken.
- Don't let your reflow max temperature climb over 235 °C or your PCB may burn: lots of smelly smoke!

Project 1 - Oven Controller
© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without

7

# PCB Burnt in Reflow Oven



Project 1 - Oven Controller

Sesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# Steps Assembling a PCB with SMT components.

- Step 1: Apply solder paste to the PCB. You will use a Mylar stencil. (I personally believe this is the most critical step in the whole process!)
- Step 2: Place the SMT components into the PCB.
- Step 3: Reflow soldering. You will be using a toaster oven with a controller of your own design.
- Step 4: Hand soldering of TH (thru hole) components.

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

9

# Steps Assembling a PCB with SMT components.

- Video 1 shows how I applied solder paste and placed the components by hand using tweezers.
  - http://courses.ece.ubc.ca/281/2017/Paste\_and\_Components\_Slow.mp4 http://courses.ece.ubc.ca/281/2017/Paste\_and\_Components\_Fast.mp4
- Video 2 Shows how I cleaned the stencil
- Video 3 shows how I reflow soldered the SMT components using a toaster oven.
  - http://courses.ece.ubc.ca/281/2017/Reflow.mp4
- Video 4 shows how to remove a solder bridge

  http://gourses.ece.ubc.ca/281/2017/Bridge\_removal\_horizontal\_mp
- Video 5 shows how I soldered the TH components. http://courses.ece.ubc.ca/281/2017/Thru\_hole.mp4

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# Mastering the Tweezers and Loupe, Step 1: find tools and materials




Project 1 - Oven Controller

Desús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised with

11


# Mastering the Tweezers and Loupe, Step 2: remove seeds!

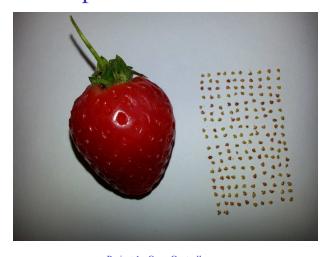

Project 1 - Oven Controller

Susús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

172 seeds!

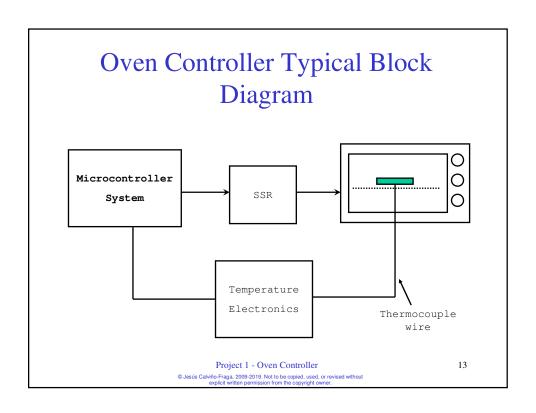

# Microcontroller Requirements

- Must not be an AT89LP51RC2 (or any other member of the AT89LP family from Atmel/Microchip)
- Provided: CV\_8052: Soft processor for the DE1-SoC board that behaves like an 8051 microcontroller.
- EFM8: Assemble this 8051 microcontroller boards as part of project 1.

Project 1 - Oven Controller

Susús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# Other Requirements

- Selectable reflow profile parameters.
- Display of temperature (s), running time, and reflow process current state using an LCD.
- Display the oven temperature in °C using three 7-segment LED displays.
- Start/Stop pushbutton.
- Beeper feedback.
- Temperature strip chart plot using the serial port of the system and a personal computer.

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

15


# K-Type Thermocouple


- Has two wires: Yellow (+) and Red (-).
- About 41  $\mu$ V/°C. You'll need and amplifier!
- Very accurate conversion table provide by the National Institute of Standards and Technology (USA):

http://srdata.nist.gov/its90/download/type k.tab

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

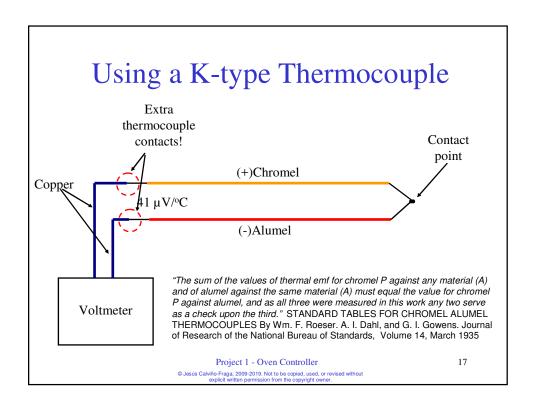

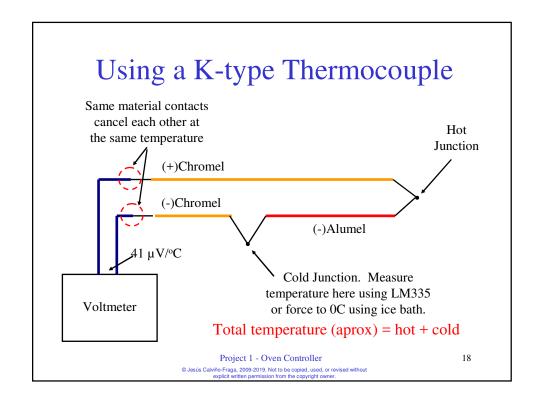


# Testing a K-Type Thermocouple in the Laboratory. You'll need:

- Thermocouple wire: included in project kit.
- Voltmeter with micro-volt resolution: Fluke 45 or Tektronix DM4020.
- Ambient temperature in the lab. Most of the time between 20C and 24C. If not measured, use 22C. Or use your LM335!
- USB to serial adapter attached to the multimeter to connect a computer. Some already connected to the multimeter close to the toaster ovens.
- Python 3.x.x, 'kconvert.py', and 'Multimeter\_Temp.pyw' (you need both files!)

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

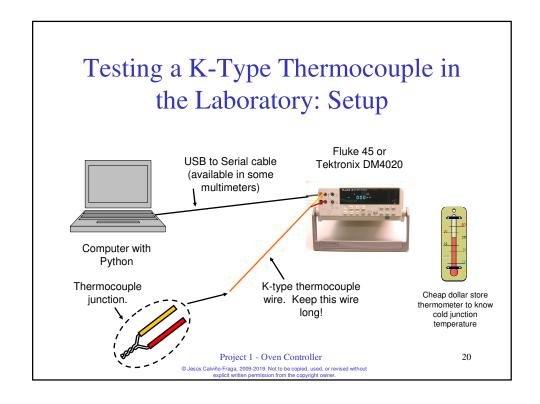

# Run 'Multimeter\_Temp.pyw'



Project 1 - Oven Controller

Sesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.


2


# Run 'Multimeter\_Temp.pyw'




Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

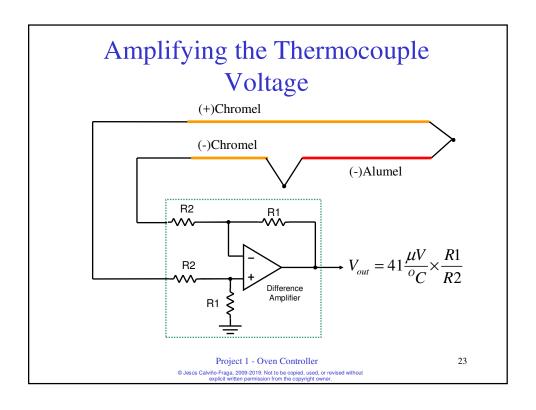

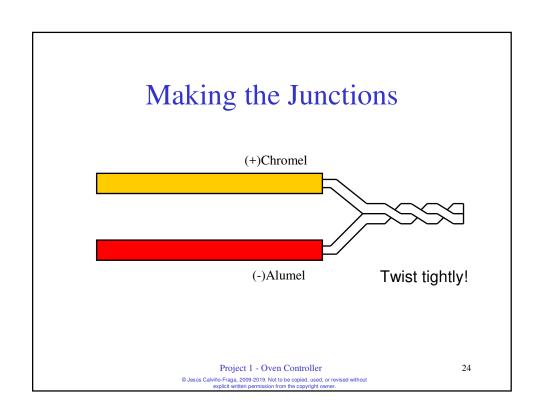

# Good Reference: Microchip AN844

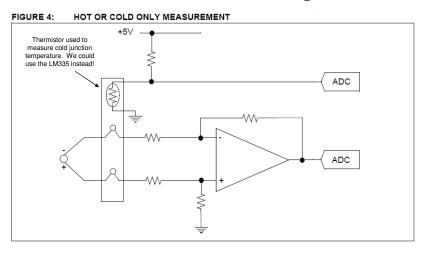

# Project 1 - Oven Controller © Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

25

# **Opamp**

- Must have very small input offset voltage, or offset null circuit.
- The OP07 provided in the microcontroller kit has a typical offset voltage of  $50\mu V$ . Sometimes is  $200 \mu V$ ! The offset can be null using a potentiometer.
- The OP07 needs dual power supplies, for example +5V and -5V. LMC7660 (or equivalent, included in the microcontroller kit) can be used to produce -5V from +5V.
- Choose the gain carefully! The OP07 will saturate at a voltage below +V.

Project 1 - Oven Controller

Sesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# **Opamp**

**Data Sheet OP07** 

### **FEATURES**

Low Vos: 75 μV maximum Low Vos drift: 1.3 μV/°C maxis Ultrastable vs. time: 1.5  $\mu V$  per month maximum Low noise: 0.6 μV p-p maximum Wide input voltage range: ±14 V typical Wide supply voltage range:  $\pm 3$  V to  $\pm 18$  V 125°C temperature-tested dice


### **APPLICATIONS**

Precision filters

Wireless base station control circuits Optical network control circuits Instrumentation Sensors and controls Thermocouples Resistor thermal detectors (RTDs) Strain bridges

Shunt current measurements

### PIN CONFIGURATION

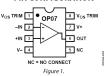

The wide input voltage range of  $\pm 13~\rm V$  minimum combined with a high CMRR of 106 dB (OP07E) and high input impedance provide high accuracy in the noninverting circuit configuration. Excellent linearity and gain accuracy can be maintained even at high closed-loop gains. Stability of offsets and gain with time or variations in temperature is excellent. The accuracy and stability of the OP07, even at high gain, combined with the freedom from external nulling have made the OP07 an

### Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# **Optional Offset Nulling**

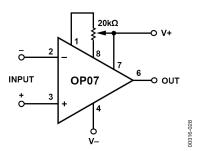


Figure 28. Optional Offset Nulling Circuit

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# Opamp needs ±5V

www.ti.cor

SNOSBZ9C - APRIL 1997 - REVISED APRIL 2013

### LMC7660 Switched Capacitor Voltage Converter

Check for Samples: LMC7660

### **FEATURES**

- Operation Over Full Temperature and Voltage Range without an External Diode
- · Low Supply Current, 200 μA Max
- Pin-for-pin Replacement for the 7660
- Wide Operating Range 1.5V to 10V
- 97% Voltage Conversion Efficiency
- 95% Power Conversion Efficiency
- Easy to Use, Only 2 External Components
- Extended Temperature Range

### DESCRIPTION

The LMC7660 is a CMOS voltage converter capable of converting a positive voltage in the range of +1.5V to +10V to the corresponding negative voltage of -1.5V to -10V. The LMC7660 is a pin-for-pin replacement for the industry-standard 7660. The converter features: operation over full temperature and voltage range without need for an external diode, low quiescent current, and high power efficiency.

The LMC7660 uses its built-in oscillator to switch 4 power MOS switches and charge two inexpensive electrolytic capacitors.

Project 1 - Oven Controller

29

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# LMC7660 $C_{p} = \frac{1}{\sqrt{10}} \frac{8}{\sqrt{7}} \frac{\sqrt{10}}{\sqrt{10}} \frac{\sqrt{$

# Temperature Validation Data

- Use the lab multimeter to validate your controller temperature measurements.
- Max acceptable error ±3°C for the range 25°C to 235°C.
- You must include the procedure and the data in the project report. Have it handy for the project demonstration!

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without

31

# Example of controller temperature differences (compared to Fluke 45)

```
20C ????, ????, ????, +0.7, +0.8, +1.1, +1.4, +1.4, +1.2, +1.3
  \texttt{30C} + \texttt{1.3,} + \texttt{1.6,} + \texttt{1.0,} + \texttt{0.0,} + \texttt{0.2,} + \texttt{0.0,} + \texttt{0.3,} + \texttt{0.4,} + \texttt{0.9,} + \texttt{0.4}  
 40C +0.2, +0.2, +0.2, ????, +0.3, +0.0, +0.1, +0.1, +0.2, +0.1
 50C +0.0, +0.1, +0.0, -0.3, +0.2, +0.5, +0.5, +0.4, +0.6, +0.7
 60C +0.6, +0.9, +0.7, +0.7, +0.7, +0.3, +0.7, +0.2, +0.4
 70C + 0.3, +0.1, +0.4, +0.2, +0.8, +0.4, +0.6, +0.5, +0.2, +0.4\\ 80C + 0.0, +0.1, +0.1, +0.3, +0.1, +0.2, +0.0, -0.1, -0.2, +0.6
90C +0.8, +0.3, -0.7, +0.0, +0.4, +0.1, -0.2, +0.0, +0.0, -0.9
100C -0.5, -0.2, -0.1, -0.3, -0.5, +0.1, +0.4, +0.1, +0.6, +0.3
1100 ????, +0.4, -0.4, +0.2, +0.9, +0.8, -0.3, -0.2, +0.4, -0.6
120C +0.5, -0.2, +1.7, +0.5, +0.1, +0.3, -0.2, -0.1, -0.1, +0.3
130C +0.2, +0.9, +0.6, +0.3, -0.6, +0.2, +0.6, +0.5, +0.6, +1.3
140C +1.0, +0.6, +1.2, +1.3, +0.5, +0.4, +0.9, +0.3, +0.5, +0.6
150C +0.0, +0.8, +0.4, +0.4, +1.1, +1.2, +1.0, +1.3, +1.2, +1.1
160C +1.0, +1.7, +1.0, +1.2, +0.3, +0.4, +0.4, +0.3, +1.1, +0.6
170C +0.6, +1.1, +1.0, +0.9, +0.8, +0.6, +0.6, +0.8, +0.9, +0.9
180C +0.7, +0.6, +0.6, ????, +0.3, +0.8, +1.5, +1.5, +1.5, +1.2
190C +1.0, +0.5, +1.1, +0.6, +0.5, +0.5, +0.7, +0.6, +0.3, +0.4 \\ 200C +0.9, +0.8, +1.4, +0.6, +0.9, +0.8, +0.3, +0.4, +0.3, +0.9
210C + 0.4, +1.3, +0.3, +0.7, +0.7, +0.4, +0.5, +0.8, +0.9, +0.5
220C +0.9, +0.6, +0.8, +0.9, ????, +0.4, +0.5, +0.7, +0.5, +0.4
230C +0.7, +0.8, +0.2, +0.4, +0.4, +0.9, +0.9, +0.8, +0.8, ????
```

Project 1 - Oven Controller

Sesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

## Sources of Error

- The amplifier has too much offset. Solution 1: null the offset using a potentiometer. Solution 2: use an ultra low offset op-amp (for example OP177; expensive!)
- Amplifier resistors mismatch resulting in incorrect gain. Solution 1: use the lab multimeter to select resistor that match. Solution 2: buy 1% or 0.1% tolerance resistors (may be expensive!)
- Incorrect cold junction temperature. Solution 1: adjust the output of the LM335 using a potentiometer. You may need an external thermometer or an ice bath to perform a "one point" calibration of the LM335. Solution 2: buy a low error temperature sensor (may be expensive!)
- Conversion from ADC to voltage gives inaccurate values. Solution 1: measure
  the "Vref" pin of the ADC using the lab multimeter and use that value in your
  firmware calculations. Solution 2: buy and use a voltage reference IC
  (expensive!). Solution 3: use LED voltage to calculate VREF.
- The conversion from voltage to temperature introduces unacceptable errors. Solution 1: tune up your calculations. Solution 2: use a look-up table.

Project 1 - Oven Controller

33

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without

# Testing Your Controller with Paper!




Paper measures 7cm x 2cm

Paper shows reflow temperature and time

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# Checking Oven Hot/Cold Spots

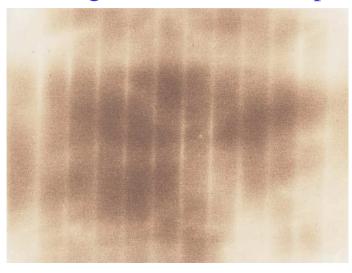

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the conviolation over

35


# Professionalism


- The first tenant of the code of ethics of professional engineers reads<sup>1</sup>: "Hold paramount the safety, health and welfare of the public, the protection of the environment and promote health and safety within the workplace".
- In the spirit of the above tenant, your reflow oven controller must be designed, built, and tested accordingly.
- Please include in your report any features, designs, procedures, as well as other activities you used to accomplish this requirement.


Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

<sup>&</sup>lt;sup>1</sup> https://www.apeg.bc.ca/getmedia/e8d858f5-e175-4536-8834-34a383671c13/APEGBC-Code-of-Ethics.pdf.aspx

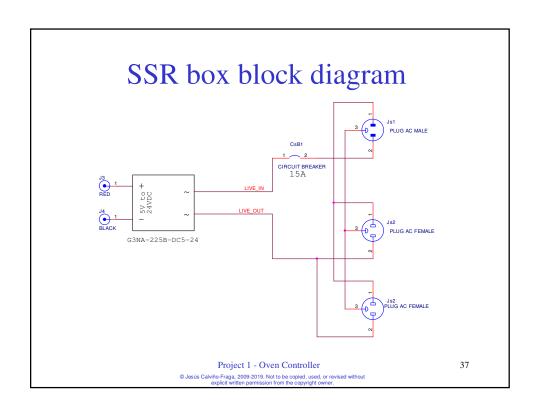

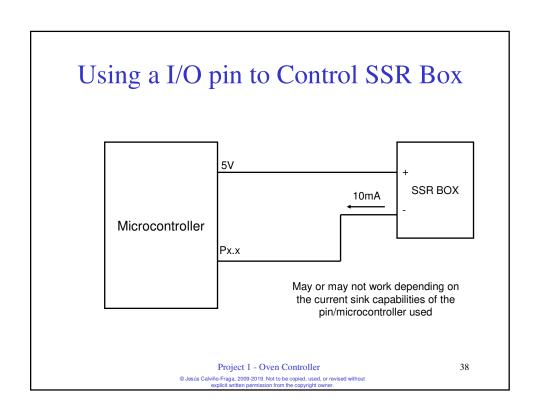

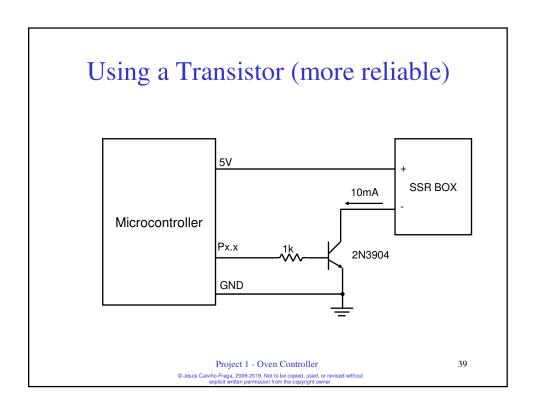

# Using the SSR box

- Connect a power cord cable to the male AC connector. The power cord cable must be rated for the type of load to be connected. If the SSR box would be used to power a 1500W toaster oven, the power cord cable must be rated for at least 13A.
- Connect the AC load to one of the available AC plugs.
- Apply a DC voltage from 5V to 24V to the control banana plugs.
- We got the SSR box CSA approved!

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.

# Using the SSR box

- Do not operate the SSR box for more than 30 minutes at the maximum rated current of 15A.
- The SSR box is designed for resistive loads only. Do not plug inductive loads (such as motors) to the SSR box.
- Do not operate the SSR box if the ambient temperature is above 40°C.
- The SSR box may become warm to the touch after using it for several minutes at maximum rated capacity. If you suspect that the case temperature is over 40°C discontinue using the SSR box immediately.
- Only apply a DC voltage from 5V to 24V to the control pins. Do not apply negative DC voltages of ANY magnitude.
- Do not disassemble the SSR box.
- If the protection breaker is tripped, find and correct the cause of the fault before resetting the breaker to normal operating mode.

Project 1 - Oven Controller

© Jesús Calviño-Fraga, 2009-2019. Not to be copied, used, or revised without explicit written permission from the copyright owner.