# **Assembly Language and Computer Organization**

**Computer Abstractions and Technology** 

Tuesday, August 30<sup>th</sup>, 2022 Dr. Robin Pottathuparambil, CSE Department, UNT



# The Computer Revolution

- Progress in computer technology
  - Underpinned by Moore's Law
- Makes novel applications feasible
  - Computers in automobiles
  - Cell phones
  - Human genome project
  - World Wide Web
  - Search Engines
- Computers are pervasive



### **Classes of Computers**

- Personal computers
  - General purpose, variety of software
  - Subject to cost/performance tradeoff
- Server computers
  - Network based
  - High capacity, performance, reliability
  - Range from small servers to building sized




### **Classes of Computers**

- Supercomputers
  - High-end scientific and engineering calculations
  - Highest capability but represent a small fraction of the overall computer market
  - <a href="https://www.top500.org/">https://www.top500.org/</a>
- Embedded computers
  - Application specific and not general purpose
  - Hidden as components of systems
  - Stringent power/performance/cost constraints



#### The PostPC Era

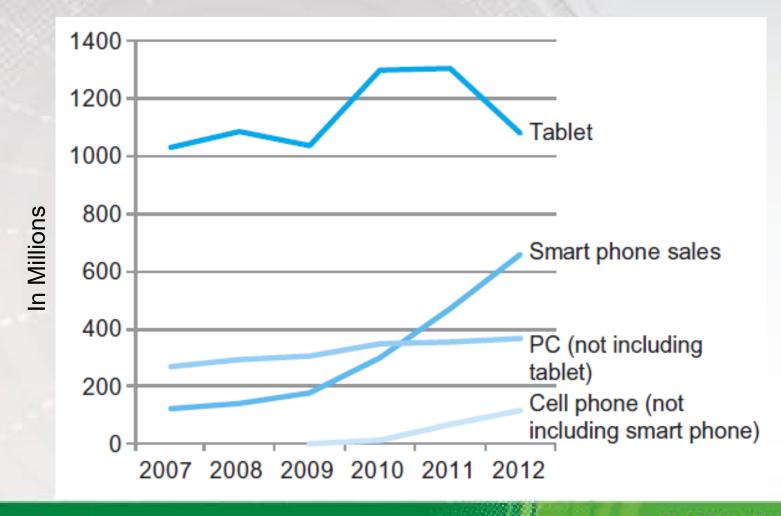



#### The PostPC Era

- Personal Mobile Device (PMD)
  - Battery operated
  - Connects to the Internet
  - Hundreds of dollars
  - Smart phones, tablets, electronic glasses
- Cloud computing
  - Warehouse Scale Computers (WSC)
  - Software as a Service (SaaS)
  - Portion of software run on a PMD and a portion run in the Cloud
  - Amazon and Google



# **Below Your Program**

#### Application software


- Written in high-level language

#### System software

- Compiler: translates HLL code to machine code
- Operating System: service code
  - Handling input/output
  - Managing memory and storage
  - Scheduling tasks & sharing resources

#### Hardware

Processor, memory, I/O controllers

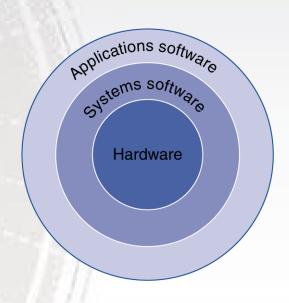

#### **Levels of Program Code**

- High-level language
  - Level of abstraction closer to problem domain
  - Provides for productivity and portability
- Assembly language
  - Textual representation of instructions
- Hardware representation
  - Binary digits (bits)
  - Encoded instructions and data


High-level language program (in C)

Assembly

language

program

(for ARMv8)

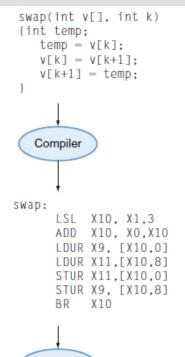

Binary machine language program (for ARMv8) Assembler



#### **Abstractions**

- Abstraction helps us deal with complexity
  - Hide lower-level detail
- Instruction set architecture (ISA)
  - The hardware/software interface
- Application binary interface
  - The ISA plus system software interface
- Implementation
  - The details underlying and interface



#### Components of a Computer

#### Five Components:

- Input Ex: Keyboard, Mouse
- Output Ex: Display, Speaker
- Memory
- Control
- Datapath Processor

#### Storage devices


Hard disk, CD/DVD, flash

#### Network adapters

For communicating with other computers

Same components for all kinds of computer

- Desktop, server, and embedded

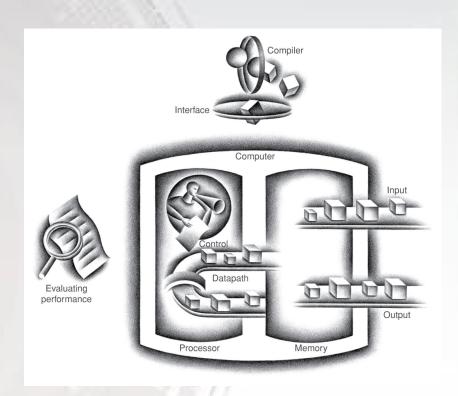




#### **Touchscreen**


- PostPC device
- Supersedes keyboard and mouse
- Resistive and Capacitive types
  - Most tablets, smart phones use capacitive
  - Capacitive allows multiple touches simultaneously




# Through the Looking Glass

- LCD screen: picture elements (pixels)
  - Mirrors content of frame buffer memory

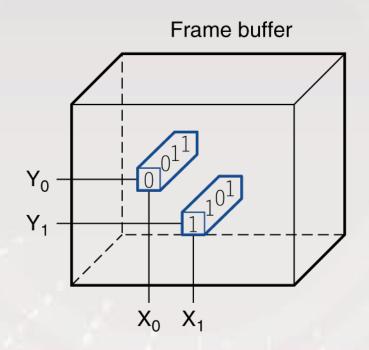

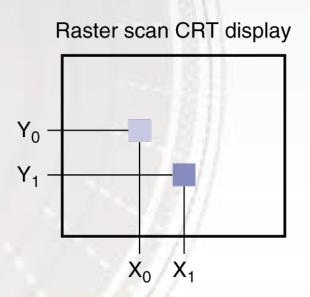

# **Opening the Box**

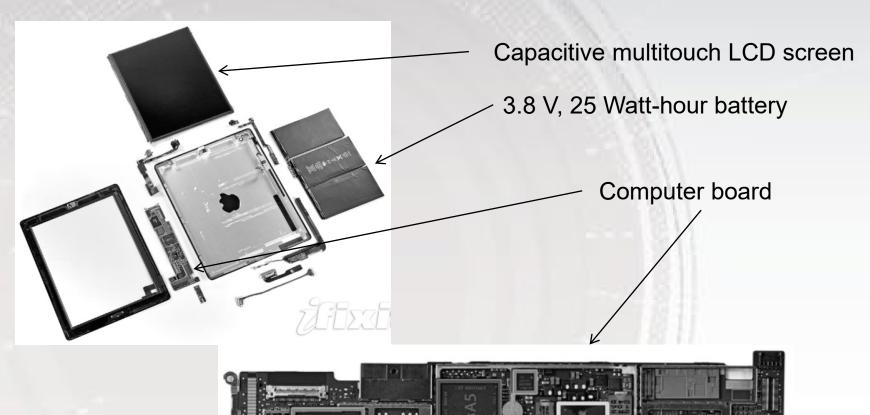



# Inside the Processor (CPU)

Apple A5



# Inside the Processor (CPU)

- Datapath: performs operations on data
- Control: sequences datapath, memory, ...
- Cache memory
  - Small fast SRAM memory for immediate access to data

#### A Safe Place for Data

- Main memory Volatile
  - Loses instructions and data when power is removed
- Secondary memory Non-volatile
  - Magnetic disk
  - Flash memory
  - Optical disk (CDROM, DVD)











16



#### **Networks**

- Communication and resource sharing
- Local area network (LAN): Ethernet
  - Within a building
- Wide area network (WAN: the Internet)
- · Wireless network: Wi-Fi, Bluetooth








# **Technology Trends**

- Electronics technology continues to evolve
  - Increased capacity and performance
  - Reduced cost

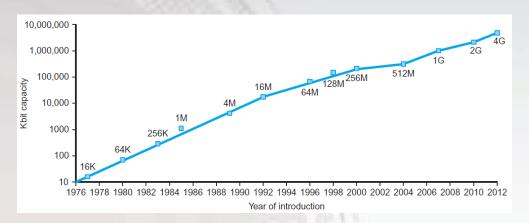

#### **DRAM** capacity


Year	Technology	Relative performance/cost
1951	Vacuum tube	1
1965	Transistor	35
1975	Integrated circuit (IC)	900
1995	Very large scale IC (VLSI)	2,400,000
2013	Ultra large scale IC	250,000,000,000

# **Semiconductor Technology**

- Silicon: semiconductor
- Add materials to transform properties:
  - Conductors
  - Insulators
  - Switch

# Manufacturing ICs

Yield: proportion of working dies per wafer

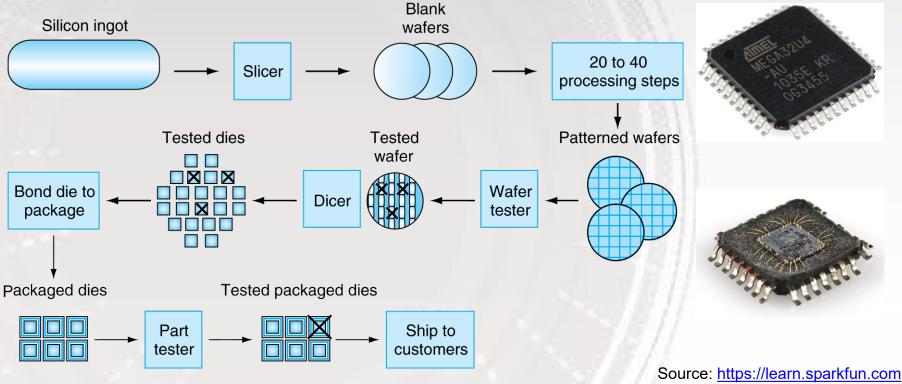

20



#### **Integrated Circuit Cost**

Cost per die = 
$$\frac{\text{Cost per wafer}}{\text{Dies per wafer} \times \text{Yield}}$$

Dies per wafer  $\approx \text{Wafer area/Die area}$ 


Yield =  $\frac{1}{(1+(\text{Defects per area} \times \text{Die area/2}))^2}$ 

- Nonlinear relation to area and defect rate
  - Wafer cost and area are fixed
  - Defect rate determined by manufacturing process
  - Die area determined by architecture and circuit design



#### Intel Core i7 Wafer

- 300mm wafer, 280 chips, 32nm technology
- Each chip is 20.7 x 10.5 mm

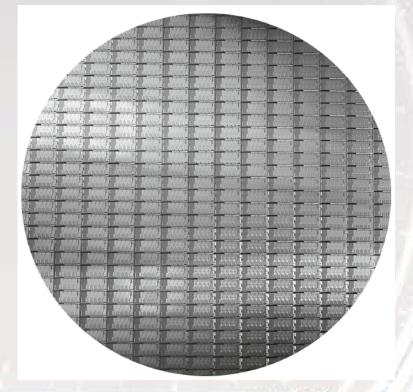


# **Understanding Performance**


- Algorithm
  - Determines number of operations executed
- Programming language, compiler, and architecture
  - Determine number of machine instructions executed per operation
- Processor and memory system
  - Determine how fast instructions are executed
- I/O system (including OS)
  - Determines how fast I/O operations are executed




### **Defining Performance**

Which airplane has the best performance?

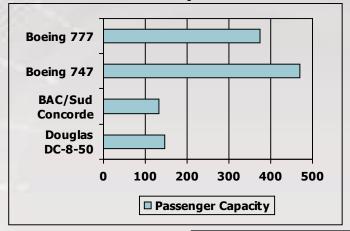


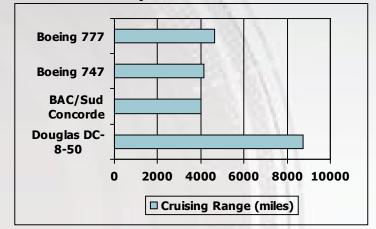

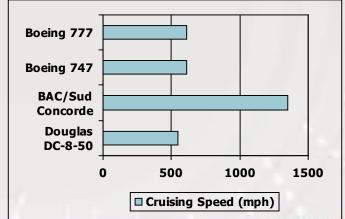

# **Defining Performance**

Boeing 747 has the best performance

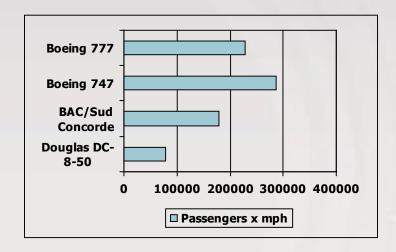

#### **Relative Performance**

- Performance = 1/Execution Time
- "X is n time faster than Y"

Performance<sub>x</sub>/Performance<sub>y</sub>

- = Execution time $_{Y}$ /Execution time $_{X} = n$
- Example: time taken to run a program
  - 10s on A, 15s on B
  - Execution Time<sub>B</sub> / Execution Time<sub>A</sub>= 15s / 10s = 1.5
  - So A is 1.5 times faster than B



### Response Time and Throughput

- Response time
  - How long it takes to do a task
- Throughput
  - Total work done per unit time
    - e.g., tasks/transactions/... per hour
- How are response time and throughput affected by
  - Replacing the processor with a faster version?
  - Adding more processors?
- We'll focus on response time for now...




#### **Measuring Execution Time**

- Elapsed time
  - Total response time, including all aspects
    - Processing, I/O, OS overhead, idle time
  - Determines system performance
- CPU time
  - Time spent processing a given job
    - Discounts I/O time, other jobs' shares
  - Comprises user CPU time and system CPU time
  - Different programs are affected differently by CPU and system performance



# **CPU Clocking**

 Operation of digital hardware governed by a constant-rate clock

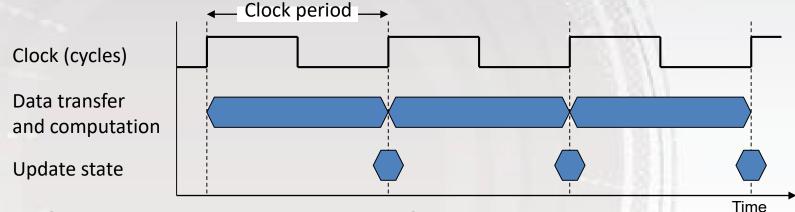

- Clock period: duration of a clock cycle
  - $e.g., 250ps = 0.25ns = 250 \times 10^{-12}s$
- Clock frequency (rate): cycles per second
  - $e.g., 4.0GHz = 4000MHz = 4.0 \times 10^{9}Hz$



#### **CPU Time**

- Performance improved by
  - Reducing number of clock cycles
  - Increasing clock rate
  - Hardware designer must often trade off clock rate against cycle count



CPU Time = CPU Clock Cycles × Clock Cycle Time

= CPU Clock Cycles

Clock Rate

 A program takes 1000 clock cycles to run on a processor running at 2 GHz. What is the time spent on the CPU by the program?

```
Clock Cycles = 1000
```

Clock Rate = 2 GHz

CPU Time =  $1000/2 \times 10^9 = 0.5 \times 10^{-6} = 0.5 \mu s$ 

- Computer A: 2GHz clock, 10s CPU time for the program
- Designing Computer B
  - Aim for 6s CPU time
  - Can do faster clock but causes 1.2x clock cycles of computer A
- How fast must Computer B clock (clock rate) be?



- Computer A: 2GHz clock, 10s CPU time for the program
- Designing Computer B
  - Aim for 6s CPU time
  - Can do faster clock but causes 1.2x clock cycles of computer A
- How fast must Computer B clock (clock rate) be?

$$\begin{aligned} \text{Clock Rate}_{\text{B}} &= \frac{\text{Clock Cycles}_{\text{B}}}{\text{CPU Time}_{\text{B}}} = \frac{1.2 \times \text{Clock Cycles}_{\text{A}}}{6\text{s}} \\ \text{Clock Cycles}_{\text{A}} &= \text{CPU Time}_{\text{A}} \times \text{Clock Rate}_{\text{A}} \\ &= 10\text{s} \times 2\text{GHz} = 20 \times 10^9 \\ \text{Clock Rate}_{\text{B}} &= \frac{1.2 \times 20 \times 10^9}{6\text{s}} = \frac{24 \times 10^9}{6\text{s}} = 4\text{GHz} \end{aligned}$$

UNT

#### Instruction Count and CPI

Clock Cycles = Instruction Count × Cycles per Instruction

CPU Time = Instruction Count × CPI × Clock Cycle Time

= Instruction Count × CPI Clock Rate

- Instruction Count for a program
  - Determined by program, ISA and compiler
- Average cycles per instruction
  - Determined by CPU hardware
  - If different instructions have different CPI
    - Average CPI affected by instruction mix



#### **CPI Example 1**

- Computer A: Clock Cycle Time = 250ps, CPI = 2.0
- Computer B: Clock Cycle Time = 500ps, CPI = 1.2
- Same Program is run both the computers A and B and same ISA
- Which is faster, and by how much?

## **CPI Example 1**

- Computer A: Clock Cycle Time = 250ps, CPI = 2.0
- Computer B: Clock Cycle Time = 500ps, CPI = 1.2
- Same Program and ISA
- Which is faster, and by how much?

$$\begin{aligned} \text{CPU Time}_{A} &= \text{Instruction Count} \times \text{CPI}_{A} \times \text{Cycle Time}_{A} \\ &= I \times 2.0 \times 250 \text{ps} = I \times 500 \text{ps} \end{aligned} \qquad \text{A is faster...}$$
 
$$\begin{aligned} \text{CPU Time}_{B} &= \text{Instruction Count} \times \text{CPI}_{B} \times \text{Cycle Time}_{B} \\ &= I \times 1.2 \times 500 \text{ps} = I \times 600 \text{ps} \end{aligned}$$
 
$$\begin{aligned} &= I \times 600 \text{ps} \\ &= I \times 500 \text{ps} \end{aligned} = 1.2 \end{aligned} \qquad \text{...by this much}$$

UNT

### **CPI in More Detail**

 If different instruction classes take different numbers of cycles

$$Clock \ Cycles = \sum_{i=1}^{n} (CPI_{i} \times Instruction \ Count_{i})$$

Weighted average CPI

$$CPI = \frac{Clock \ Cycles}{Instruction \ Count} = \sum_{i=1}^{n} \left( CPI_i \times \frac{Instruction \ Count_i}{Instruction \ Count} \right)$$

# **CPI Example 2**

 Alternative compiled code sequences using instructions in classes A, B, C

Class	A (Loads)	B (Branches)	C (Arithmetic)
CPI for class	1	2	3
IC in sequence 1	2	1 ===	2
IC in sequence 2	4	1	1

- Sequence 1: IC = 5
  - Clock Cycles= 2×1 + 1×2 + 2×3= 10
  - Avg. CPI = 10/5 = 2.0

- Sequence 2: IC = 6
  - Clock Cycles= 4×1 + 1×2 + 1×3= 9
  - Avg. CPI = 9/6 = 1.5 39



## **Performance Summary**


$$CPU \ Time = \frac{Instructions}{Program} \times \frac{Clock \ cycles}{Instruction} \times \frac{Seconds}{Clock \ cycle}$$

- Performance depends on
  - Algorithm: affects IC, possibly CPI
  - Programming language: affects IC, CPI
  - Compiler: affects IC, CPI
  - Instruction set architecture: affects IC, CPI, Clock rate





### **Power Trends**

In CMOS IC technology

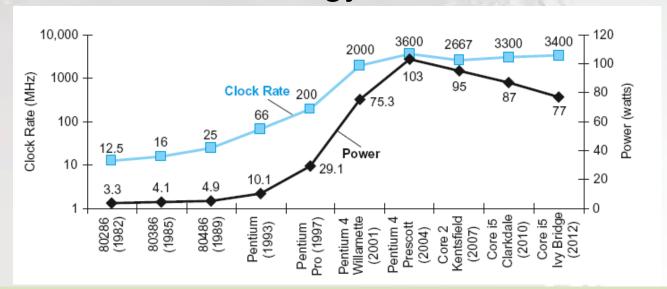

Power = Capacitive load × Voltage<sup>2</sup> × Frequency

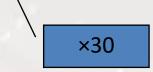

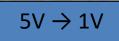

×1000



## **Reducing Power**


- Suppose a new CPU has
  - 85% of capacitive load of old CPU
  - 15% voltage reduction and 15% frequency reduction

$$\frac{P_{\text{new}}}{P_{\text{old}}} = \frac{C_{\text{old}} \times 0.85 \times (V_{\text{old}} \times 0.85)^2 \times F_{\text{old}} \times 0.85}{C_{\text{old}} \times V_{\text{old}}^2 \times F_{\text{old}}} = 0.85^4 = 0.52$$

- The power wall
  - We can't reduce voltage further
  - We can't remove more heat
- How else can we improve performance?



# **Uniprocessor Performance**

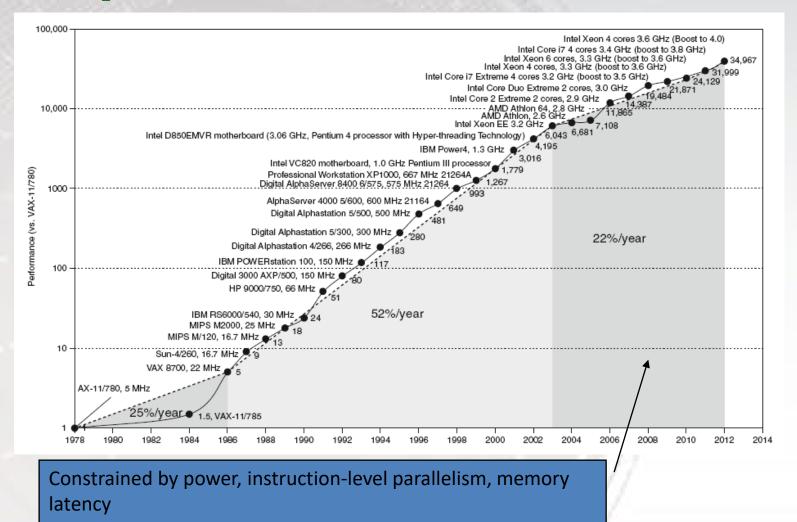

UNT


## Multiprocessors

- Multicore microprocessors
  - More than one processor per chip
- Requires explicitly parallel programming
  - Compare with instruction level parallelism
    - Hardware executes multiple instructions at once
    - Hidden from the programmer
  - Hard to do
    - Programming for performance
    - Load balancing
    - Optimizing communication and synchronization



### **SPEC CPU Benchmark**

- Programs used to measure performance
  - Supposedly typical of actual workload
- Standard Performance Evaluation Corp (SPEC)
  - Develops benchmarks for CPU, I/O, Web, ...
- SPEC CPU2006
  - Elapsed time to execute a selection of programs
    - Negligible I/O, so focuses on CPU performance
  - Normalize relative to reference machine
  - Summarize as geometric mean of performance ratios
    - CINT2006 (integer) and CFP2006 (floating-point)

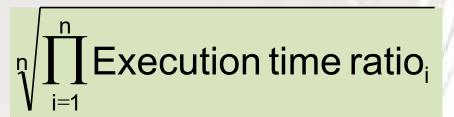



### CINT2006 for Intel Core i7 920

Description	Name	Instruction Count x 10 <sup>9</sup>	CPI	Clock cycle time (seconds x 10 <sup>-9</sup> )	Execution Time (seconds)	Reference Time (seconds)	SPECratio
Interpreted string processing	perl	2252	0.60	0.376	508	9770	19.2
Block-sorting compression	bzip2	2390	0.70	0.376	629	9650	15.4
GNU C compiler	gcc	794	1.20	0.376	358	8050	22.5
Combinatorial optimization	mcf	221	2.66	0.376	221	9120	41.2
Go game (AI)	go	1274	1.10	0.376	527	10490	19.9
Search gene sequence	hmmer	2616	0.60	0.376	590	9330	15.8
Chess game (AI)	sjeng	1948	0.80	0.376	586	12100	20.7
Quantum computer simulation	libquantum	659	0.44	0.376	109	20720	190.0
Video compression	h264avc	3793	0.50	0.376	713	22130	31.0
Discrete event simulation library	omnetpp	367	2.10	0.376	290	6250	21.5
Games/path finding	astar	1250	1.00	0.376	470	7020	14.9
XML parsing	xalancbmk	1045	0.70	0.376	275	6900	25.1
Geometric mean	-	_	_	_	-	_	25.7

### **SPEC Power Benchmark**

- Power consumption of server at different workload levels
  - Performance: ssj\_ops/sec
  - Power: Watts (Joules/sec)

Overall ssj\_ops per Watt = 
$$\left(\sum_{i=0}^{10} ssj_ops_i\right) / \left(\sum_{i=0}^{10} power_i\right)$$

ssj\_ops = server side java ops

UNT

## SPECpower\_ssj2008 for Xeon X5650

Target Load %	Performance (ssj_ops)	Average Power (Watts)
100%	865,618	258
90%	786,688	242
80%	698,051	224
70%	607,826	204
60%	521,391	185
50%	436,757	170
40%	345,919	157
30%	262,071	146
20%	176,061	135
10%	86,784	121
0%	0	80
Overall Sum	4,787,166	1,922
$\Sigma$ ssj_ops/ $\Sigma$ power =		2,490

### Pitfall: Amdahl's Law

 Improving an aspect of a computer and expecting a proportional improvement in overall performance

$$T_{improved} = \frac{T_{affected}}{improvement factor} + T_{unaffected}$$

- Example: multiply accounts for 80s/100s
  - How much improvement in multiply performance to get 5× overall?

$$20 = \frac{80}{n} + 20$$
  $\rightarrow$  Can't be done!

Corollary: make the common case fast



## Fallacy: Low Power at Idle

- Look back at Xeon power benchmark
  - At 100% load: 258W
  - At 50% load: 170W (66%)
  - At 10% load: 121W (47%)
- Google data centre
  - Mostly operates at 10% 50% load
  - At 100% load less than 1% of the time
- Consider designing processors to make power proportional to load



#### Pitfall: MIPS as a Performance Metric

- MIPS: Millions of Instructions Per Second
  - Doesn't account for
    - Differences in ISAs between computers
    - Differences in complexity between instructions

$$MIPS = \frac{Instruction count}{Execution time \times 10^{6}}$$

$$= \frac{Instruction count}{\frac{Instruction count \times CPI}{Clock rate}} = \frac{Clock rate}{CPI \times 10^{6}}$$

CPI varies between programs on a given CPU



# **Concluding Remarks**

- Cost/performance is improving
  - Due to underlying technology development
- Hierarchical layers of abstraction
  - In both hardware and software
- Instruction set architecture
  - The hardware/software interface
- Execution time: the best performance measure
- Power is a limiting factor
  - Use parallelism to improve performance

