

PRACTICAL BOILER WATER TREATMENT HANDBOOK

N.MANIVASAKAM

Formerly **CHIEF WATER ANALYST**
PRINCIPAL PUBLIC HEALTH LABORATORY
COIMBATORE-641018 (T.N.)
INDIA



Chemical Publishing Company
2011

Practical Boiler Water Treatment Handbook

© 2011 by Chemical Publishing Co., Inc. All rights reserved.

No part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, scanning or otherwise, except as permitted under Sections 107 or 108 of the 1976 United States Copyright Act, without either the prior written permission of the Publisher, or authorization through payment of the appropriate per-copy fee to the Copyright Clearance Center, 222 Rosewood Drive, Danvers, MA 01923, (978) 750-8400, fax (978) 646-8600, or on the web at copyright.com. Requests to the Publisher for permission should be addressed to the Publisher, Chemical Publishing Company, through email at info@chemical-publishing.com.

The publisher and the author make no representations or warranties with respect to the accuracy or completeness of the contents of this work and specifically disclaim all warranties, including without limitation warranties of fitness for a particular purpose.

ISBN: 978-0-8206-0171-7

Chemical Publishing Company:
www.chemical-publishing.com
www.chemicalpublishing.net

Cover Design: M.SAKTHIKUMAR

Printed in the United States of America

**DEDICATED
TO
THE LOTUS FEET OF
LORD MURUGA
AND
TO MY PARENTS
C.K.NATARAJ AND ARUNAGIRI AMMAL**

I gratefully Acknowledge,

- 1) The Chemical Publishing Company, New York.
- 2) Department of Army, U.S.Army Corps of Engineers, Alexandria, U.S.A.,
- 3) Unified Facilities Criteria (UFC) – Washington.,
- 4) Dow Chemical Company, Midland, Michigan, U.S.A.,
- 5) Hach Company, Colorado, U.S.A.,
- 6) The Fairmont Press Inc., Lilburn, U.S.A.,
- 7) Thermidaire Corporation Canada Ltd., Ontario, Canada.,
- 8) Lenntech Water Treatment and Air Purification Holding, B.V., The Netherlands.,
- 9) N.E.M., Business Solution, Hemyock Devon,
- 10) Ion Exchange (India) Ltd., Mumbai, India, and
- 11) Jasubhai Media (P) Ltd., Navi Mumbai, India.

for their kind permission to reproduce some of the figures, tables and portions from their publications.

- N. MANIVASAKAM

PREFACE

This book is an outcome of my lengthy experience and the burning desire to write books of this type. Starting from plant managers to plant operators indulging in boiler water treatment, they have an umpteen number of unanswered questions. A vast literature is available on this subject, but most of them are descriptive and provide less practical information. As pointed out by George S.Solt and Chris B.Shirley in the preface of their book, "An Engineer's Guide to Water Treatment", "most of the books are written by the experts for the experts". This is true with the case of boiler water treatment books also and therefore most of the technical persons are unaware of the several problems that occur during treatment eventhough they read many books. They carryout treatment with only partial understanding of the basics and intricacies of the treatment. I tried to provide much more practical information on the subject and to offer answers for the questions that have not been cleared hitherto, which sets this book as a different one from others of this type.

This book is divided into nine parts for easy understanding of the subject. Part – I, "Boiler Basics" provides information on the fundamentals of boiler, boiler components and types of boilers. In Part – II, "Boiler Water Troubles", are dealt exhaustively the innumerable troubles caused by the impurities present in water. A thorough understanding of the causes and effects of boiler water troubles would help to eliminate them in the early stages itself. In Part – III, "Water Quality Requirements and Treatment Programs", the quality requirements of feed water and boiler water as prescribed by the American Society of Mechanical Engineers, and recommended by James W.McCoy in his book "The Chemical Treatment of Boiler Water" are given. This is followed by a brief discussion on external and internal treatments and guidelines on treatment programs. In Part – IV, "External Treatment" and Part – V, "Internal Treatment" all the treatment methods are dealt exhaustively.

It is extremely important that the technical persons must have a thorough knowledge on the calculations of blowdown, cycles of concentration and dosage of chemicals. The methods of calculation of such parameters are provided along with worked out problems under Part – VI, "Boiler Water Treatment – Important Calculations". To cater more information on boiler start up and allied subjects, Part – VII, "Boiler Startup, Cleaning, Layup and Maintenance" is included. In Part – VIII, "Chemicals Handling, Solution Preparation and Feeders" are given the methods of chemical handling and storage, methods of preparation of solutions and different types of chemical feeders. Part – IX, "Analysis of Water and Steam" provides analytical procedures for testing feed water and boiler water and for the measurement of steam purity. In the appendix are provided a number of tables which are useful tools to simplify calculations and computations.

This book would be extremely useful to Plant Managers, Water Treatment Personnel, Water Chemists, Boiler Operators and to Water Treatment Consultants and Firms engaged in

(ii)

water treatment as well as for Boiler Manufacturers. This book would serve as a handy reference and ready reckoner to each wet processing industry and power stations and would help to choose the right type of treatment, right type of chemical and to reduce the cost on water treatment significantly. This book would also serve as a ready reference to students of Industrial Engineering, Mechanical Engineering, Chemical Engineering, Industrial Chemistry, Applied Chemistry and to various other faculties of Colleges and Universities.

The usefulness of the book is enhanced by some figures and tables which are reproduced from certain books and journals. Many of the publishers and manufacturers of water treatment equipments and organizations have been kind enough to permit me to reproduce such figures and tables from their publications. I am ever grateful to all of them.

In the preparation of this book, considerable assistance has been derived from a number of my friends, I am grateful to them for their interest, encouragement and assistance. Especially I wish to acknowledge the help rendered by Mr.S.Muruganandam and Mr.Manoharan. I also acknowledge Ms.S.Punitha for the excellent typesetting of this book. Lastly it is a pleasure to extend my sincere thanks, to my wife M.Sivabagiam for her patience and continued encouragement, and to my son Mr.M.Sakthikumar who has designed the cover excellently, amidst his busy schedule.

I am immensely pleased to express my gratitude and sincere thanks to M/s. Chemical Publishing Company, for their keen interest shown towards the publication of this book.

- N. MANIVASAKAM

This book is divided into the following parts

PART – I.	BOILER BASICS
PART – II.	BOILER WATER TROUBLES
PART – III.	WATER QUALITY REQUIREMENTS AND TREATMENT PROGRAMS
PART – IV.	EXTERNAL TREATMENT
PART – V.	INTERNAL TREATMENT
PART – VI.	BOILER WATER TREATMENT – IMPORTANT CALCULATIONS
PART – VII.	BOILER STARTUP, CLEANING, LAYUP AND MAINTENANCE
PART – VIII.	CHEMICALS HANDLING, SOLUTION PREPARATION AND FEEDERS
PART – IX.	ANALYSIS OF WATER AND STEAM

CONTENTS

PART – I. BOILER BASICS 1

- Chapter 1. Boiler – An Introduction 3
- Chapter 2. Classification of Boilers 11
- Chapter 3. Common Terms and Explanation 24

PART – II. BOILER WATER TROUBLES 29

- Chapter 4. Impurities in Water and Their Effects 31
- Chapter 5. Boiler Water Troubles – A Prelude 35
- Chapter 6. Scale Formation 37
- Chapter 7. Silica Carryover 45
- Chapter 8. Scale Formation in Economizers 47
- Chapter 9. Super Heater and Turbine Deposits 48
- Chapter 10. Corrosion – Basic Information 50
- Chapter 11. General Corrosion (Overall Corrosion / Acidic Corrosion) 52
- Chapter 12. Dissolved Oxygen Corrosion (Pitting Corrosion) 54
- Chapter 13. Carbondioxide Corrosion 57
- Chapter 14. Corrosion caused by Unstable Salts 59
- Chapter 15. Corrosion caused by Other Substances 61
- Chapter 16. Corrosion caused by Chelants (Chelant Corrosion) 63
- Chapter 17. Caustic Embrittlement and Caustic Gouging 64
- Chapter 18. Hydrogen Embrittlement 67
- Chapter 19. Condensate Corrosion 69
- Chapter 20. Preboiler Corrosion 71
- Chapter 21. Economizer Corrosion 73

Chapter 22.	Super Heater and Turbine Corrosion	75
Chapter 23.	Foaming, Priming & Carryover	77

PART – III. WATER QUALITY REQUIREMENTS AND TREATMENT PROGRAMS 81

Chapter 24.	Quality Requirements for Feed Water and Boiler Water	83
Chapter 25.	Objectives of Boiler Water Treatment	88
Chapter 26.	External Treatment and Internal Treatment	89
Chapter 27.	Water Treatment programs – Guidelines	93

PART – IV. EXTERNAL TREATMENT 97

Chapter 28.	External Treatment – A Prelude	99
Chapter 29.	Coagulation (Removal of Color, Turbidity and Suspended Matter)	100
Chapter 30.	Filtration	110
Chapter 31.	Softening by Chemical Method (Lime – Soda Softening)	115
Chapter 32.	Ion Exchange Resins and Treatment Methods	130
Chapter 33.	Softening by Ion–Exchange Method	171
Chapter 34.	Dealkalization	193
Chapter 35.	Demineralization (Deionization)	205
Chapter 36.	Mixed Bed Deionization	246
Chapter 37.	Reverse Osmosis	255
Chapter 38.	Evaporation	278
Chapter 39.	Silica Removal	279
Chapter 40.	Oil Removal	286
Chapter 41.	Condensate Treatment (Condensate Polishing)	289
Chapter 42.	Deaeration (Mechanical Removal of Oxygen)	294

PART – V. INTERNAL TREATMENT 301

Chapter 43.	Internal Boiler Water Treatment – A Prelude	303
-------------	---	-----

Chapter 44.	Organic Polymers and Their Role as Scale Inhibitors, Dispersants and Sludge Conditioners in Boiler Water Treatment	305
Chapter 45.	Internal Treatment – Chemical Feeding	313
Chapter 46.	Prevention of Scale Formation	316
Chapter 47.	Sludge Conditioning	328
Chapter 48.	Prevention of Corrosion – An Introduction	330
Chapter 49.	Prevention of Corrosion Due to Low pH	331
Chapter 50.	Prevention of Pitting Corrosion Using Oxygen Scavengers (Chemical Removal of Oxygen)	333
Chapter 51.	Prevention of Caustic Embrittlement and Caustic Gouging	339
Chapter 52.	Prevention of Chelant Corrosion	347
Chapter 53.	Prevention of Condensate Corrosion	348
Chapter 54.	Prevention of Pre-Boiler Corrosion	352
Chapter 55.	Prevention of Economizer Corrosion	354
Chapter 56.	Prevention of Foaming, Priming & Carryover	356
Chapter 57.	Prevention of Silica Carryover	359
Chapter 58.	Boiler Blow Down	361

PART – VI. BOILER WATER TREATMENT – IMPORTANT CALCULATIONS 367

Chapter 59.	Basic Conversion Factors	369
Chapter 60.	Water Softening – Calculations	372
Chapter 61.	Cycles of Concentration, Blowdown, Feed Water and Makeup Water – Calculations	374
Chapter 62.	Determination of Dosage of Chemicals	380

PART – VII. BOILER START UP, CLEANING, LAY UP AND MAINTENANCE 387

Chapter 63.	Boiler Startup (Pre-operational Cleaning)	389
Chapter 64.	Descaling and Boiler Cleaning	391
Chapter 65.	Boiler LayUp	400
Chapter 66.	Boiler Maintenance	403

PART – VIII. CHEMICALS HANDLING, SOLUTION PREPARATION AND FEEDERS 407

- Chapter 67. Chemicals Handling and Storage 409
- Chapter 68. Preparation of Solutions and Suspensions 412
- Chapter 69. Chemical Feeders 417

PART – IX. ANALYSIS OF WATER AND STEAM 423

- Chapter 70. Control Parameters and Testing Schedule 425
- Chapter 71. Collection of Samples 430
- Chapter 72. Sampling of Boiler Water 432
- Chapter 73. Expression of Results 434
- Chapter 74. Electrical Conductivity 437
- Chapter 75. Dissolved Solids 439
- Chapter 76. pH Value 441
- Chapter 77. Acidity 444
- Chapter 78. Free Carbondioxide 448
- Chapter 79. Equivalent Mineral Acidity 451
- Chapter 80. Alkalinity 452
- Chapter 81. Hardness (Total) 458
- Chapter 82. Calcium 463
- Chapter 83. Magnesium 465
- Chapter 84. Sodium 466
- Chapter 85. Iron (Total) 468
- Chapter 86. Copper 470
- Chapter 87. Sulfate 472
- Chapter 88. Chloride 476
- Chapter 89. Silica 479
- Chapter 90. Dissolved Oxygen 483

Chapter 91.	Oxygen Absorbed (or) Permanganate Value	486
Chapter 92.	Oils & Grease	488
Chapter 93.	Phosphate	490
Chapter 94.	Sulfite	492
Chapter 95.	Hydrazine	494
Chapter 96.	Residual Chelant (EDTA)	496
Chapter 97.	Langelier Saturation Index, Ryznar Stability Index and Puckorius Scaling Index	500
Chapter 98.	Coagulant Demand (or) Jar Test	504
Chapter 99.	Silt Density Index [SDI] (or) Fouling Index	506
Chapter 100.	Measurement of Steam Purity	508

Bibliography	511
---------------------	-----

Appendix	519
-----------------	-----

Index	545
--------------	-----

PART I

BOILER BASICS

Chapter - 1

BOILER – AN INTRODUCTION

Water is the universal solvent and is invariably used for a wide variety of domestic and industrial purposes. The major industrial uses of water are steam generation, cooling, washing, conveying of materials etc., Above all, it is the major raw material which will become an ingredient in the finished product.

Of the many uses of water, steam production is considered as the most important as it is a means of power generation and of several industrial uses. Steam is used to drive turbines and for heating, and to operate pumps, compressors and reciprocating engines. Most chemical process industries require an uninterrupted supply of steam to be used for varied purposes.

Steam is the vapor phase of water. While many liquids can be vaporized and utilized, steam is the preferred one as it can hold very large quantities of heat within it, the property which the vapors of other liquids do not possess. A kilogram of steam carries more energy than any other vaporized liquid. When water is converted to steam, its volume increases by about 1600 times and produces a very high force similar to that of an explosive and hence is used to drive turbines, pumps and compressors. This apart, water is available in plenty than any other material. Besides, handling of water and steam is much easier when compared to handling of other liquids and their vapors.

Steam is generated from water by the common equipment 'Boiler'. A boiler is an enclosed vessel in which heat is transferred continuously from an external heat source to water until it is converted to hot water or steam. The hot water or steam under pressure is then used for transferring the heat for industrial processes or for power generation. The pressure vessel consists of a furnace (heating source), steam drum and mud drum, riser tubes, downcomer tubes, flue gas tubes, steam headers along with necessary accessories and fittings such as safety valves, blow off valves and pressure and temperature gages. This apart, some auxiliary equipments such as economizers, superheaters etc., are also incorporated in a steam generation system. All these components are described separately in later pages.

Boilers can burn coal, oil, natural gas, biomass and other fuels. During combustion, oxygen reacts with the fuel to produce a flame and hot combustion gases. These combustion gases transfer their heat to water in the boiler through radiation, conduction and convection. The relative percentage of each is dependent upon the type of boiler, heat transfer surface and fuel. A boiler is designed in such a way to absorb the maximum amount of heat released in the process of combustion.

Boilers are manufactured in many different sizes and configurations depending on the characteristics of the fuel, the required output, and on the emission controls. Some boilers are only capable of producing hot water while others are designed to produce steam.

There are a few fundamental types of boilers and many variations of each type. Boilers are generally classified according to the operating pressures and operational design. They are also classified based on certain other criteria too. All types of boilers are dealt exhaustively in Chapter – 2.

STEAM GENERATION SYSTEM

It should be noted that boiler is a pressure vessel transforming water to steam while 'steam generation system' is a combination of boiler along with preboiler system and postboiler system. A schematic diagram of a steam generation system is shown in Fig 1 – 1.

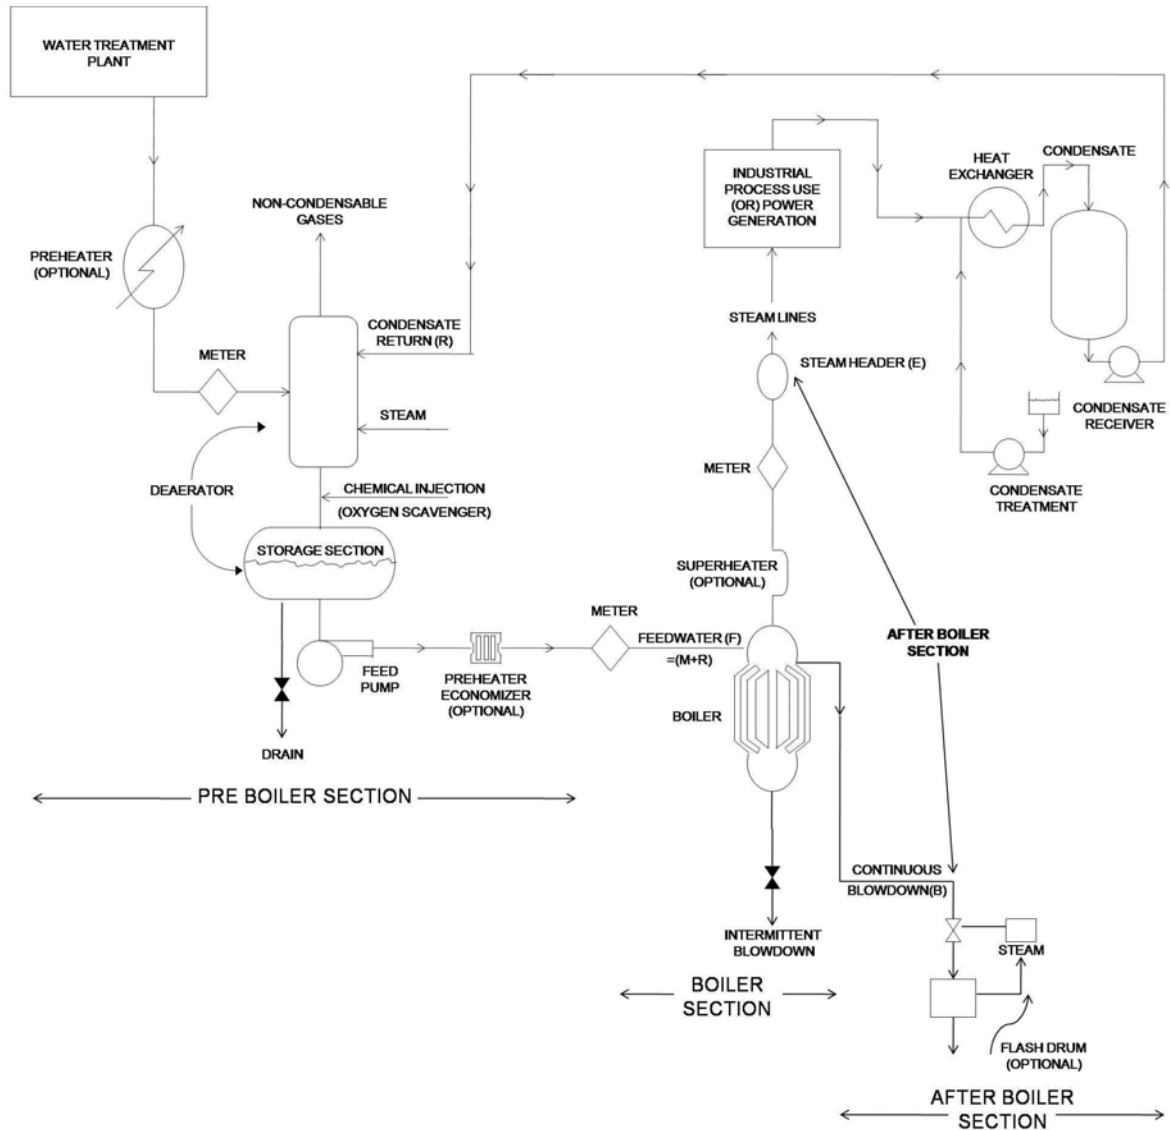


Fig 1 – 1. Schematic Diagram of a Steam Generation System

Pre-boiler Section

The preboiler section of a steam boiler comprises of the boiler system's structural components that hold, move and treat the water before the water enters the boiler. The preboiler system components include water treatment system, feed water pre-heater, deaerator to remove dissolved oxygen (and other non-condensable gases), economizer, and feed water pumps. All these components are discussed in the following section. The pre-boiler section may include a storage tank for the treated makeup water.

Boiler Section

This is exclusively boiler which generates steam. The components of boiler includes steam drum, mud drum, riser tubes, downcomers, and superheaters which are discussed in the following section.

After - boiler Section

The after boiler, or post boiler section comprises of all structural components of the boiler system that hold, move and process the steam and water downstream from the actual boiler. The after-boiler components include steam headers, desuperheaters, condensate system and steam traps etc., which are described in the following section.

BOILER COMPONENTS AND AUXILIARY EQUIPMENTS

Feed Water Pre Heaters

Boiler feed water is usually preheated by the waste heat extracted from spent steam. Closed tube and shell type heat exchangers are used for feed water preheating. These closed feed water heaters generally make use of turbine exhaust steam. The feed water is preheated before it is passed on to deaerators or hot water boilers. In the heat exchanger, feed water is passed in the tubes (inside) and steam on the shell side (outside).

Deaerators

Feed water usually contains objectionable amounts of dissolved oxygen which is highly corrosive. In order to prevent corrosion by dissolved oxygen, it has to be removed completely. Deaeration is the process by which oxygen and other gases are removed from boiler feed water prior to its introduction to a boiler. Deaeration is accomplished by the equipment termed as 'deaerator'. Deaerators function on the principle that solubility of oxygen decreases as the temperature is raised. This is done by passing a stream of steam through the feed water. Deaerators are generally a combination of spray and tray type. A separate chapter is devoted for deaeration and deaerators. Refer Chapter - 38.

Steam Drum and Mud Drum

A boiler system consists of a steam drum and mud drum. The steam drum is the upper drum of a water tube boiler into which feed water is added. Chemicals used for internal boiler water treatment are also

6 Boiler – An Introduction

added to water in the steam drum. Steam drum is the place where separation of water and steam occurs. Steam drums are equipped with mechanical separators to ensure that the steam leaving the boiler does not contain water, solids or other impurities. The present day trend is to use combination of baffles, cyclone-type separators, corrugated scrubbers, and perforated plates for effective separation of steam and water. Steam from the drum may be discharged directly to the steam header or to the superheater to generate superheated steam. The steam drum also contains provisions for continuous blow down.

The steam outlet line normally takes off from this drum to a lower drum by a set of riser and downcomer tubes. The lower drum, called the mud drum is a tank at the bottom of the boiler that equalizes distribution of the water to the generating tubes and collects solids such as salts formed from hardness and silica or corrosion products carried over into the boiler. The mud drum is normally provided with a blowdown valve for periodic blowdown of sediment collecting in the bottom of the drum (See Fig. 2 -5).

Steam Headers

The steam generated by the boiler reaches steam header from where it is being supplied to steam distribution system. (See Fig. 1-1). The steam is either used to generate electricity by passing on to turbine section or consumed for industrial processes. The used steam is then condensed and subsequently reused for steam production.

Economizer

An economizer is a tube bundle placed in the stack of the boiler for preheating feed water. Economizers are used to recover heat from the boiler flue gases and thereby increase boiler efficiency. In effect an economizer is a water heater designed to preheat boiler feed water and deliver the water to the boiler at a high temperature, thus saving energy. By recovering waste heat, an economizer can often reduce fuel requirement by 5% to 10%. Not all boilers have economizers. Usually they are found only on water tube boilers using fossil fuels, that too in high pressure steam plants. Adding an economizer to an existing high pressure boiler installation would increase the capacity of the plant. Boilers that exceed 100 boiler horsepower, operating at pressures exceeding 75 psig or above and those that are significantly loaded all year long are excellent candidates for economizer retrofit. Economizers do not work on most low pressure and HTHW plants.

In power plants that use fossil fuel, improvements in thermo dynamic efficiency are achieved by economizers and air heaters installed in the path of the exit flue gas between the boiler and stack. Economizers transfer heat from the exit gases to the feed water, air heaters transfer some of the residual stack gas heat to the boiler combustion air supply.

An economizer is typically constructed of tubes just like boiler tubes. The tubes can be bare but are usually fitted with fins to increase the heat transfer surface. Bare tubes are used for coal fired boilers, while fin-tubes or extended surfaces are commonly used on gas and oil-fired units. Figure 1 – 2 shows a continuous bare tube economizer. Figure 1-3 illustrates a steel-finned extended surface economizer.

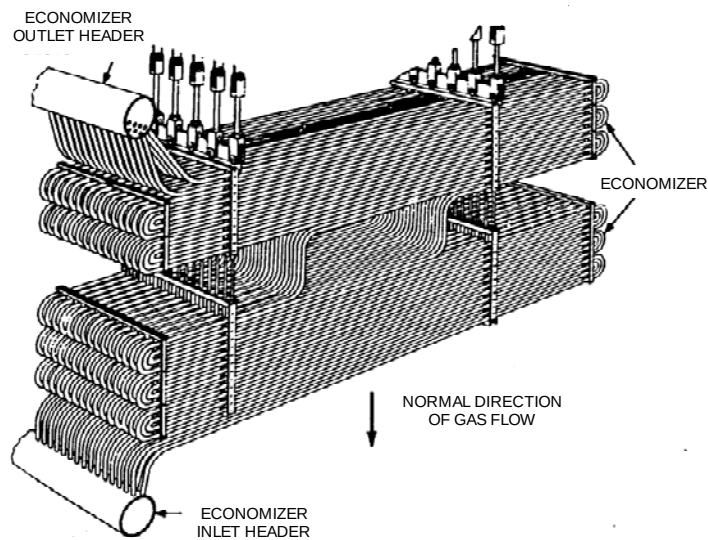


Fig 1 – 2. Bare Tube Economizer*

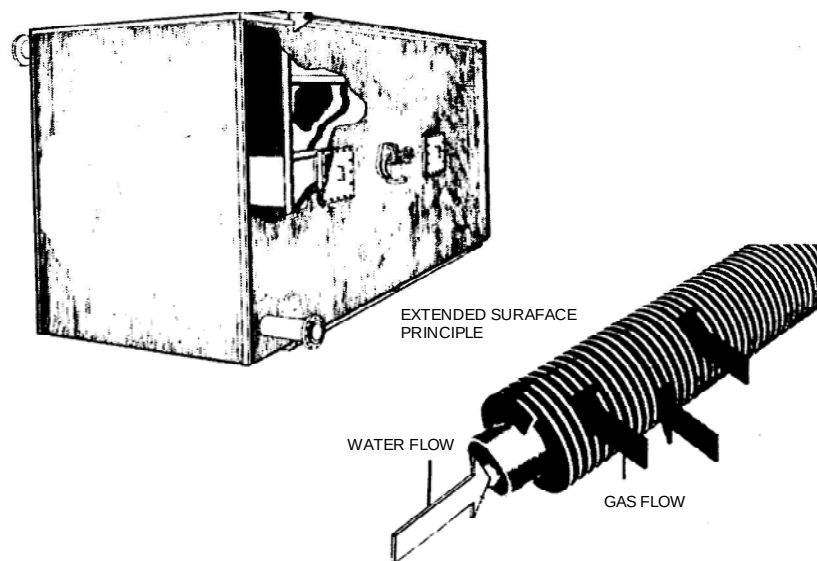


Fig 1 – 3. Extended Surface Economizer*

* Reproduced with the kind permission from the Department of the Army, U.S. Army Corps of Engineers, Alexandria, from their publication, "Central Boiler Plants" (TM 5-650).

Super Heaters

Some industrial processes and turbines require superheated steam which can be obtained by incorporating a super heater in the boiler system. To obtain superheated steam, steam from the steam drum is allowed to pass through superheater where it gets additional heat. The purpose of superheating is to remove the last traces of moisture from the steam and to transfer additional heat to the steam, thus raising the temperature of the steam above its saturation point. In power plants, to achieve the highest possible thermodynamic efficiency, modern fossil fuel power cycles use steam superheaters and reheaters to raise average temperatures of steam flowing through the turbine.

The superheaters can be single bank or multiple banks of tubes either in horizontal or vertical arrangement and located in the convective or radiation zone of the boiler. Fig. 1-4 illustrates a two drum boiler equipped with a superheater, water walls, spreader stoker and economizer.

There are two types of super heaters, namely 1) Drainable Super Heaters and 2) Pendant Super Heaters. Drainable superheaters as the name implies have arrangements to drain the water that accumulates. In pendant superheater, water is not drained, instead the tubes hang down from the heaters into the furnace or flue gas passages.

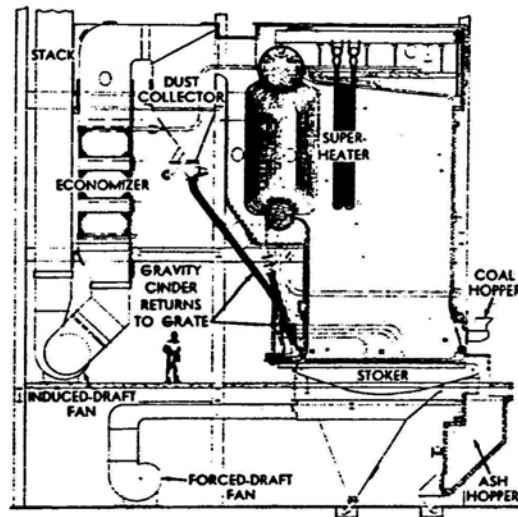


Fig 1 – 4. Super Heater in Two Drum Boiler*

Desuperheaters (Attemperators)

Desuperheater or attemperator is an equipment for reducing and controlling the temperature of superheated steam.

* Reproduced with the kind permission from the Department of the Army, U.S. Army Corps of Engineers, Alexandria, from their publication, "Central Boiler Plants" (TM 5-650).

Normally steam is superheated to increase the cycle efficiency in power generating plants. However superheat is objectionable in process steam, principally because it creates a lower heat transfer rate than does saturated steam. Therefore larger equipment is required if super heated steam is used. Because of this reason, it becomes necessary to desuperheat the steam for process use. Desuperheating is accomplished by injecting a stream of high purity water into the superheated steam. The injection rate is automatically controlled by temperature sensors that modulate the flow of injection water. The injected water evaporates and becomes part of the steam while reducing the temperature (and pressure) of the steam. An incidental advantage is the increase in supply of desuperheated steam. Desuperheaters are usually located at the exit of the superheater, but may also be placed in an intermediate position.

As the concentration of the total dissolved solids in the spray water should be < 2.5 ppm, condensate is the preferred supply. In emergencies, feed water or treated makeup water may be used.

Steam Traps

Steam traps are integral part of any steam distribution system. Steam trap is a device attached to a steam line that automatically drains off any condensate that forms (and other non-condensable gases such as air) without releasing any significant amount of steam. It is a very important mechanical item for maintaining peak efficiency in steam system. Industrial plants normally have a number of steam traps. It should be remembered that no single type of steam trap is ideal for every situation. Four types of steam traps have been developed to meet specific requirements. They are (i) Thermostatic (ii) Float and Thermostatic (c) Disc / Thermodynamic, and (iv) Inverted Bucket types. Adequate care is essential in maintaining steam traps. If steam traps are not maintained, condensate may be retained in the system, severely limiting heat transfer.

BOILER OPERATING PRESSURE

The operating pressure is usually expressed in terms of pounds per square inch (psi). It must be clarified that boiler operators express the pressure indicated by the gauge and hence the precise expression is 'psig' (pounds per square inch gauge). Wherever pressure is indicated simply by psi it is psig only. There is another term 'absolute pressure' which is the gauge pressure plus atmospheric pressure (14.7 psi) and expressed as pounds per square inch absolute (psia). But plant operators are normally interested only in gauge pressure.

Pressure is also expressed in other units. They are (i) Kilogram per square centimeter (Kg/cm^2), (ii) atmosphere (iii) bar and (iv) Pascal (or Newton / meter²). Table 1 -1 provides conversion factors between these units.

BOILER REGULATIONS

Boiler is a pressure vessel, and safety during operation is vital. Keeping in view of the safety, each and every country has promulgated a set of rules and laws with regard to the construction, operation and inspection of boilers. The American Society of Mechanical Engineers has formulated a code for operating boilers. These standards are universal and have been incorporated into the laws of many countries. For more detailed information, readers are directed to refer 'Boiler and Pressure Vessel Code' published by ASME.

TABLE 1 – 1. PRESSURE UNITS AND CONVERSION FACTORS

From	To	Multiply by
psi (or lb/in ²)	Kg / cm ²	0.07031
psi	atmosphere	0.068046
psi	bar	0.068948
psi	Pa (or) N / m ²	6.8927 x 10 ³
Kg / cm ²	psi	14.223
Kg / cm ²	atmosphere	0.9678
Kg / cm ²	bar	0.9804
Kg / cm ²	Pa (or) N / m ²	9.804 x 10 ⁴
atmosphere	psi	14.696
atmosphere	Kg / cm ²	1.03325
atmosphere	bar	1.01295
atmosphere	Pa (or) N / m ²	1.01295 x 10 ⁵
bar	psi	14.5039
bar	Kg / cm ²	1.02
bar	atmosphere	0.9872
bar	Pa (or) N / m ²	1 x 10 ⁵
Pa (or) N / m ²	psi	1.4508 x 10 ⁻⁴
Pa (or) N / m ²	Kg / cm ²	1.020 x 10 ⁻⁵
Pa (or) N / m ²	atmosphere	9.869 x 10 ⁻⁶
Pa (or) N / m ²	bar	1 x 10 ⁻⁵

Pressure is also expressed as MN / m²

1 MN / m² = 1 MPa

INDEX

A

2-amino-2methyl-1propanol (a neutralizing amine), 349
Acidity determination, 444-447

- Methyl orange acidity, 445-446
- Total acidity, 445-446
- Free mineral acidity, 447

Activated magnesia, 281
Activated silica, 106-107
After precipitation, 47, 127
After-boiler section, 5
Algal slimes in softener – removal, 191
Alkali-iodide-azide reagent, 484
Alkaline boilout, 389-390, 399
Alkaline cleaning solution, 389
Alkalinity determination 452-457

- Phenolphthalein alkalinity, 453-454
- Total alkalinity, 454
- calculation of three forms of alkalinity, 454-456
- hydroxide alkalinity-B value-detrn, 456-457

All volatile Treatment, 346
Alum addition in softening, 126
Aluminium hydroxide gel

- preparation, 287

Aluminium sulfate (Alum), 101-102, 126
Alum stock soln for Jar test, 504
Ammonia 31, 34

- corrosion due to, 61
- and condensate corrosion, 70
- as regenerant, 136
- addition in all volatile treatment, 346
- to prevent condensate corrosion, 348
- addition to prevent pre-boiler corrosion, 352

Ammonia-ammonium chloride buffer, 459, 496
Ammoniated citric acid, 392
Ammonium bifluoride, 393
Ammonium bromate, 392
Ammonium molybdate soln for phosphate detn, 490
Ammonium molybdate, 10% soln, for silica, 480
Ammonium salts of EDTA, 392, 395
AMP (a phosphonate), 269, 312, 326
Angstrom unit, 255
Anion dealkalization, 201-203
Anionic surfactants, 275
Antifoams, 91, 94, 95, 356

- feeding, 314
- polyamides, 356

- recommended dosage, 356

- polyoxy alkylene glycols, 356

- recommended dosage, 356

- silicones, 356
Antiscalants, 94-95, 269

- phosphonates in RO process, 269

Anti telescoping device (ATD), 257
Artificial standard soln for silica detn, 480
ASME Standards

- for boiler water, 84
- for feed water, 84
- for steam, 84

Attemperators – See Desuperheaters,
Attrition losses, 160
Auxiliary chemicals for coagulation, 104-105

B

Bacterial slimes in softener – removal, 190, 191
Bare tube economizer, 7
Barium chloride, 5% soln, 472
Barium chloride, crystals, 474
Bed volume, 141
Bentonite, 107
Biofouling of RO membranes 270-271
Blends of neutralizing and film forming amines, 351, 353
Blowdown, 361-366

- advantages and disadvantages, 364
- bottom, 363-364
- calculations of 364-366, 374-376, 477-478
- continuous, 361-363
- definition, 24
- intermittent, 363

Blowdown ratio, 25
Boiler, 3

- A-type 17, 18
- classification, 11-23
- definition, 3
- D-type, 17-18
- fire tube, 12, 13-15
- flexitube 19
- fluidized bed combustion, 22

- forced circulation, 21
 - high pressure, 11
 - horizontal return tube, 13-15
 - hot water, 22
 - low pressure, 11
 - natural circulation, 21
 - O-type, 17, 18
 - package 17-19, 20
 - pulverized coal, 21-22
 - spreader-stoker, 21
 - supercritical, 12
 - waste heat, 23
 - water tube, 12, 15-16
 - Boiler blowdown - See blow down
 - Boiler capacity rating, 24
 - Boiler cleaning, 391-399
 - Boiler efficiency, 24
 - Boiler evaporation ratio, 24
 - Boiler horsepower, 24
 - Boiler lay-up, 400-402
 - dry lay-up 400, 401, 402
 - wet lay-up, 400-401, 402
 - Boiler maintenance, 403-405
 - Boiler section, 5
 - Boiler startup, 389-390
 - from dry lay-up, 390
 - from wet lay-up, 390
 - Boiler tube failure - See Tube Failure
 - Boiler water
 - definition, 27
 - quality requirements, 83-84, 87
 - Borax soln, 1%, 480
 - Breakage of crosslinking, 164-165
 - Breakthrough, 154
 - Brine dosage determination, 182-183
 - Brining, 181-182
 - British thermal unit, 25
- C**
- Calcium carbonate scale, 31-32, 37-38, 47
 - Calcium chloride and corrosion, 60, 68
 - Calcium determination, 463-464
 - Calcium hydroxide-See Hydrated lime
 - Calcium nitrate
 - in the prevention of economizer corrosion, 355
 - Calcium nitrate and corrosion, 60
 - Calcium oxide-See Lime
 - Calcium phosphate, 39
 - Calcium standard soln, 458
 - Calcium sulfate scale, 32, 38
 - Carbohydrazide, 337
 - Carbonate hardness, 460, 461
 - Carbondioxide corrosion, 57-58, 69, 75
 - prevention, 331-332
 - Carbondioxide determination-See Free carbondioxide determination
 - Carboxy methyl cellulose 324
 - Carryover, 27, 36, 48-49, 79-80
 - definition, 27
 - effects of, 80
 - of silica, 45-46
 - prevention, 357-358
 - Caustic embrittlement, 64, 317, 321, 332
 - prevention of, 65, 339-346
 - by addition of inhibitors, 340-341
 - by congruent phosphate-pH method, 344-345
 - by co-ordinated phosphate-pH program, 341-344
 - by zero solids treatment, 346
 - of rotors and turbines, 48
 - mechanism, 64
 - Caustic gouging, 65, 290
 - mechanism, 65
 - prevention of, 66, 339-346
 - by congruent-pH method, 344-345
 - by co-ordinated phosphate, -pH method, 341-344
 - by zero solids treatment, 346
 - Caustic soda
 - as regenerant, 135, 136, 156, 227, 284
 - feeding, 313
 - rayon grade, 284
 - requirements, calculations, 382-383
 - Caustic soda solution, preparation, 415-416
 - Caustic soda treatment for filter sand 113
 - Channeling, 165
 - Chelant corrosion, 63, 323-324
 - Chelant dose, 325
 - determination, 325-326
 - Chelant program, 322-326
 - addition of polymers, 324
 - chelant dose, 325
 - limitations, 323
 - maintenance of alkalinity residual, 324
-

-
- phosphate-chelant-polymer combination, 326
 - precautions, 324
 - Chelants, 91, 94
 - EDTA, 91, 322, 323
 - NTA, 91, 322, 323
 - advantages, 322
 - dose, 325
 - feeding point, 313, 325, 354
 - Chelant treatment-See Chelant program
 - Chemical cleaning methods, 391
 - Chemical cleaning solutions, 392-396
 - EDTA cleaning solution, 395-396
 - inhibited hydrochloric acid, 392
 - hydrochloric acid cleaning solution
 - for carbonate and phosphate deposits, 393
 - for the removal of iron and silicate scales, 393
 - for the removal of copper, 393
 - inhibited sulfamic acid, 394-395
 - passivating solution, 394
 - Chemical feeders, 126, 417-422
 - dry chemical feeders, 422
 - solution feeders, 417-421
 - Chemical feeding
 - antifoams, 314
 - caustic soda, 313
 - chelants, 313
 - filming amines, 314
 - neutralizing amines, 314
 - oxygen scavengers, 313
 - polymeric dispersant, 314
 - phosphates, 313, 320
 - soda ash, 313
 - Chemical feed system
 - computerized, 314
 - Chemical pot feeder, 314-315
 - Chemicals handling and storage, 409-411
 - storing chemical solutions, 416
 - Chloride determination, 476-478
 - Chlorine treatment for filter sand, 113
 - Chloroform, 470
 - Citric acid, 275, 390
 - Cleaning in place (CIP), 257
 - Cleaning of superheaters, 399
 - Cleaning of turbines, 399
 - Cleaning procedure, 396-399
 - EDTA cleaning, 398-399
 - hydrochloric acid cleaning, 396-398
 - Clumping of resins, 251-252
 - Coagulant demand determination, 504-505
 - Coagulants, 100-104, 126
 - aluminium surface (alum), 101-102
 - organic polymers, 103-104
 - polyaluminium chloride, 101, 103
 - sodium aluminate, 102-103
 - Coagulation, 100-109
 - Coagulation equipments, 107-109
 - Coalescing oil filter, 286, 288
 - Cocurrent regeneration, 158-159
 - Cold lime-soda softening, 115-128
 - limitations, 126
 - variations, 126-128
 - Collection of samples, 430-431
 - sampling of boiler water, 432-433
 - Colloidal silica, 138, 236, 280
 - Concentrate (reject, retentate), 256
 - Concentrate flow, 257
 - Concentration polarization, 257, 274
 - Condensate
 - definition, 26
 - Condensate corrosion, 69-70
 - prevention, 348, 351
 - Condensate filtration, 353
 - Condensate polishing - See condensate treatment
 - Condensate treatment, 95-96, 289-293
 - magnetic filters, 292-293
 - mixed bed polishing, 290-291
 - powdex polishing, 292
 - Condensed tannins, 309, 310
 - Conditioner, 94, 95
 - Conditioning reagent, 474
 - Congruent phosphate-pH method, 341, 344-345 (congruent control)
 - Continuous sand filters, 114
 - Control parameters and testing schedule, 425-429
 - for boiler blowdown, 428
 - for boiler water, 428
 - for condensate, 428
 - for feed water, 428
 - Control parameters for treatment processes
 - cation exchange softening, 426
 - demineralization, 426
 - lime soda softening, 426
 - Conversion factors
 - calcium carbonate equivalents, 371
 - conversion to calcium carbonate, 369
 - gram per litre to equivalent per litre, 369
 - gram to equivalent, 369
-

- milligram per litre to milli equivalent per litre, 369

Co-ordinated phosphate-pH program, 341-344

Copper, 48

Copper determination, 470-472

Copperoxide, 289, 290

Copper standard soln, 471

Copper stock soln, 470

Corrosion

- acidic, 52-53
- by ammonia, 61, 70, 71
- by calcium chloride, 60, 68
- by calcium nitrate, 60
- by hydrogen sulfide, 61, 70
- by lubricating oil, 76
- by magnesium chloride, 59, 68
- by magnesium nitrate, 59
- by magnesium sulfate, 60
- by peaty matter, 61
- by sulfurdioxide, 61, 70
- caused by boiler sludge, 461-462
- caused by carbondioxide, 57-58, 70, 71, 75
- caused by chelants, 63
- caused by unstable salts, 59-60
- condensate, 69-70
- definition, 35
- dissolved oxygen, 54-56, 70, 71, 73
- due to ammonia, 61
- economizer, 73-74
- general, 52-53
- preboiler, 71-72
- superheater, 75-76
- turbine, 75-76

Corrosion by unstable salts, 59-60

Corrosion due to low pH

- prevention, 331-332

Countercurrent regeneration, 158-159

Cracking of resin, 160

Cross flow filtration - See Reverse Osmosis

Cycles of concentration

- definition, 25
- calculations, 374-377, 477-478

Cyclohexylamine, 53, 91, 353

- addition for the prevention of condensate corrosion, 91
- addition in all volatile treatment, 346
- properties, 349

D

2-dimethyl amino-2-methyl-1-propanol, 349
(a neutralizing amine)

Deaerating heaters, 294, 295-298

- atomizing type, 296
- spray and tray type, 297
- spray type, 296
- trouble shooting, 299-300

Deaeration, 294-300, 352

Deaerators, 5, 294-300

- Types of deaerators, 294
- maintenance, 299

Dealkalization, 130, 145, 193-204

- and softening, 193
- anion dealkalization, 197, 201-203
- applications, 193
- limitations, 196
- split stream, 197, 198-201
- variants, 196-203
- with weak acid cation and softener, 197-198

Declumping of resins 252

Degasser, 223-224

Deionized distilled water, 466

Demineralization, 130, 145-146, 205-245

- checking the functioning of exchangers, 230
- control tests, 234
- degasser, 223-224
- exchanger units, 222
- mixed bed, 223
- problems associated with, 235
- regenerant waste disposal, 229-230
- regeneration, 226-228
- resins used for, 207-209
- service run, 226
- systems, 209, 222

Demineralization plants

- care and maintenance, 237-238
- trouble shooting, 238-244

Descaling, 391-399

Desuperheaters, 8-9

Diastearoyl ethylene diamide, 356

Diethyl hydroxyl amine (DEHA), 337

Diethylamino ethanol (DEAE), 53

- properties, 349
- in the prevention of condensate corrosion, 349

Dilution of acids, 415

Diocadecyl amine, 91

Diocadecylamine, 351

Diolelyl piperazine, 356
 Disodium hydrogen phosphate, 318, 319, 342, 344
 Dispersants, 309-312, 344
 - feeding of, 314
 - natural, 309-310
 - synthetic, 310-311
 Disposal of spent brine, 184-185
 Dissolved oxygen, 33-34
 Dissolved oxygen corrosion, 54-56 (pitting corrosion)
 - prevention of, 333-338
 Dissolved oxygen determination, 483-485
 Dissolved solids, determination, 439-440
 Dolomitic lime, 281
 Dosage of chemicals-determination, 380-385
 Dry lay-up, 400, 401, 402

E

Economizer, 6, 47, 354
 - baretube, 7
 - extended surface, 7
 - scale formation, 47
 Economizer corrosion, 73-74
 - prevention of, 354-355
 EDTA cleaning solution, 395-396
 EDTA titrant 0.02N, 458, 463
 EDTA working standard soln, 497
 Electrical conductivity-determination, 437-438
 - neutralized conductivity, 438
 Equivalent Mineral Acidity(EMA), 230, 231, 232
 - determination of, 451
 Eriochrome Black-T indicator, 459, 496
 Erythorbic acid, 337
 Ethylenediamine, 399
 Ethylene Diamine Tetra Acetic acid (EDTA), 91, 275, 322, 323
 Evaporation, 278
 Expression of results, 434-436
 Extended surface economizer, 7
 External treatment, 26-27, 89-90, 92, 99

F

Fast rinse, 157
 Feed flow, 258

Feed water, 26-27
 - definition, 26, 257
 - quality requirements, 83-86
 Feedwater Preheater, 5
 Ferric sulfate, 282, 283
 Film forming amines-See filming amines
 Filming amines, 350-351
 - disadvantages, 351
 - feeding, 314
 - in the prevention of condensate corrosion, 350-351
 Filter sand, 111
 - cleaning by caustic soda, 113
 - cleaning by chlorine, 113
 - preservation of, 113-114
 - removal and filling, 114
 Filtration, 110-114
 - continuous sand filters, 114
 - new developments, 114
 Firetube boilers, 12, 13-15
 Flash steam, 362
 Flexitube boiler, 19
 Flocculation aids, 105-107
 - activated silica, 106-107
 - bentonite, 107
 - polyelectrolyte, 105-106
 Floc former and settling basins, 107, 108
 Fluidized bed combustion boilers, 22
 Flux, 258
 Foaming, 36, 49, 77
 - prevention of, 356
 Forced circulation boiler, 21
 Fouling Index-See Silt Density Index
 Free carbondioxide determination, 448-450
 - in degasser effluent, 449-450
 - in steam, 450
 Free Mineral Acidity (FMA), 231, 446
 - determination, 446-447

G

Gas pockets, 236
 Gel type ion-exchange resins (microporous resins), 132-137
 - strong acid cation, 134
 - strong base anion, 135
 - weak acid cation, 134-135
 - weak base anion, 135-136

H

Hardness

- classification, 460
- conversion factors, 462
- determination, 458-462
- units, 462

Hardness removal, 93

Hardness (Total) determination, 458-462

Heater deaerators-See Deaerating heaters

Heat Recovery Steam Generators (HRSG)-See Waste heat boilers.

HEDP (a phosphonate), 269, 309, 312, 326

Hexadecylamine (a film forming amine), 91, 351

Hollow-fat fibre, 263

Hollow fine-fibre module-See Hollow fibre module

Hollow fibre module, 261, 263, 265

Horizontal-return tube boiler, 13

Hot lime-soda softening, 128-129

- for silica removal, 280-281

Hotwater boilers, 22

Hydrated dolomitic lime, 281

Hydrated lime, 104, 115, 116, 281

Hydrazine, 91

- addition in all volatile treatment, 346
- advantages, 337
- as oxygen scavenger, 336-338, 353
- disadvantages, 337
- feeding point, 336, 353
- recommended residuals in boiler water, 337

Hydrazine, determination, 494-495

Hydrazine standard soln, 494

Hydrazine stock solun, 494

Hydrazine sulfate, 337

Hydrochloric acid

- 0.5N, 494
- 1+1, 468, 472, 480

Hydrochloric acid as regenerant, 134, 135, 155, 195, 198, 201, 227, 248

Hydrochloric acid cleaning solution

- for the removal of carbonate and phosphate deposits, 393
- for the removal of copper, 393
- for the removal of iron and silicate scales, 393

Hydrochloric acid (inhibited)

- for acid cleaning, 389, 392

Hydrogen embrittlement, 67-68

Hydrogen sulfide

- and condensate corrosion, 70

- corrosion due to, 61

Hydroquinone, 337,

Hydroxide alkalinity-B value, detn, 456-457

Hydroxyacetic-formic acid, 390, 392

Hydroxyethyl cellulose, 283

Hydroxylamine, 337

Hydroxyl amine hydrochloride soln, 470

Hydroxylamine hydrosulfate, 399

Hyperfiltration, 258

I

Induced air floatation (for oil removal), 286, 288

Inhibited hydrochloric acid-See hydrochloric acid(inhibited)

Inhibited sulfamic acid-See sulfamic acid (inhibited)

Inhibitors added to hydrochloric acid, 392

- acridine, 392
- imidazoline, 392
- hexamine, 392
- pyridine, 392
- quinoline, 392
- triamyl amine, 392

Intercrystalline cracking-See Caustic embrittlement

Internal treatment, 88, 89, 91, 92, 303-304

- for oil removal, 91, 288

Ion exchange capacity (Resin capacity), 141-143

Ion exchange method of softening-See softening by ion exchange method

Ion exchange plants

- care and maintenance, 166
- for dealkalization, 194, 198, 201
- for demineralization, 207-209
- for softening, 172

Ion exchange resins, 130-141

- gel type resins (microporous resins), 132-137
 - base polymer, 131
 - functional group, 131
 - strong acid cation, 134, 208
 - strong base anion, 135, 208-209
 - weak acid cation, 134-135, 194, 208
 - weak base anion, 135-136, 210
- macroporous resins
 - anion macroporous, 138
 - as organic scavengers, 138
 - cation macroporous, 138

Ion exchange resins, 130-141

- cracking of, 160
- density, 140
- disinfection, 167-168
- life span, 137
- maximum operating temperature, 137
- particle size, 139
- porosity, 139
- protection during storage, 169
- removal of algal slimes, 168
- resin capacity(ion exchange capacity), 141
- salt splitting capacity, 141
- stability of resin, 146, 151
- strong base capacity, 141
- water regain, 140

Ion exchange treatment

- associated problems, 160-166
- attrition losses, 160
- break through, 154
- degradation of, 165
- hydraulic considerations, 150-151
- important parameters, 141-145
- leakage, 150
- operation sequences, 152-158
- practical considerations, 145-152
- regeneration, 154, 158

Ionic load (ion exchange load), 143-144

Iron oxide, 289, 290

Iron (Total) determination, 468-469

Iron standard soln, 468

Iron stock soln, 468

Isoascorbic acid, 337

Isoporous resin, 132

Isopropyl alcohol, 471

J

Jar test-See Coagulant demand determination

L

Langelier Saturation Index, 500-502

Layered bed, 218, 219, 220

Leakage, 146, 150

- of sodium, 231, 232
- of silica, 235

Leakage of hardness, 186

Lignin, 91, 286, 309, 310, 311, 317, 321, 328

Lignin sulfonate, 340

Lime, 109, 115, 116, 281

Lime dose for softening calculations, 118-119, 129-121, 122

Lime-soda softening, 115-129

- cold lime-soda softening, 115-128
- hot lime-soda softening, 128-129

Lime stock soln for Jar test, 504

Loss of resin capacity, 164-165

M

Macroporous resins

- anion macroporous, 138
- as organic scavengers, 138-139
- cation macroporous, 138
- cleaning, 168-169
- for condensate polishing, 290

Magnesia, 280, 281

Magnesium chloride and corrosion, 59

Magnesium determination, 465

Magnesium hydroxide sludge, 32, 38

Magnesium nitrate and corrosion, 60

Magnesium oxide

- in the prevention of economizer corrosion, 355

Magnesium silicate sludge, 39

Magnesium standard soln, 496

Magnesium sulfate and corrosion, 60

Magnesium sulfate soln, 483

Makeup water

- definition, 26
- requirements calculations, 377-379

Manganous sulfate soln, 483

Mechanical removal of oxygen-See Deaeration

Membrane foulants, 276

Methyl ethyl ketoxamine, 337

Methyl orange acidity, 445-446

Methyl orange alkalinity, 454

Methyl orange indicator soln, 445

Methyl polysiloxane (antifoam), 356

Methyl red indicator soln, 472

Micro filtration, 255

Misting, 78-79

Mixed bed deionization, 223, 246-254

- mixed bed units, 246

- for condensate polishing, 290-292
- problems associated with mixed beds, 251
 - bad mixing, 253
 - clumping of resins, 251
 - degradation of resins, 254
 - fouling of resins, 253
 - imperfect mixing, 252
 - imperfect separation, 252
 - mechanical problems, 254
- recent advances, 250
- regeneration, 251
 - external regeneration, 250
 - insitu regeneration (two step method), 248, 249
 - offline regeneration, 250
 - simultaneous method, 248

Mixed bed polishing, 290

Mixed indicator, 453

Morpholine, 53, 91, 346, 353

- addition in all volatile treatment, 346
- properties, 349

Mud drum, 5-6

Murexide indicator, 463

N

N, N' - dihexa decyl adipamide, 356

N, N' - diocta decyl sebacamide, 356

Nano filtration, 255

Natural circulation boiler, 21

Natural dispersants, 309-310

- condensed tannins, 309, 310
- lignins, 309
- quebracho, 309
- sodium alginate, 309
- sodium mannuronate, 309
- starch, 309
- sulfonated lignins, 309, 310

Neo cuproin soln, 470

Neutralized conductivity, 438

Neutralizing amine, 53, 348-350, 353

- feeding, 314, 350
- in the prevention of condensate corrosion, 348-350
- properties, 349
- requirements, calculations of, 384-385

Nitrilo Triacetic Acid (NTA), 91, 322, 323

Non-carbonate hardness, 460, 461

Non-ionic polymers, 283

Non-ionic surfactants, 275

Non-precipitation program, 316, 322-237

O

Octadecylamine(a film forming amine), 91, 350

Oil balls, 286, 288

- prevention of, 288, 312

Oils & grease, 488-489

Open heaters, 294, 295

Operator's performance and training, 404-405

Organic phosphates (See Phosphonates)

Organic polymers-See Polymers

Organic polymers as coagulants, 103-104

Orthophosphates, 318

- addition in congruent phosphate-pH method, 344-345
- addition in co-ordinated phosphate-pH program, 342-344
- addition in internal treatment for scale prevention, 317-320
- limitations to use in scale prevention, 319

Output between regenerations (OBR), 145

Oxalic acid soln, 10%, 480

Oxygen absorbed-determination, 486-487

Oxygen (dissolved)-See Dissolved Oxygen

Oxygen scavengers, 94, 333, 336-338, 352-353

- carbonylhydrazide, 337
- diethyl hydroxyl amine (DEHA), 337
- erythorbic acid, 337
- feeding, 313, 334-335, 336
- hydrazine, 336-337
- hydrazine sulfate, 337
- hydroquinone, 337
- hydroxylamine, 337
- iso ascorbic acid, 337
- methyl ethyl ketoxamine, 337
- sodium sulfite, 333-336

P

Package boiler, 17-19, 20

- A-type, 17, 18
 - D-type, 17-18
 - O-type, 17, 18
-

-
- Para dimethyl amino benzaldehyde soln, 494
 Passivating solution, 394
 Patton and Reeder's indicator, 463
 PBTC (a phosphonate), 269, 309, 312, 326
 Percentage of moisture in steam – determination, 358
 Permanganate value – determination, 486-487
 Permeate, 256, 258
 Petroleum ether, 488
 pH 4 buffer solution, 442
 pH 7 buffer solution, 442
 pH 9 buffer solution, 442
 pH recommended for corrosion control, 53
 pH value-determination, 441-443
 Phenolphthalein acidity, 445-446
 Phenolphthalein alkalinity, 453-454
 Phenolphthalein indicator soln, 445, 448, 453, 490
 Phosphate determination, 490-491
 Phosphate hideout, 40, 320
 Phosphate programs, 341-345
 - congruent phosphate-pH method, 341, 344-345
 - co-ordinated phosphate-pH program, 341-344
 Phosphate requirement calculation sn, 381-382
 Phosphates,
 - orthophosphates, 318, 319
 - disodium hydrogen phosphate, 318, 319, 342, 344
 - sodium dihydrogen phosphate, 318, 319, 344
 - trisodium phosphate, 318, 319, 342, 344
 - polyphosphates, 318, 320, 343
 - sodium hexa meta phosphate, 318, 320, 321
 - sodium tripolyphosphate, 318, 321
 - tetra sodium pyrophosphate, 318
 Phosphates commonly used – properties, 318
 Phosphate standard soln, 490
 Phosphate stock soln, 490
 Phosphate treatment, 316, 317-321
 - addition of polymers, 321
 - commonly used phosphates, 318
 - feeding point 313, 320
 - limitations for ortho phosphates, 319-320
 - phosphate requirement – calculations of, 381-382
 - polyphosphates, 320
 Phosphonate program, 326-327
 Phosphonates, 91, 269, 309, 312, 326
 - AMP (Amino-trimethylene phosphonic acid), 369, 312, 326
 - HEDP (1-hydroxy ethylidene 1, 1, diphosphonic acid), 269, 309, 312, 236
 - PBTC (2-phosphono butane-1, 2, 4-tricarboxylic acid), 269, 309, 312, 326
 - as antiscalants in RO process, 269
 Phosphoric acid for DO detn, 484
 Pipes for chemical solutions, 421
 Pitting corrosion, 54-56
 - prevention, 333-338
 Plate and Frame module, 261
 Polyacrylamide, 105, 106, 310
 Polyacrylate, 91, 269, 286, 288, 307, 308-309, 310, 311, 317, 324, 328
 Polyaluminium chloride (PAC), 103
 Polyamide antifoams, 91, 356
 - diastearoyl ethylene diamide, 356
 - diolelyl piperazine, 356
 - N, N' – diocta decyl sebacamide, 356
 - N, N' – dihexa decyl adipamide, 356
 - dosage, 356
 Polyelectrolytes, 105-106
 Polyetheramide-polysulfone composite membranes, 262
 Polyethylene imine membranes, 260
 Polyfuran membranes, 260
 Polymaleate, 310, 324
 Polymer addition in chelant treatment, 324
 Polymer addition in sludge conditioning, 329
 Polymeric flocculants – See Polyelectrolytes
 Polymer requirements – calculations, 383-384
 Polymers, 103-104, 305-312, 321
 - anionic, 306, 307, 310
 - addition in chelant program, 324, 326
 - addition in phosphate treatment, 321
 - addition in sludge conditioning, 329
 - as coagulants, 103-104
 - as dispersants, 309-310
 - as scale inhibitors, 308-309
 - as sludge conditioners, 311-312
 - cationic, 306, 307
 - non-ionic, 306, 307, 308, 310
 Polymethacrylate, 91, 307, 308-309, 310, 311, 317, 324, 328
 Polyoxy alkylene glycols (antifoams), 91, 356
 - dosage, 356
 - dotetra conta oxyethylene glycol, 356
 - octadeca-oxyethylene glycol, 356
 Polyphosphates, 127, 318, 320-321, 343
 - addition in co-ordinated phosphate-pH method, 343
 - addition in internal treatment, 320-321
 - addition in lime soda softening, 127
 - limitations, 320-321
-

Polyvinylalcohol, 105
Ponding, 128
Potassium chromate indicator soln, 477
Potassium chromate soln for silica detn, 480
Potassium iodate-iodide soln, 492
Potassium iodide soln, 10%, 487
Potassium permanganate soln
 - 0.01250 N, 486
 - 0.02 N, 468
 - 0.1250 N, 486
Powdex process (Powdex Precoat polishing)
 - for condensate treatment, 292
 - for the prevention of pre-boiler corrosion, 353
Practical Scaling Index-See Puckorius Scaling Index
Pre-boiler corrosion, 71-72
 - prevention, 72, 352-353
Pre-boiler section, 5, 71-72
Pre-boiler treatment-See External treatment
Precipitation program, 316-321, 327
Precoat filters (for oil removal), 286, 287, 324, 328
Pre-operational cleaning-See Boiler start up
Preparation of lime suspension (milk of lime), 414-415
Preparation of solutions and suspensions, 412-416
 - preparation of caustic soda solution, 415-416
 - preparation of concentrated solutions from solid
 chemicals, 412-413
 - preparation of dilute solutions from concentrated
 solutions, 413-414
 - preparation of lime suspension, 414-415
Pressure drop, 161
Pressure filter, 110-113
 - preservation of filter sand, 113
 - removal of sand and gravel, 114
Pressure units and conversion factors, 10
Pressure vessels, 259
Prevention of carryover, 357-358
Prevention of caustic embrittlement and caustic gouging,
 339-346
Prevention of corrosion
 - chelant corrosion, 347
 - condensate corrosion, 348-351
 - due to low pH, 331
 - economizer corrosion, 354-355
 - pitting corrosion, 333-338
 - preboiler corrosion, 352-353
Prevention of foaming, 356
Prevention of priming, 357
Prevention of scale formation, 316-327
Prevention of silica carryover, 356-358

Priming, 36, 75, 77-78, 357
 - effects of, 78
 - prevention of, 357
Pseudomonas, 164
Puckorius Scaling Index (PSI), 503
Pulverized coal boiler, 21-22

Q

Quality requirements
 - for feed water, 83, 84, 86
 - for boiler water, 83, 84
 - for steam, 84
Quebracho, 286, 309
Quebracho tannin(as caustic embrittlement inhibitor), 340
Quicklime - See Lime

R

Rayon grade caustic soda, 284
Recovery, 258
Regenerant consumption, 146, 152
Regenerant injection, 155-157
Regenerant removal, 157, 228
Regenerant reuse, 159-160, 229-230
Regenerants, 155-156, 198
Regenerant waste disposal, 159-160
Regeneration
 - during ion exchange treatment, 154-158
 - during softening, 180-184
 - during dealkalization, 195, 201, 203
 - during demineralization, 226-229
Regeneration capacity, 194
Regeneration level (Regenerant level), 144
Regeneration ratio, 144-145
Reject-See Concentrate
Residual chelant (EDTA) - determination 496-499
Resin capacity(Ion exchange capacity), 141-143
 - Loss of resin capacity, 164-165
Resing capacity units, 142
 - conversion factors, 142
Resin fouling, 161-164, 236-237
Reverse osmosis, 255-277
 - and ion exchange, 257
 - antiscalants used in RO, 269
 - factors affecting performance, 272-274
 - feed water requirements, 266

- identification of foulants, 276
 - maintenance of RO systems, 276-277
 - membrane cleaning, 274-275
 - membrane configurations, 261-265
 - membrane materials, 259-261
 - process details, 255-256
 - special advantages, 256-257
 - terminology, 257
 - water treatment systems, 258-259
 - Reverse osmosis membranes
 - cellulose acetate, 262
 - hollow fat fibres, 263
 - hollow fibre (hollow fine-fibre), 263
 - polyetheramide-polysulfone, 262
 - Reverse osmosis membranes
 - ageing, 274
 - biofouling, 270, 273
 - cleaning of, 274-275
 - colloidal fouling, 267-268, 273
 - deposition of metal oxides, 270
 - deterioration by hydrolysis, 274
 - plugging, 267, 273
 - scaling, 267, 268 - 270
 - Ryznar Stability Index, 500-503
- S**
- Salt passage, 258
 - Salt rejection, 258
 - Salt splitting capacity, 141
 - Sample collection, 430-431
 - Sampling of boiler water, 432-433
 - Saturated steam, 25
 - Scale formation, 35, 37-40
 - due to deposition of corrosion products, 40
 - due to evaporation, 37-38
 - due to reaction with water treatment chemicals, 39-40
 - in economizers, 47
 - in superheaters, 48-49
 - in turbines, 48-49
 - prevention of, 42-44
 - Scale inhibitors, 308-309
 - polyacrylate, 308, 309
 - polymaleate, 309
 - polymethacrylate, 308, 309
 - Scales-See also scale formation
 - Sepralators-See Spiral wound module
 - Septum filters (for oil removal), 286, 287-288
 - Shot feeder, 314-315
 - Silica, 33, 279, 37
 - volatility, 45-46
 - permissible concentrations in boiler, 280, 362
 - Silica carryover, 45-46
 - prevention of, 359-360
 - Silica, colloidal - See Colloidal silica
 - Silica determination, 479-482
 - Silica leakage, 235
 - Silica removal, 93, 279-285
 - by cold lime-soda ferric sulfate process, 282-283, 285
 - by demineralization, 283-285
 - hot lime-soda magnesia process, 280-282, 285
 - by ultra filtration, 280
 - using macroporous resins, 138
 - Silica scales, 33, 37, 38-39, 42, 43, 45, 48, 279
 - Silt Density Index (SDI), 258, 260
 - definition, 258
 - determination, 506-507
 - Silver nitrate-nitric acid reagent, 472
 - Slow rinse, 157
 - Sludge blanket type coagulation and settling equipment, 109
 - Sludge conditioners, 95, 311-312
 - Sludge conditioning, 328-329
 - coagulation method, 328, 329
 - dispersion method, 328-329
 - polymer requirements, 329
 - Sludge inhibition, mechanism, 311
 - Sludge inhibitors(sludge conditioners), 311-312
 - natural, 311
 - lignin, 311
 - starch, 311
 - tannin, 311
 - synthetic, 6
 - copolymers of methacrylate, 311
 - polyacrylate, 311, 312
 - sulfonated styrene, 311
 - Soda ash (See Sodium Carbonate)
 - Soda ash dose for softening calculations, 119, 121, 122-123
 - Sodium alginate, 309
 - Sodium aluminate, 102-103

- addition in softening, 126
 - Sodium bisulfite, 270
 - Sodium carbonate(Soda ash), 105, 115-116, 313, 316-317, 281
 - feeding, 313
 - Sodium carbonate soln, 1N, 453
 - Sodium carbonate treatment, 316-317
 - Sodium chloride as regenerant, 134, 155, 181, 198, 201
 - Sodium citrate soln, 470
 - Sodium determination, 466-467
 - Sodium dihydrogen phosphate, 127, 318, 319, 344
 - Sodium hexametaphosphate, 127, 318, 320, 321
 - Sodium hydroxide soln,
 - 0.02N, 445
 - 0.0227N, 448
 - 1N, 448, 463
 - Sodium mannuronate, 309
 - Sodium metabisulfite, 270
 - Sodium nitrate (as caustic embrittlement inhibitor), 340
 - Sodium polyacrylate, 324
 - Sodium polymethacrylate, 324
 - Sodium slip(sodium leak), 64, 231, 232, 235
 - determination, 230-232
 - Sodium stock soln, 466
 - Sodium sulfide inhibitor, 459
 - Sodium sulfite (as oxygen scavenger), 91, 333-336
 - demerits, 335
 - dosage calculations, 334, 380-381
 - feeding point 334-335
 - recommended residuals in boiler water, 334
 - Sodium thiosulfate soln
 - 0.01250N, 486
 - 0.025N, 484
 - 0.1N, 484
 - 0.1250N, 486
 - Sodium tripolyphosphate, 127, 275, 318, 321
 - Softener capacity (water softener capacity), 179
 - Softener units, 173
 - care and maintenance, 190-191
 - design, 174-178
 - Softening by chemical method, 115-129
 - Softening by ion exchange method, 130, 145, 171-192
 - design of softeners, 174-178
 - determination of brine dosage, 182-183
 - fault diagnosis, 186-188
 - governing factors, 186-188
 - limitations, 185-186
 - operation of softeners, 178-184
 - problems associated with softening, 188-190
 - Softening-calculation, 372-373
 - Softening run, 178-180
 - Solubilizing water treatment program – See Non-precipitation program
 - Solution feeders, 417-421
 - gravity-orifice feeders, 417, 418
 - helical rotor acid feeders, 417, 421
 - pot-type feeders, 417, 419-420
 - pressure-solution acid feeders, 417, 420
 - proportional-flow solution feeders, 418-419
 - reciprocating-pump type feeders, 417, 419
 - Spiral wound module, 261, 262-263
 - Split stream dealkalization, 197, 198-201
 - Spreader-stoker boiler, 21
 - Stability of resin, 157
 - Staging RO systems, 265
 - Standard EDTA soln for residual chelant detn, 496, 497
 - Standard EDTA titrant, 0.02N soln, 458, 463
 - Standard silver nitrate titrant 0.0282 N, 476
 - Standard sodium chloride titrant 0.0282N, 476
 - Standard sulfate soln, 474
 - Stannous chloride soln, 490
 - Starch, 91, 288, 309, 311, 317, 321, 328
 - Starch indicator soln, 484, 487, 492
 - Steam drum, 5-6
 - Steam generation system, 4
 - Steam header, 6
 - Steam purity, 25
 - measurement of, 508-509
 - Steam quality, 26
 - Steam traps, 9
 - Storing chemical solutions, 416
 - Stress corrosion cracking–See Caustic embrittlement
 - Strong base capacity, 141
 - Sulfamic acid, 392
 - Sulfamic acid (inhibited), 394-395
 - Sulfite determination, 492-493
 - Sulfonated lignin, 91, 309, 310, 311, 328
 - Sulfonated styrene, 91, 310, 311, 328
 - Sulfurdioxide
 - and condensate corrosion, 70
 - and economizer corrosion, 73, 354-355
 - corrosion due to, 61
 - Sulfuric acid
 - 0.02N, 453
-

- 1N, 453
- 1+3, 487
- 1+1, 488, 492

Sulfuric acid as regenerant, 134, 135, 156, 195, 198, 227, 248

Sulfuric acid, conc for DO detn, 484

Sulfuric acid (inhibited), 394-395

Sulfuric acid - nitric acid soln, 490

Superheated steam, 26

Super heater, 8

- cleaning of, 399
- corrosion of, 72, 75-76
- drainable superheater, 8
- pendant superheater, 8

Superheater corrosion, 75-76

Superheating, 26

Synthetic dispersants, 310-311

- copolymers of polymethacrylate, 310
- polyacrylamide, 310
- polyacrylates, 310
- polymaleates, 310
- sulfonated styrene, 310

T

Tannin, 91, 311, 317, 321, 328, 356

Thin Film Composite membrane (TFC/TFM)-258, 260-261

Thiocyanate soln 10%, 468

Thiourea, 393, 394

Thorough fare regeneration, 214

Total chelant determination, 497-498

Triammonium EDTA, 395

Trisodium phosphate, 318, 319, 342, 344

Tube failure, 42

Tube settlers, 108

Tubular module, 261

Turbine cleaning, 399

Turbine corrosion, 75-76

U

Ultra filtration, 255, 280, 286, 288

- for oil removal, 288

V

Vacuum deaerators, 294, 295

Vapor phase corrosion inhibitors - See Neutralizing amines

W

Waste heat boilers, 23

Water regain, 140

Water treatment programs, 93-96

Watertube boilers, 12, 15-16

Wet layup, 400-401, 402

X

Xylenol orange soln, for total chelant detn, 497

Z

Zero solids treatment-See "All volatile treatment"

Zirconyl chloride stock soln, 498

Zirconyl chloride working soln, 498