# Memory BIST Training Workbook

Software Version 8.2003\_3

August 2003



Copyright © Mentor Graphics Corporation 1999 - 2003.

All rights reserved.

This document contains information that is proprietary to Mentor Graphics Corporation. The original recipient of this document may duplicate this document in whole or in part for internal business purposes only, provided that this entire notice appears in all copies. In duplicating any part of this document, the recipient agrees to make every reasonable effort to prevent the unauthorized use and distribution of the proprietary information.

This document is for information and instruction purposes. Mentor Graphics reserves the right to make changes in specifications and other information contained in this publication without prior notice, and the reader should, in all cases, consult Mentor Graphics to determine whether any changes have been made.

The terms and conditions governing the sale and licensing of Mentor Graphics products are set forth in written agreements between Mentor Graphics and its customers. No representation or other affirmation of fact contained in this publication shall be deemed to be a warranty or give rise to any liability of Mentor Graphics whatsoever.

MENTOR GRAPHICS MAKES NO WARRANTY OF ANY KIND WITH REGARD TO THIS MATERIAL INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OR MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

MENTOR GRAPHICS SHALL NOT BE LIABLE FOR ANY INCIDENTAL, INDIRECT, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER (INCLUDING BUT NOT LIMITED TO LOST PROFITS) ARISING OUT OF OR RELATED TO THIS PUBLICATION OR THE INFORMATION CONTAINED IN IT, EVEN IF MENTOR GRAPHICS CORPORATION HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

#### **RESTRICTED RIGHTS LEGEND 03/97**

U.S. Government Restricted Rights. The SOFTWARE and documentation have been developed entirely at private expense and are commercial computer software provided with restricted rights. Use, duplication or disclosure by the U.S. Government or a U.S. Government subcontractor is subject to the restrictions set forth in the license agreement provided with the software pursuant to DFARS 227.7202-3(a) or as set forth in subparagraph (c)(1) and (2) of the Commercial Computer Software - Restricted Rights clause at FAR 52.227-19, as applicable.

Contractor/manufacturer is:

Mentor Graphics Corporation
8005 S.W. Boeckman Road, Wilsonville, Oregon 97070-7777.

This is an unpublished work of Mentor Graphics Corporation.

### **Table of Contents**

About This Training Workbook	ix
Introduction.	ix
Audience	X
Primary Audience	X
Secondary Audience	
Course Timeline	
Course Overview	xii
Prerequisite Knowledge	xiii
Acronyms Used in This Workbook	xiii
Customer Support Information	xiv
Module 1	
Memory BIST Concepts	1-1
Objectives	1-1
Embedded Memories	1-2
Typical Architecture with Embedded Memories	1-4
Types of Memories	1-5
Types of Testing	1-7
Functional Testing	1-8
Direct Access Testing	1-9
Memory BIST Testing	1-10
When Should You Use Memory BIST?	1-11
Advantages of Adding BIST	1-13
Disadvantages of Adding BIST	1-14
Inserting BIST Circuitry	1-16
Memory Testing and Fault Types	1-17
Stuck-at Faults	1-19
Stuck-at Faults	1-20
Transition Faults	1-21
Transition Faults (Continued)	1-22
Coupling Faults	1-23
Neighborhood Pattern Sensitive Faults	1-26
Testing for Cell Array Faults	1-28
Memory BIST Algorithms	1-30

Comparing the Algorithms	1-31
March C+ (March 2)	1-33
Module 2	
Generating a Memory BIST	2.1
Generating a Memory DIST	2-1
Objectives	2-1
Typical Memory BIST Flow	
MBISTArchitect Inputs and Outputs	
Graphical User Interface	
MBISTArchitect GUI Overview	2-7
Role of the Test Bench	2-8
Memory BIST Documentation	2-9
Module 2 Lab Exercises	2-10
Module 2: Lab Exercises	2-11
Getting Started	2-11
Software Versions	2-11
Training Files	2-12
Installing the Training Data Files	2-12
Exercise 1: Creating a Basic Memory BIST Colla	r2-14
Exercise 2: Verifying the BIST Circuitry	
Module 3	
Common BIST Variations	3-1
Objectives	
Configuring Memory BIST Circuitry	
Support for Multi-port Memories	
Generate a Comparator Functional Test	
Inserting BIST for Multiple Memories	
MBISTArchitect Controller Options	
How the BIST Controller Works	
Read/Write Operations on Synchronous Memories.	
Full-Speed Overview	3-14
Full-speed design with pipeline circuitry	
Pipelining Read/Write Operations	3-17

Performing Sequential Memory Tests	3-19
Adding Diagnostics	3-21
Clock Synchronization	
Compressor vs. Comparator	3-25
BIST using a Compressor	3-27
Adding Pipeline Registers	
Specifying Non-controlled Memory Ports	3-32
Specifying Parameters for Memory Clock Signals	
Bypassing Memory in Scan Mode	
Synthesis Driver File	3-38
Design Compiler Clock Constraints	3-40
Mux-Embedded Memory Support	
Module 3 Lab Exercises	
Module 3: Lab Exercises	3-44
Exercise 3: Changing the BIST Algorithm	3-45
Exercise 4: Changing the Data Background	3-49
Exercise 5: Inserting BIST for Multiple Memories	3-51
Exercise 6: Adding BIST with a Compressor	
Exercise 7: Running BIST at Full-Speed	3-61
Extra Credit	3-65
Test Your Knowledge	3-66
Lab Summary	3-66
Exercise 8: Adding BIST for Bidirectional Memories	3-67
Exercise 9: Adding BIST for ROMs	3-68
Module 4	
Memory BIST-In-Place	4-1
Objectives	4-1
Memory BIST-In-Place Flow	4-2
Memory BIST-In-Place Flow Overview	
Creating BIST Structures	
Model Creation	
Memory Model Example	
Creating BIST Structures Invocation	
Basic Command Flow	

Creating BIST Structures Results	4-10
Example of RTL BIST Logic	
Example WGL File	
Core Test Description File (CTDF)	
Connecting BIST Structures	
Connecting BIST Structures Invocation	
Example Command Flow (Setup)	
Example Continued (Setup)	
Example Command Flow (Synthesis)	
Connecting BIST Structures Results	
Connecting BIST Structures Dofile	
Example CTAF File	
Example RTL Phase Decoder	
Integrating BIST Patterns	
Integrating BIST Patterns Invocation	
Integrating BIST Patterns Commands	
Continued Example (Integration)	
Integrating BIST Patterns Dofile	4-30
Integrating BIST Patterns Results	
Verification	
I/O Pads	4-33
Global Signal Connections	4-34
BSDArchitect/ Memory BIST-In-Place Integration	4-35
Module 4: Lab Exercises	4-37
Exercise 10: Setting Up MBISTArchitect Outputs	4-38
Exercise 11: Inserting BIST Controllers using Memory BIST-In-Place	4-42
Exercise 12: Translating BIST Patterns to the SoC Level	4-45
Exercise 13: Full Flow Exercise	4-47
26.11.6	
Module 5	
Memory Modeling for	<b>~</b> 1
MBISTArchitect	5-1
Objectives	5-1
A Memory Model:	
Memory Model Syntax	5-3

Memory Model Editor	5-4
Loading Library Files and Models	5-5
Defining Inputs/Outputs	
The Dont_touch Keyword	5-9
Understanding Clocking Schemes	5-10
Clock Connections	5-12
No Memory Clock	5-14
A Gated Memory Clock	5-15
A Non-Gated Memory Clock	
An Inverted BIST Clock	5-17
Test Clock	5-18
Control Retention Test Delay	5-19
Memory Ports	
Defining Memory Ports	5-21
Port Definition Example 1	5-22
Port Definition Example 2	5-23
Read/Write Cycle Syntax	5-24
The Read Cycle	5-25
The Write Cycle	5-26
Interpreting Data Sheets	5-27
A Synchronous RAM Example	5-28
Interpreting the Read Cycle Timing	5-31
Defining the Read Cycle	5-32
Interpreting the Write Cycle Timing	5-34
Defining the Write Cycle	5-35
Defining Constant Values	5-37
Logical to Physical Mapping	5-39
The Effect of Physical Topology	5-40
Allowing for Physical Topology	5-41
The Checkerboard Algorithm	5-42
Descrambling Functions	5-44
Validating a Memory Model	
User Defined Algorithm	
Troubleshooting a Memory Model	
Troubleshooting Example: March2	5-50

Module 5 Lab Exercises	5-51
Module 5: Lab Exercises	5-52
Exercise 14: Modifying a Template to Match Your Memory S <sub>1</sub> 53	pecifications 5-
Exercise 15: Reviewing a User Defined Algorithm	5-62
Exercise 16: Running a User Defined Algorithm File	5-66

# **About This Training Workbook**

### Introduction

This course is designed to be a one-day, self-paced training class. The student will use this workbook and run exercises to become familiar with memory Built-In-Self-Test (BIST) concepts. The following are the top level course goals:

- The student will understand the Memory BIST design processes
- The student will gain experience with Mentor Graphics MBISTArchitect™ and Memory BIST-In-Place™ tools
- The student will understand how to find information and problem-solve typical design issues

If taken in its entirety, this training course is intended to introduce design engineers to the V8.2002\_1 version of the Mentor Graphics MBISTArchitect and Memory BIST-In-Place tools.

### **Audience**

### **Primary Audience**


The target student profile is the Electronic Design Engineer using synthesis tools to develop synchronous digital designs. It is assumed that students will be using MBISTArchitect, and optionally, Memory BIST-In-Place tools. This type of student will comprise about 80% of the course attendees and will have the following characteristics:

- They have some limited familiarity with DFT terminology and concepts.
- They are interested in learning how to add memory BIST to their designs.
- As they work with these DFT tools, these engineers want to know "what is this tool doing to my design" (or my design flow) and "how do I control what the tool is doing to my design?"
- These engineers want to know how to analyze the tool-generated reports and modify the tool setup constraints to achieve the test goals that may be imposed on them by their organization.
- These engineers want to be well grounded in the basic tool process flow and be able to respond appropriately when the tools report "problems."

### **Secondary Audience**

About 20% of the students will be "test engineers." These engineers are typically members of a manufacturing test group or an internal CAD group that provides support for design engineers. Test engineers are typically well grounded in their understanding of DFT terms and concepts, but may not have had much experience with DFT tools.

# **Course Timeline**

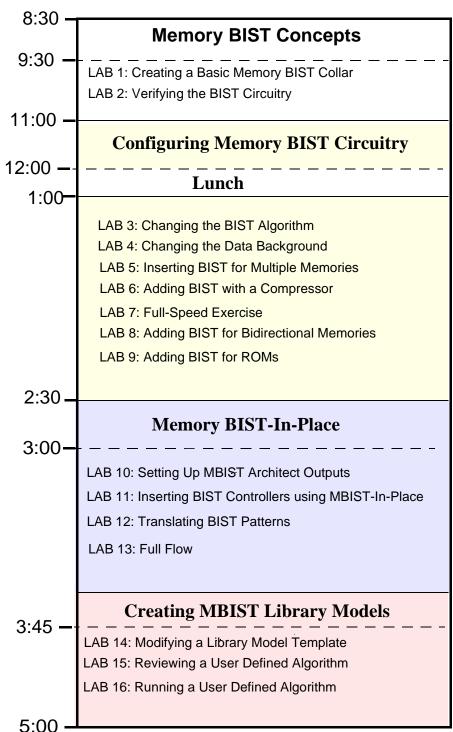

### **Course Overview**

The course is divided into the following five parts:

### **Module 1 Memory BIST Concepts**

The first module introduces various types of memories, memory BIST concepts, memory testing and fault types.

#### **Module 2 Generating a Memory BIST**

This module introduces you to the typical memory BIST flow, inputs and outputs to MBISTArchitect, and the role of the test bench. It also introduces you to the MBISTArchitect graphical user interface (GUI) and user documentation for memory BIST tools. The lab exercises will give you practice generating a BIST collar and verifying the circuit.

#### **Module 3 Common BIST Variations**

This module highlights a variety of options you can use to customize the memory BIST circuitry to your design. The lab exercises cover tasks you may use when adding memory BIST to your design such as inserting BIST for multiple memories or adding BIST when you have a compressor, ROM, or bidirectional memories. A number of lab exercises are included here to give you a variety of choices. Generally, you will not be expected to complete them all.

### **Module 4 Memory BIST-In-Place**

This module gives you a basic understanding of how to create, connect, and integrate BIST structures using the Mentor Graphics Memory BIST-In-Place tool. The lab exercises at the end of this module will give you experience in running through the process flow of Memory BIST-In-Place.

### **Module 5 Memory Modeling for MBISTArchitect**

This module explains how memory devices are modeled inside MBISTArchitect. The lab exercises are designed to give you practice creating a memory model in case your company does not already have the model you are looking for. It also

introduces you to the Mentor Graphics User Defined Algorithm™ function that can be used to generate your own March-type algorithms.

### **Prerequisite Knowledge**

Prerequisite knowledge in DFT fundamentals is required. The purpose of requiring prerequisites is to (1) reduce "learning overload" which can happen early in the course and (2) help the students move quickly toward learning tool concepts and best practices for getting results.

Generic DFT concepts and terminology can be learned from sources outside Mentor Graphics.

# **Acronyms Used in This Workbook**

The following is an alphabetical list of the acronyms used in this workbook:

ASIC - Application Specific Integrated Circuit

ATE - Automatic Test Equipment

ATPG - Automatic Test Pattern Generation

AVI - ASIC Vector Interfaces

BIST - Built-In Self-Test

BSDL - Boundary Scan Design Language

CTAF - Core Test Access File

CTDL - Core Test Description Language

**CUT - Circuit Under Test** 

DFT - Design-for-Test

DRC - Design Rules Checking

**DUT** - Device Under Test

GUI - Graphical User Interface

HDL - Hardware Description Language

JTAG - Joint Test Action Group

LFSR - Linear Feedback Shift Register

LSB - Least Significant Bit

MCM - Multi-Chip Module

MISR - Multiple Input Signature Register

MSB - Most Significant Bit

PRPG - Pseudo-Random Pattern Generator

RTL - Register Transfer Level

SCOAP - Sandia Controllability Observability Analysis Program

SFP - Single Fault Propagation

TAP - Test Access Port

TCK - Test Clock

TDI - Test Data Input

TDO - Test Data Output

TMS - Test Mode Select

TRST - Test Reset

WDB - Waveform Data Base

# **Customer Support Information**

Additional help is available from Mentor Graphics Customer Support using the following phone numbers, email address, and internet site:

**DirectConnect** (M-F: 6am-5:30pm, 1-800-547-4303

PST)

SupportCenter Fax 1-800-684-1795

SupportNet-Email support\_net@mentor.com

SupportNet-Web site http://www.mentor.com/supportnet

Mentor DFT Web site http://www.mentor.com/dft

# Module 1 Memory BIST Concepts

When you complete this module, you should have a basic understanding of memory testing and memory BIST concepts.

### **Objectives**

Upon completion of this module, you will be able to:

- List when and why to use Memory BIST (MBIST)
- List the basic advantages and disadvantages of Memory BIST
- Describe some of the common fault types associated with memory testing
- List the common algorithms used by MBISTArchitect to test memories

### **Embedded Memories**

#### **Embedded Memories**

- Memory Built-In-Self-Test (MBIST) has been used successfully for years to solve the test issues for embedded memories.
- Most of today's designs contain embedded memories—features associated with memories:
  - Memory can consume a large design portion
  - Memories are dense, resulting in high defect rates
  - Embedded memory quality is critical to whole chip quality
  - Memories can have high operating speeds
  - Embedded memories can be difficult to exercise efficiently with functional testing

1-2 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

Most of today's designs contain embedded memories. Here are some common side effects of using embedded memories in chips today:

• Memory can consume a large design portion and result in high defect rates

In many designs today, memories may take up a large portion of the design. See "Typical Architecture with Embedded Memories" on page 1-4 for more information on architecture and test options.

• Embedded memories can be difficult to exercise efficiently with functional or other types of testing.

Large, complex circuits often contain difficult-to-test portions of logic. Even the most testable designs, if large, can require extensive test generation time, tester pattern memory, and tester application times—all of which are expensive, yet necessary, to adequately test devices in a classic test scenario. Memory BIST solves the problems associated with functional

testing, see "Advantages of Adding BIST" on page 1-13 for an overview of memory BIST advantages.

#### • Typical ATE testing may not adequately test memories.


The bullets in these slides describe features of memories. In Lesson 3, we'll talk about how a memory can fail and what kinds of patterns need to be used to test them well.

#### • Memories can have high operating speeds

Memories of all sorts, but especially high speed memories, are susceptible to speed-related defects. To ensure high quality memory tests, you need to test for these sorts of defects by running at-speed memory tests. See the "Full-Speed Overview" on page 3-14 for information on using MBISTArchitect to test memory at full access speed.

# Typical Architecture with Embedded Memories

### **Typical Architecture with Embedded Memories**

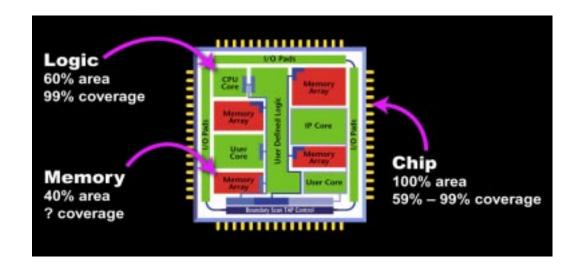

1-3 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

This slide shows a typical architecture of a design with embedded memories. Logic takes up 60% of the silicon while memories consume 40%. In order to ensure high quality, you need to thoroughly test these memories. For example, if your test coverage is 99%, but you don't test your memories the whole chip test coverage is much lower and your finished products will be susceptible to test escapes due to the untested memories.

## **Types of Memories**

#### **Types of Memories**

- General Memory types
  - Different depth and width
  - Synchronous and asynchronous
  - Multi-port
- ♦ SRAM
- DRAM
- EPROM & EEPROM (Flash)
- ♦ ROM

1-4 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

The memories listed in the slide above are common, your memory BIST circuit will be different depending upon the model selected. In general, SRAM and ROMs commonly use memory BIST to solve the test problems.

### • General Memory Types

Memories can have different depths and widths, be synchronous and asynchronous, or be multi-port.

#### SRAM

The most commonly used in our industry is an ASIC type of flow. We do most of our work in this tutorial on variations of an SRAM.

#### DRAM

A DRAM is not as common as an SRAM, a special process is sometimes required to accommodate DRAMs.

#### EPROM and EEPROM

#### (Flash)

EPROM and EEPROM are also known as "Flash" memory. Flash is fairly common but is usually not fully functionally tested because of the extremely long access times. Specialized memory BIST could be generated but is not commonly done.

#### • ROM

ROM memories are very common and generally use a slightly different implementation for memory BIST. We'll talk about BIST architectures in Lesson 3.

# **Types of Testing**

### **Types of Testing**

- ♦ Functional testing
- Direct access testing
- Memory BIST

1-5 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

There are several common testing techniques used to test memories.

## **Functional Testing**

#### **Functional Testing**

- Pattern generation can be very difficult
- Verification can be time consuming
- Determining quality is difficult and time consuming
- Reduces amount of external test data to store
- No functional impacts

1-6 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

Large, complex circuits often contain difficult-to-test portions of logic. Large designs require extensive test generation time, tester pattern memory, and tester application times—all of which are expensive, yet necessary, to adequately test devices in a classic test scenario.

Previously, ATPG functional testing was the only way to test embedded memories. Because memory faults differ from random logic faults and memories reside within larger designs, ATPG does not provide an adequate memory testing solution. Functional testing is inadequate because pattern generation is difficult, verification is time-consuming and it is difficult to determine quality.

## **Direct Access Testing**

#### **Direct Access Testing**

- Must Mux inputs and outputs to chip pins
- Pattern generation may be difficult (pattern conversion is easy)
- Extensive ATE memory required or memory test hardware
- Routing and timing issues can arise

1-7 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

Another method of testing memories is direct access testing. This method is usually feasible only if you only have one or two memories and can be accessed off of a bus that is already routed at the top level of the chip. Direct access testing may require special hardware or ATE memory testing equipment. It also requires mux input and output access directly to pins. In addition, pattern generation and verification is still a problem with this method of testing.

# **Memory BIST Testing**

#### **Memory BIST Testing**

- Simplifies pattern generation
- High quality guaranteed by algorithmic patterns
- Minimal impact to timing and area

1-8 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

Memory BIST testing addresses memory testing problems. Memory BIST adds a layer of test circuitry around the memory. This circuitry becomes the interface between the high-level system and the memory. This interface minimizes the controllability and observability challenges of testing embedded memories. And the built-in, finite-state machine that provides the test stimulus for the memory greatly reduces the need for an external test set for memory testing.

BIST provides a memory test solution without sacrificing test quality. In many cases, BIST structures can eliminate or minimize the need for external test pattern generation (and thus, tester pattern memory) and tester application time. In addition, a designer can exercise BIST circuitry within a design, running tests at speed due to the proximity of the BIST circuitry to the memory under test. A designer can also run a memory BIST process from within higher levels of the design. See "Advantages of Adding BIST" on page 1-13 for more detailed information on the advantages of using memory BIST.

# When Should You Use Memory BIST?

#### When Should You Use Memory BIST?

- User should use Memory BIST:
  - On medium to large embedded memories
  - On memories that are contained within Intellectual Property (IP) that will be reused
  - On memories that should be tested at speed
  - On devices with multiple embedded memories
  - On devices that are time-to-market critical
  - On devices that run on ATEs with limited capability
  - On SOCs where testing and verification will be difficult

1-9 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

#### You should use Memory BIST (MBIST):

#### Medium to Large embedded memories

You should definitely use memory BIST testing on medium-to-large memories. Very small memories must be considered on a case by case basis. On very small arrays, the controller may be larger than the array. Small memories can also be added to an existing MBIST controller so very minimal impact is observed. Alternative solutions such as MacroTest might be a better solution.

# • Memories which are contained within Intellectual Property (IP) that will be reused

MBIST is a very important part of the reusability and portability of IP. Once the test circuitry is built in, it can be reused and rerun wherever the IP is placed, with no additional work. You only need to ensure that the memory BIST operation on the IP is properly controlled at the chip-level.

#### Memories that should be tested at speed

Ideally, you should test memories at the same rate or a rate greater than they will be used in the application. Additional types of memory faults will be found if the memory is exercised at full speed. MBISTArchitect has a full speed option that lets you test the memories at full speed, see the "Full-Speed Overview" on page 3-14 for more information.

#### • On devices with multiple embedded memories

Memory BIST controllers can be shared across multiple arrays of different sizes with little incremental area increases. This is practical when the arrays are in relatively close proximity to each other. If arrays are far apart in the chip layout, care must be taken not to have excessive routing overhead.

#### • On devices that are time-to-market critical

Pattern generation and conversion is significantly easier with the use of memory BIST. Verification of the manufacturing patterns is streamlined by the use of an automated tool.

#### On devices that run on ATEs with limited capability

BIST can reduce the memory, timing, and control signals an ATE would need to test a memory. This may allow the device to be tested on a simpler and cheaper tester.

#### On SOCs where testing and verification will be difficult

Verification and test generation are the two largest challenges of SOCs. Therefore, Memory BIST improves time-to-market and first pass silicon success.

### **Advantages of Adding BIST**

#### **Advantages of Adding BIST**

- Enables Intellectual Property (IP) reuse
- Reduces the routing of signals needed at the chip level
- Reduces test application time and simplifies pattern generation
- Reduces amount of test data to store
- Facilitates hierarchical test capabilities -- lets you easily test at model, block, design, and system levels
- Merges test and design, reducing development time
- ♦ BIST controller can be shared across memories

1-10 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

Self-testing provides a number of benefits. First, placing the test circuitry on the chip itself reduces external tester time and expense. Second, it minimizes the difficulty of testing embedded circuitry by providing system-level control signals that run and report status of the test operation. Third, because the circuitry itself generates test stimulus, this eliminates or reduces expensive test pattern generation time. Likewise, it eliminates or reduces the amount of required external test data storage.

Additionally, designs with BIST facilitate hierarchical test capabilities. Hierarchical BIST lends itself to test at the model, block, design, and system levels. For example, a memory BIST controller embedded in an IC can be used to test off-the-shelf memories that are external to the chip.

BIST blends both the design and test disciplines. Merging test into the design process far earlier in the flow reduces the product development cycle.

## **Disadvantages of Adding BIST**

#### **Disadvantages of Adding BIST**

- Small area increase
- Adds Mux delay to memory data path
- Not as flexible as direct access testing
- ♦ Small routing and timing impact

1-11 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

#### Disadvantages of adding BIST include:

#### • Small area increase

The area increase caused by adding BIST is small and depends on what features you select for your BIST controller and the word and address size of the array. Typically, a controller can range from 400 gates for a simple implementation, to 1500 gates for an implementation that uses many options and several algorithms.

### • Adds Mux delay to memory data path

This multiplexor delay depends on the technology you are using. Typically, this is in the range of 200ps. This may be a problem if your designer doesn't have that much margin built into his or her design.

### Not as flexible as direct access testing

There are many types of tests and algorithms to use for memory BIST.


However, these tests are being "hard-wired" into the controller. After they are designed in, they cannot be changed. If you have direct access, you can change your test pattern supplied by the tester and rerun. It is also possible to design a re-configurable controller but this takes additional work and overhead.

#### • Small routing and timing impact

This is usually the reason most designers or managers initially might question the use of memory BIST. However, the routing and timing changes required by MBIST are almost always so small they are insignificant. With 5 or 6 layer metal processes and mux delays of 100 to 200ps, you can probably justify the use of memory BIST.

# **Inserting BIST Circuitry**

#### **Inserting BIST Circuitry**

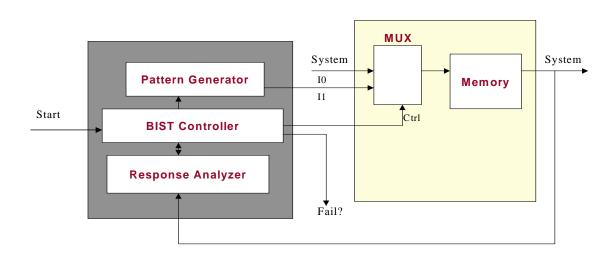

1-12 • MBISTArchitect: MBIST Concepts


Copyright © 2002 Mentor Graphics Corporation

A built-in self-test (BIST) solution can alleviate many of these classic problems by embedding the pattern generator within the silicon. This approach can be automated using MBISTArchitect, which creates the RTL description in either Verilog or VHDL, that tests the memory without external stimulus or access.

# **Memory Testing and Fault Types**

#### **Memory Testing and Fault Types**

- Faults can be found in:
  - Address decoder logic
  - Read/write control logic
  - Memory cell array

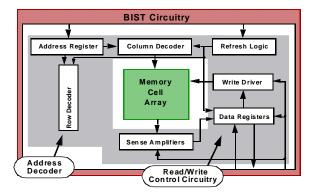

1-13 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

# **Memory Testing and Fault Types**

#### **Memory Testing and Fault Types (Continued)**

- Faults include:
  - stuck-at
  - transition
  - coupling
  - neighborhood pattern sensitive

1-15 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation


Memories fail in a number of different ways. The three main parts—address decoder logic, memory cell array, and read/write logic—can each have flaws that cause the device to fail. Memory testing, while similar to random logic testing, focuses on testing for these memory-specific failures.

The basic types of memory faults include stuck-at, transition, coupling, and neighborhood pattern sensitive. The next several slides discuss each of these fault types in more detail.

### **Stuck-at Faults**

#### **Stuck-at Faults**

- ♦ Applies to Control signals and memory cells
  - Behavior: Value stuck at either 0 or 1 indefinitely (signal/cells acts as though tied to power or ground)

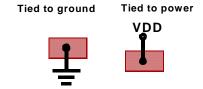


1-16 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

### **Stuck-at Faults**

#### **Stuck-at Faults (Continued)**

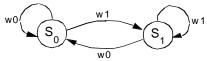

Good Cell State Diagram



1-17 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

A memory fails if one of its control signals or memory cells remains stuck at a particular value. Stuck-at faults model this behavior, where a signal or cell appears to be indefinitely tied to power (stuck-at-1) or ground (stuck-at-0).

### **Transition Faults**

#### **Transition Faults**

- ♦ Applies to: Signal or cell
- Behavior: Signal or cell cannot transition from 0 to 1 or 1 to 0




1-18 • MBISTArchitect: MBIST Concepts


Copyright © 2002 Mentor Graphics Corporation

# **Transition Faults (Continued)**

#### **Transition Faults (Continued)**

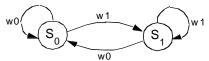

**Good Cell State Diagram** 

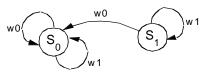

Cell with 0->1 (up) Transition Fault

1-19 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

A memory fails if one of its control signals or memory cells cannot make the transition from either 0 to 1 or 1 to 0. The inability to change from 0 to 1 is called an up transition fault. The inability to change from a 1 to a 0 is called a down transition fault.


As the example shows, a cell may behave normally when a test writes and then reads a 1 value. And it may even transition properly from 1 to 0. However, when undergoing a 0->1 transition, the cell could remain at the 0 state—exhibiting stuck-at-0 behavior from this point on. However, a stuck-at-0 test might not detect this fault if the cell was at the 1 state originally.

Thus, to ensure the cell can transition normally, a test must write a 1, write a 0, and then read the cell contents, as well as write a 0, write a 1, and then read the cell contents.

# **Coupling Faults**

#### **Coupling Faults**

- Applies to: Memory cells
- Behavior: A write operation changing one cell's value influences another cell's value.
  - Several types:
    - Inversion (CFin) Transition in one cell causes inversion of another cell's value

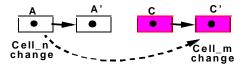


1-20 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

# **Coupling Faults (Continued)**

#### **Coupling Faults (Continued)**

 Idempotent (CFid) - Transition in one cell forces a particular value on another cell

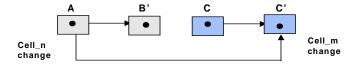

- ♦ Bridging (BF) Short, or bridge between two cells
- State (SCF) A certain state on one cell forces a value onto another cell

1-21 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

Memories fail when memory cells do not attain the proper state. This can happen in a number of different ways. In one case, a write operation in one cell can influence the value in another cell. Coupling faults model this behavior.

Coupling faults fall into several categories: inversion, idempotent, bridging, and state.

Inversion coupling faults, commonly referred to as CFins, occur when one cell's transition causes inversion of another cell's value. For example, a 0->1 transition in cell i causes the value in cell j to go from 0 to 1.

Idempotent coupling faults, commonly referred to as CFids, occur when one cell's transition forces a particular value onto another cell. For example, a 0->1 transition in cell i causes the value of cell j to be 0.

Bridge coupling faults, abbreviated as BFs, occur when a short, or bridge, exists between two or more cells or signals. Instead of transition operation, a logic value

#### **Memory BIST Concepts**


triggers the faulty behavior. Bridging faults fall into either the AND bridging fault (ABF) or OR bridging fault (OBF) subcategories. ABFs exhibit AND gate behavior: that is, the bridge has a 1 value only when all the connected cells or signals have a 1 value. OBFs exhibit OR gate behavior: that is, the bridge has a 1 value when any of the connected cells or signals have a 1 value.

State coupling faults, abbreviated as SCFs, occur when a certain state in one cell causes another specific state in another cell. For example, a 0 value in cell i causes a 1 value in cell j.

# **Neighborhood Pattern Sensitive Faults**

#### **Neighborhood Pattern Sensitive Faults**

- ◆ Applies to: Memory cells
- Behavior: A set of values or a transition of values in multiple cells influences the value of another cell.

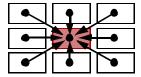

1-22 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

### **Neighborhood Pattern Sensitive Faults**

#### **Neighborhood Pattern Sensitive Faults (Continued)**

- Three types:
  - Active During a certain pattern in neighboring cells, one cell change causes another cell to change value.
  - Passive Certain pattern in neighboring cells causes a cell to remain fixed (appear stuck-at).
  - Static Certain pattern in neighboring cells forces a cell to a certain state.

1-23 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

Another way in which memory cells can fail involves a write operation on a group of surrounding cells affecting the values of one or more neighboring cells. Neighborhood pattern sensitive faults model this behavior. Neighborhood pattern sensitive faults break down into three categories: active, passive, and static.

An active fault occurs when, given a certain pattern of neighboring cells, one cell value change causes another cell value to change. A passive fault occurs when a certain pattern of neighboring cells cause one cell value to remain fixed.

A static fault occurs when a certain pattern of neighboring cells forces another cell to a certain state.

Because of the complexity and vast number of ways in which these faults can occur, testing for neighborhood pattern sensitive faults remains a very difficult task.

### **Testing for Cell Array Faults**

#### **Testing for Cell Array Faults**

- Stuck-at faults:
  - Require writing 0's in all cells, reading all cells, writing 1's in all cells, and reading again.
- Transition faults:
  - Require writing (1->0) and immediately reading 0's at each address, and repeating the process for writing (0->1) and reading 1's.
- Coupling faults:
  - Require scanning (writing/reading) all memory cells in ascending order followed by scanning all memory cells in descending order.
- Neighborhood pattern sensitive faults:
  - Difficult to detect and require different procedures for different types of these faults.

1-24 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

To detect stuck-at faults, you must place the value opposite the stuck-at fault at the fault location. To detect all stuck-at-1 faults, you must place 0s at all fault locations. To detect all stuck-at-0 faults, you must place 1s at all fault locations.

In order to detect all transition faults in the memory array, a test must transition each cell from 0->1 and then immediately read it. The test must then repeat this process for the 1->0 transition.

Coupling faults involve cells affecting adjacent cells. Thus, to sensitize and detect coupling faults, you must perform a write operation on one cell (j) and later read cell (i). The write/read operation performed in ascending order assumes coupling of a memory cell to any number of cells with lower addresses. Likewise, the write/read operation performed in descending order assumes coupling of a memory cell to any of the cells with higher addresses.

Neighborhood pattern sensitive faults are complex and require a variety of different methods for detection. While currently available, test algorithms for

#### **Memory BIST Concepts**

neighborhood pattern sensitive fault detection require much area overhead and produce very long test sets. Some test algorithms, in conjunction with manual circuit manipulation, can produce test sets for this fault type. However, currently no commercially-available tool alone does an adequate testing job for this memory fault type.

# **Memory BIST Algorithms**

#### **Memory BIST Algorithms**

- Numerous memory BIST algorithms exist
  - The more popular memory BIST algorithms include:
    - March A and March B
    - March C, March C-, March C+, March3, and Column March
    - Unique Address
    - Checkerboard
    - ROM Tests
    - Port Interactive Test
    - User Defined Algorithm™

1-25 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

The test industry has generated many different algorithms for memory testing. The following list gives a brief description of some of the more popular ones:

#### March A and March B

The March A and March B algorithms cover some linked faults, such as idempotent linked faults, transition faults linked with idempotent coupling faults, and inverting faults coupled with idempotent coupling faults.

March C+ (March2) Default Algorithm)
 The next few slides discuss the March C+ default algorithm.

#### Other Algorithms

Other common algorithms include: March C, March C-, March3, Column March, Unique Address, Checkerboard, ROM Test, the Port Interaction Test, and the User Defined Algorithm. For more detailed information on these algorithms, see Chapter 3 in the *Built-In Self-Test Process Guide*.

# **Comparing the Algorithms**

#### Comparing the Algorithms

#### Testing at 10Mhz

\*not supported in MBISTArchitect

Algorithm	Fault Coverage	Test Time on 1M RAM
March C-	Detects address, stuck-at, transition, coupling, and unlinked coupling	1.0 seconds
March C+ (default)	Detects all March C- faults and some dynamic faults such as address decoder delay faults	1.3 seconds
MATS*	Detects address and stuck-at faults	0.42 seconds
Unique Address	Detects stuck-at and address faults	0.50 seconds
Checkerboard	Locates stuck-at and memory leakage (refresh) faults	0.52 seconds
Walking 0/1*	Locates stuck-at, address, transition, and coupling faults	2.5 days
GALPAT*	Locates address, stuck-at, transition, coupling, and write recovery faults	5.1 days

1-26 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

This slide provides a comparison of several algorithms that ran on a 1 Megabit RAM. Notice that some of the algorithms required a large amount of time for test completion. This is due to the nature of the algorithm—the number of operations (complexity) required for testing.

For example, the March C- algorithm has a complexity of 10n, where n is the number of locations in the memory. That is, if you count the number of operations (see the slide depicting the algorithm operations for March C-), you can see that it requires 10 operations at each location to complete its test. In this comparison, the March C- algorithm took 1.0 seconds to complete testing of a 1 M RAM.

While more robust in its fault detection, the GALPAT algorithm, on the other hand, has an order  $n^2$ complexity. A walking target cell and revisiting of this target cell after each read greatly increases this algorithm's complexity. This results in the following equation that describes the complexity of the GALPAT algorithm:  $2(2^N + 2n^2)$ , where N is the number of address lines and n is the number of cells in the memory. Because of its complexity, in this comparison, the GALPAT

algorithm would take 5.1 days to complete testing of a 1 M RAM. The MATS algorithm is a modification of the Algorithm Test Sequence (ATS). MATS provides the shortest march test for unlinked stuck-at faults, it detected address and stuck-at faults in .42 seconds.

#### **Evaluating the Tradeoffs**


Selecting one or more algorithms for your BIST design depends on the type of memory you are testing, your test goals, your overall test strategy, and the advice you may receive from in-house memory-test experts or ASIC vendors.

As you can see, as the size of the target memory grows, the complexity of the algorithm plays a very big role in the required test execution time. So, you need to consider the trade-off between robust fault coverage and test execution time when determining which algorithms to use.

# March C+ (March 2)

#### March C+ (March 2)

- Default Algorithm for MBISTArchitect
- Adds extra read to each stage of march
- Extra read operation immediately after write operation lets you test at-speed
- Algorithm comprised of 14 operations (14n):

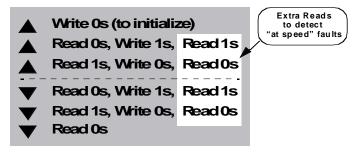

1-27 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

# March C+ (March 2)

#### March C+ (March 2) Continued

- Detects the same faults as March C, PLUS some stuck-open faults, and some timing faults if you test at-speed (due to the read immediately after the write)
- **♦ MBISTArchitect refers to March C+ as "March 2"**

1-28 • MBISTArchitect: MBIST Concepts

Copyright © 2002 Mentor Graphics Corporation

MBISTArchitect uses this algorithm by default if you don't specify an algorithm and refers to this algorithm as "March 2".

The March C+ algorithm modifies the original March C algorithm by adding an extra read operation after each stage of the march plus another at the end of the final stage. While increasing the algorithm from 10n (of March C-) to 14n, these extra reads allows additional fault detection, most notably stuck-open faults for all types of RAM.

# Module 2 Generating a Memory BIST


When you complete this module, you should have a basic understanding of memory testing inputs and outputs, how to launch MBISTArchitect, and how to access documentation for MBISTArchitect. The accompanying lab exercises give you hands-on experience generating and verifying a BIST collar for a simple memory device.

# **Objectives**

Upon completion of this module, you will be able to:

- Describe what a typical Memory BIST flow might look like
- List inputs and outputs to MBISTArchitect
- Show how to start MBISTArchitect in GUI mode
- Describe how to locate and use the documentation resources available through Mentor Graphics for MBISTArchitect

### **Typical Memory BIST Flow**

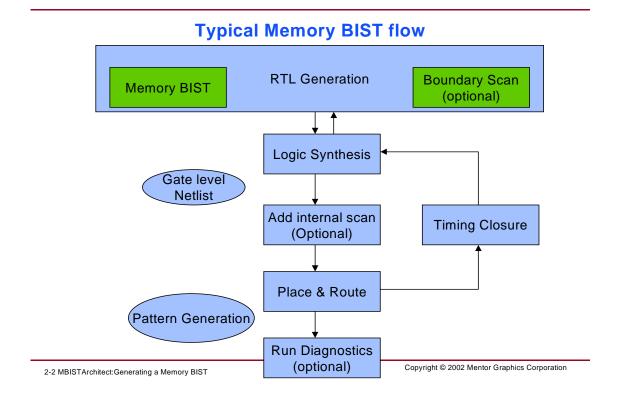

Here a typical Memory BIST flow. It contains all the basic steps that are used in an ASIC type flow.

#### • Step 1 – Generate RTL or VHDL type code

Memory BIST RTL code is inserted at this stage. It can be generated by hand. But why would you generate the code manually when you can use tools like MBISTArchitect to generate it for you? You can also add a boundary scan (IEEE 1149.1), sometimes called JTAG, at this time. Boundary scan is a very common method to control test modes such as memory BIST and scan testing. We will talk about this more in Lesson 5.

#### • Step 2 – Logic Synthesis

Tools like Synopsys' Design Compiler, Cadence' Ambit, or Mentor Graphics' Leonardo can handle this step, which turns RTL into a technology specific gate level netlist.

#### • Step 3 – Adding Internal Scan

Memory BIST is not dependent on having a scan design. You can have memory BIST in a scan design or in a non-scan design. In Lesson 5, we will talk further on how to interface scan and memory BIST.

#### • Step 4 – Place and Route

Many tools can be used to generate a physical layout database. This generates a GDSII database that is needed to continue the physical flow.

#### • Step 5 – Timing Closure

Static and Dynamic timing analysis tools can be used to verify timing. An SDF file can be generated and used in a Verilog-based simulation to check for additional timing issues.

#### • Step 6 – Pattern Generation


Patterns can be generated at any time but should be verified with backannotated timing information. Memory BIST patterns can be generated using the testbench generated during the RTL generation.

#### • Step 7 – Diagnostics and Debug

Diagnostics and debug might be required if a part fails on the ATE tester. Memory BIST generated with debugging options included can make this stage possible. We'll also talk about this in Lesson 3.

## **MBISTArchitect Inputs and Outputs**

#### **MBISTArchitect Inputs and Outputs**

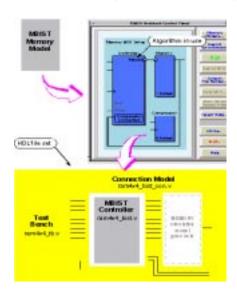

2-3 MBISTArchitect:Generating a Memory BIST

Copyright © 2002 Mentor Graphics Corporation

The only input to MBISTArchitect is one or more "abstract" memory models. These memory models reside in ASCII text files. The model describes the signals on the memory ports and the read/write protocol. These models only serve as a core around which MBISTArchitect builds an RTL BIST collar. The memory model itself does not become part of the final design output.

The MBISTArchitect Control Panel gives you a graphic means to setup and generate the memory BIST circuitry. As shown in the slide, the output is a set of three HDL files:

- 1. A memory BIST Controller (**ram4x4\_bist.v**). This file includes the finite state machine, the pattern generator, the comparator and memory blocks.
- 2. A Connection Model (**ram4x4\_bist\_con.v**). This is basically a set of ports and wires. It provides a means for connecting the memory BIST Controller to the memory simulation model and serves as the main interface to your design.


3. Test Bench (**ram4x4\_tb.v**) You can use this test bench to verify the proper working of the memory BIST generated circuit before you include the circuit in your design.

You or your ASIC vendor must supply the memory simulation model. In this case, assume that your simulation model file is named **ram4x4.v.** 

### **Graphical User Interface**

#### **Graphical User Interface**

- All DFT tools use a similar Graphical User Interface (GUI)
- When you invoke a tool, it opens:
  - The Command line window
  - The Control Panel windows

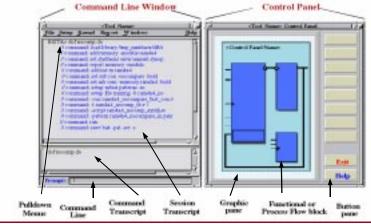

2-4 MBISTArchitect:Generating a Memory BIST


Copyright © 2002 Mentor Graphics Corporation

DFT products use two similar graphical user interfaces (GUI): one for BIST products and one for ATPG products. The BIST graphical user interface supports MBISTArchitect, LBISTArchitect, BIST Controller Synthesis, BIST-In-Place, and BSDArchitect.

The slide shows a representation of the GUI elements that are common to both user interfaces. Notice that the graphical user interfaces consist of two windows: the Command Line window and the Control Panel window.

### **MBISTArchitect GUI Overview**

#### **MBISTArchitect GUI Overview**

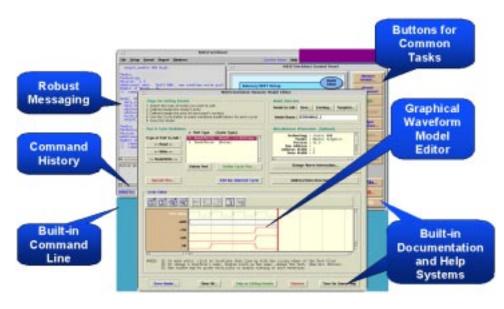

2-5 MBISTArchitect:Generating a Memory BIST

Copyright © 2002 Mentor Graphics Corporation

#### The MBISTArchitect GUI provides the following:

- Buttons used for common tasks such as loading memory models, setting the report environment, and obtaining help.
- Command history, command messaging and a command line for entering commands manually.
- A graphical wave form model editor.


To launch MBISTArchitect in the GUI mode, type:

#### shell > mbistarchitect

You will be using the tool in the GUI mode in the first exercise.

### Role of the Test Bench

#### Role of the Test Bench

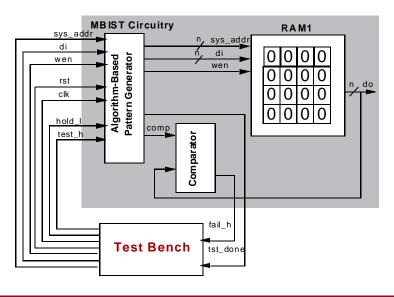

2-6 MBISTArchitect:Generating a Memory BIST

Copyright © 2002 Mentor Graphics Corporation

The testbench instantiates and provides stimulus to the connected memory BIST model. A high value on the tst\_done signal indicates the BIST test has successfully completed. The fail\_h signal value goes high the first time the BIST controller encounters a miscompare.

### **Memory BIST Documentation**

#### **Memory BIST Documentation**

- You can obtain online help and view Memory BIST documentation using a PDF viewer
- Refer to these guides:
  - MBISTArchitect Reference Manual
  - Built-In-Self-Test Process Guide

2-7 MBISTArchitect:Generating a Memory BIST

Copyright © 2002 Mentor Graphics Corporation

Use the following documentation for information on BIST concepts and how to use the MBISTArchitect and Memory BIST-In-Place tools:

- MBISTArchitect Reference Manual—This guide provides reference information for the Mentor Graphics' MBISTArchitect and Memory BIST-In-Place tools. Information contained in this manual includes tool capabilities, a reference for all tool commands, modeling information, and sample tool outputs.
- Built-In-Self-Test Process Guide—This guide contains process-oriented information on MBISTArchitect and Memory BIST-In-Place, as well as other Mentor Graphics Design-for-Test (DFT) tools. Use this manual to become familiar with Memory BIST concepts and tool functionality.

Click the **Help** and **Turn on Query Help** buttons to obtain online information and links to this documentation. You will need a PDF viewer to view documentation.

### **Module 2 Lab Exercises**

- Setting Up the Training Data
- Creating a Basic Memory BIST Collar (20 minutes)
- Verifying the BIST Circuitry (20 minutes)

Generating a Memory Bit

### **Module 2: Lab Exercises**

In this lab, you will use the MBISTArchitect tool to create a memory BIST collar and verify the BIST circuitry. The goal of each exercise is as follows:

Exercise 1: Creating a Basic Memory BIST Collar—You will create a basic BIST collar for a simple 4x4 RAM model, then save the BIST circuit as a Verilog file set.

Exercise 2: Verifying the BIST Circuitry—You will use ModelSim to verify the memory BIST circuit using an MBISTArchitect-generated test bench.



These exercises should take approximately 40 minutes.

### **Getting Started**

This section lists the software versions and versions of the training data you will need. It also provides instructions on how to install the training data so that you can run the labs.

#### **Software Versions**

This version of the training data and materials (V8.2002\_1) should be used with the V8.2002\_1 release of all BIST products to ensure that the lab exercises run successfully:

MBISTArchitect v8.2002\_1 Memory BIST-In-Place v8.2002\_1

Acrobat Reader v4.0 (install from MGC CD)

ModelSim EE/Plus 5.5f or newer, including both VHDL

and Verilog libraries

### **Training Files**

Training files have been provided for this course. Use the files in this directory to access the training data:

• *mbist896nwp*—This is the data you need to use to run the exercises.

### **Installing the Training Data Files**

The data for the lab exercises consists of circuit(s), library parts, and userware (called dofiles). Because you will modify some of the data during the lab exercises, you need to have your own local copy. Use the following procedure to make a local copy of the lab exercise data:

- 1. Make sure that your \$MCG\_HOME shell variable is set to a MGC\_HOME tree that contains the 8.2002\_1 version of the MBISTArchitect and Memory BIST-In-Place software.
- 2. The design data for the lab exercises is named *mbist896nwp*. It is located in the directory named:

```
$MGC_HOME/shared/training/mbist896nwp
```

Before you can perform the lab exercises, this training data directory must be installed in your Mentor Graphics tree. To check whether the training data is installed, list the contents of the \$MGC\_HOME/shared/training directory by issuing the following operating system command:

```
/bin/ls $MGC_HOME/shared/training
```

If *mbist896nwp* does not appear in the displayed list, then either you or your system administrator must install the training package.

3. Before attempting to copy the training directory, ensure you have at least 20 MB of disk space. The uncompressed tar file is approximately 10 MB and the design data is about 10 MB.

4. Copy the training package data from the MGC\_Home tree to the training directory on your workstation. Specify the pathname where you want your local copy. The pathname that you specify in this step is referred to as *your\_path*.

```
Copy from: $MGC_HOME/shared/training/mbist896nwp
Copy to: your_path/training/mbistnwp
```

- 5. Include \$MGC\_HOME/bin in your \$PATH variable.
- 6. Ensure that acroread (Acrobat Reader) is also included in your \$PATH variable.
- 7. Define an environment variable named *MBISTNWP* that points to the full pathname where you copied *mbistnwp*. For example, in a C shell enter:
  - \$ setenv MBISTNWP <dir\_path>/mbistnwp
- 8. Each lab directory, such as *lab1* or *lab2*, contains a *results* subdirectory. You may need to change the permissions of these directories to allow write access.

### **Exercise 1: Creating a Basic Memory BIST Collar**

This exercise should take approximately 20 minutes to complete.

1. Change to the following working directory:

```
shell> cd $MBISTNWP/mbist1/ram4x4/design
```

2. List the design files you will be using in this exercise.

```
shell> ls -l ram*
```

The *ram4x4.atpg* file is a library file contains a single 4x4 RAM model. The *ram4x4.v* file is the corresponding Verilog simulation model.

3. Change to the *ram4x4/results* directory.

```
shell> cd ../results
```

You will work and save your results in this directory.

4. Invoke MBISTArchitect.

```
shell> mbistarchitect
```

This step invokes the MBISTArchitect graphical user interface (GUI). You will be using various aspects of the GUI to create your memory BIST model.

5. Click on the **Memory** block in the Control Panel graphic pane.

This starts the process to load the ram4x4 model.

- a. Click on the **Browse** button, then navigate to the *\$MBISTNWP/mbist1/ram4x4/design* directory.
- b. Double click on the *ram4x4.atpg* file, then click **Load**.

The ram4x4 now appears in the Available Models list.

c. Select the ram4x4 model, then click Add.

This adds the model to the memory models for BIST insertion.

- d. Click OK.
- 6. From the command line, report on the models in the library.

#### MBISTA> report library models

The tool should respond:

```
// Error: Command 'report library models' is unknown
```

This is not the proper command name.

7. Use the help command to display the available application commands.

MBISTA> help

The tool displays a list of commands similar to those shown on the next page.

ADD VErilog Include ADD VHdl Library ADD VHdl Use ALIas DELete Algorithms DELete DAta Backgrounds DELete DIagnostic Monitor DELete MBist Algorithms DELete MEmory Models DELete VErilog Include DELete VHdl Library DELete VHdl Use DOFile EXIt HELp HIStory LOAd ALgorithms LOAd LIbrary REPort Algorithm Steps REPort ALgorithms REPort BIst REPort DAta Backgrounds REPort DIagnostic Monitor REPort Environment REPort MBist Algorithms REPort MEmory Models REPort VErilog Include REPort VErsion Data REPort VHdl Library REPort VHdl Use RESet STate RUN SAVe BIst SAVe HIstory SET BIstinplace SET COmmand Editing SET COmparator Test SET COntroller Debug SET COntroller Hold SET DOfile Abort SET FIle Compression SET GZip Options SET MEssage Handling SET SCan Logic SET SYnthesis Environment SET VHdl Configurations SETup CLock Period SETup COmparator Failflag SETup COntroller Clock SETup COntroller Naming SETup COntroller Pipeline SETup COntroller Reset SETup DIagnostic Clock SETup File Naming SETup MBist COMpressor SETup MBist Algorithms SETup MBist Patterns SETup MEmory Access SETup MEmory Clock SETup MEmory Test SETup MUx Location SETup OBservation Scheme SETup REtention Cycles SYStem

The command you want to use is REPort MEmory Models.

1. Get the command usage for Report Memory Models.

#### MBISTA> help report memory models

```
The tool should display the following usage:
```

Usage: REPort MEmory Models [-Library | -Model <model\_name>]

You want to see the models in the library, so use the -Library switch.

2. Report on the library models.

```
MBISTA> report memory models -library
```

Or, if you want to use minimal typing:

```
MBISTA> rep me m -I
```

The tool displays information on the single model, ram4x4, as follows:

```
Available Memory Models:

Name Vendor Technology

ram4x4 sample sample1
```

This is the memory model around which you want to generate BIST circuitry.

3. From the command line interface, report more information on the current memory model by issuing the following command:

```
MBISTA> report memory models -model ram4x4
```

The tool should display the following:

```
Model ram4x4
  data_out DO3, DO2, DO1, DO0;
  data_in DI3, DI2, DI1, DI0;
  address A1, A0;
  write_enable WEN low;

Vendor: sample
Technology: sample1
Version: 1.0
Additional info: 4x4 RAM, ports = 1rw
Number of Words: 4
```

This RAM has one read/write port and contains four words. It has four data input bits, two address bits, and four data output bits.

#### 4. Click Run.

Default BIST circuitry is added to this model.

#### 5. Click **Report BIST**

The tool should display the following information:

#### Generated BIST structures:

Name	Type
ram4x4_bist	Memory Bist

MBISTArchitect generates *ram4x4\_bist*, which is the memory BIST controller for the *ram4x4* model.

#### 6. Click Save BIST...

Verify that the *ram4x4\_bist.v* model will be saved to the *\$MBISTNWP/mbist2/ram4x4/results* directory, then click **OK**. The tool responds by telling you the models it is saving, as such:

```
Saving MBIST Data:
Saved ram4x4_bist.v
Saved ram4x4_bist_con.v
Saved ram4x4_tb.v
```

#### 7. Click View Saved Design Files

This action brings up the File Viewer window which allows you to view the contents of each of the output files. MBISTArchitect generated the following three Verilog files for the ram4x4 model:

• ram4x4\_bist.v - an HDL model that contains the ram4x4 BIST controller.

Examine the top-level signals coming out of and going into the BIST controller. Scroll down through the file and notice that the default BIST circuitry includes a comparator.

• ram4x4\_bist\_con.v - this HDL model simply instantiates both ram4x4\_bist and ram4x4 and connects them up by default. The ports of this model represent the external interface of the memory BIST collar.

Examine the top-level signals coming out of this connection model. Notice that the system signals (**sys\_**) replace the previous memory input ports and the memory signals (**Con-Test**) are newly created wires that connect the controller to the memory inputs. Notice also that the memory data outputs have a "**\_O**" extension.

There are also three new BIST inputs; **clk** and **rst\_l** drive the new BIST state machine. **test\_h** is a level-sensitive signal that tells the BIST controller to run the test.

**tst\_done** tells your design that the test is finished and has run successfully;

**fail\_h** tells your design that the memory test has failed.

• ram4x4\_tb.v - the testbench for the ram4x4\_bist\_con.v model.

Examine the top-level signals coming out of this model. Examine the testing that the testbench performs on the *ram4x4\_bist\_con.v* model.

8. Exit the tool.

MBISTA> exit

### **Exercise 2: Verifying the BIST Circuitry**

This exercise should take approximately 20 minutes to complete.

In this exercise, you will use the MBISTArchitect-generated testbench to verify the memory BIST circuitry that you created in the last exercise.

- 1. Ensure that you are still working in the \$MBISTNWP/mbist1/ram4x4/results directory.
- 2. Set up a work directory.

```
shell> $MGC_HOME/bin/vlib work
```

3. Compile the memory simulation model, all BIST models, and the testbench.

```
shell> $MGC_HOME/bin/vlog ../design/ram4x4.v \
    ram4x4_bist.v ram4x4_bist_con.v ram4x4_tb.v
```

- 4. Simulate the test driver.
  - a. Invoke the ModelSim simulator and load the testbench model.

```
shell> $MGC HOME/bin/vsim ram4x4 tb
```

b. Set up the lists by running the following dofile:

```
VSIM 1> do ../design/vsim_setup.do
```

This dofile sets the parameters for the simulation to stop—either **tst\_done** or **fail\_h** going high. It also sets up a List window so you can examine the pertinent signals. If necessary, expand the list window that appears so you can see all the signals. You can also use a wave window, if you choose.

c. Run the simulation until it is finished.

VSIM 2> run -all

d. Run a little more to capture the complete pattern for the **tst\_done** signal.

**VSIM 3> run 50** 

e. Write the displayed list to a file.

VSIM 4> write list trace.log.m2

f. Quit the simulation.

VSIM 5> quit

5. Examine the saved list file. Use whatever editor you prefer to view the *trace.log.m2* file you saved.

As you scroll through this file, notice the following things:

- The signals that comprise the columns in this file include (from left to right, fail\_h, tst\_done, the address, the write enable, the data input values, and the data output values).
- The first 650ns of the testbench tests some system signals.
- The March2 algorithm begins at time 1450ns. Remember that the write enable is active low, and the address changes only when the write enable is *not* active (that is, only when the write enable is high). So at time 1450ns, the address is set to 0, the write enable is inactive, and the data on inputs is set to 0. At time 1550ns, the write enable goes low, capturing the input data and writing it to address space 0. At time 1650ns, the write enable again goes inactive, so the address can change to space 1. Thus, the time from 1450ns to 1650ns initializes address space 0 to all 0s, and prepares to initialize the next address space to 0.
- From 1650ns to 2150ns, the March2 algorithm continues to initialize address spaces 1, 2, and 3. This completes the first step in the March2 algorithm: Write 0s to initialize.
- At time 2250ns, with the address set back to space 0, the algorithm reads 0, writes 1, and reads 1. The address space increases to 1, and the

- algorithm then reads 0, writes 1, and reads 1. This process repeats for addresses 2 and 3.
- At time 4650ns, with the address set back to space 0, the algorithm reads 1, writes 0, and reads 0. This repeats for addresses 1, 2, and 3.
- At time 7050ns, the algorithm begins the test in reverse address order, reading 0s, writing 1s, and reading 1s.
- At time 9450ns, the algorithm again performs the test in reverse address order, this time reading 1s, writing 0s, and reading 0s.
- At time 12750ns, the **tst\_done** flag goes high indicating the BIST testing is complete.
- fail\_h remains low throughout the entire simulation.

# Module 3 Common BIST Variations

When you complete this module, you should have a basic understanding of how to configure memory BIST circuitry, use one BIST controller for multiple memories, add diagnostics, add pipeline registers, use compressors and comparators, use clock constraints, and run MBISTArchitect at full-speed.

### **Objectives**

Upon completion of this module, you will be able to:

- Insert BIST for multiple memories
- Add BIST with a compressor
- Add BIST for bidirectional memories
- Add BIST for ROMs
- Perform a full-speed BIST test

# **Configuring Memory BIST Circuitry**

#### **Configuring Memory BIST Circuitry**

- Add to and/or change the BIST algorithms
  - Use one BIST controller for multiple memories
  - Use a compressor instead of a comparator
    - Add more system-level BIST control signals
- Use one BIST controller for multiple memories
  - Decreases BIST hardware
    - Memories must be compatible, event sequences must be the same

3-2 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

## **Configuring Memory BIST Circuitry**

### **Configuring Memory BIST Circuitry (Continued)**

- Use a compressor instead of a comparator
  - Allows ROM testing
  - Reduces diagnostic capability
  - Decreases interconnections

3-3 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

The MBISTArchitect tool provides a common default BIST architecture, however, this default circuitry may not meet all your testing requirements. Thus, MBISTArchitect lets you customize the circuitry it generates in a number of ways.

You can add to or change the default algorithms. For example, if you are adding BIST circuitry to a multiple-port memory model, you may not want to execute the March C+ test on every write port. You may instead want to use the Unique Address algorithm to test just the address and control circuitry for all but the first port.

Another common variation includes using a single BIST controller for multiple memory models. You can add a BIST collar around an individual model or you can create a single BIST controller that controls and tests a number of different compatible memory models.

One common variation includes using a compressor for signature analysis instead of a built-in comparator for direct memory output comparison. You also have less capability to diagnose what failure occurred.

You can add a system-level hold signal that can stop the testing process. You can also define multiple input busses connecting to the memory model to provide further system control.

### **Support for Multi-port Memories**

#### **Support for Multi-port Memories**

- MBISTArchitect provides the following features for multi-port memories
  - Applies different algorithms to each port
    - Reduces test application time
- Generates a port interaction test
  - Produces higher quality tests
- Handles restrictions on simultaneous port access
  - Honors read and write constraints for multiple ports

3-4 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

The MBISTArchitect tool supports testing of multi-port memories. Using this functionality, you can apply different algorithms to each port to reduce test application time. The tool honors the read and write constraints for multiple ports which it uses to handle restrictions on simultaneous read-port access.

### **Generate a Comparator Functional Test**

#### **Generate a Comparator Functional Test**

- From controller's finite state machine
- Add two states
  - comp\_test\_write
  - comp\_test\_read\_fail and comp\_test\_read\_pass
    - Generate Using:

MBIST> setup observation scheme -compare set comparator test -on

- Use with other options
  - Example: Repeat comparator test for each memory prior to any other tests to test the fail flag of each memory independently

MBIST> setup memory test - sequential set comparator test -on setup comparator failflag -separate

3-5 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

The MBISTArchitect tool provides the ability to test the comparator before running the BIST. This is achieved by adding three states to the controller's finite state machine that inject faulty data into the memory at the beginning of the test. The two states are comp\_test\_write and comp\_test\_read\_fail.

The comparator test first uses the comp\_test\_write state to write known data (background 1) to address zero of all the memories. Then, comp\_test\_read performs a read/compare expecting a mismatch which should raise the fail\_h flag. Next, comp\_test\_read performs a second read/compare expecting a match, thereby resetting the fail\_h flag. When you enable the comparator test, it always precedes all other tests.

To generate the comparator test, use the Setup Observation Scheme command with the -Compare switch. To test the comparator, use the Set Comparator Test command with the -on switch as follows:

## setup observation scheme -compare set comparator test -on

The default of the comparator upon invocation of the MBISTArchitect is "-Off".

Additionally, you can use other MBISTArchitect command options in conjunction with these commands. For example, you can enable the comparator test in combination with the Setup Memory Test command's sequential memory test (-Sequential) and the comparator fail flag option as shown here:

setup memory test - sequential setup comparator failflag -separate

In this case, the controller repeats the comparator test for each memory prior to the application of any other tests. Thus, testing the fail flag of each memory independently.

### **Inserting BIST for Multiple Memories**

### **Inserting BIST for Multiple Memories**

- MBISTArchitect can generate BIST circuitry that tests multiple memory models
- You can load multiple memory models with the Add Memory Model command
- MBISTArchitect runs test in parallel


3-6 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

Example

# Inserting BIST for Multiple Memories (Continued)

#### Inserting BIST for Multiple Memories (Continued)

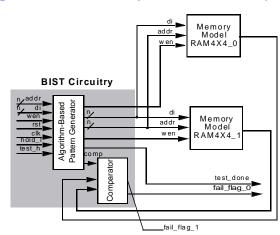

3-7 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

You can create a single BIST controller that runs BIST on multiple memory models. This can only occur with compatible memory models—those that share the same vendor and technology and have compatible read and write cycle definitions.

You can specify multiple memories using one or more Add Memory Models commands. MBISTArchitect generates BIST circuitry that runs the testing on all memories in parallel.

In this case, the default names become *<first\_model\_added>\_multi.v*, *<first\_model\_added>\_multi\_con.v*, and *<first\_model\_added>\_tb.v*.

### **MBISTArchitect Controller Options**

#### **BIST Controller Options**

- The BIST controller performs two primary functions while testing memories under test:
  - It provides the test stimulus
  - It checks the response
- MBISTArchitect contains options that let you determine how to test the memory and how fast the MBIST controller performs memory testing

3-8 MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


MBISTArchitect contains options that let the designer or tester determine how they want to test the memory and how fast the MBIST controller performs memory testing. Using MBISTArchitect options, the designer can match the memory BIST controller speed and hardware required to their own unique needs.

Designers and testers can use MBISTArchitect to test embedded memories at varying speeds. From using the system default with built-in delay cycles, all the way up to using the full-speed option to exercise and test the memory at system cycle speeds, as well as performing timing and stress tests on embedded memories.

See "How the BIST Controller Works" on page 3-11 for information on how the BIST controller typically works. See "Full-Speed Overview" on page 3-14 for an overview of MBISTArchitect full-speed implementation.

### **How the BIST Controller Works**

#### **Typical Memory BIST Controller**

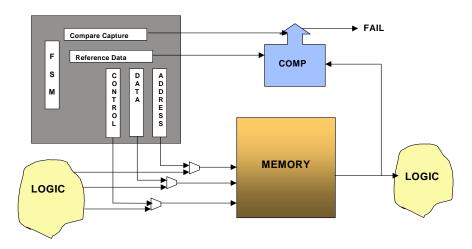

3-9 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


In a typical design with memory BIST, the BIST controller performs two primary functions to the memories under test: 1) it provides the test stimulus, 2) it checks the response. The slide shows that there is one memory tested by one BIST controller. In reality, the BIST controller is much smaller than the memories.

The BIST controller itself is a finite-state machine. The clock controlling its state transitions can be from either an internal clock generator or an external source. To avoid clock synchronization problems during the BIST operation, normally the same clock source controls both the BIST controller and the memories it tests. In this example, we assume all memories are synchronous memories.

See "Read/Write Operations on Synchronous Memories" on page 3-12 for information on how MBISTArchitect performs read/write operations on synchronous memory. See "Pipelining Read/Write Operations" on page 3-17 for information on how MBISTArchitect performs read/write operations when using the full-speed option.

## Read/Write Operations on Synchronous Memories

### **Typical Read/Write Operations**

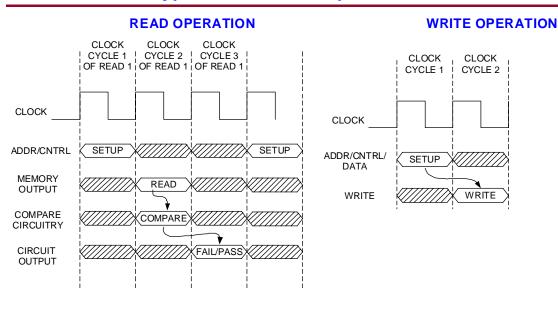

3-10 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

To properly perform read or write operations for synchronous memories, the BIST controller must first generate read/write setup signals before the memory clock is active. For simplicity, the examples presented in this section assume:

- all read/write setup signals are synchronous signals
- all memories and the BIST controller are activated at rising edge

Since the BIST controller and its memories use the same clock, a typical read/write operation requires two clock cycles. During the first clock cycle, the BIST controller generates all the necessary read/write setup signals for the memories under test. During the second clock cycle, a read/write operation occurs at the edge of memory clock. This is called data latency in single clock memory BIST operation.

In addition, memory BIST controllers typically use comparators to verify the data read out from the memories. Since memory outputs are not ready until the edge of the second clock, the result of the comparator will be captured at the third clock cycle. Therefore, a BIST controller requires:

- three clock cycles to perform a complete read operation
- two clock cycles to finish a write operation

Typically, a memory BIST controller requires six cycles to do two consecutive read operations and four cycles to do two consecutive write operations. Likewise, it requires five cycles to do one read operation followed by one write operation.

### **Full-Speed Overview**

#### **Full-Speed Approach**

- BIST controller running at system speed
- Memory exercised at system speed
- Timing stress testing

3-11 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

Because memories are getting larger and denser, design and test engineers need to ensure higher memory test quality to ensure overall chip quality. Besides static functional tests, timing and stress tests are necessary to detect system operation problems. *At-speed* BIST operation generally means BIST operation is capable of exercising the memories at system clock frequency. However, at-speed operation is not sufficient to detect all timing faults. Even if a BIST controller design is operated in system clock frequency, its data latency prevents testing whether the memory can change the address and read out different data from different addresses at every cycle. Without this limitation, the BIST operation may not ensure adequate memory quality.

MBISTArchitect has a feature called Full-Speed™ BIST operation. Full-speed is used to enhance a single clock memory BIST controller so that it can launch a read or write operation on each active clock edge, thus enabling timing and stress testing as part of the BIST operation. Besides improved test quality, full-speed BIST operation significantly reduces test time. For example, typical consecutive

#### **Common BIST Variations**


read/write operations require 5 clock cycles which can be done in 2 clock cycles with full-speed BIST operation.

The MBISTArchitect full-speed functionality provides maximum memory BIST controller speed and test performance. Running full-speed at system clock speed tests the memory at the full-speed the system will run.

Full-speed testing reduces testing times. Full-speed can locate defects that will not be detected at slower speeds, thus providing increased fault detection. Full-speed provides the additional benefit of testing whether a memory can change an address and read data from different addresses at every cycle. It enables timing and stress testing as part of the BIST operation because it can launch a read/write operation on each active clock edge.

### Full-speed design with pipeline circuitry

### **Pipelined BIST Controller**

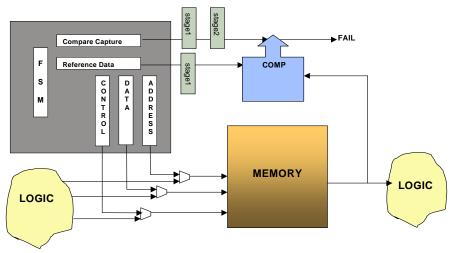

3-12 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


The slide shows a Full-Speed pipelined BIST Controller.

Since there is data latency in memory BIST controllers, the BIST controller must be pipelined to enable full-speed read/write operation. The pipeline is used to temporally separate the needed action at each cycle of read/write operations. With pipelining, you can model the memory as only taking one clock cycle and then use the pipelining to tear the comparison out of the first cycle and the capture of the comparison result, which happens at the end of the pipeline.

## **Pipelining Read/Write Operations**

#### **Full-Speed Pipelined Read/Write Operations**

#### **READ / WRITE OPERATION**

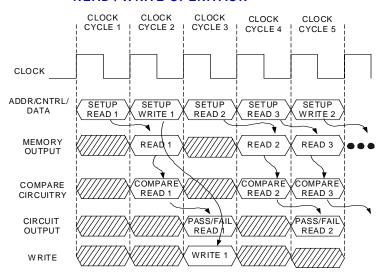

3-13 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

The slide shows the pipelined design for full-speed memory BIST operation.

A 3-stage pipeline can be used to compress the three cycle read operation into single cycle read. In this case, the first stage does the read setup—which may include read address change, read enable activation, and output enable activation. The second stage activates the read clock and provides the reference data for read data output comparison. The third stage captures the comparison result. Inside the BIST controllers, all signals needed for read operation are generated at the rising edge of the same clock. The following pipelines are also needed:

- A pipeline register to create one-cycle delay at the memory clock signal.
- A pipeline register to create one-cycle delay at the reference data to the comparator.

• A full-speed BIST controller needs a pipeline register to create two-cycle delay at the capture signal that activates the capturing the results of the comparator.

In addition, a 2-state pipeline can compress the two cycle write operation shown earlier, into a single cycle write. The first stage does the write setup which may include write address change, write data change, and write enable activation. The second stage activates the write clock. Similarly, inside the BIST controllers, all signals needed for write operation are generated at the rising edge of the same clock. Here, only the memory clock needs to be delayed one cycle to achieve full-speed operation. As explained earlier, a memory clock is repeated every cycle, the pipeline register to create one-cycle memory clock delay is not needed.

As part of this module, you can perform a Full-Speed exercise to see the results of full-speed testing. See "Running BIST at Full-Speed" on page 3-61.

### **Performing Sequential Memory Tests**

#### **Performing Sequential Memory Tests**

- Apply all test algorithms to all ports of a memory before proceeding to the next memory
  - MBIST> setup memory test -sequential [Interleaved | Contiguous]
- Multiple Memories Sequential Memory Test
- Generate individual fail flags
  - MBIST> setup comparator failflag -separate
- Identifies which memory has failed

3-14 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

MBISTArchitect creates a controller that by default tests multiple memories concurrently. You can specify that the controller test each of these memories sequentially by using the following command option:

#### setup memory test -sequential

The -Sequential contiguous switch causes the controller to apply all the test algorithms to all the ports of a memory before proceeding to the next memory (this is the system default). Using the -Sequential interleaved switch instructs the MBISTArchitect tool to interleave algorithm steps between memories.

Since the controller tests the memories independently of one another during sequential memory testing, the memory's read/write cycles need no longer be compatible. However, the current MBISTArchitect implementation of sequential memory test does not have this capability.

Additionally, you can generate individual fail flags for multiple memories by using the Setup Memory Test and Setup Comparator Failflag commands as follows:

setup memory test -sequential setup comparator failflag -separate

This specifies separate fail flags for multiple memory tests. This is especially useful in identifying which memory has failed when you specify the sequential memory test option (-Sequential). The default is Common; output a single fail bit regardless of the number of memories.

## **Adding Diagnostics**


### **Adding Diagnostics**

- Extracts failing data for fault diagnosis process
- Data scanned out through a serial pin
- Diagnostics contained within the BIST logic
- Two modes of operation

3-15 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

### **Adding Diagnostics (Continued)**

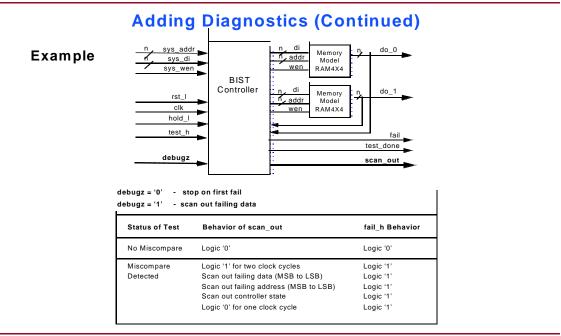

3-16 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

MBISTArchitect can give the BIST controller the ability to download the failing data on every occurrence of a miscompare. And, the failing data can be scanned out with a minimal impact on silicon area and routing overhead. You can switch on a diagnostic clock and a diagnostic clock pin named diag\_clock is added to the controller pin list. The diag\_clock pin is toggled at half BIST clock during the test bench. The BIST controller operates in one of two modes controlled by **debugz**. The modes and operation of the **fail\_h** and **scan\_out** ports is as follows:

**Normal Mode** (debugz = '0') When **debugz** is set to '0', the BIST controller performs the default test. In this mode, the **scan\_out** port is set to '0', as no fail data is downloaded. The **fail\_h** port is asserted on the first failure and remains high for the remainder of the test.

**Debug Mode** (debugz = '1') When **debugz** is set to '1', the diagnostic mode is enabled. In this mode, a miscompare will suspend the operation of the BIST controller, and the failing data will be serially scanned out of the controller through **scan\_out** (see the table on the opposite page). Once the failing data has been scanned out, the BIST controller resumes the test and resets fail\_h to 0. At the end of the test, fail\_h is asserted to 1 if there has been any failing data. The scan out operation will repeat on every occurrence of a miscompare.

In order to synthesize the diagnostic functionality into the BIST controller, the following conditions must be met.

- 1. The BIST controller must use a comparator for verification.
- 2. Only algorithms supporting the comparator can be used. These include march1, march2, march3, unique address, checkerboard, and topological checkerboard.
- 3. The hold\_l signal must be added to the BIST controller.

The diagnostics capability is added by using these commands:

```
setup controller hold -on | -off
setup controller debug -on | -off
set comparator test -on | -off
set comparator failflag {-Common | -SEparate} {-SInglefail | -Multifail}
```

You can also set a slow clock to scan out diagnostic data. The cycle time of the diagnostic clock is two times slower than a BIST clock with a default of 200ns. Use the Setup Diagnostic Clock -Diag\_clock command in conjunction with the Setup Controller Naming -Diag\_clk diag\_clk command to set up a diagnostic clock.

```
setup diagnostic clock diag_clock setup controller naming -diag_clk diag_clk
```

### **Clock Synchronization**

There are two clock domains for the diagnostic process in the Memory BIST controller. One clock controls the diagnostic clock domain that scans out diagnostic data to the Automatic Test Equipment (ATE). This clock domain is

usually relatively slow. A second clock domain is run by the bist clock that operates everything except the diagnostic data scan-out and operates at a faster clock speed. In default operation, MBISTArchitect operates with these clocks in a non-synchronized relationship. When you turn synchronization on, these clocks become synchronized by passing information between the domains. For more information, see the "Synchronization between BIST Clock and Diagnostic Clock" section in Chapter 3 of the *Built-In-Self-Test Process Guide*.

### Compressor vs. Comparator

### **Compressor versus Comparator**

- Most people use a comparator because:
  - It stops on the first fail
  - You can add diagnosis capabilities to the BIST controller
- Some people use compressors because:
  - A ROM test requires it

3-17 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

In Memory BIST, the output response analysis is performed either by means of a comparator or a compressor.

A comparator provides some unique benefits such as diagnostic capability at the expense of higher area overhead. Since comparator width is the same as the memory data width, this area overhead increases for wide memories.

However, a comparator has the capability of stopping on the first fail or in the case of debug mode, stopping on every failure and scanning out the data. These features result in good diagnostic capability by providing precise information about failure location.

A compressor, on the other hand, entails relatively less area overhead. Compressor width can be different than that of the memory data width. Output from a memory wider than a compressor has to be fed to the compressor through a properly designed XOR tree.

Since the contents of a ROM are predetermined and cannot be changed by the BIST controller, the expected reference data for a comparator would have to be provided through the duplication of ROM contents. In general, this results in a large area overhead and is unacceptable. Thus, using a compressor for analyzing the ROMs output response is the only viable alternative.

Compressors cannot provide good diagnostic capability since their contents, in general, are checked only at the end of a test. Precise identification of the fault location based on the final content of a compressor is a difficult task.


Compressors can be placed immediately at the output of a memory, or in case of an embedded memory, can be placed downstream. Placing the compressor downstream tests the logic between memory outputs and compressor. However, diagnostic capability will be further worsened since a fault now can be either in the memory or in the intervening logic.

The MBISTArchitect tool has configurations that use a compressor (MISR) to capture the output of the memory under test. You use the Setup MBist Compressor command to define compressor parameters.

Use **Setup MBist Compressor -scan** to scan out the final signature and compare it with the tester. Use **Setup MBist Compressor -localcomparator** to generate a signature comparator in the memory BIST collar (locally).

### **BIST** using a Compressor

#### **BIST Using a Compressor**

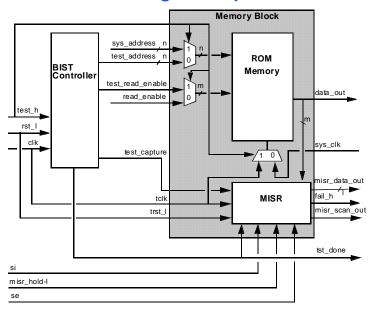

3-18 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

Within an MBISTArchitect session, you can generate either a BIST controller with a comparator or a compressor configuration. If you specify a compressor configuration, MBISTArchitect generates a separate HDL model for each compressor(s).

Before you can tell MBISTArchitect to generate a compressor configuration, you must specify that the controller should use a compressor.

For example, the following set of commands generates the compressor shown:

shell> \$MGC\_HOME/bin/mbistarchitect -library dft.lib

MBIST> add memory model ram4x4 ram8x8 ram8x8

MBIST> set controller hold -on

MBIST> setup observation scheme -compress

MBIST> setup mbist compressor -hold [-localcomparator]

MBIST> run

MBIST> save bist

MBIST> exit

### **Adding Pipeline Registers**

### **Adding Pipeline Registers**

- Specify number of input and output stages
- Pipeline registers are separate modules in the BIST controller file
- Testbench accounts for pipeline stages
  - Example Request:


MBIST> setup controller pipeline -depth input\_depth 2 output\_depth 3

3-19 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

### **Adding Pipeline Registers (Continued)**

#### **Adding Pipeline Registers (Continued)**

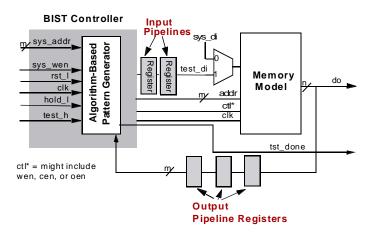

3-20 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

In some designs, pipeline registers are inserted along the address/data lines to synchronize the data flow activity between the memory and a system-level device. MBISTArchitect can model this pre-determined pipeline delay by allowing you to insert pipeline registers into the generated connection model.

The Setup Controller Pipeline command specifies the controller pipeline register settings, the number of pipeline registers to be placed between the controller and the memory, the position of the comparator in the pipeline, and the number of pipeline delay stages to be placed between memory and the comparator. For different configurations you can also specify the respective pipeline stages for the memory address input, data input, control input, and/or output pipelines. Refer to the "Setup Controller Pipeline" command section of the *MBISTArchitect Reference Manual* for information on specific switches.

Pipelining is useful for several situations, such as when timing is critical or when you want to control where MBISTArchitect samples and compares the data. With this command and its options, you can manage time delays and meet timing

constraints. By specifying the comparator's position, you can control from which pipeline stage you want to take data for comparison.

For example, by entering the following setup command, MBISTArchitect will generate two input and three output pipeline registers:

#### setup controller pipeline -depth input\_depth 2 output\_depth 3

In this case, MBISTArchitect creates the registers as separate instantiations in the connection model and modifies the controller timing to account for the pipeline delay. Notice that pipeline registers can only be added to the address and data paths and not to any other control signals.

Adding pipeline registers is also used in full-speed testing, see "Full-Speed Overview" on page 3-14 for more information.

## **Specifying Non-controlled Memory Ports**

### **Specifying Non-controlled Memory Ports**

- Memory ports not to be controlled by BIST Controller
- Default assertion state is high
  - Test bench holds the signal at the value opposite its assert state
- Default direction is input
  - Except for "data\_out" and "data\_inout"
- ♦ Define in Library Model's bist\_definition section

3-21 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

### **Specifying Non-controlled Memory Ports**

### **Specifying Non-controlled Memory Ports (Continued)**

Library Model's bist definition section

- port\_name = pin or bus to be left untouched.
- assert state = "high" (default) or "low"
- direction = "input" or "output"

3-22 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

You can use a clause on the bist\_definition section of the MBISTArchitect memory model to specify which ports on the memory should not be controlled by the BIST Controller. The default assertion state is high and the default direction is input except for "data\_out" and "data\_inout."

## Specifying Parameters for Memory Clock Signals

#### **Specifying Parameters for Memory Clock Signals**

- Memory Clock Signal Gate Parameters
  - Clock Gating On
    - Generate multiplexer in path of clock signal
    - MBIST> setup memory clock -control
  - Clock Gating Off (Default)
    - Use the system clock for BIST testing
    - MBIST> setup memory clock -system
- Synchronize Controller with Memory Clock
  - Synchronous with Clock's Rising Edge (Default)
    - MBIST> setup memory clock -test noinvert
  - Synchronous with Clock's Falling Edge (inverted)
    - MBIST> setup memory clock -test invert

3-23 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

The following commands support clock gate control:

SETup MEmory Clock {-System | -Control | {-Test {Noinvert | Invert}}}


The -Control switch specifies that the memory clock should be gated. The default is -System. When the -Control switch is used, the test mode clock is connected to the clock control signals created by the BIST controller.

The -Test Noinvert switch lets you specify whether the controller is synchronous with the rising edge or falling edge (inverted) of the clock. The default is to not invert.

### **Bypassing Memory in Scan Mode**

#### **Bypassing Memory in Scan Mode**

- Propagates fault efforts around memories
- Allows high fault coverage for scan and logic BIST designs with embedded memories

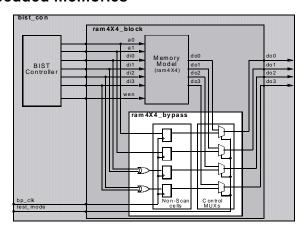

3-24 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

#### Use these commands:

SET SCan Logic [-Addr\_observe integer] [-Data\_observe integer] [-NoScan | -Scan] [-Control | -NoControl] [-CNtrl\_observe integer]

#### Where:

- -Addr\_Observe: Number of cells to observe address
- -Data\_Observe: Number of cells to observe data
- -Scan: Generate scan cells and scan chain (not default)
- -Control: Multiplex bypass cell outputs onto memory cell outputs
- NOControl: Do not multiplex bypass cell outputs onto memory cell outputs

# Bypassing Memory in Scan Mode (Continued)

#### **Bypassing Memory in Scan Mode (Continued)**

- Commands used:
  - SET SCan Logic [-Addr\_observe integer] [-Data\_observe integer]
     [-NOScan | -Scan] [-Control | -NOControl]
     [-CNtrl\_observe integer]
    - -Addr\_observe : Number of cells to observe address
    - Data\_observe : Number of cells to observe data
    - Scan: Generate scan cells and scan chain (not default)
    - Control : Multiplex bypass cell outputs onto memory cell outputs
    - NOControl : Do not multiplex bypass cell outputs onto memory cell outputs

3-25 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

You can direct MBISTArchitect to configure scan logic to bypass the memory during scan mode. This is done by XORing all the address lines and all the data input lines to generate a specified number of compressed signals. Each of these compressed signals are captured in scan or non-scan cells. These cells are clocked using a new signal line named **bp\_clk**. If you choose to specify scan cells, MBISTArchitect generates three additional signal lines: scan\_enable, scan\_in, and scan\_out.

The default -Control option is provided to multiplex the scan/non-scan cell output to the memory data output. This is helpful in testing logic on the output side of the memory during scan test. MBISTArchitect inserts one multiplexer for each data output. It connects one input of the multiplexer to memory data output and the other input to the newly inserted scan/non-scan cells. The multiplexer is controlled by the **test\_mode** signal.

The bypass logic created by this command is placed in a hierarchical block called memory\_name\_bypass. Also, a new level of hierarchy called memory\_name\_block is created if it doesn't already exist. This memory\_name\_block is created or modified to contain both the memory and the memory\_name\_bypass blocks. The description of the memory\_name\_bypass and memory\_name\_block are in the same file as the BIST Controller.

To help with testing the logic that surrounds your memory design, MBISTArchitect allows you to add memory bypass circuitry using the Set Scan Logic command. This bypass circuitry compresses the address and data input lines through XOR logic and either scan or non-scan cells into a specified number of output signals. By using the command's default -Control switch, these output signals are multiplexed with the memory data output lines. The multiplexers are controlled by *test\_mode*. When *test\_mode* is asserted high for testing the surrounding logic, the memory is bypassed and the compressed address and data input signals are presented to the data output lines. This allows you control over the downstream logic during testing.

For a detailed description of the MBISTArchitect memory bypass functionality, refer to the Set Scan Logic command description in the *MBISTArchitect Reference Manual*.

### **Synthesis Driver File**

#### **Synthesis Driver File**

- ♦ MBISTArchitect can produce a basic synthesis script:
  - For Synopsys environments
  - Named <design>\_dcscript for Synopsys Design Compiler (by default)
  - That you can use as a template or example of a basic synthesis/optimization run

3-26 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

MBISTArchitect can write a basic synthesis script, targeted for Synopsys' Design Compiler tools. You can use this script as a template for synthesizing and optimizing the BIST models MBISTArchitect produces.

While you can change the model's name using Setup File Naming, by default MBISTArchitect names this model *<design>\_dcscript* (for Synopsys Design Compiler).

The Design Compiler can save the BIST controller and BIST block in a single file for Verilog. For VHDL, the BIST controller and BIST block can be saved to separate files.

An example is shown below:

```
/* -----
// File Type: Logic Synthesis Script File
// Date Created: Wed Feb 6 21:02:00 2002
// Tool Version: v8.9_6.02 Wed Feb 6 15:31:55 PST 2002
// -----
* /
sh mkdir work
define_design_lib work -path "./work"
read -format verilog top_after.v
current_design cti_sab
uniquify
compile
write -format verilog -hierarchy -output "cti_sab_gate.v"
current design ram4x4 multi bist
uniquify
compile
write -format verilog -hierarchy -output
"ram4x4_multi_bist_gate.v"
current_design ram4x4_multi_bist_ram4x4_block_0
uniquify
compile
write -format verilog -hierarchy -output
"ram4x4_multi_bist_ram4x4_block_0_gate.v"
current_design ram4x4_multi_bist_ram4x4_block_1
uniquify
compile
write -format verilog -hierarchy -output
"ram4x4_multi_bist_ram4x4_block_1_gate.v"
current design ram4x4 multi bist ram4x4 block 2
uniquify
compile
write -format verilog -hierarchy -output
"ram4x4_multi_bist_ram4x4_block_2_gate.v"
exit
```

# **Design Compiler Clock Constraints**

#### **Design Compiler Clock Constraints**

- MBISTArchitect lets you define clock constraints within the Synopsis Design Compiler script
  - Example:

```
Clock_Period=100
  create_clock-period CLOCK_PERIOD RCLK
  set dont_touch_network RCLK
  create_clock-period CLOCK_PERIOD BIST_CLK
  set dont_touch_network BIST_CLK
```

3-27 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

The MBISTArchitect Design Compiler script has been modified to let you define clock constraints. This script uses the currently defined clock width and add clock constraints for the BIST controller clock and any other memory model defined clock signals, where clock gating is disabled.


capture and write the output values of the memory itself. You specify this information using the Setup Mbist Patterns command.

While you can change the model's name using Setup File Naming, by default MBISTArchitect names this output *<design>\_bist.pat*.

# **Mux-Embedded Memory Support**

#### **Mux-Embedded Memory Support**

- MBISTArchitect supports mux-embedded memory structures
  - The tool uses the inserted muxes within memory blocks to reduce overhead and timing penalties

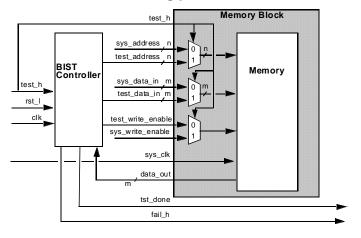

3-28 MBISTArchitect:Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

MBISTArchitect supports mux-embedded memory structures. It is often to your advantage to design control muxes within memory blocks to reduce overhead and timing penalty. The tool uses the inserted mux to select test or system signals and support by-pass logic signals inside of the memory block. You can design the data output to either separate system and test pins or to a single output for both signals.

## **Library Enhancement**

To support the mux-embedded memory structure, a library format is used to specify which signals are paired. The following are mux-embedded memory support signals that are used in this library format:

```
port_type sys_name:test_name width active_state
```

A BIST-mode signal is used to select either BIST signals or system signals. This signal is necessary and is used as follows:

bist\_mode name active\_state

To support embedded bypass logic inside of mux-embedded memories, the following signals should be used:

ATPG\_mode, scan\_clk, scan\_enable, scan\_in, and scan\_out. atpg\_mode name active\_state

For information on Mux-Embedded Memory Support limitations and examples of the mux-embedded memory support library format, see the "Mux-Embedded Memory Support" section in Appendix A of the *MBISTArchitect Reference Manual*.

## **Module 3 Lab Exercises**

- Changing the BIST Algorithm (20 minutes)
- Changing the Data Background (20 minutes)
- Inserting BIST for Multiple Memories (15 minutes)
- Adding BIST with a Compressor
- Implementing Full-Speed BIST (20 minutes)
- Adding BIST for Bidirectional Memories (10 minutes)
- Adding BIST for ROMs (30 minutes)

## **Module 3: Lab Exercises**

You may be able to increase test coverage and reduce area by taking the time to configure the BIST circuitry to your design. The following exercises will give you a start at customizing BIST for different design configurations that you may encounter. You may choose to do all exercises or only those that fit your design needs.

Exercise 3: Changing the BIST Algorithm—In this exercise, you will generate a new memory BIST collar that uses the March 1 rather than the default March 2 algorithm to reduce test time.

Exercise 4: Changing the Data Background—In this exercise, you will improve the test coverage of the March 1 BIST Controller by adding three different data pattern backgrounds.

Exercise 5: Inserting BIST for Multiple Memories —In this exercise, you will save area and overhead by sharing a BIST controller for multiple memories.

Exercise 6: Adding BIST with a Compressor — In this exercise, you will add a Compressor instead of a Comparator. A Compressor may be used to improve area-overhead or optimize routing.

Exercise 7: Running BIST at Full-Speed—In this exercise, you run BIST at "full-speed" meaning it will run at the system clock speed to test the memory at the full speed at which the system will run.

Exercise 8: Adding BIST for Bidirectional Memories—In this exercise, you add BIST for bidirectional memories.

Exercise 9: Adding BIST for ROMs—In this exercise, you add BIST for ROMs. A ROM requires the use of a compressor.

	These exercises should take approximately 1 hour and 20 minutes
Note	

## **Exercise 3: Changing the BIST Algorithm**

This exercise should take approximately 20 minutes to complete.

Selecting one or more algorithms for your BIST design depends on the type of memory you are testing, your test goals, your overall test strategy, and the advice you may receive from in-house memory-test experts and ASIC vendors.

The March 2 (March C+) algorithm is the MBISTArchitect default because it is so commonly used and accepted.

In this exercise, you will direct MBISTArchitect to use the March 1 algorithm when you generate a BIST collar for the ram4x4 memory. Remember that you can add new algorithms as well as change algorithms. You will gain experience adding algorithms in later exercises.

#### Do the following:

- 1. Verify that you are in the \$MBISTNWP/mbist1/ram4x4/results directory.
- 2. Invoke MBISTArchitect while loading the library at invocation.

```
shell> mbistarchitect -lib ../design/ram4x4.atpg
```

- 3. Add the ram4x4 model to the list of memory models for BIST insertion.
- 4. Select the **Controller** block to access the Setup Mbist Controller dialog box.
- 5. Select the Test Algorithms tab, select **March 1**, then click **OK**.
- 6. Click **Run** to add default BIST circuitry to this model.
- 7. Save the default outputs by clicking **Save BIST**. After verifying the format and destination directory, click **OK**.

MBISTArchitect prompts you with the following question:

One or more of the output files already exist. Do you want to overwrite them?

Click **No** in the Question dialog box, then **Cancel** the Save Bist Results dialog box.

In Exercise 1, you saved outputs with the same default filenames. Instead of replacing these files, you can give them custom names.

8. Click on the **Output Files Names** button in the Control Panel Window. In the Setup Output File Naming dialog box, change the filenames to the following, then click **OK**:

# Old FilenameNew Filenameram4x4\_bist.vram4x4\_m1\_bist.vram4x4\_bist\_con.vram4x4\_m1\_bist\_con.vram4x4\_tb.vram4x4\_m1\_tb.v

- 9. Click **Save BIST**.
- 10. From the Command Line, list the generated outputs:

```
MBISTA> system is ram*
```

The System command lets you issue an operating system command. The ls command shows the contents of the working directory. You should see:

```
ram4x4_bist.v ram4x4_m1_bist.v ram4x4_m1_tb.v ram4x4_bist_con.v ram4x4_m1_bist_con.v ram4x4_tb.v
```

MBISTArchitect generated three new Verilog models for the ram4x4 model:

- ram4x4\_m1\_bist.v a model that contains just the ram4x4 BIST control circuitry,
- ram4x4\_m1\_bist\_con.v the connection model that connects the BIST controller to the ram4x4 simulation model, and
- ram4x4\_m1\_tb.v the testbench that instantiates and tests the ram4x4 m1 bist con.v model.
- 11. Click View Saved Design Files.

MBISTArchitect generated three Verilog models for the ram4x4 model:

Look at  $ram4x4\_m1\_bist.v$ . This model is very much the same as  $ram4x4\_bist.v$ , except for the March 1/March 2 algorithm differences. Both algorithms perform the basic March test, with March1 eliminating the RWR operation to reduce the algorithm from 14n to 10n.

- 12. **Exit** the tool.
- 13. Compile the outputs.
  - a. Set up a new work directory for the March1 test models.

```
shell> $MGC_HOME/bin/vlib work_m1
```

b. Compile the memory simulation model, all BIST models, and the testbench.

```
shell> $MGC_HOME/bin/vlog -work work_m1 \
    ../design/ram4x4.v ram4x4_m1_bist.v \
    ram4x4_m1_bist_con.v ram4x4_m1_tb.v
```

- 14. Simulate the BIST circuitry
  - a. Invoke the ModelSim simulator and load the ram4X4 testbench.

```
shell> $MGC_HOME/bin/vsim -lib work_m1 ram4x4_tb
```

b. Set up the lists by running the following dofiles:

```
VSIM 2> do ../design/vsim setup.do
```

c. Run the simulation until it is finished.

```
VSIM 3> run -all
```

d. Run a little more to capture the complete pattern for the tst\_done signal.

```
VSIM 4> run 50
```

e. Write the displayed list to a file.

VSIM 5> write list trace.log.m1

f. Quit the simulation.

VSIM 6> quit

Examine the saved list file.

## **Exercise 4: Changing the Data Background**

This exercise should take approximately 20 minutes to complete.

This exercise repeats the steps you performed in the last exercise—with one exception. In this exercise, instead of having the March 2 test write words of 0s and 1s, you will tell MBISTArchitect to create a March2 pattern generator that uses 1010, 0010, and 0100 as the data backgrounds.

- 1. Ensure you are in the \$MBISTNWP/mbist1/ram4x4/results directory.
- 2. Invoke MBISTArchitect.
- 3. Load the *ram4x4.atpg* library from the ../*design* directory, (*but do not add the model to the memory list*).
- 4. Add the ram4x4 model to the list of memory models for BIST insertion.

MBISTA> add me m ram4x4

5. Change the data background for the March 2 algorithm.

MBISTA> add data backgrounds 1010 0010 0100

Because you specified three patterns, MBISTArchitect applies the March 2 algorithm three times. In the first March 2 test, the algorithm uses the word value 1010 instead of 0000 and then uses the inverse, 0101, instead of 1111. In the second March 2 test, the algorithm uses 0010 instead of 0000, and then uses the inverse, 1101, instead of 1111. In the third March 2 test, the algorithm uses 0100 instead of 0000, and then uses the inverse, 1011, instead of 1111.

6. Generate the BIST circuitry for this memory model.

MBISTA> run

7. Set up file naming.

MBISTA> setup file naming -bist\_model ram4x4\_m1db\_bist.v -connected \
ram4x4\_m1db\_bist\_con.v -test\_bench ram4x4\_m1db\_tb.v

8. Save the output files with the customized names.

#### MBISTA> save bist -script

Because you specified the -Script switch, MBISTArchitect saves a synthesis script file named *ram4x4\_bist.v\_dcscript* in addition to the regular outputs.

9. Exit the tool.

MBISTA> exit

- 10. Compile the outputs and simulate the testbench. Create a new work directory called work\_m2db for the compilation and simulation results. You can use the ../design/vsim\_setup\_db.do file to setup the simulation. Name the trace file trace.log.m2db. If you need assistance with this process, refer back to Exercise 2: Verifying the BIST Circuitry.
- 11. Observe from the List Window that the background patterns you specified are written to and read from the memory.
- 12. Exit the simulator.

## **Exercise 5: Inserting BIST for Multiple Memories**

This exercise should take approximately 15 minutes to complete.

This exercise explores several additional features of MBISTArchitect. First, it creates a single BIST controller for two memories: an 8x4 RAM and a 4x4 RAM. Second, the BIST controller applies the March 2 algorithm to the first write port and the "unique address" algorithm to the second write port. Third, MBISTArchitect produces the BIST controller in VHDL format.

Now that you have become more acquainted with the GUI features, you will be able to utilize the command line to take advantage of minimum typing and other features.

1. Change directories.

```
shell> cd $MBISTNWP/mbist2/multi_ram_dwp/results
```

This is where you will do your work and save your results.

2. Invoke MBISTArchitect.

```
shell> mbistarchitect
```

3. Load the appropriate libraries (you can load only one library at a time):

```
MBISTA>load library ../design/ram4x4.atpg
MBISTA>loa li ../design/ram8x4.atpg
```

4. Add both the ram4x4 and ram8x4 models to the list of memory models for BIST insertion:

MBISTA> add me m ram4x4 ram8x4

5. Add the "Unique Address" algorithm to port 2.

MBISTA> add mbist algorithm 2 unique



The BIST controller automatically applies the March 2 algorithm to port 1. This command adds the unique address algorithm to port 2 (the second port of the ram8x4 memory), replacing the default March 2 algorithm for this specified port only.

If you issued the Add Mbist Algorithms command Add MBIST Algorithms command again for port 2, the BIST controller would apply both specified algorithms to port 2.

6. Add default BIST circuitry to this model.

MBISTA> run

7. Save default VHDL-format outputs with the default names.

MBISTA> save bist -vhdl

Note that when you generate a BIST controller for multiple memories, MBISTArchitect names the saved outputs *<first\_memory>\_multi\_bist.vhd*, *<first\_memory>\_multi\_bist\_con.vhd*, and *<first\_memory>\_multi\_tb.vhd*, by default. In this case, you added ram4x4 first with the Add Memory Models command, so "ram4x4" becomes the prefix for each saved file.

- 8. Examine the generated outputs using the **View Saved Design Files** button in the Control Panel window.
- 9. Exit the tool.

MBISTA> exit

- 10. Compile the outputs and simulate the testbench.
  - a. Set up a work directory for the March2/Unique test models.

shell> \$MGC HOME/bin/vlib work

b. Compile the core logic, all BIST models, and the testbench.



You use **vlog** for compiling Verilog (the original memory models) and **vcom** for compiling VHDL (the MBISTArchitect-generated outputs). In this exercise, you perform mixed Verilog/VHDL simulation using ModelSim after compiling the models.

a. Invoke the ModelSim simulator and load the testbench model.

```
shell> $MGC_HOME/bin/vsim ram4x4_multi_tb
```

b. Set up the lists by running the following dofile:

```
VSIM 1> do ../design/vsim_setup.do
```

c. Run the simulation until it is finished.

VSIM 2> run -all

d. Run a little more to capture the complete pattern for the tst\_done signal.

**VSIM 3> run 50** 

e. Write the displayed list to a file.

VSIM 4> write list trace.log.m2.un

f. Quit the simulation.

VSIM 5> quit

Examine the saved list file.

The BIST controller runs testing on the RAM4x4 and RAM8x4 memories in parallel, first running the March 2 algorithm on port 1 of each memory, followed by running the Unique Address algorithm on port 2 of RAM8x4.

The Unique Address algorithm places the address value in the address location. For example, the algorithm places address value 0000 in location 0, address value 0001 in location 1, address value 0010 in location 2, and so on. If the address and data widths do not match, the algorithm concatenates the MSB values of the address and places them as the LSB of the data word, to pad the data word to the appropriate size.

In this exercise, the address bus has three bits while the data width has four. So the algorithm pads the data word by duplicating the most significant address bit as the least significant data word bit to increase the word size to four bits. For example, in this case the algorithm places the value 0000 at location 0, 0010 at location 1, 0100 at location 2,..., 1011 at location 5, and so on. Note that you see the data values in reverse bit order (LSB->MSB) during simulation.



At this time, the descending March test performs the read/write/read operation in the order 0,3,2,1 (for RAM4x4) or 0,7,6,5,4,3,2,1 (for RAM8x4).

Table 3-1 provides a breakdown of the testbench simulation, and thus, the memory BIST controller operation.

Table 3-1. March2 and Unique Address Simulation Activity

Time (ns)	RAM4x4 Activity/Address	RAM8x4 Activity/Address	Algorithm Operation			
<b>BEGIN BIST LOGIC TESTING (Initialize for the BIST controller)</b>						
0-2975	Write0 / 0 Read0 / 0	Write0 / 0 Read0 / 0	Test for the system path			
BEGIN MARCH 2 TESTING OF RAM4X4 AND RAM8X4 PORT 1						
3050-3750 3750-4550	Write0 / 0->3 Hold WEN off	Write0 / 0->3 Write0 / 4->7 Hold WEN B off	Initialize for March 2 Test			

Table 3-1. March2 and Unique Address Simulation Activity

Time (ns)	RAM4x4 Activity/Address	RAM8x4 Activity/Address	Algorithm Operation
4650-6850 7050-9250	Read0,Write1,Read1/ 0->3 Hold WEN off	Read0,Write1,Read1/ 0->3 Read0,Write1,Read1/ 4->7 Hold WEN B off	Read0 Write1 Read1
9450-11650 11850-14050	Read1,Write0,Read0/ 0->3 Hold WEN off	Read1,Write0,Read0/ 0->3 Read1,Write0,Read0/ 4->7 Hold WEN B off	Read1 Write0 Read0
14550-16450 16650-18850	Hold WEN off Read0,Write1,Read1/ 3->0	Read0,Write1,Read1/ 7->4 Read0,Write1,Read1/ 3->0 Hold WEN B off	Read0 Write1 Read1
19050-21250 21450-23650	Hold WEN off Read1,Write0,Read0/ 3->0	Read1,Write0,Read0/ 7->4 Read1,Write0,Read0/ 3->0 Hold WEN B off	Read1 Write0 Read0
23685-25250	Read0 / 3->0 Read0 / 3->0	Read0 / 7->4 Read0 / 3->0 Hold WEN B off	▼ Read0
BEGIN UN	QUE ADDRESS TE	STING OF RAM8X	4 PORT 2
25550-26950	Hold WEN off	Hold WENA off 0->7	Write address value to address location
27050-28550	Hold WEN off	Hold WENA off 0->7	Read value from address location
28650-30050	Hold WEN off	Hold WENA off 0->7	Write1 to all address locations

Table 3-1. March2 and Unique Address Simulation Activity

Time (ns)	RAM4x4 Activity/Address	RAM8x4 Activity/Address	Algorithm Operation
30250-31750	Hold WEN off	Hold WENA off 7->0	Write inverse address value to address location
31850-33250	Hold WEN off	Hold WENA off	Read value from address locations

## **Exercise 6: Adding BIST with a Compressor**

This exercise should take approximately 40 minutes to complete.

This exercise demonstrates how to generate BIST circuitry that uses a compressor instead of a comparator. Since you have invoked MBISTArchitect and generated BIST circuitry several times in previous exercises, this exercise does not provide as much detail as the previous exercises. If you need assistance, refer to Exercise 1: Creating a Basic Memory BIST Collar.

This exercise again uses the RAM4x4 model—for the sake of both simplicity and comparison to the architectures generated by earlier exercises.

- 1. Change to the \$MBISTNWP/mbist2/ram4x4/results directory.
- 2. Invoke MBISTArchitect, loading the *ram4x4.atpg* library (.../design/ram4x4.atpg) at invocation.
- 3. Add the ram4x4 model to the list of memory models for BIST insertion.
- 4. Specify that the BIST controller should not include a comparator in the architecture.

#### MBISTA> setup observation scheme -compress

The -Compress switch tells MBISTArchitect not to include a comparator as part of the controller. In this case, you want to use a compressor for signature analysis, instead of a comparator. You will set up the compressor parameters in the next step.

5. Set up the compressor parameters.

#### MBISTA> setup mbist compressor -low 32

This specifies for MBISTArchitect to generate a compressor model associated with RAM4x4 with a MISR length of 32 bits.

Due to character conflicts, the minimum typing for Setup Mbist Compressor is "set mb com" and the minimum typing for Setup Mbist Controller is "set mb con".

- 6. Run the BIST circuitry generation process.
- 7. Set up output file naming.

You already generated default outputs in a previous exercise. Because you do not want MBISTArchitect to overwrite these models, you should give the models generated in this exercise unique names.

MBISTA> setup file naming -bist\_model ram4x4\_nocompare\_bist.v \
-connected ram4x4\_nocompare\_bist\_con.v \
-test\_bench ram4x4\_nocompare\_tb.v

8. Save the default outputs, with the customized names, in Verilog format.

MBISTA> save bist -r

9. List the generated outputs.

MBISTA> system Is \*.v

Because of the compressor model, this time when you saved MBISTArchitect generated FOUR new Verilog models for the ram4x4 model. These models include:

- *Compressor\_lib.v* the compressor-only model.
- ram4x4\_nocompare\_bist.v a model that contains just the ram4x4 BIST control circuitry.
- ram4x4\_nocompare\_bist\_con.v the connection model for the controller and the RAM collar.
- ram4x4\_nocompare\_tb.v the testbench that instantiates and tests the ram4x4\_nocompare\_bist\_con.v model.
- 10. Reset the state of MBISTArchitect and make some changes within the session.

Assume you examined the files and decided you want to implement a hold\_l signal. This signal lets you pause BIST testing with a low value on the hold\_l signal, retaining the state of the BIST test process. When the hold\_l signal returns to a high state, the BIST test continues. The hold\_l

signal, among other purposes, enables you to perform data retention testing. If you pause testing between a write and a read, the read performed after testing should display the expected values from the write operation. If not, the memory could have a data retention problem.

Next, assume you decide to generate a synthesis script for the MBISTArchitect outputs as well as a file capturing the BIST-generated inputs to the RAM4x4 memory. You can do this within the current session by resetting the state and running the additional commands as follows:

```
reset state
add me m ram4x4
report memory models
set obs s -compress
set con h -on
set mb com -low 32 -hold
setup file naming -bist ram4x4_nocompare_bist.v -con \
    ram4x4_nocompare_bist_con.v -t ram4x4_nocompare_tb.v \
    -script ram4x4_nocompare_synth.script
run
save bist -scr -r
```

**Hint**: Instead of entering these commands interactively, run the ../design/nocomp.do dofile.

11. Examine the generated outputs.

First look at *ram4x4\_nocompare\_bist.v.* Notice that this model contains two signals that the previous models did not: test\_capture\_0 and hold\_1.

You should also notice that the connection file,  $ram4x4\_nocompare\_bist\_con.v$ , instantiates the BIST controller and the RAM collar.

- 12. Exit MBISTArchitect.
- 13. Compile the outputs and run the simulation using the following script. Verify that the final signature is 8482e23a.

```
shell> runsim
```

Answer "No" to the question about finishing.

14. Examine the synthesis template script generated.

The synthesis file,  $ram4x4\_nocompare\_synth.script$ , in your results directory provides a template script for compiling and synthesizing the BIST controller model in the Design Compiler environment.

15. If you have time, and want to explore more of the available algorithms for the compressor architecture, repeat this exercise specifying one of the other algorithms—such as Diagonal or Checkerboard—instead of the default March 2 algorithm.

## **Exercise 7: Running BIST at Full-Speed**

This exercise will take approximately 20 minutes. We will generate BIST circuitry using the default values for MBISTArchitect with the exception of adding the library and BIST changes required to run at full speed.

**FULL SPEED** is defined as clocking with back to back read/write cycles.

1. Change to the following working directory:

shell> cd \$MBISTNWP/full\_speed/design

2. List the design files you will be using in this exercise:

shell> ls -ltr \*

3. Change directories to the *full\_speed/results* directory:

cd ../results

4. Invoke MBISTArchitect:

shell> mbistarchitect

- 5. Click on the **Memory** block in the Control Panel graphic pane. This will start the process to load the "Full speed" memory model.
  - a. Click on the **Browse** button, then navigate to ../design directory.
  - b. Double click the *lab13.atpg* file. A list of files displays, click on *Full\_speed.atpg*, then click **Load**. The **Full\_speed** model now appears in the available Models list.
  - c. Select the **Full\_speed** model, then click **Add**.
  - d. Click OK.

You've just added the memory model for BIST insertion.


6. Click on the **Controller** block in the Control Panel graphic pane.

Now you can modify the specific settings to enable the generation of the FULL SPEED memory BIST controller. You should now see the "Setup Mbist Controller" panel.

- a. Select the **Controller Options** tab at the top right of the "Setup MBIST Controller" panel.
- b. Make sure that the **System Clock** is selected in the Type of Memory Clock.
- c. Select the **Setup Pipelining...** button at the bottom left of the "Setup MBIST Controller" panel.

You should now see the "Setup Pipeline Staging" panel come up.

- i. Select Pipeline Stages
- ii. Select Add Pipeline Controller Registers of Different Depths
  - a. Set #**Input Stages** = 0
  - b. Set **#Output Stages** = 2
- iii. Set **Position of the Comparator** = 1
- iv. Select Placement of Delay Stages
  - a. Select No Delay Set
- v. Click **OK** in "Setup Pipeline Staging." The following figure displays the settings for this dialog box.

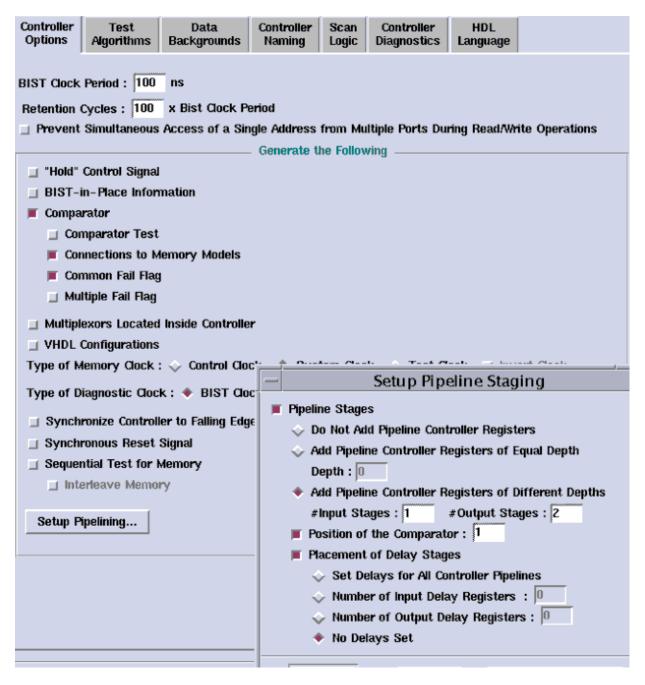

- d. Click **OK** in the "Setup Mbist Controller" panel.
- 7. Click **Run** in the Control Panel. This will generate the BIST circuitry.
- 8. Click **Save BIST** and click OK. This will generate the BIST circuitry and add to the BIST model.

9. Click View Saved Design Files.

Next, look at the files you just generated. You should see three new files.(Full\_speed\_bist.v, Full\_speed\_bist\_con.v, Full\_speed\_tb.v). Look at the \*\_bist.v file and try to identify the new pipeline registers.

- 10. What makes the memory model different in AT Speed vs. FULL Speed? Look at the memory models and compare them.
  - a. Open up another shell window:

```
shell> cd $MBISTNWP/mbist/full_speed/design
```

b. Use your text editor to chose and view the library file.

```
shell> vi lab13.atpg
```


You will see two RAM model definitions in this library file. The first is called At\_speed and the second is called Full\_speed.

Try and identify all the differences between these two models.

- 11. Next, we will verify the BIST logic works properly. Use the BIST Controller you just generated with the Verilog model of the memory and resimulate to see if everything works.
  - a. Open up another shell window

```
shell> cd $MBISTNWP/mbist/full_speed/results
shell> runsim
```

b. A window displays with the message "Are you sure you want to finish?" Click No.

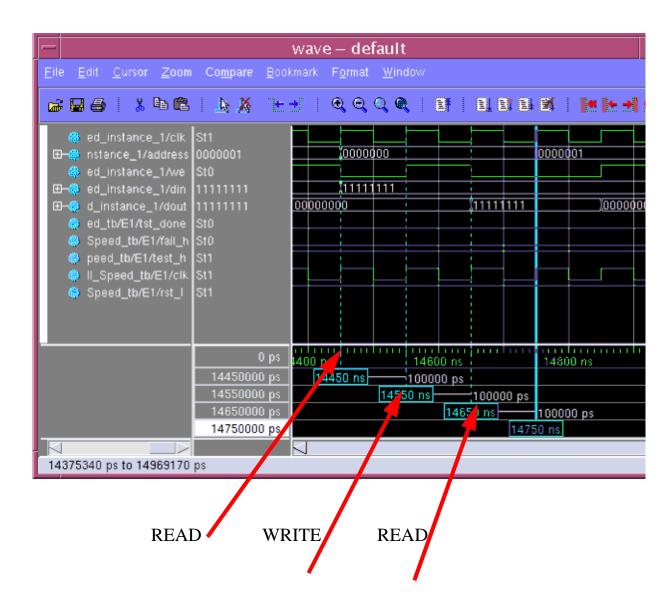

c. Review the wave - default window pane.

Separated by time cursors are 3 cycles of interest for the first back-to-back RWR operation for address 0.

## **Extra Credit**

To do additional speed comparisons go through steps 1 - 11 again but this time select the At\_speed model in steps 5b and 5c. Skip step 6.

- Compare the verilog of the \*\_bist.v files. What are the differences and why?
- Compare the Verilog expected data and the number of cycles in the 2 testbench file. What are the differences and why?

## **Test Your Knowledge**

- Why do you need pipelining stages to test your memory at Full-Speed?
- What two things do you need to change to accomplish Full-Speed Memory BIST?
- What are the advantages and disadvantages of doing Full-Speed memory BIST?

## **Lab Summary**

You should now be able to take a memory that can perform back-to-back read/write cycle and generate a memory BIST circuit to do Full Speed testing of that memory.

## **Exercise 8: Adding BIST for Bidirectional Memories**

This exercise should take approximately 10 minutes to complete.

This exercise demonstrates BIST insertion for a RAM with a bidirectional data bus. In this exercise, you will duplicate the default run you performed in another exercise, then examine the generated outputs to understand the circuitry that MBISTArchitect creates.

- 1. Change to the \$MBISTNWP/mbist2/bram4x4/design directory.
- 2. Examine the model defined in *bram4x4.atpg*. Notice the data\_inout statement declaration for the bidirectional data bus "dio".
- 3. Change to the ../results directory.
- 4. Invoke MBISTArchitect.
- 5. Load the ../design/bram4x4.atpg library.
- 6. Add the bram4x4 model to the list of memory models for BIST insertion.
- 7. Add default BIST circuitry to this model.
- 8. Save the default outputs, with the default names.
- 9. Exit the tool.
- 10. Compile the outputs and the memory model (../designs/bram4x4.v) then simulate the testbench. Create a new work directory called work for the compilation and simulation results. You can use the ../design/vsim\_setup.do file to setup the simulation and format the transcript. Name the trace file trace.log. If you need assistance with this process, refer back to Exercise 2: Verifying the BIST Circuitry.

## **Exercise 9: Adding BIST for ROMs**

This exercise should take approximately 30 minutes to complete.

In this exercise, you will use a dofile to add BIST circuitry to test a ROM. This exercise uses a ROM64x16 model.

- 1. Change to the \$MBISTNWP/mbist2/rom64x16/results directory.
- 2. Look at the following dofile:

```
shell> more ../design/rom64x16.do
```

The contents should appear as follows:

```
load library ../design/rom64x16.lib
add memory models rom64x16
set obs s -compress
set mb com -low 32
run
report bist
save bist -r
exit
```

This dofile sets up for ROM BIST circuitry generation, runs the insertion, and saves the default outputs with the default names to the current directory.

The ROM BIST insertion process is very automated. MBISTArchitect recognizes memory models without defined write cycles as ROMs. When you add a ROM model during a session, MBISTArchitect automatically sets the algorithm type to ROM. An architecture with a compressor, not a comparator, supports ROM testing. Thus, you must specify that the BIST controller *not* contain a comparator. You then additionally specify for MBISTArchitect to generate a compressor using the Setup Mbist Compressor command.

3. Invoke MBISTArchitect without the GUI using a dofile:

4. Examine each of the generated files in the current (*rom64x16/results*) directory.

```
rom64x16_bist.v rom64x16_bist_con.v
Compressor_lib.v rom64x16_tb.v
```

5. Run the simulation using the following script and examine the results.

```
shell> runsim
```

Answer "No" to the question about finishing.

### **Common BIST Variations**

# Module 4 Memory BIST-In-Place

This module will give you a basic understanding of how to create, connect, and integrate BIST structures using the Memory BIST-In-Place tool. The lab exercises at the end of this module will give you experience in running through the process flow of Memory BIST-In-Place.


# **Objectives**

Upon completion of this module, you will be able to:

- Define the Memory BIST-In-Place flow
- Launch the Memory BIST-In-Place tool
- Define the files used in the tool to create BIST structures

# **Memory BIST-In-Place Flow**

## **Memory BIST-In-Place Flow**

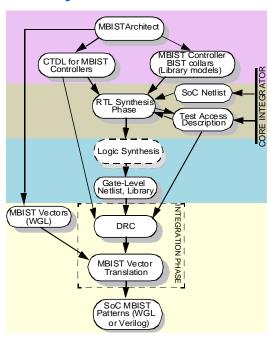

4-2 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation


Memory BIST-In-Place automates the insertion of Memory BIST structures for embedded memory test in a System-on-a-Chip (SoC) design. This includes:

- the insertion of BIST collars around the original embedded memories
- the connection of memories to the inserted BIST controller(s)
- the synthesis of access structures in order for BIST controllers to be accessed from the SoC periphery
- pattern translation

The BIST controllers and memory collars are generated from the standalone Mentor Graphics Memory BIST tool, MBISTArchitect.

# **Memory BIST-In-Place Flow Overview**

#### Memory BIST-In-Place Flow Overview

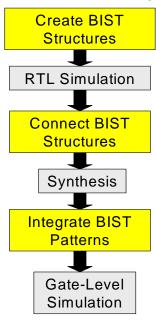

#### **BIST Generator**

input: MBISTA library

output: RTL BIST logic, Verilog TB, WGL, CTDF

#### **BIST Insertion and Stitching**

input: Verilog design, library, WGL, RTL BIST

logic, CTDF

output: BISTed design, RTL access logic, CTAF

#### **DRC and Pattern Conversion**

input: Gate level Verilog design, ATPG library,

CTDF, CTAF

output: Design level pattern (WGL/Verilog)

4-3 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

#### Create BIST structures

Invoke the MBISTArchitect tool to generate RTL, BIST logic, a Verilog test bench, and WGL and Core Test Description Files.

#### • RTL Simulation

Run the Mentor Graphics ModelSim tool to simulate the design. You can also run a gate-level simulation later in the process.

#### • Connect BIST structures

Run Memory BIST-In-Place in the Synthesis mode to connect BIST structures and output a bisted design, RTL access logic, and Core Test Access Files.

#### Synthesis

Run the bisted design through a synthesis tool.

## • Integrate BIST patterns

Run Memory BIST-In-Place in the Integration mode to perform a design rules check and to generate patterns.

### • Gate-Level Simulation

Run the Mentor Graphics ModelSim tool to simulate the design.

### **Creating BIST Structures**

### **Creating BIST Structures™**

- **♦ Uses MBISTArchitect**
- ♦ Requires Memory BIST models for input
- Creates RTL BIST models
  - BIST controller
  - BIST collar


4-4 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Model Creation**

# Creating BIST Structures Model Creation

- Model description includes:
  - Pin interface
  - Read/write cycle description
- You can create models:
  - Manually, using basic syntax
  - Graphically, with the MBISTArchitect Model Editor

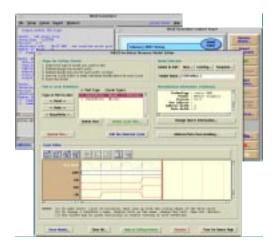

4-5 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Memory Model Example**

#### **Creating BIST Structures Memory Model Example** model ram4x4 (DO3, DO2, DO1, DO0, A1, A0, WEN, DI3, DI2, DI1, DI0) bist\_definition ( data\_out d\_o(DO3, DO2, DO1, DO0); data\_in di(DI3, DI2, DI1, DI0); address addr(A1, A0); write\_enable WEN low; Pin Interface Description min\_address = 0; max\_address = 3; Port and Control $data_size = 4;$ Signals Description read\_write\_port( read\_cycle( change addr; expect d\_o move; Optional information write\_cycle( change addr; change di; wait; assert WEN; wait; Read and Write ) Cycle Description


4-6 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Creating BIST Structures Invocation**

# Creating BIST Structures Invocation

- MBISTArchitect point tool invocation
  - \$ mbistarchitect -library lib\_name -nogui
- ♦ BIST-in-Place GUI invocation
  - \$ bistinplace
  - Click on "Create BIST Structures" step in the Task Flow Manager

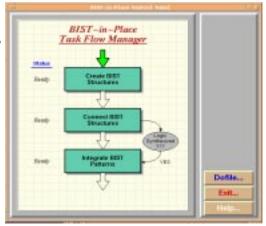

4-7 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Basic Command Flow**

# **Creating BIST Structures Basic Command Flow**

- Load Library <library name>
- Add Memory Model <model name...>
- ♦ Add Mbist Algorithm <port#> <algorithm>
- Set Bistinplace -on
- ♦ Run
- Save Bist
- ♦ Exit

4-8 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Creating BIST Structures Results**


# Creating BIST Structures Results

- RTL BIST logic (ramname\_bist.v)
  - BIST logic
  - Adds specparams to convey the info of connections between RAM and BIST to MBIP
- WGL file (ramname\_bist.wgl)
  - Used for pattern conversion in MBIP pattern integration step
- ♦ CTDF (ramname bist.v.ctdf)
  - Defines procedures to get in test mode and isolation mode

4-9 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Example of RTL BIST Logic**

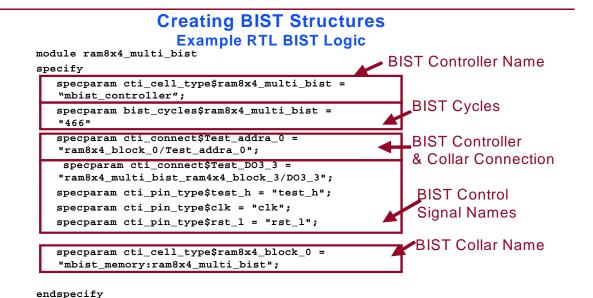


4-10 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Example WGL File**

# Creating BIST Structures Example WGL File

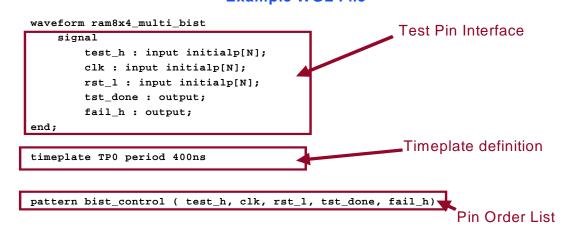

4-11 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Example WGL File (Continued)**

# Creating BIST Structures Example WGL File

```
vector(+, TP0) := [ 1 1 1 X X ];
vector(+, TP0) := [ 1 1 0 X X ];

BIST Initialization
Pattern

loop 450
    vector(+, TP0) := [ 1 1 1 0 0 ];
end

loop 16
    vector(+, TP0) := [ 1 1 1 X 0 ];
end
    vector(+, TP0) := [ 1 1 1 1 0 ];
end
end
BIST Test Pattern
end
vector(+, TP0) := [ 1 1 1 1 0 ];
```

4-12 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Core Test Description File (CTDF)**

### Creating BIST Structures Core Test Description File (CTDF)

```
core ram8x4 multi_bist =
output Test_addr_3[1:0];
output Test_WEN_3;
output tst_done;
output fail_h;
input
  Test_da_o3_0,Test_da_o2_0,Test_da_o1_0,Test_da_o0_0;
input test_h;
input clk;
input rst_1;
clock clk;
clock_lo rst_1;
end;
```

4-13 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Core Test Description File (Continued)**

### Creating BIST Structures Core Test Description File (CTDF)

```
core ram8x4_multi_bist =
  procedure core_isolate =
  core ram8x4_multi_bist;
  timeplate tp1;
  cycle =
  hold clk 0;
  hold test_h 1;
  expect tst_done 0;
  expect fail_h 0;
  end;
end;
Procedure to
  place BIST
  Controller in
  Isolation
  Mode
```

4-14 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Core Test Description File (Continued)**

#### Creating BIST Structures Core Test Description File (CTDF) Procedure to place core ram8x4\_multi\_bist = **BIST** Controller into procedure core\_test run\_bist = core ram8x4\_multi\_bist; Test Mode timeplate tp1; probe tst\_done, fail\_h, clk, rst\_l; Pins to be monitored pattern\_file ram8x4\_multi\_bist.wgl; during BIST test Test pattern file name hold test\_h 1; end; end;

4-15 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Connecting BIST Structures**

### **Connecting BIST Structures**

- Uses Memory BIST-In-Place Synthesis mode
- Requires
  - RTL or gate-level design (VHDL or Verilog)
  - VHDL or Verilog library
  - BIST design objects created earlier in flow
  - CTDF created earlier in flow
- Inserts/connects BIST structures within hierarchy and to chip-level I/O

4-16 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Connecting BIST Structures Invocation**

# Connecting BIST Structures Invocation

- Can invoke with GUI or as command line only tool
  - \$ bistinplace design\_name -verilog -lverilog verilog\_library\_name -synthesis -gui|nogui



4-17 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

# **Example Command Flow (Setup)**

# **Connecting BIST Structures Example Command Flow (Setup)**

- ♦ Load RTL bist logic
  - load design object ramname\_bist.v
- Load CTDF file
  - load core description file ramname\_bist.v.ctdf
- Define clocks
  - add clock 0 clock\_name

4-18 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Example Continued (Setup)**

# Connecting BIST Structures Example Continued (Setup)

- Specify BIST controller location and RAM/RAM collar correspondence
  - add mbist controller <bist\_controller\_pathname>
     <bist\_controller\_module\_name> <memory\_path\_name>
     Collar <memory\_collar\_module\_name>
- Switch to synthesis mode
  - set system mode synthesis

4-19 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Example Command Flow (Synthesis)**

### Connecting BIST Structures Example Command Flow (Synthesis)

- ♦ Run
  - insert access logic
- Write out RTL access logic and phase decoder
  - save design file\_name -replace
- ♦ Write out CTAF file
  - save core access file\_name -replace
- Write driver files for Design Compiler and Memory BIST-In-Place integration mode
  - save driver files -logic\_synthesis file\_name -integration file\_name
- ♦ Exit
  - exit


4-20 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Connecting BIST Structures Results**

# Connecting BIST Structures Results

- Core Test Access File (CTAF)
  - Contains mapping information between BIST controller and design pins
  - Recommended file naming:
    - <design\_name>.ctaf or .access
- RTL access logic and phase decoder
- Driver files for downstream tools
  - Design compiler synthesis script
  - MBIP integration mode

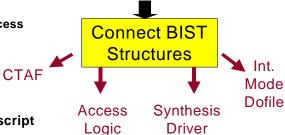

4-21 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Connecting BIST Structures Dofile**


### Connecting BIST Structures Example Dofile

```
load design objects ram8x4_bist.v
add mbist controller mbistc ram8x4_bist
    /U1/mem_a -collar ram8x4_block_0
load core description ram8x4_bist.v.ctdf
set system mode synthesis
insert access logic
save design core1_rtl.v -replace
save access file core1_rtl.access -replace
save driver files -logic_synthesis dc.do
-bsda bsda.do -replace
exit
```

4-22 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation


### **Example CTAF File**

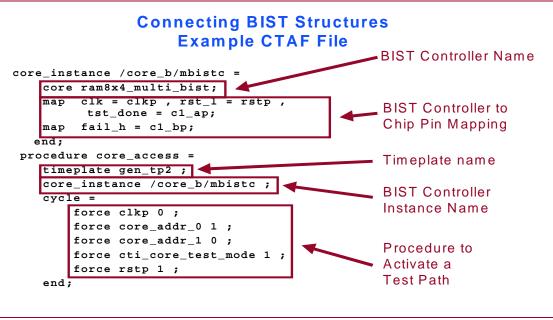

4-23 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Example RTL Phase Decoder**

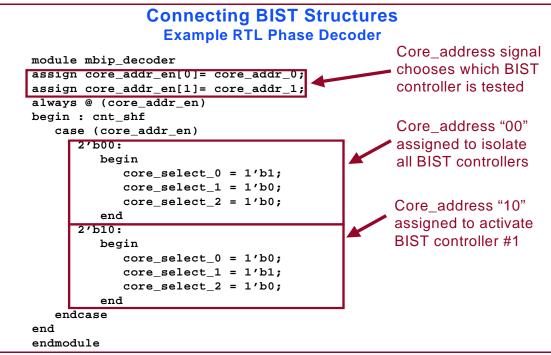

4-24 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Integrating BIST Patterns**

#### **Integrating BIST Patterns**

- Uses Memory BIST-In-Place Integration mode
- Requires
  - Gate-level netlist
  - ATPG library
- Creates design level test vector running the BIST process
  - Verilog and WGL

4-25 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Integrating BIST Patterns Invocation**

# Integrating BIST Patterns Invocation

- Can invoke with GUI or as command line only tool
  - \$ bistinplace design\_name -verilog -library atpg\_library\_name -integration



4-26 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Integrating BIST Patterns Commands**

# Integrating BIST Patterns Example Command Flow (Setup)

- **♦** Load CTDF file
  - load core description ramname\_bist.v.ctdf
- Load CTAF file
  - load core access design\_name.ctaf
- Define clocks
  - add clocks 0 clock name
- Switch to integration mode
  - set system mode integration

4-27 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Continued Example (Integration)**

# Integrating BIST Patterns Continued Example (Integration)

- Specify BIST controller name(s) for pattern conversion
  - add pattern translation -all
- Run
  - run
- Write out chip-level test patterns
  - save pattern file\_name [-verilog|-wgl] -replace

4-28 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Integrating BIST Patterns Dofile**

# Integrating BIST Patterns Example Dofile

```
load core description ram8x4_bist.v.ctdf
load core access my_design.ctaf
add clocks 0 clock_clk1
add clocks 1 reset_rst0
set system mode integration
add pattern translation -all
run
save patterns my_pats -verilog -replace
save patterns my_pats.wgl -wgl -replace
exit
```


4-29 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Integrating BIST Patterns Results**

# Integrating BIST Patterns Results


♦ Verilog pattern for simulation

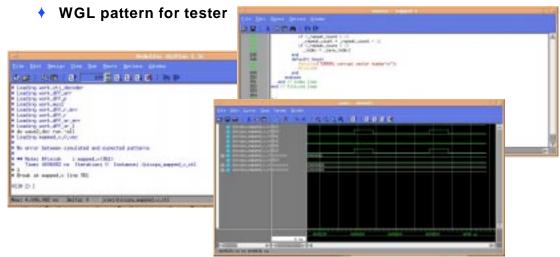

4-30 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Verification**

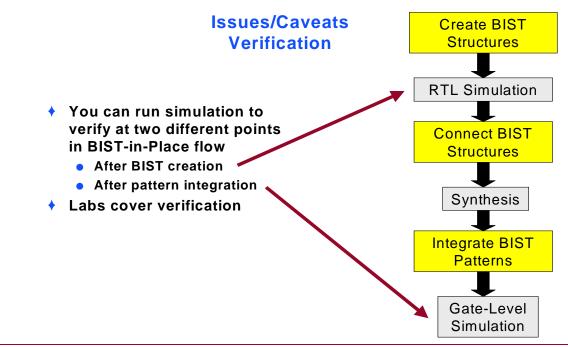

4-31 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### I/O Pads

# Issues/Caveats I/O Pads

 Designs with I/O pads attributes need to be added in Verilog library

```
module iopad1 (pad, cin, i, oen);
 inout pad;
 output cin;
 input i, oen;
 bufif0
                 U1 (pad,i,oen);
 buf
                 U2 (cin,pad);
 specify
   specparam cti_cell_type$iopad1 = "io_pad_bidi" ;
   specparam cti_pin_type$pad = "io_pin" ;
   specparam cti_pin_type$cin = "data_in" ;
   specparam cti_pin_type$i = "data_out" ;
   specparam cti_pin_type$oen = "output_enable_n" ;
    //specparam cti_pin_type$oen = "output_enable";
    //if enable is active high.
  endspecify
endmodule
```


4-32 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

### **Global Signal Connections**

### **Global Signal Connections**

- MBISTArchitect lets you make a connection for bypass logic
- Use the Set Global Pin command to specify the global pins for pin types clock \_bypass and control\_bypass
- ♦ For example, use this command in MBIP synthesis mode:
  - SET Global Pin -clock \_bypass U1/port1
  - SET Global Pin -control\_bypass U2/ port2

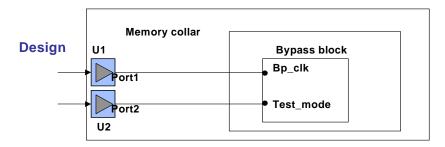

4-33 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

# **BSDArchitect/ Memory BIST-In-Place Integration**

#### **BSDArchitect / Memory BIST-In-Place Integration**

- Memory BIST-In-Place creates a BSDA dofile
- BSDA reserves an instruction register and creates a data register for memory BIST
- ♦ BSDA uses the information in the dofile to run memory BIST
- Example dofile:

```
save driver file -bsda bsda.do -inst mbist -reg mbist_reg -op 0011
add external register mbist_reg 2
add bscan instr mbist -reg mbist_reg -code 0011
add port connection clk buf TCK
add port connection cti_core_test_mode buf mbist
add port connection rst_1 mbist nand update_dr
add nontop port core_addr_0 core_addr_1
set testbench para -tck 200
set external_register interface mbist_reg \
-capture out1 out2 -update core_addr_0 acore_addr_1
set mbist interface -instr mbist -shift_in 10 10 \
-shift_out xx 10 -cycle 0 156
run
save bscan -r
```

4-34 • Memory BIST Training Workbook: MBIST In-Place

Copyright © 2002 Mentor Graphics Corporation

Memory BIST-In-Plac

### **Module 4: Lab Exercises**

The following exercises take you through the Memory BIST-In-Place process flow illustrated in this lesson.

Exercise 10: Setting Up MBISTArchitect Outputs —You will create a memory BIST structure using MBISTArchitect, then generate the files needed for use with Memory BIST-In-Place.

Exercise 11: Inserting BIST Controllers using Memory BIST-In-Place —You will insert the BIST controller and synthesize the design.

Exercise 12: Translating BIST Patterns to the SoC Level —As the final step in the Memory BIST-In-Place process flow, you will translate the BIST patterns to the chip-level.

Exercise 13: Full Flow Exercise — You will run through the entire process again using a different design. To make things faster, you will run through various scripts which take you through the process.

### **Exercise 10: Setting Up MBISTArchitect Outputs**

The purpose of this exercise is to use MBISTArchitect to create the output files needed by Memory BIST-In-Place. You will generate a BIST structure for a design, mbip.v, that has three 4x4 RAMs and one 8x4 RAM.


Now that you are familiar with the MBISTArchitect GUI and its command line interface, we will invoke MBISTArchitect through Memory BIST-In-Place. The Memory BIST-In-Place GUI provides a task flow manager that makes creating BIST structures easier. For every command that the flow guide executes, do the following:

- 1. Change to the \$MBISTNWP/mbist4/ram8x4 directory.
- 2. Invoke Memory BIST-In-Place shell> \$MGC\_HOME/bin/bistinplace
- 3. From the GUI, click on **Create BIST Structures**.

The BIST Structures Creating Flow Guide opens to the first step.




- 4. Load the *mbist.lib* design library. Click **Click Here to Set Up...** to set up the Load Libraries information. In the new window, select the mbist.lib library and click **Load**. Close this window.
- 5. Click **Next** >>> to move to the Add Memories step, then set up the Add Memories information as shown. You will be adding one 8x4 RAM and three 4x4 RAMs for BIST insertion. This shares multiple RAMs with one BIST controller.

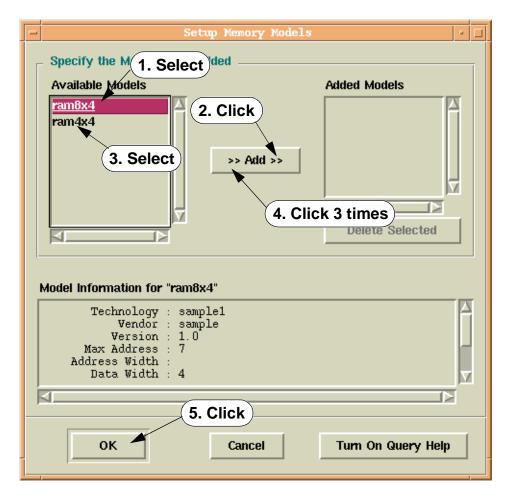

- 6. Continue to the next step in the flow guide. Since you will be using the default algorithm setting, there is no need to set up any information for this step.
- 7. Continue to the next step in the flow guide. You are now at the Specify Controller Options step. For this exercise, you will create multiplexers

outside of the controller, in the BIST collar block, and create the necessary output files for use with Memory BIST-In-Place.

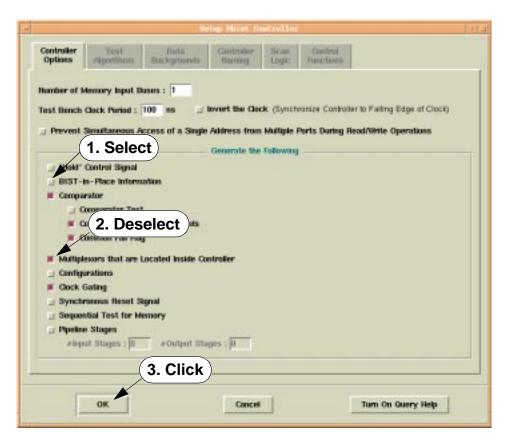

- 8. From this point on, you will want to use the default settings. Click **Next** >>> until you get to the Generate BIST Logic step.
- 9. Click **Next** >>> to run the BIST circuitry generation process.
- 10. Click **Next** >>> until you get to the Save Results step. Set this up to generate BIST-In-Place files, then click **OK**.
- 11. Click **Next** >>> twice and Close Flow Guide.
- 12. From the MBISTArchitect command line window, list the generated outputs.

MBISTA> system Is ram8x4\*

Because you specified for the tool to save Memory BIST-In-Place information, MBISTArchitect generated a total of FIVE files. These files include:

- ram8x4\_multi\_bist.v The RTL-level BIST logic.
- ram8x4\_multi\_bist\_con.v The connection model for the controller and the RAM collar.
- ram8x4\_multi\_tb.v The testbench that instantiates and tests the BIST model.
- ram8x4\_multi\_bist.v.ctdf The CTDF file.
- ram8x4\_multi\_bist.wgl The WGL pattern file.
- 13. Examine the generated outputs.
- 14. Exit MBISTArchitect.
- 15. Exit Memory BIST-In-Place.
- 16. Compile the model outputs and simulate the testbench to verify the BIST structure using the given script.

```
shell> runmsim
```

Answer "No" to the question about finishing.

# **Exercise 11: Inserting BIST Controllers using Memory BIST-In-Place**

In this exercise, you will be continuing through the design flow of Memory BIST-In-Place, building on the data created in the previous exercise. This exercise steps you through the process of inserting BIST controllers on the RTL level.

- 1. Ensure that you are still in the \$MBISTNWP/mbist4/ram8x4 directory.
- 2. Invoke Memory BIST-In-Place in synthesis mode.

```
shell> $MGC_HOME/bin/bistinplace MBIP.v \
    -verilog -lverilog vlib -synthesis -nogui
```

Memory BIST-In-Place has two modes upon which you can invoke the tool: synthesis and integration. Here we invoked in synthesis mode in order to replace a RAM with the BISTed RAM generated in the previous exercise. This mode also creates access logic to a BIST controller and a connection to an SoC. All outputs in this mode are at the RTL level.

The -lverilog switch specifies the Verilog RAM library used in the design file.

3. Load the BISTed RAM information.

```
SETUP> load design objects ram8x4_multi_bist.v
```

4. Schedule the insertion of the BIST controller into the SoC design. Actual insertion does not take place until you transition the tool into the Synthesis mode.

```
SETUP> add mbist controller core_b/mbistc ram8x4_multi_bist \
mem_a -c ram8x4_multi_bist_ram8x4_block_0 \
core_b/mem_b -c ram8x4_multi_bist_ram4x4_block_1 \
core_c/mem_c -c ram8x4_multi_bist_ram4x4_block_2 \
core_c/core_e/mem_d -c ram8x4_multi_bist_ram4x4_block_3
```

This command places the BIST controller in /core\_b/mbistc.

You can also run the *add\_mbist.do* dofile to keep from having to type the whole thing.

5. Load the core test description file.

#### SETUP> load core description ram8x4\_multi\_bist.v.ctdf

This file contains information on how to test and isolate a BIST controller.

6. Switch to Synthesis mode.

SETUP> set system mode synthesis

7. Insert access logic.

BISTINPLACE> insert access logic

The Insert Access Logic command initiates all the actions specified during the setup mode. These include:

- Replacement of memories by the BIST collar equivalents.
- Connection of the BIST collars to the BIST controllers.
- Insertion of the MUXes to provide access to the BIST controller from SOC pins.
- Insertion of logic to provide isolation conditions for the BIST controller.
- 8. Save the results.
  - a. Save the RTL level access logic to core1\_rtl.v and modified SoC netlist to BIP\_cti.v

BISTINPLACE> save design core1\_rtl.v -all -replace

b. Save the CTAF file which includes information on how to access the BIST controller from the SoC level.

BISTINPLACE> save access file core1\_rtl.access -replace

c. Save the script files necessary for downstream tools.

BISTINPLACE> save driver files -logic\_synthesis dc.do -include \
MBIP\_cti.v -integration int.do -replace

The scripts saved are as follows:

- dc.do Design Compiler script for the RTL access logic.
- -include BIP\_cti.v Inserts an include statement in the SoC level netlist with the names of the synthesis-generated files.
- *int.do* Script file for Memory BIST-In-Place integration mode.
- 9. Exit the tool.
- 10. At this point, you will synthesize the RTL design using a logic synthesis tool such as Design Compiler. Since we cannot run Design Compiler here, examine the *runDC* and *dc.do* scripts provided in this directory.

## **Exercise 12: Translating BIST Patterns to the SoC Level**

In this exercise, you will be continuing through the design flow of Memory BIST-In-Place, building on the data created in the previous exercise. This exercise steps you through the process of translating the BIST patterns to the SoC level.

- 1. Ensure that you are still in the \$MBISTNWP/mbist4/ram8x4 directory.
- 2. Examine the dofile *int.do*. It should look something like this:

```
load core description ram8x4_multi_bist.v.ctdf
load core access core1_rtl.access
add clock 0 clkp
add clock 1 rstp
set gate report error
set gate level design
set drc hand c2 ignore
set system mode int
report cores
add pattern translation -all
run
save patterns mapped.v -verilog -replace
save patterns mapped.wgl -wgl -replace
exit -d
```

The first step is to load in the core test description file (ram8x4\_multi\_bist.v.ctdf), which describes how to get in to test mode and isolation mode of the BIST controller, and core access file (core1\_rtl.access), which describes the procedure for accessing the BIST controller for test purposes.

After defining the design's clocks (clock=clkp and reset=rstp), you set the system mode to cti or integration mode. This initiates a set of design rules checks. Then you tell the tool to translate all patterns (Note: If you have multiple memories and/or multiple controllers, you could translate patterns for only a subset of these), and then run, which creates chip-level vectors to control the BIST operation. You then save patterns in both Verilog (for simulation/verification) and WGL (for test program) formats.

3. Invoke Memory BIST-In-Place in integration mode. You will be invoking on the dofile you created in the previous exercises.

```
shell> $MGC_HOME/bin/bistinplace MBIP_cti.v -verilog \
    -lib atpglib -integration -dof int.do -nogui
```

- 4. Scroll back through the transcript to see the results of the steps described previously.
- 5. Verify the chip-level BIST test patterns.

This step performs a final simulation of the chip-level BIST operation, simulating them to ensure there are no mismatches.

```
shell> runfinalsim
```

Answer "No" to the question about finishing. You should see the comment "No error between simulated and expected patterns."

#### **Exercise 13: Full Flow Exercise**

This exercise follows the same process flow as the previous exercises, but gives you the opportunity to work on a different design. This exercise demonstrates the use of MBISTArchitect for generating BISTed memory models. In addition, this exercise takes you through the process of inserting BISTed memories and connecting the BIST circuitry at the chip-level with Memory BIST-in-Place (an option to MBISTArchitect). This exercise goes through the entire chip-level memory BIST process.

- 1. Change to the \$MBISTNWP/mbist4/picdram/data directory.
- 2. Invoke MBISTArchitect.

First you will invoke MBISTArchitect to generate a BIST structure for a RAM called *picdram* in the design *design\_noscan.v*.

shell> \$MGC\_HOME/bin/mbistarchitect

3. Load a design library and add memories.

Click on the Memory models block in the MBISTArchitect Control panel.

The MBISTArchitect library is located in ../libs/ram.atpg. Click the **Browse...** button to find and select the appropriate library. Navigate up one level and into the *libs* directory. Select the *ram.atpg* library, click **OK** in the File Browser dialog and then click **Load**. You should see two models appear in the Available Models field.

The next step is to Add Memories. This means you are choosing the memory models you want to BIST from the library that you just loaded.

Select picdram from "Available Models" and click >> **Add** >>. You should see this model description listed under "Added Models." If you click on picdram, you can view model information in the "Model Information" area.

Click **OK** to close the Setup Memory Models dialog box.

#### 4. Specify algorithms.

Click on the line between the Controller and RAM blocks in the Control Panel. Here you can see the list of all available algorithms the tool supports. The March2 algorithm, which is the default (shown on the Controller block), is the algorithm we'll be using in this lab. It is already selected by default, so you can just **Cancel** out of this dialog.

#### 5. Specify controller options.

You have a lot of flexibility in setting up the Memory controller. Click on the Controller block in the Control panel to see these options.

In this case, we want to put multiplexors under the Memory collar block (as opposed to putting them in the controller block), since there is only one memory being BISTed. Therefore, unselect the option to create a configuration that has Multiplexors Located Inside Controller.

We also want to turn clock gating off so make sure you unselect the option Clock Gating (the system clock is used for the memory).

Also, we want to insert BIST-in-place in the design, so check the option for BIST-in-Place information. Click **OK** when you are finished.

#### 6. Generate BIST logic.

We are now ready to perform a Memory BIST generation. You need only click the **Run** button to generate the BIST logic. Notice how the compressor block disappears from the Control Panel. That is because we did not choose to use a compressor, but instead are using a comparator to determine whether the memory passes the BIST process.

#### 7. Save the results.

The last step is to save all results. Click on the **Save BIST...** button. When the Save BIST Results dialog appears, check all the boxes to select all the options. Then click **OK**.

The tool writes out a total of six files, which you can see in the transcript area:

- piccdram\_bist.v BIST Model
- picdram\_bist\_con.v Connected Model (RAM collar and BIST controller)
- *picdram\_tb.v* Test bench
- picdram\_bist.v\_dcscript DC synthesis script
- *picdram\_bist.v.ctdf* CTDF file
- picdram\_bist.wgl WGL format pattern file

#### 8. Exit MBISTArchitect.

You have just created BIST structures for your memory model - so you now have a "BISTed" memory. In other words, you have a memory model with a BIST collar, a BIST controller to control the BIST operation for this memory, as well as other files (testbench, core test definition, DC synthesis script, and WGL pattern file) that will be used downstream.

You are now ready to insert these BIST structures into the chip-level design. For this process we will run a series of scripts.

9. Verify the operation of the BISTed model.

You are now going to run a simulation of the RTL BIST model you created. To do this, execute the following command:

```
shell> runsim1
```

Answer "No" to the question about finishing.

This script compiles the BIST design objects and runs the generated testbench on the model.

Notice the march2 algorithm as its shown in the Wave window. Expand the Wave window. You can **Zoom** > **Zoom Full** to see the whole BIST process, or zoom into various parts by clicking your middle mouse button and drawing a box around a particular area. You may also need to expand the leftmost area where the signals are displayed to see their full names.

Basically what you are seeing is the test clock (clk), the reset signal (rst\_l), the test signal (test\_h), the test\_done signal (tst\_done), the fail flag (fail\_h), followed by the clock, address, we, din, and dout of the memory model. Notice the read/write operations and the address incrementing up and down the address space, as occurs during the march test. The tst\_done signal goes high when the BIST operation completes.

Use **File** > **Quit** from the ModelSim EE window to close Modelsim, and this time enter Yes, that you want to quit.

#### 10. Run BIST-in-Place synthesis.

The next step is to insert the BISTed memory and controller into the design. We will do this via a script that runs the Memory BIST-in-Place tool in synthesis mode. The end result is that we will have an RTL design that includes the inserted memory model with BIST collar, BIST controller, access logic, phase decoder, and all the appropriate connections. To perform this operation, execute the following command:

#### shell> runsyn

Scroll up through the transcript of BISTINPLACE. The main steps that were performed include copying the original design, inserting the controller, connecting the controller to the memory, and replacing the memory with the BISTed memory. The tool then creates access logic to the chip-level, mapping the controller I/O to chip-level pins. The tool then saves the design (mbip\_rtl.v) and access file (mbip.access).

The design file (mbip\_rtl.v) now needs to undergo synthesis, as the next phase of BIST-in-place, integration mode, requires a gate-level design. Integration mode also uses the access file (mbip.access) as described in the next step.

#### 11. Run BIST-in-Place integration

In a normal design flow, you would synthesize the RTL design created during BIST-in-Place synthesis (mbip\_rtl.v) to gates. However, due to time constraints, we will use a design that has already been synthesized. Therefore, the final step is to perform rules checking on the gate-level design to ensure safe testing when the access path is sensitized and then create chip-level patterns to initiate the memory BIST operation. This is all done in the integration phase of BIST-in-Place.

To view the steps the tool will perform, view the integration script, runint. It should look as follows:

```
$MGC_HOME/bin/bistinplace design_noscan_cti.v -verilog \
    -lib ../libs/atpglib -int -nogui <<!!
load core description picdram_bist.v.ctdf
load core access mbip.access1
add cl 0 ramclk1
add cl 1 clk2
set sys m cti
add pattern translation -all
run
save pattern mapped.v -verilog -r
save pattern mapped.wgl -wgl -r
!!</pre>
```

The first step is to invoke BIST-in-Place on the synthesized Verilog design (design\_noscan\_cti.v). You then load in the core test description file (picdram\_bist.v.ctdf), which describes how to get in to test mode and isolation mode of the BIST controller, and core access file (mbip.access1), which describes the procedure for accessing the BIST controller for test purposes.

After defining the design's clocks (clock=ramclk1 and reset=clk2), you set the system mode to cti or integration mode. This initiates a set of design rules checks. Then you tell the tool to translate all patterns (Note: If you have multiple memories and/or multiple controllers, you could translate patterns for only a subset of these), and then run, which creates chip-level vectors to control the BIST operation. You then save patterns in both Verilog (for simulation/verification) and WGL (for test program) formats.

To run the integration process, execute the script:

shell> runint

12. Verify the chip-level BIST test patterns.

This step performs a final simulation of the chip-level BIST operation, simulating them to ensure there are no mismatches.

To perform this checking, execute the following command:

shell> runsim2

You should see the comment "No error between simulated and expected patterns."

# Module 5 Memory Modeling for MBISTArchitect

This module gives you a basic understanding of how to create, load and verify MBISTArchitect memory models. The lab exercises at the end of this module also give you experience creating, verifying and troubleshooting a variety of memory model types.

## **Objectives**

Upon completion of this module, you will be able to:

- Define inputs and outputs.
- Understand clocking schemes.
- Understand memory models.
- Understand troubleshooting procedures.

## **A Memory Model:**

#### A Memory Model:

- Is an abstract data model that defines the memory ports and the read/write protocol of each port
- Is the only "design" input to MBISTArchitect
- Is not a simulation model
- Uses a basic DFT library model description
- Adds its own constructs to support BIST insertion
- Ignores the constructs it does not need

3-2 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

The MBISTArchitect tool uses an abstract data model that defines the memory ports and read/write protocol of each port. This model adds its own constructs to support BIST insertion. The memory model is the only input to MBISTArchitect. See the next slide for an example of a memory model and a description of memory model syntax.

You can add or change memory models using the Memory Model Editor in the MBISTArchitect Control Panel. See "Memory Model Editor" on page 5-4 for a sample of the Memory Model Editor.

## **Memory Model Syntax**

#### **Memory Model Syntax**

```
model model_name(list_of_pins)(
       bist definition (
                                             address <name> (list_of_pins);
data_in <name> (list_of_pins);
data_out <name> (list_of_pins);
                                            data_inout <name> (list_or_pins);
data_inout <name> (list_of_pins);
clock <pin> <active_state>;
write_enable <pin> <active_state>;
read_enable <pin> <active_state>;
output_enable <pin> <active_state>;
chip_enable <pin> <active_state>;
control <pin> <active_state>;
                                                                                                                                                                                   Input/Output Definitions
                                             dont_touch <name> <active_state> <dir>;
                                             tech = <tech name>;
                                             vendor = <vendor_name>;
version = "number";
message = "message_text";
                                                                                                                                                                                    Memory Identification
                                             address_size = <number>;
min_address = <lowest address>;
max_address = <highest address>;
                                                                                                                                                                                    Memory Size Information
                                             data_size = <data_bus_bits>;
addr_inc = <number>
write_port (
                                             write_cycle ( ... ))
read_port (
                                                                                                                                                                                    Read and Write Cycles
                                                  ead_port (
read_cycle (
                                       read_cycle ( ... ))
) // end bist_definition
// end model description
```

3-3 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


The MBISTArchitect tool shares the library format used by the DFT/ATPG tools FastScan, FlexTest, and DFTAdvisor. You need only to add the special "bist\_definition" section if you have an existing memory model in the DFT library format. MBISTArchitect does not use the gate-level simulation primitive information found in the primitive construct. The other DFT/ATPG tools use this information, but MBISTArchitect simply ignores it.

The term "pin" in this context refers to the individual inputs and outputs of the memory at the cell boundary. A pin can be defined as a scalar bit or an array. An array represents a bus and is sometimes referred to as a "wide pin". The pin name must exactly match the port names specified in the associated Verilog or VHDL simulation model (both in name and case).

See "Loading Library Files and Models" on page 5-5 for instructions on how to load the library file, add a memory model, and run MBISTArchitect to generate memory BIST logic.

## **Memory Model Editor**

#### **Memory Model Editor**

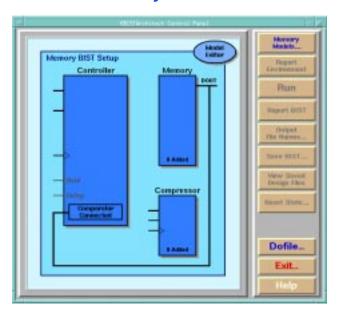

3-4 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

You can add or change memory models using the Memory Model Editor in the MBISTArchitect Control Panel. For more information on how to use the Memory Model Editor, refer to "Using the Memory Model Editor" in Chapter 3 of the *MBISTArchitect Reference Manual*.

## **Loading Library Files and Models**

#### **Loading Library Files and Models**

- Follow these steps to run MBISTArchitect, load libraries add memories, and generate:
- Launch MBISTArchitect
- Load a library
- ♦ Add a model
- ♦ Run MBISTArchitect
- Save the output and exit

3-5 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

Follow these steps to invoke, set up, and run the MBISTArchitect tool using the minimum set of commands needed to generate memory BIST logic.

1. Invoke MBISTArchitect.

To invoke MBISTArchitect, enter the following command at the shell:

shell> \$MGC\_HOME/bin/mbistarchitect

2. Load a Library.

After tool invocation, you must load a DFT library that contains the memory model(s) for which to add BIST logic. To load a DFT library interactively during the session, enter:

MBISTA> load library dft.lib

Where *dft.lib* is the name of the library. You can also load a library at invocation by using the -Lib switch.

#### 3. Add a Memory Model.

The next step is to add a memory model from the loaded library to the BIST configuration. For example:

#### MBISTA> add memory models ram4x4

Where *ram4x4* is the name of the memory model for which you want to add BIST logic.

#### 4. Run MBISTArchitect.

After you have loaded a library and added a memory model, you can run MBISTArchitect to generate default BIST logic:

MBISTA> run

#### 5. Save the Output.


MBISTArchitect saves files in Verilog (default) or VHDL format. After memory BIST generation, you need to save the output:

MBISTA> save bist

#### 6. To end an MBISTArchitect session, enter:

MBISTA> exit

## **Defining Inputs/Outputs**

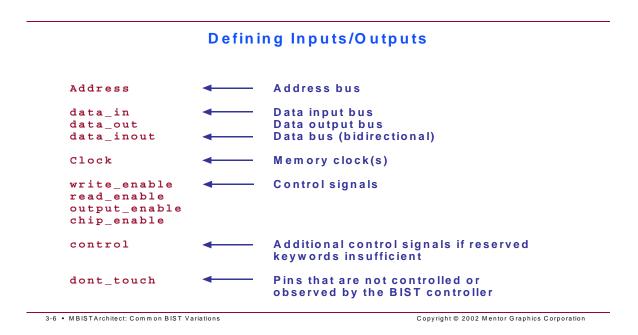

**Defining Buses** You should define the address and data buses in the same manner as the simulation model for the memory. If a bus in your simulation model is declared as an array, then declare the same bus in your memory model header as an array. Consider the following memory model header segment:

```
model ram4x4 (A, DI, DO, WEN)
( bist_definition (
    address A (array = 1:0;);
    data_in DI (array = 3:0;);
    data_out DO (array = 3:0);
...
```

When MBISTArchitect reads this model, it assumes the address and data ports on the HDL model are declared as arrays and will use the STD\_LOGIC\_VECTOR as the data type when generating the matching bus in the BIST controller. You can change the signal type to STD\_CLOGIC\_VECTOR to specify it at the end of each statement.

Now consider the following memory model header segment:

```
model ram4x4 (DO3, DO2, DO1, DO0, A1, A0, WEN, DI3, DI2, DI1,
DI0)
( bist_definition (
    data_out d_o(DO3, DO2, DO1, DO0);
    data_in di(DI3, DI2, DI1, DI0);
    address addr(A1, A0);
```

Each bus element in the model header is declared as an individual scalar bit, the same as the simulation model. Notice that the bist\_definition segment allows you to collect the individual bit under a single bus name and the ordering is significant. MBISTArchitect assumes that the bit order is from most significant (MSB) to least significant (LSB). MBISTArchitect uses this pin ordering when it connects the BIST controller to the RAM model. Thus, mismatches between the specified library pin ordering and the HDL model pin ordering can result in an improperly-connected BIST controller.

**Memory Clock**s You can define one or more memory clocks for synchronous memories.

**Control Signals** The active state can be either **high** (default) or **low**. During the read and write cycles, control signals always remain at the value *opposite* this state except when explicitly asserted. The following example declares an active low write enable named "wrt":


```
write_enable wrt low;
```

If the control signal operates a bidirectional data bus, the active state required to control tri-state buffers for the data bus follows the signal's active state. You must specify either **tri\_l** or **tri\_h** to define this tri-state output buffer control state. When you define a model with a bidirectional data bus, you must specify a tri-state output control state for at least one of the defined control signals.

## The Dont\_touch Keyword

#### The Dont\_touch Keyword

- Memory pins not connected to the BIST controller
  - Examples: supply pins, status output pins

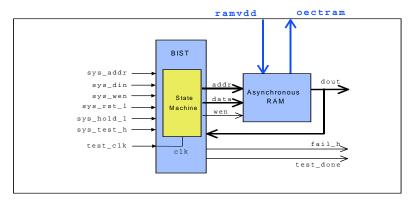

3-7 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

The dont\_touch keyword allows you to specify pins that have no need to be controlled by the BIST controller. The syntax for specifying dont\_touch ports is as follows:

```
dont_touch pin_name assert_state direction;
```

The *assert state* is either **high** (default) or **low** and defines the pin's active state. Dont\_touch pins always remain at the value *opposite* their assert state. The *direction* is either **input** or **output**.

The default is input for all vector types except "data\_out" and "data\_inout." The following example declares two dont\_touch ports — an active low input port named "clr" and an active high output port named "refentso":

```
dont_touch clr low;
dont_touch refcntso out;
```

## **Understanding Clocking Schemes**

#### **Understanding Clocking Schemes**

- Asynchronous Memory
  - No memory clock input
  - A change in inputs starts a read or write cycle
- Gated Memory Clock
  - In system mode, the memory clock connects through a mux to the system clock
  - In test mode, the memory clock connects to a controllerrelated clock signal
- ♦ Non-Gated Memory Clock
  - Memory clock (mem\_clk) connects to the system memory clock

3-8 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


#### The Primary Goal


Your job in creating a memory model is to define a read and write cycle that meets the minimum timing constraints as specified by the manufacturer, but at the same time runs at the fastest test speed. Introducing just one extra test clock cycle in a read operation, for example, can increase the total test time for a March2 algorithm by 50%.

There are different clocks that you need to reference when defining the read and write cycles for a memory model. This discussion refers to the "BIST clock" as the primary input clock to the BIST controller. This clock is named "clk" by default and is used to advance the BIST state machine to the next state. As the state machine enters each state, memory control signals are asserted or de-asserted and memory bus values can be changed. The term "memory clock" (mem\_clk) refers to the clock input to a synchronous memory. A memory can have one or more clock inputs. Asynchronous memories don't have a clock input. During testing, a "test clock" is also generated as described next.

## **Understanding Clocking Schemes**

#### **Understanding Clocking Schemes (Continued)**

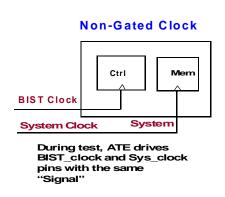

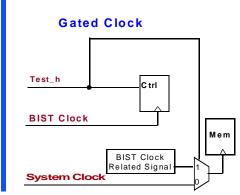

MBISTArchitect has a variety of clock connection options. Use these commands to control the clock connection:

Setup Memory Clock [-System|-Test[Noinvert|Invert]|-Control]
Set controller clock [-positive|-negative]

3-9 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


- Non-Gated (also referred to as System)—During test (and during actual system use), the memory clock is driven by a system clock.
- Gated —There is a MUX (gate) attached to the clock input of the memory.
  During system use, the MUX is set so the memory clock is driven by a
  system clock. During test mode, the MUX is set so that the memory is
  driven by a BIST related clock. There are three important variations of this
  described in the following clocking diagrams.

The key advantage of the Non-Gated approach is that it greatly simplifies getting clock timing correct for normal system use. Depending on the clock-tree generation process and the severity of the minimal skew requirements, using the Non-Gated approach can be almost mandatory. It is the default mode.


The major disadvantage to this approach is that the tester must be set up to drive the system clock input and the bist clock input with the same signal. There are potential skew issues with this due to tester limitations. However, these are often mitigated by the tester clock being much slower than the expected system clock.

## **Clock Connections**

#### **Clock Connection**

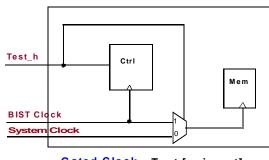

Gated Clock Test [noinvert]

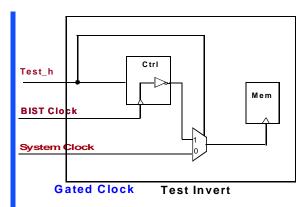


MBISTArchitect has a variety of clock connection options. Use these commands to control the clock connection:

Setup Memory Clock [-System|-Test[Noinvert|Invert]|-Control]
Set controller clock [-positive|-negative]

3-10 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

#### **Clock Connection (Continued)**

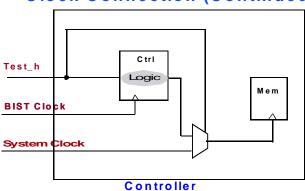

 $\boldsymbol{N}$  ote: Fastest possible clock out of ctrl is 1/2 rate of the BIST clock or even slower

MBISTArchitect has a variety of clock connection options. Use these commands to control the clock connection:

Setup Memory Clock [-System|-Test[Noinvert|Invert]|-Control]
Set controller clock [-positive|-negative]

3-11 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

When Memory clocking is set to anything other than -System, there will be a MUX instantiated which will select between a system clock and a BIST-related signal. This MUX will be very obvious when you use commands that place MUX related RTL in the collar. Otherwise, it may be buried in the BIST controller RTL.


- When the SETup MEmory Clocking -Test command is specified, the BIST clock will be sent to the BIST controller and directly to the MUX.
- When the SETup MEmory Clocking -Test INVERT command is specified, the BIST clock will be routed to the BIST controller. It will be passed through an inverter and then routed to the MUX.
- When the SETup MEMory Clocking -Controller command is specified, the BIST controller will use internal logic to drive a signal that is to act as the clock. That signal will be routed to the MUX. The BIST controller itself is a synchronous, single-phase clock, design. So, it cannot change the state of this clock signal any faster than once per BIST clock. So, the clock it generates cannot be any faster than one-half the speed of the BIST clock (one clock for going high, one-clock for going low). Depending on the operation needed, the BIST controller may keep the output clock constant for several BIST clock cycles. Often, this is to calculate and set up conditions for a rising clock edge on the memory.

There is a separate command: SET COntroller Clock [-positive | negative] that can be used in conjunction with the clock connection command to deal with memories that lock their inputs on falling edges rather than rising edges. Also, the two commands can be used to effect half-cycle phase shift which can overcome timing violation issues. This is discussed later in this workbook.

## **No Memory Clock**

#### No Memory Clock

- Asynchronous memory
- test clk drives the BIST state machine

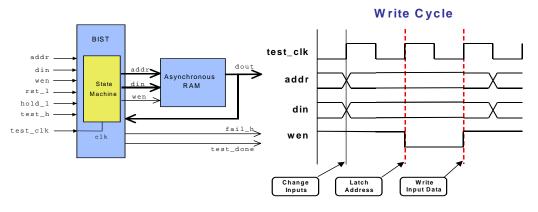

3-11 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


Asynchronous memories don't have a clock input, so a change in one or more of the inputs starts a read or write cycle. In this write cycle example, a change on the **addr** address bus starts the write cycle. After a minimum settling time, the **wen** write enable signal goes active low which causes the memory to latch the new address. Sometime before the **wen** signal goes inactive high, new data is placed on the **din** bus and allowed to settle. When **wen** goes inactive high, the data is written to memory and the write cycle ends.

## **A Gated Memory Clock**

#### **A Gated Memory Clock**

While under test, mem\_clk is driven by the BIST controller.

Set Memory Clock -control

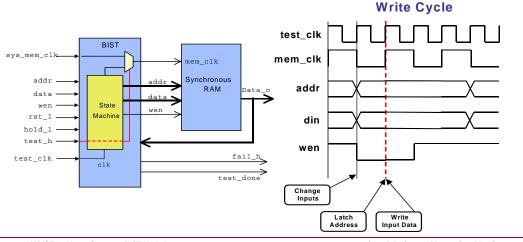

3-12 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


If the memory model is synchronous, the default is -system. Notice in the illustration that a reference clock called **test\_clk** drives the BIST state machine. When **test\_h** goes active, the multiplexor prevents the **sys\_clk** from reaching the memory and the BIST state machine drives the **mem\_clk** input. The BIST controller drives this clock input as it would any other control signal. Notice that the **mem\_clk** frequency is half the **test\_clk** frequency (at best), and that the controller has total control over the memory clock.

## A Non-Gated Memory Clock

#### A Non-Gated Memory Clock

#### Non-gated mem\_clk is in phase with test\_clk

Setup Memory Clock -System (default)

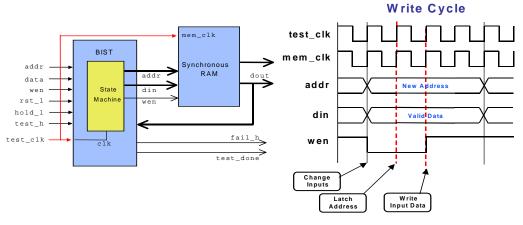

3-13 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


If your design environment doesn't permit a gated clock, MBISTArchitect can generate a BIST controller without one, as shown in the illustration. In this case, the source for the **test\_clk** is also tied to the mem\_clk and they are both the same frequency and in phase (assuming no skew). Assuming that you must allow for minimum setup and hold times, the total test time for this non-gated clock scheme is about the same as the gated clock scheme (four test clock cycles). By shifting the two clocks out of phase, it is possible to cut this write cycle time in half.

## **An Inverted BIST Clock**

#### An Inverted BIST Clock

#### Non-gated mem\_clk is 180 out of phase with test\_clk

Setup Memory Clock -Test invert

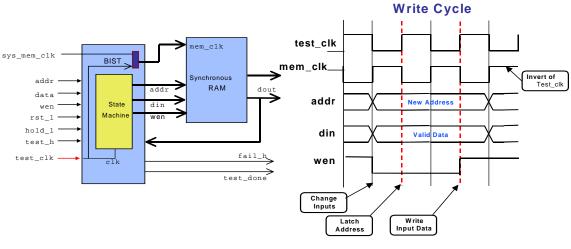

3-14 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


You can use a setup command in MBISTArchitect to tell the BIST state machine to respond to the falling edge of the clock. In this case, the falling edge of the clock input to the state machine causes the memory input buses and control lines to change. One half cycle later, the rising edge of the clock input to the synchronous memory captures the input data. This scheme reduces the write cycle from four cycles to two, and thus cuts the write cycle test time in half.

### **Test Clock**

#### A Test Clock

Memory clock is connected to a mux. In test mode, the clock is driven from a signal generated by the BIST controller.

Setup Memory Clock -Test

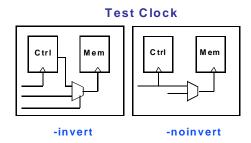


3-15 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

When using the test clock scheme, the memory clock connects to a mux. In system mode, the clock is driven from the system memory clock. In test mode, the clock is driven from a signal generated by the BIST controller. This signal is a reassignment of the BIST controller clock. The generated RTL will be modified for the controller assigned test clock scheme to include the controller assignment of the clock and the clock mux.

Two types of test clock connection are supported, -noinvert and -invert.

## **Control Retention Test Delay**

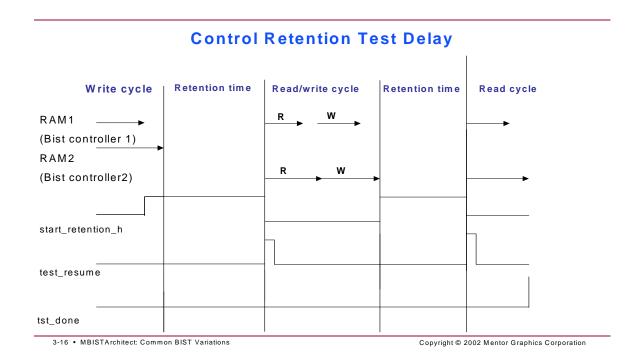

MBISTArchitect lets you control the delay value used in the WGL and simulation test bench when waiting to assert the resume signal. This is used to continue the BIST session following a retention test synchronization delay.

You can specify the delay value, as a multiple of the number of controller clock cycles. The default value is 100 cycles. The report environment reports the delay value.


The diagnostics capability is added by using the Setup Retention Cycles command followed by a value defining the delay in cycles. For example, to set a delay value of 50 cycles, enter:

setup retention cycles 50

## **Memory Ports**

#### **Memory Ports**

- Memory ports define their read and write capability
  - Can have any number of read ports, write ports or read/write ports

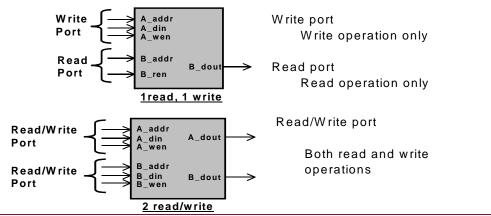

3-17 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

A memory component can have any number of read ports, write ports, or read/write ports. The memory model syntax can match the port scheme of any memory component.

## **Defining Memory Ports**

#### **Defining Memory Ports**

- Each unique port requires its own port definition
- Port definitions are not explicitly labeled
- MBISTArchitect identifies a port by the signals controlled within the read/write cycles



- ♦ Write Port
  - Contains write cycle only
- Read Port
  - Contains read cycle only
- Read/Write Port
  - Contains both a read cycle and write cycle

3-18 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


Each unique port requires its own port definition and the definitions are not explicitly labeled. MBISTArchitect identifies a port by the signals controlled within the read/write cycles. Only the write port is identified as a port for the add mbist algorithm command.

The first port that is defined within the bist\_definition is referred to as port #1 and the MBISTArchitect Model Editor will enter a comment identifying it as such. The second port defined in the model will be referred to as port #2, and so on.

## **Port Definition Example 1**

#### **Port Definition Example 1**

♦ Example: 1 read, 1 write memory

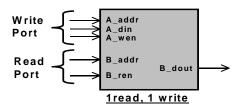


3-19 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

#### **NOTES:**

## **Port Definition Example 2**

#### Port Definition Example 2

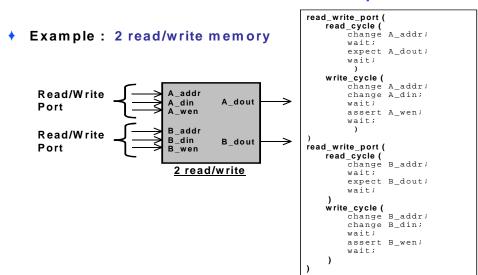


3-20 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

#### **NOTES:**

## Read/Write Cycle Syntax

#### Read/Write Cycle Syntax

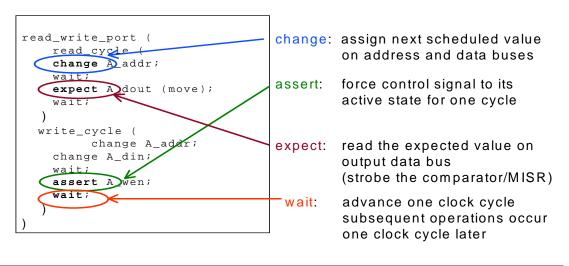

3-21 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

You use *event* statements to describe the action of the inputs and outputs during a read and write cycle. You use the **change** statement to assign the next scheduled value on the address bus and data buses.


You use the **assert** statement to force a control signal to its active state during that test clock cycle. The control signal returns to its inactive state on the leading edge of the next test clock cycle, unless asserted again with another assert statement.

The **expect** statement tells the BIST controller that the data on the specified bus is valid, starting with the leading edge of that test clock cycle. This tells the BIST controller that it can read the data for use with the comparator or MISR.

Inserting a **wait** statement is like inserting the leading edge of the next test clock cycle (the clock that drives the BIST state machine). Any signals described in the change, assert, or expect statements that follow the wait statement become active or are valid on the leading edge of that clock cycle.

### The Read Cycle

#### The Read Cycle

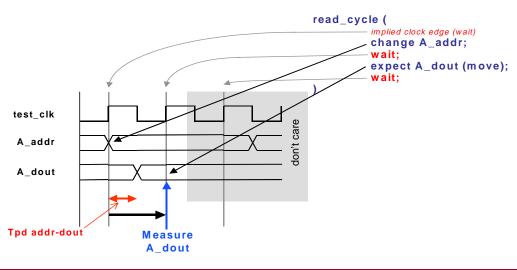

3-22 • MBISTArchitect: Common BIST Variations


Copyright © 2002 Mentor Graphics Corporation

A read or write cycle often starts with a memory input becoming active, such as an address bus or a chip enable line. This change occurs on the rising edge of the clock that is advancing the state of the BIST controller. You can also think of a wait statement as a rising edge of the reference clock and a read or write cycle as starting with an implied wait statement, even though the wait statement is not explicitly written into the model. You should place an explicit wait statement at the end of a read or write cycle to mark the end of the cycle.

In this example, the change in address marks the beginning of an asynchronous read cycle. After a specified period, the data appears on the output data bus. You can assume that this period is less than one test clock cycle. The next wait statement marks the next clock edge and the expect statement following that tells MBISTArchitect that the data is valid and it is okay to measure the output at that clock edge.

### **The Write Cycle**

#### The Write Cycle

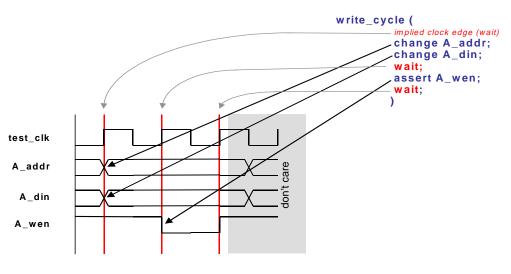

3-23 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

In this asynchronous write cycle, the change in address occurs on the rising edge of the test\_clk and marks the beginning of an asynchronous write cycle. The new input data is also changed at this time, although typically, the change could occur later in the cycle without violating the timing constraints. The next wait statement marks the next rising edge of the test\_clk. A\_wen goes active low, which latches the address into the memory. On the next clock edge (wait statement), A\_wen is released because it is not explicitly activated in the memory model. This action writes the data to memory and ends the write cycle.

An **expect** statement can include an optional **move** modifier that specifies when an event executes. The **move** modifier means that the MBISTArchitect tool can move this event to a later clock cycle when optimizing the BIST structure. The **move** option usually applies to data outputs. The MBISTArchitect tool uses the **move** option only when it is trying to optimize circuitry while combining read and write cycles together to form read/write/read cycles or other large cycles.

### **Interpreting Data Sheets**

### **Interpreting Datasheets**

- Read and Write cycles can be determined from datasheets
- Dependent timing constraints are handled with "wait" statements
  - Setup and hold constraints
  - Sequential behavior


3-24 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

# A Synchronous RAM Example

### A Synchronous RAM Example

### 1 read/write - synchronous RAM

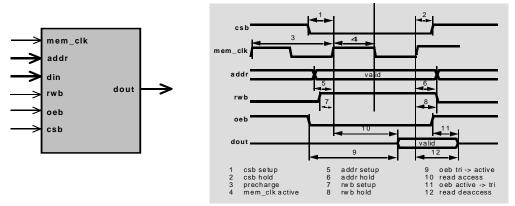


Read cycle timing diagram


3-25 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

### A Synchronous RAM Example

### A Synchronous RAM Example (Continued)

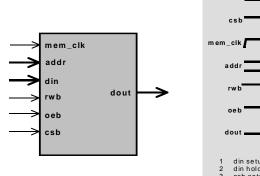

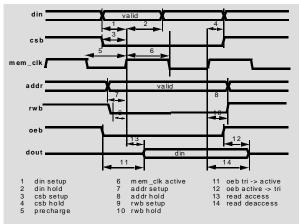

Write cycle timing diagram

3-26 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

# A Synchronous RAM Example

#### A Synchronous RAM Example (Continued)

#### ♦ Input/Output Definitions

```
model ram_1rw (addr, din, rwb, oeb, csb, mem_clk, dout)(

bist_definition (

address addr (array = 4:0;);
data_in din (array = 3:0;);
output_enable oeb low;
write_enable rwb low;
chip_enable csb low;
clock mem_clk high;


tech = "technology_1";
vendor = "acme_silicon";
version = "1.0";
message = "Synchronous SRAM, 1rw";
address_size = 5;
min_address = 0;
max_address = 31;
data_size = 4;
```

3-27 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

# **Interpreting the Read Cycle Timing**

### Interpreting the Read Cycle Timing

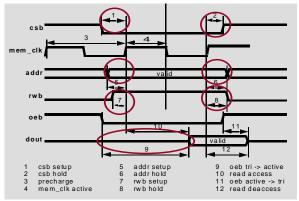

Read cycle timing diagram


- Read cycle is synchronized by mem\_clock rising edge
- Look for dependencies
  - csb setup before mem\_clk
  - addr setup before mem\_clk
  - Tpd oeb to dout
  - Tpd mem\_clk to dout
  - csb hold after mem\_clk
  - addr hold after mem\_clk
  - rwb setup and hold???
    - No rwb is inactive
- No other dependencies

3-28 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

# **Defining the Read Cycle**

### **Defining the Read Cycle**

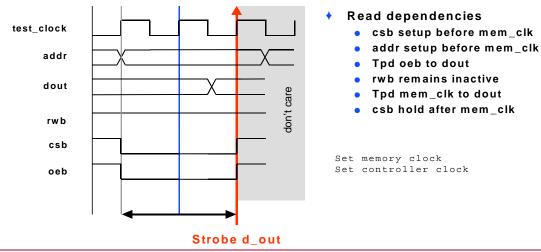


3-29 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

# **Defining the Read Cycle**

### **Defining the Read Cycle (Continued)**

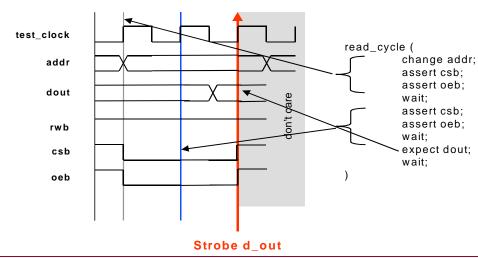


3-30 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

# Interpreting the Write Cycle Timing

### Interpreting the Write Cycle Timing

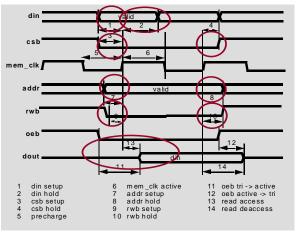

Write cycle timing diagram


- Write cycle is synchronized by mem\_clock rising edge
- Look for dependencies
  - csb setup before mem\_clk
  - addr setup before mem\_clk
  - rwb setup before mem\_clk
  - Tpd mem\_clk to data valid
  - csb hold after mem\_clk
  - addr hold after mem\_clk
  - rwb hold after mem\_clk
  - oeb setup and hold?
    - No oeb is for observe only
    - oeb can be asserted
- No other dependencies

3-31 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

### **Defining the Write Cycle**

### **Defining the Write Cycle**

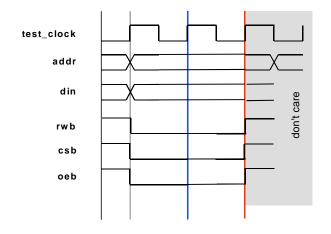


- Write dependencies
  - csb setup before mem\_clk
  - addr setup before mem\_clk
  - din setup before mem\_clk
  - rwb setup before mem\_clk
  - Tpd oeb to dout
  - Tpd mem\_clk to data valid
  - csb hold after mem\_clk
  - addr hold after mem\_clk
  - rwb hold after mem\_clk

3-32 • MBISTArchitect: Common BIST Variation

Copyright © 2002 Mentor Graphics Corporation

# **Defining the Write Cycle**

### Defining the Write Cycle (Continued)

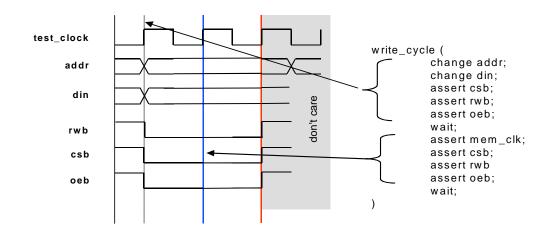


3-33 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

### **Defining Constant Values**

### **Defining Constant Values**

- Some signals can be held constant during both read and write cycles
  - For example, output enable, chip enable
- These signals can be redefined in the memory model
  - Redefine the active state to be the inactive state
  - Remove the assert statements from the read and write cycles

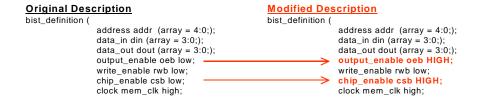

3-34 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

### **Defining Constant Values**

### **Defining Constant Values (Continued)**

Modified read and write cycles

```
read_cycle (
                                  write_cycle (
          change addr;
                                             change addr;
          wait;
                                             change din;
          assert mem_clk;
                                             assert rwb;
          wait;
                                             wait;
          expect dout;
                                             assert mem_clk;
          wait;
                                             assert rwb
)
                                             wait;
                                  )
```


3-35 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


### **Logical to Physical Mapping**

#### Logical to Physical Mapping

- Example: 64-bit RAM
  - 16 words, 4 bits per word
  - 16 physical columns by 4 physical rows
  - 4 words per row

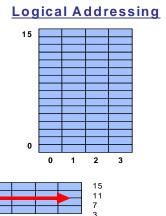

### **Physical Addressing**

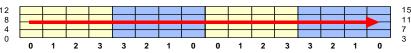

3-36 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation


Externally, the memory illustrated may appear to consist of sixteen 4-bit words. The internal physical layout of a memory is organized in a two-dimensional matrix, in this case a common word per row configuration. Memory designers use different physical configurations in an effort to reduce cell space, reduce power consumption, increase yield (by including spare rows and columns), and accommodate mapping to standard chip pin assignments. In this example, there are four words per row.

### The Effect of Physical Topology

#### The Effect of Physical Topology

- Apply checkerboard algorithm
  - Should ensure inversion between every bit

Physical topology compromises algorithm effectiveness

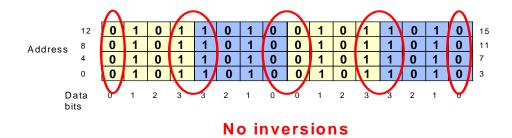

3-37 • MBISTArchitect: Common BIST Variations


Copyright © 2002 Mentor Graphics Corporation

A checkerboard algorithm detects stuck-at-faults and shorts between adjacent cells by writing alternating 1's and O's to cells as viewed from a logical layout. When the physical layout differs, the inversion of the bits between adjacent cells doesn't always happen, as shown in the illustration.

### **Allowing for Physical Topology**

### **Allowing for Physical Topology**

- ♦ Solution
  - Adjust the data pattern to fit the physical topology
  - Data inverted at addresses 1, 3, 4, 6, 9, 11, 12, 14

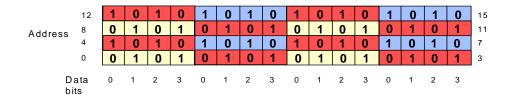

3-38 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

### The Checkerboard Algorithm

#### The Checkerboard Algorithm

- Supports basic "columns per row" architectures
- Library keywords define topology
  - top\_column = number columns (words) per row
  - top\_word defines muxing on address decoder
- Select algorithm with the following command:
  - Add Mbist Algorithms Checkerboard

```
top_column = 4;
top_word = 0;
```

3-39 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

The Checkerboard algorithm reads the physical topology information from the memory model and adjusts the output patterns to create the proper checkerboard pattern among physically adjacent cells. When you are creating the memory model, you must include the physical topology information by placing the following lines within the memory model bist\_definition. Often this information is not found in a standard memory data book and you must request it from the manufacturer. **top\_column=<value>** tells the algorithm the number of words per row. The <value> can be any integer greater than 0. The algorithm uses this value to ensure that the first word of each row is different than the first word of the previous row, thus creating a checkerboard pattern. **top\_word=<value>** tells if multiplexers in the column address decoder. A multiplexer is used to select between the bits of two words that are interleaved. If this is the case, then writing all 1's to one word and all 0's to the other creates a checkerboard pattern. 1 indicates there are multiplexers, 0 indicates there are not.

### **Memory Modeling for MBISTArchitect**

You must use the **Setup Observation Scheme -Compare** command when you use the Checkerboard algorithm to compare algorithms. In addition, multiple memories of different topologies can share the same controller. It is only necessary that each memory model contain its own top\_column and top\_word statements.

### **Descrambling Functions**

#### **Descrambling Functions**

- Descrambling provides most flexible topological mapping
  - Used for more complex topological mapping
  - Defines where data is inverted
  - Addresses can also be descrambled
  - Must use "Setup Mux location -controller"

```
descrambling_definition (
    data_in (
        data0_desc = data0 XOR ((addr3 AND (NOT addr0) OR (addr0 AND (NOT addr3));
        data1_desc = data0 XOR ((addr3 AND (NOT addr0) OR (addr0 AND (NOT addr3));
        data2_desc = data0 XOR ((addr3 AND (NOT addr0) OR (addr0 AND (NOT addr3));
        data3_desc = data0 XOR ((addr3 AND (NOT addr0) OR (addr0 AND (NOT addr3));)
)
```

3-40 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

If your memory uses a scheme that "translates" an external address to an internal address or translates the input data in some way for internal storage, you must describe this translation to the Topchecker algorithm. Otherwise, an accurate checkerboard pattern cannot be generated. Usually this kind of information is not found in a standard data book and you must request it from the manufacturer.


The **address** subsection defines the descrambling for the address bus and the **data\_in** subsection defines the descrambling for the data input bus. For each address/data line of the memory there must be a line in the corresponding subsection. For example, if the width of the address bus is 4, there must be four lines in the **address** subsection of the descrambling definition section of the memory model. Similarly, if the width of the data bus is 8, there must be eight lines in the **data** section of the descrambling definition section of the memory model. The names of the descrambled address/data lines are arbitrary but the order of the statements in each section is important.

### **Memory Modeling for MBISTArchitect**

The first statement corresponds to the LSB and the last to the MSB. The supported Boolean operators are BUF, INV, AND, NAND, OR, NOR, XOR, XNOR. Finally, you must define BOTH address and data\_in subsections, regardless of whether or not scrambling information exists for both.

### **Validating a Memory Model**

### Validating a Memory Model

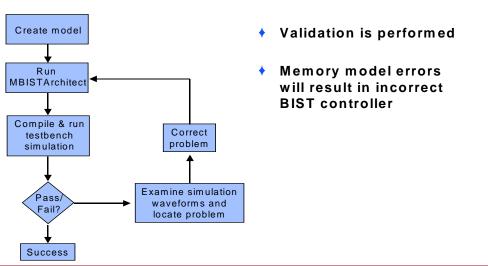

3-41 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

### **User Defined Algorithm**

#### User Defined Algorithm™

- You can define your March-type algorithm
- ♦ Not supported in User Defined Algorithm function:
  - Access to multiple ports at the same time
  - Non-March type algorithms (such as Galpat)
  - Example of UDA:

0	0	0	0	0
0	0	0	0	0
0	0	0	1	0
0	0	0	0	0

- 1.W rite all 0 except base cell
- 2.Read first cell
- 3.Read base cell
- 4. Repeat 2-3 for all cells

3-42 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

Prior to inclusion of the Mentor Graphics User Defined Algorithm™ function, all of the test algorithms available in the MBISTArchitect tool were precoded into the tool. Adding a new algorithm required engineering work at the factory to support the new algorithm. The User Defined Algorithm functionality removes the precoded test algorithms and replaces them with algorithm definitions, loaded from files, which you can modify prior to BIST generation. All of the algorithms preconfigured as part of the MBISTArchitect tool, except the comparator test and port interaction tests, are defined within the software using this facility.

You can use User Defined Algorithms to define a class of simple March-type algorithms. This capability lets you define algorithms that perform a single memory access operation or more complex activity formed from read and write operations, at each address of a range of memory addresses.

When the memory BIST kernel is active, you can use User Defined Algorithm commands to load algorithms into the tool and change the set of available algorithms. The UDA algorithms use the UDA language that follows a Verilog-like style. Algorithms are composed of these parts:

- Tests
- Repetitions
- Steps

Use these commands when working with User Defined Algorithms: Load Algorithms, Delete Algorithms, and Report Algorithms.

User Defined Algorithm Exercises are available at the end of this module so that you can get experience using this MBISTArchitect feature.

### **Troubleshooting a Memory Model**

### **Troubleshooting a Memory Model**

- Three major causes of mismatches
- Incorrect memory model description
  - Re-examine datasheet and memory model
- Additional MBISTArchitect commands required
  - Some memories will require some setup in MBISTArchitect
- Incorrect simulation model or inaccurate datasheet
  - Intended behavior correct, but still getting problems

3-43 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

### **Troubleshooting Example: March2**

#### **Troubleshooting Example: March2**

 $\triangle$  (Wr0),  $\triangle$  (R0, Wr1, R1),  $\triangle$  (R1, Wr0, R0),  $\blacktriangledown$  (R0, Wr1, R1),  $\blacktriangledown$  (R1, Wr0, R0)

- Is data being written correctly during ▲(Wr0)?
  - Yes: write operation is correct
  - No : problem with write operation
- Is data being read correctly on R0 of ▲(R0,W1,R1)?
  - Yes : read operation is correct
  - No : problem with read operation
- Is data being read correctly on R1 of ▲(R0,W1,R1)?
  - Yes: read, write, and rwr operation is correct
  - No: problem optimizing read and write cycles to rwr
- Does incorrect behavior apply to all addresses?
  - Yes: problem is not address dependent
  - No: there may be a problem interfacing last ▲(W0) and first ▲(R0,W1,R1) operations

3-44 • MBISTArchitect: Common BIST Variations

Copyright © 2002 Mentor Graphics Corporation

### **Module 5 Lab Exercises**

- Using the Model Editor (20 minutes)
- Reviewing a User Defined Algorithm (20 minutes)
- Running a User Defined Algorithm File (20 minutes)

Memory Modeling for MBISTArchite

### **Module 5: Lab Exercises**

The following exercises introduce you to the Model Editor and User Defined Algorithms.

Exercise 14: Modifying a Template to Match Your Memory Specifications — You will use the model editor to make a working copy of a template, modify the template, and save the model.

Exercise 15: Reviewing a User Defined Algorithm —You will review a User Defined Algorithm (UDA) that has been modified to change the March1 algorithm.

Exercise 16: Running a User Defined Algorithm File—You will run the User Defined Algorithm reviewed in the previous exercise and simulate a memory model which uses the algorithm.

# **Exercise 14: Modifying a Template to Match Your Memory Specifications**

The purpose of this exercise is to give you step-by-step instruction on how to use the Model Editor. You will invoke the Model Editor, make a working copy of a template that comes close to the RAM model you need, modify the working copy to conform to the specifications of your particular RAM, then save the model. Before you begin, you should be aware of the following characteristics of the Model Editor:

- The Model Editor works on the principle of "Correct-by-Construction (CBC)". It will only read and write a complete and syntactically-correct model file.
- The Model Editor works on selected objects. Therefore, in most cases, you must first select an object before you modify or replace that object.
- The Model Editor allows you to save to multiple models to one file. Therefore, during a save operation, only a model with exactly the same name is overwritten in that file. If you save a model by a different name, that model will be appended to the existing models in the file.

### Becoming Familiar with your RAM Input/Output Specifications

1. Examine the following model information:

#### RAM4x16

#### 1-Port Asynchronous RAM with 4 words by 16 bits

Technology: Newest

Version: 1.00 Date: 4/29/96 Inputs/Outputs

a1:0 - Address lines.

d15:0 - Data inputs.

q15:0 - data outputs (tri-state).

oe - Output Enable - active low.

wrt - Write control line. A high state enables writing, a low state enables reading.

Miscellaneous Info: Input and Output buses are defined as wide-pins (arrays) on the simulation model.

### Make a Working Copy of a Similar Template


1. Move to the **mbist3** directory.

shell> cd \$MBISTNWP/mbist3/ram4X16/results


2. Invoke MBIST Architect:

shell> mbistarchitect

3. Click the Model Editor button, then follow the directions below to select a template:

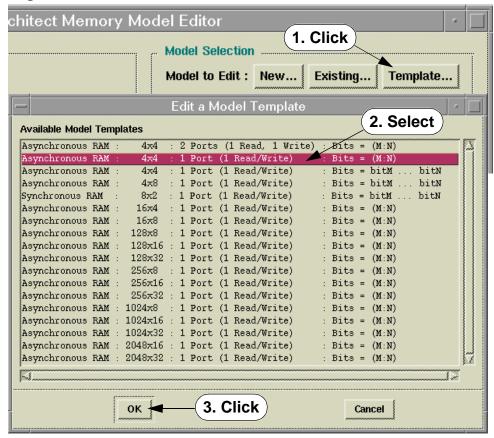

- 4. Change the model name to MY\_RAM4X16\_bussed.
- 5. Click **Save Model...**, then do the following.

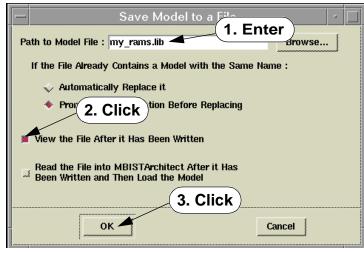

The File Viewer window should appear with the template displayed. At this point, only the model name has changed.


**BEST PRACTICE**: Keep the File Viewer window open and off to the side, so you can examine the updated status of the file after you execute each **Save Model...** command.

#### **Edit the Miscellaneous Information**


- 1. Bring the Model Editor window to the front, then click on **Change Above Information**.
- 2. Change the **Data Width** to 16.
- 3. Change the **Message Text** to read "4x16 RAM".
- 4. Click **OK**.

#### **Edit the Read Cycle Definition**

1. Examine the following vendor timing diagram:

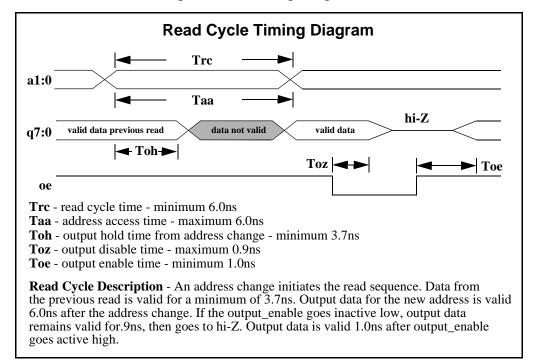

It is helpful to draw a simplified event-driven diagram that uses the test clock as a reference. For this first exercise, you can use the following diagram:

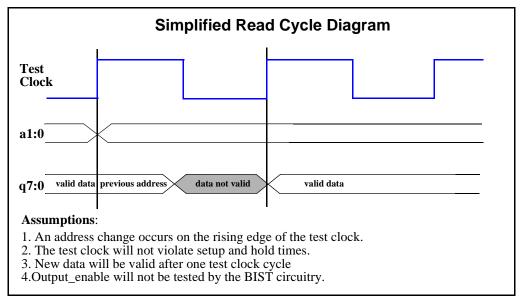


- 2. Verify that the Read Cycle for Port #1 is selected for editing. If not, select "1 Read/Write (Read)", then click Edit the Selected Cycle.
- 3. Click **Define Cycle Pins**, then select the Address definition on the right side of the form.
- 4. Change the **Name** from "addr" to "a", click >> **Add** >>, then click **Change Selected**.
- 5. Select the **Data\_OUT** definition, then change the name from "do" to "q" and change the bus width to "15:0", click >> **Add** >>, then click **Change Selected**.
- 6. Add an Output\_Enable signal called oe. Since you will not be testing this signal, define it as active low even though it is active high. This causes the

BIST controller to hold it in what it thinks is the inactive state (high), when in fact it is the active state (for example, output always enabled).



In the Write Cycle editing session that follows, you will define the write\_enable "wrt" signal as active "high". You can assume this signal is low during the read cycle, therefore you don't have to define it as part of the read- cycle protocol.


- 7. End the Cycle Pin editing by clicking **OK**.
- 8. Look at the Cycle Editor timing diagram. The output data should be valid one test clock cycle after a valid address change, so click on the "q" signal line where shown in Step 1 below. Also, the read cycle is complete within two test clock cycles, so you should shorten the Read Cycle by one test clock cycle, as shown in Step 2 below:

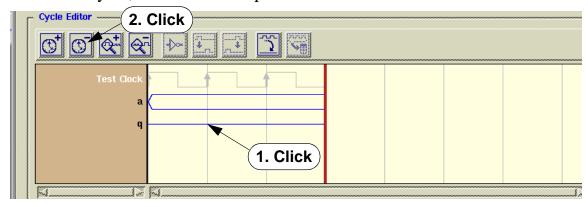


### **Edit the Write Cycle Definition**

In the following sequence, you will learn how to Import a signal definition from the Read Cycle to the Write Cycle.


### 1. Examine the following Write Cycle timing diagram

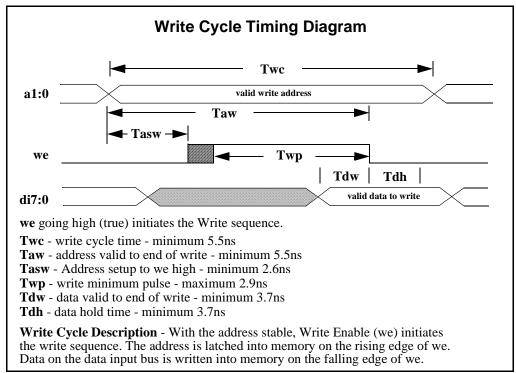

The simplified event-driven diagram below uses the test clock as a reference:

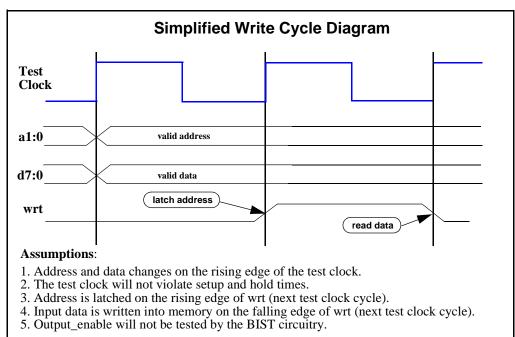

- 2. Select "1 Read/Write (Write)" in the Model Editor window, then click Edit the Selected Cycle.
- 3. Click **Define Cycle Pins**, select the Address definition, then click **Import Pin...**
- 4. Select the Address definition, click **OK**, click >> **Add** >>, then click **Change Selected**.
- 5. Select the **Data\_IN** definition. Change the name from "di" to "d", change the bus width to "15:0", then >> **Add** >> the input to the Write Cycle definition.
- 6. Change the Write\_Enable input to an active high "wrt" signal, then click **OK**.
- 7. Look at the Cycle Editor timing diagram and make it conform to the illustration below:

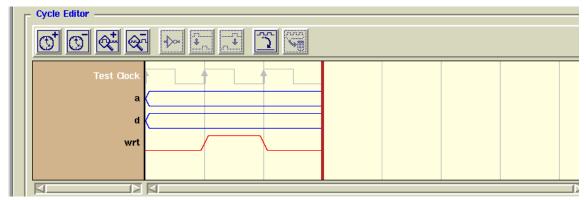

- 8. End the Modeling Editing session by clicking on **Save Model...**, then click **OK**.
- 9. Examine the updated status of the Read and Write Cycle in the File Viewer window. Verify that it corresponds with your understanding of what the syntax should be.

## **Summary**

In this exercise, you modified a template to match the specifications of your particular RAM model. You changed the model name, changed the bus width specification, then modified the read cycle protocol. You then imported the read cycle specification to modify the write cycle protocol. You are now ready to invoke MBISTArchitect on this model and create a bist collar for it.

# **Exercise 15: Reviewing a User Defined Algorithm**

MBISTArchitect contains a User Defined Algorithm (UDA) feature that lets you create your own algorithms. The UDA functionality removes the pre-coded test algorithms and replaces them with algorithm definitions contained in files, which you can modify prior to BIST generation. You would typically create a user defined algorithm if you wanted to modify one of the memory test algorithms.

In this exercise, we will show you an example of a user defined algorithm. The next exercise shows you how to load a dofile that references this algorithm and to run the dofile in MBISTArchitect.

### **Reviewing an Algorithm File**

1. Move to the *mbist3/uda/design* directory.

shell> cd \$MBISTNWP/mbist3/uda/design

- 2. The file named **marchA.dsc** is an algorithm file that has been created to modify the existing March 1 algorithm. Use your favorite text editor or **vi** to open this file.
- 3. This file contains the following sections:
  - Definition
  - Steps
  - Algorithm repetition

The Definition section contains the test name, a summary of the test, and size. This is followed by an algorithm definition that defines the actions to be taken in the algorithm. In this example, it defines the read and write operations performed during the up and down memory test.

### **Definition Section**

```
marchA

Summary:
  test example for a marching algorithm named marchA

Size: Copyright (C) Mentor Graphics Corporation 1999 All Rights Reserved

10n

Algorithm:
    up - write 0
    up - read 0, write 1
    up - read 1, write 0
    down - read 0, write 1
    down - read 1, write 0
    down - read 0
```

The Steps section declares the basic activity across the address space of the memory ports. The step includes the following:

### • addr

The address clause defines what happens to the address register during the step of the algorithm.

#### • data

A string that defines what data values will be used by the operation applied at each address visited by the algorithm step.

## operation

A string that defines the activity, such as a read or write, that is performed at each address visited by the algorithm step.

## **Steps Section**

```
step wSeedUp;
  addr min, max, up, 1;
  data seed;
  operation w;
step rwInvSeedUp;
  addr min, max, up, 1;
  data invSeed;
  operation rw;
step rwSeedUp;
   addr min, max, up, 1;
   data seed;
   operation rw;
step rwInvSeedDown;
  addr min, max, down, 1;
   data invSeed;
  operation rw;
step rwSeedDown;
  addr min, max, down, 1;
   data seed;
  operation rw;
step rSeedDown;
  addr min, max, down, 1;
   data seed;
   operation r;
```

The Repetition section defines the action that will be taken in the algorithm. It includes the following:

#### seed

A string that specifies a common default value to be used by all the steps in the repetition.

## keywords and steps

The begin and end keywords surround the body of the repetition declaration, which is a sequence of step references.

## **Repetition Section**

```
repetition marchA;
    seed 0;
begin
    step wSeedUp;
    step rwInvSeedUp;
    step rwSeedUp;
    step rwInvSeedDown;
    step rwSeedDown;
    step rwSeedDown;
    step rseedDown;
    repetition marchA;
```

Once you have finished reviewing the sample algorithm, close the text editor. In the next exercise, you will load a dofile that references the MarchA algorithm and run the dofile in MBISTArchitect.

# **Exercise 16: Running a User Defined Algorithm File**

In this exercise, you will review a dofile that loads the user defined algorithm reviewed in Exercise 15: Reviewing a User Defined Algorithm. You will also run the dofile in MBISTArchitect and synthesize the design.

## **Running an Algorithm Dofile**

1. Move to the *mbist3/uda/design* directory.

```
shell> cd $MBISTNWP/mbist3/uda/design
```

2. Use your favorite text editor or **vi** to open the *ram4x4.do* file. This file contains commands required to load the design, memory model and the MarchA algorithm.

### ram4x4.do sample

```
loa li ../design/ram4x4.atpg
add me m ram4x4
load algorithm marchA.dsc
add mbis alg 1 marchA
run
save bist -replace
exit
```

- 3. Once you have finished reviewing the sample algorithm, close the text editor.
- 4. You are now ready to run MBISTArchitect and load this dofile. Change to the **results** directory.

```
shell> cd $MBISTNWP/mbist3/uda/results
```

Type the following command to launch MBISTArchitect and run the dofile:

```
shell > mbistarchitect -nogui -dofile ../design/ram4x4.do
```

MBISTArchitect will load the design, memory models, and MarchA algorithm. It will create BIST circuitry and create the following files, it will also save these files and exit the tool:

```
ram4x4_bist.v
ram4x4_bist_con.v
ram4x4_tb.v
```

## **Verifying the BIST Circuitry**

Next, you will use the MBISTArchitect-generated testbench to verify the memory BIST circuitry created by running the dofile.

- 1. Ensure that you are still working in the *\$MBISTNWP/mbist1/uda/results* directory.
- 2. Set up a work directory.

```
shell> $MGC_HOME/bin/vlib work
```

3. Compile the memory simulation model, all BIST models, and the testbench.

```
shell> $MGC_HOME/bin/vlog ../design/ram4x4.v ram4x4_bist.v\
ram4x4_bist_con.v ram4x4_tb.v
```

- 4. Simulate the test driver.
  - a. Invoke the QuickHDL simulator and load the testbench model.

```
shell> $MGC_HOME/bin/vsim ram4x4_tb
```

- 5. Set up the lists by running the following dofile:
  - a. VSIM 1> do ../design/vsim\_setup.do
  - b. This file sets the parameters for the simulation to stop due to **tst\_done** or **fail\_h** going high. It also sets up a List window so you can examine pertinent signals.

6. Run the simulation until it is finished.

VSIM 2> run -all

a. Write the displayed list to a file.

VSIM 2> write list trace.log.uda

b. Quit the simulation.

VSIM 4> quit

- 7. Examine the saved list file. Use whatever editor you prefer to view the *trace.log.uda* file you saved.
- The signals that comprise the columns in this file include (from left to right): tst\_done, fail\_h, the address, the write enable, the data input values, and the data output values.
- The first portion of the testbench tests some system signals.
- The MarchA algorithm is performed as follows:

-W(up) 1450-2150ns -RW(up) 2250-3750ns -RW(up) 3850ns-5350ns -RW(down) 5450-6950ns -RW(down) 7050-8550ns -R(down) 8650-9550ns

## **Trademark Information**

#### **Mentor Graphics Trademarks**

The following names are trademarks, registered trademarks, and service marks of Mentor Graphics Corporation:

 $3D\ Design^{\intercal M},\ A\ World\ of\ Learning(SM),\ ABIST^{\intercal M},\ Arithmetic\ BIST^{\intercal M},\ AccuPARTner^{\intercal M},\ AccuParts^{\intercal M},\ ACcuSim^{\circledR},\ ADEPT^{\intercal M},\ ADVance^{\intercal M}\ MS,\ ADVance^{\intercal M}\ RFIC,\ ACCUPARTNER^{\intercal M},\ ACCUPARTN$ AMPLE™, Analog Analyst™, Analog Station™, AppNotes(SM), ARTgrid™, ArtRouter™, ARTshape™, ASICPlan™, ASICVector Interfaces™, Apprie™ Assess2000(SM), AutoActive®, AutoCells™, AutoDissolve™, AutoFlow™, AutoFlow™, AutoLib™, AutoLinaar™, AutoLinaarm™, AutoLinaarm, Auto BLOCKS™, AutoLogic FPGA™, AutoLogic VHDL®, AutomotiveLib™, AutoPAR®, AutoTherm®, AutoTherm Duo™, AutoThermMCM™, AutoView™, Autowire Station™, AXEL™, AXEL Symbol Genie™, BISTArchitect™, BIST Compiler(SM), BIST-In-Place(SM), BIST-Ready(SM), Board Architect™, Board Designer™ Board Layout™, Board Link™, Board Process Library™, Board Station®, Board Station Consumer™, BOLD Administrator™, BOLD Browser™, BOLD Composer™, BSDArchitect™, BSPBuilder™, Buy on Demand™, Cable Analyzer™, Cable Station™, CAECO Designer™, CAEFORM™, Calibre®, Calibre CB™, Calibre DRC™, Calibre DRC-H<sup>™</sup>, Calibre Interactive<sup>™</sup>, Calibre LVS<sup>™</sup>, Calibre LVS-H<sup>™</sup>, Calibre MDPview<sup>™</sup>, Calibre MGC<sup>™</sup>, Calibre OPCpro<sup>™</sup>, Calibre ORC<sup>™</sup>, Calibre OR PRINTimage™, Calibre PSMgate™, Calibre RVE™, Calibre WORKbench™, Calibre xRC™, CAM Station™, Capture Station®, CAPITAL™, CAPITAL Analysis™, CAPITAL Bridges™, CAPITAL Documents™, CAPITAL H™, CAPITAL Harness™, CAPITAL Harness Systems™, CAPITAL H the complete desktop engineer®, CAPITAL Insight™, CAPITAL Integration™, CAPITAL Manager™, CAPITAL Manufacturer™, CAPITAL Systems™, Cell Builder¹ Station®, CellFloor™, CellGraph™, CellPlace™, CellPower™, CellRoute™, Centricity™, CEOC™, CheckMate™, CHEOS™, Chip Station®, ChipGraph™, CommLib™, Concurrent Board Process(SM), Concurrent Design Environment™, Connectivity Dataport™, Continuum™, Continuum Power Analyst™ CoreAlliance™, CoreBIST™, Core Builder™, Core Factory™, CTIntegrator™, DataCentric Model™, DataFusion™, DataPusion™, DataSolvent™, dBUG™, Debug Detective™, DC Analyzer™, Design Architect®, Design Architect Elite™, DesignBook®, Design Capture™, Design Manager™, Design Station®, DesignView™, DesktopASIC™, Destination PCB®, DFTAdvisor™, DFTArchitect™, DFTInsight™, DirectConnect(\$M), DSV™, Direct System Verification™, DSV™ Documentation Station™, DSS (Decision Support System)™, ECO Immunity(SM), EDT™, Eldo™, EldoNet™, ePartners™, EParts®, E3LCable™, EDGE (Engineering Design Guide for Excellence)(SM), Empowering Solutions™, Engineer's Desktop™, EngineerView™, ENRead™, ENWrite™, ESim™, Exemplar™, Exemplar Logic™, Expedition™, Expert2000(SM), Explorer CAECO Layouti™, Explorer CheckMate™, Explorer Datapath™, Explorer Lsim™, Explorer Lsim FastTrack Consulting(SM), First-Pass Design Success<sup>™</sup>, First-Pass success(SM), FlexSim<sup>™</sup>, FlexTest<sup>™</sup>, FDL (FlexTimition Language)<sup>™</sup>, FlowTabs<sup>™</sup>, FlowTabs<sup>™</sup>, FPGA Stations, FrameConnect<sup>™</sup>, FPGA Stations, FPGA Stat Galileo®, Gate Station®, GateGraph™, GatePlace™, GateRoute™, GDT®, GDT Core®, GDT Designer™, GDT Developer™, GENIE™, GenWare™, Geom Genie™, HDL2Graphics™, HDL Architect™, HDL Architect Station™, HDL Author™, HDL Designer™, HDL Designer Series™, HDL Detective™, HDL Inventor™, HDL Inventor™, HDL Designer Series™, HDL Designer Series Ser Pilot™, HDL Processor™, HDL Sim™, HDL Write™, Hardware Modeling Library™, HIC rules™, Hierarchical Injection™, Hierarchy Injection™, HotPlot®, Hybrid Designer™, Hybrid Station®, IC Design Station™, IC Designer™, IC Layout Station™, IC Station®, ICbasic™, ICcheck™, ICcheck™, ICcheck™, ICdevice™, ICextract™, ICGen™, ICGen™, ICLink™, ICLink™, ICIster™, ICPlan™, ICRT Controller Lcompiler™, ICRLes™, ICextract™, ICVerify™, ICX Active™, ICX Custom Modeling™, ICX Custom Modeling™, ICX Pro™, ICX Project Modeling™, ICX Sentry™, ICX Standard Library™, ICX Verify™, ICX Vision™,  $IDEA\ Series^{TM},\ Idea\ Station^{TM},\ InFORM^{\textcircled{\tiny{M}}},\ IFX^{TM},\ Inexia^{TM},\ Integrated\ Product\ Development^{\textcircled{\tiny{M}}},\ Integration\ Tool\ Kit^{TM},\ INTELLITEST^{\textcircled{\tiny{M}}}$ Interactive Layout $^{TM}$ , Interconnect Table $^{TM}$ , Interface-Based Design $^{TM}$ , IBD $^{TM}$ , IntraStep(SM), Inventra $^{TM}$ , InventraIPX $^{TM}$ , Inventra Soft Cores $^{TM}$ , IP Evaluation Kit $^{TM}$ , IP Factory $^{TM}$ , IP -PCB $^{TM}$ , IP QuickUse $^{TM}$ , IS $^{$ Creation(SM), ITK™, It's More than Just Tools(SM), Knowledge Center(SM), Knowledge-Sourcing(SM), LAYOUT™, LNL™, LBIST™, LBISTArchitect™ Language Neutral Licensing™, Lc™, Lcore™, Leaf Cell Toolkit™, Led™, LED LAYOUT™, Leonardo®, LeonardoInsight™, LeonardoSpectrum™, LIBRARIAN™, Library Builder™, Logic Analyzer on a Chip(SM), Logic Builder™, Logical Cable™, LogicLib™, logio™, Lsim™, Lsim DSM™, Lsim-Gate™, Lsim Net™, Lsim Power Analyst™, Lsim-Review™, Lsim-Switch™, Lsim-XL™, Mach PA™, Mach TA™, Manufacture View™, Manufacturing Advisor™, Manufacturing Cable™, MaskCompose<sup>™</sup>, MaskPE®, MBIST™, MBISTArchitect™, MCM Designer™, MCM Station®, MDV™, MegaFunction™, Memory Builder™, Memory Builder Conductor<sup>TM</sup>, Memory Builder Mozart<sup>TM</sup>, Memory Designer<sup>TM</sup>, Memory Model Builder<sup>TM</sup>, Mentor Graphics®, Mentor Graphics Support CD(SM), Mentor Graphics SupportBulletin(SM), Mentor Graphics SupportCenter(SM), Mentor Graphics SupportFax(SM), Mentor Graphics SupportNet-Email(SM), Mentor Graphics SupportNet-FTP(SM), Mentor Graphics SupportNet-Telnet(SM), Mentor Graphics We Mean Business™, MicroPlan™, MicroRoute™, Mi , ModelEditor™, ModelSim®, ModelSim LNL™, ModelSim VHDL™, ModelSim VLOG™, ModelSim SE™, ModelStation®, Model Technology ModelViewer™, ModelViewerPlus™, MODGEN™, Monet®, Mslab™, Msview™, MS Analyzer™, MS Architect™, MS-Express™, MSIMON™, MTPI(SM), Nanokernel®, NetCheck™, NETED™, Online Knowledge Center(SM), OpenDoor(SM), Opsim™, OutNet™, P&RIntegrator™, PACKAGE™, PARADE™, ParallelRoute-Autocells™, ParallelRoute-MicroRoute™, PathLink™, Parts SpeciaList™, PCB-Gen™, PCB-Generator™, PCB IGES™, PCB Mechanical Interface™, PDLSim™, Personal Learning Program™, Physical Cable™, Physical Test Manager:SITE™, PLA Leompiler™, Platform Express™, PLDSynthesis™, PLDSynthesis II™. Power Analyst™. Power Analyst Station™. Power To Create®. Precision™. Precision Synthesis™. Precision HLS™. Precision PNR™. Precision PTC™. Pre-Silicon™, ProjectXpert™, ProtoBoard™, ProtoView™, QNet™, QualityIBIS™, QuickCheck™, QuickConnect™, QuickFault™, QuickGade™, QuickHDL™, QuickGade™, QuickHDL™, QuickGade™, QuickHDL™, QuickGade™, QuickSault™, QuickGade™, QuickSault™, QuickSa QuickVHDL®, RAM Lcompiler™, RC-Delay™, RC-Reduction™, RapidExpert™, REAL Time Solutions!™, Registrar™, Reinstatement 2000(SM), Reliability Advisor™, Reliability Manager™, REMEDI™, Renoir™, RF Architect™, RF Gateway™, RISE™, ROM Lcompiler™, RTL X-Press™, Satellite PCB Station™, ScalableModels™, Scaleable Verification™, SCAP™, Scan-Sequential™, Scepter™, Scepter DFF™, Schematic View Compiler, SVC™, Schemgen™, SDF™ (Software Data Formatter), SDL2000 Lcompiler™, Seamless®, Seamless C-Bridge™, Seamless Co-Designer™, Seamless CVE™, Seamless Express™, Selective Promotion™, SignaMask OPC™, Signal Spy™, Signal Vision™, Signature Synthesis™, Simulation Manager™, SimExpress™, SimPilot™, SimView™, SiteLine2000(SM), SmartMask™, SmartParts™, SmartRouter™, SmartScripts™, SmartScripts™, SnartShape™, SNX™, SneakPath Analyzer™, SOS Initiative™, Source Explorer™, SpeedGate™,  $SpeedGate\ DSV^{TM}, SpiceNet^{TM}, SST\ Velocity@, Standard\ Power\ Model\ Format\ (SPMF)^{TM}, Structure\ Recovery^{TM}, Super\ C^{TM}, Super\ LC\ Station^{TM}, Support\ Services$ BaseLine(SM), Support Services ClassLine(SM), Support Services Latitudes(SM), Support Services OpenLine(SM), Support Services PrivateLine(SM), Services SiteLine(SM), Support Services TechLine(SM), Support Services RemoteLine(SM), Symbol Genie™, Symbolscript™, SYMED™, SynthesisWizard™, System Architect™, System Design Station™, System Modeling Blocks™, Systems on Board Initiative™, System Vision™, Target Manager™, Tau®, TeraCell™ TeraPlace™, TeraPlace-GF™, TechNotes™, The Ultimate Tool for HDL Simulation™, TestKompress™, Test Station®, Test Structure Builder™, The Ultimate Site  $For \ HDL \ Simulation^{\intercal M}, \ TimeCloser^{\intercal M}, \ Timing \ Builder^{\intercal M}, \ TNX^{\intercal M}, \ ToolBuilder^{\intercal M}, \ TrueTiming^{\intercal M}, \ Vlexpress^{\intercal M}, \ V-Net^{\intercal M}, \ VHDLmrite^{\intercal M},$ Verinex™, ViewCreator™, ViewWare®, Virtual Library™, Virtual Target™, Virtual Test Manager:TOP™, VR-Process(SM), VRTX®, VRTXmc™, VRTXoc™, VRTXsa™, VRTX32®, Waveform DataPort™, We Make TMN Easy™, Wiz-o-matic™, WorkXpert™, xCalibre™, xCalibrate™, Xconfig™, XlibCreator™, Xpert™, Xpert API™, XpertBuilder™, Xpert Dialogs™, Xpert Profiler™, XRAY®, XRAY MasterWorks®, XSH®, Xtrace®, Xtrace Daemon™, Xtrace Protocol™, Zeelan®, Zero Tolerance Verification™, Zlibs™

#### **Third-Party Trademarks**

The following names are trademarks, registered trademarks, and service marks of other companies that appear in Mentor Graphics product publications:

Adobe, the Adobe logo, Acrobat, the Acrobat logo, Exchange, FrameMaker, FrameViewer, and PostScript are registered trademarks of Adobe Systems Incorporated.

Altera is a registered trademark of Altera Corp.

AM188, AMD, AMD-K6, and AMD Athlon Processor are trademarks of Advanced Micro Devices, Inc.

Apple and Laserwriter are registered trademarks of Apple Computer, Inc.

ARIES is a registered trademark of Aries Technology

AMBA, ARM, ARMulator, ARM7TDMI, ARM7TDMI-S, ARM9TDMI, ARM9E-S, ARM946E-S, ARM966E-S, EmbeddedICE, StrongARM, TDMI, and Thumb are trademarks or registered trademarks of ARM Limited.

ASAP, Aspire, C-FAS, CMPI, Eldo-FAS, EldoHDL, Eldo-Opt, Eldo-UDM, EldoVHDL, Eldo-XL, Elga, Elib, Elib-Plus, ESim, Fidel, Fideldo, GENIE, GENLIB, HDL-A, MDT, MGS-MEMT, MixVHDL, Model Generator Series (MGS), Opsim, SimLink, SimPilot, SpecEditor, Success, SystemEldo, VHDeLDO and Xelga are registered trademarks of ANACAD Electrical Engineering Software, a unit of Mentor Graphics Corporation.

Avant! and Star-Hspice are trademarks of Avant! Corporation.

AVR is a registered trademark of Atmel Corporation.

Cadence, Affirma signalscan, Allegro, Analog Artist, Composer, Concept, Design Planner, Dracula, GDSII, GED, HLD Systems, Leapfrog, Logic DP, NC-Verilog, OCEAN, Physical DP, Pillar, Silicon Ensemble, Spectre, Verilog, Verilog XL, Veritime, and Virtuoso are trademarks or registered trademarks of Cadence Design Systems, Inc.

CAE+Plus and ArchGen are registered trademarks of Cynergy System Design.

CalComp is a registered trademark of CalComp, Inc.

Canon is a registered trademark of Canon, Inc. BJ-130, BJ-130e, BJ-330, and Bubble Jet are trademarks of Canon, Inc.

Centronics is a registered trademark of Centronics Data Computer Corporation.

ColdFire and M-Core are registered trademarks of Motorola, Inc.

Ethernet is a registered trademark of Xerox Corporation.

Foresight and Foresight Co-Designer are trademarks of Nu Thena Systems, Inc.

FLEXIm is a trademark of Globetrotter Software, Inc.

GenCAD is a trademark of Teradyne Inc.

Hewlett-Packard (HP), LaserJet, MDS, HP-UX, PA-RISC, APOLLO, DOMAIN and HPare registered trademarks of Hewlett-Packard Company.

HCL-eXceed and HCL-eXceed/W are registered trademark of Hummingbird Communications. Ltd.

HyperHelp is a trademark of Bristol Technology Inc.

Installshield is a registered trademark and service mark of InstallShield Corporation.

IBM, PowerPC, and RISC Systems/6000 are trademarks of International Business Machines Corporation.

I-DEAS and UG/Wiring are registered trademarks of Electronic Data Systems Corporation.

IKON is a trademark of Tahoma Technology.

IKOS and Voyager are registered trademarks of IKOS Systems, Inc.

Imagen, QMS, QMS-PS 820, Innovator, and Real Time Rasterization are registered trademarks of MINOLTA-QMS Inc. imPRESS and UltraScript are trademarks of MINOLTA-QMS Inc.

ImageGear is a registered trademark of AccuSoft Corporation.

Infineon, TriCore, and C165 are trademarks of Infineon Technologies AG.

Intel, i960, i386, and i486 are registered trademarks of Intel Corporation.

Java and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc.

Linux is a registered trademark of Linus Torvalds.

MemoryModeler MemMaker are trademarks of Denali Software, Inc.

MIPS is a trademark of MIPS Technologies, Inc.

MS-DOS, Windows 95, Windows 98, Windows 2000, and Windows NT are registered trademarks of Microsoft Corporation.

MULTI is a registered trademark of Green Hills Software, Inc.

NEC and NEC EWS4800 are trademarks of NEC Corp.

Netscape is a trademark of Netscape Communications Corporation.

Novas, Debussy, and nWave are trademarks or registered trademarks of Novas Software, Inc.

OakDSPCore is a registered trademark for DSP Group, Inc.

 $Oracle, Oracle 8i, and \ SQL*Plus \ are \ trademarks \ or \ registered \ trademarks \ of \ Oracle \ Corporation.$ 

PKZIP is a registered trademark of PKWARE, Inc.

 $Pro/CABLING \ and \ HARNESSDESIGN \ are \ trademarks \ or \ registered \ trademarks \ of \ Parametric \ Technology \ Corporation.$ 

Quantic is a registered trademark of Quantic EMC Inc.

QUASAR is a trademark of ASM Lithography Holding N.V.

Red Hat is a registered trademark of Red Hat Software, Inc.

SCO and the SCO logo are trademarks or registered trademarks of Caldera International, Inc.

Sneak Circuit Analysis Tool (SCAT) is a registered trademark of SoHaR Incorporated.

SPARC is a registered trademark, and SPARCstation is a trademark, of SPARC International, Inc.

Sun Microsystems, Sun Workstation, and NeWS are registered trademarks of Sun Microsystems, Inc. Sun, Sun-2, Sun-3, Sun-4, OpenWindows, SunOS, SunView, NFS, and NSE are trademarks of Sun Microsystems, Inc.

SuperH is a trademark of Hitachi, Ltd.

Synopsys, Design Compiler, DesignWare, Library Compiler, LM-family, PrimeTime, SmartModel, Speed-Model, Speed Modeling, SimWave, and Chronologic VCS are trademarks or registered trademark of Synopsys, Inc.

TASKING is a registered trademark of Altium Limited.

Teamwork is a registered trademark of Computer Associates International, Inc.

Tensilica and Xtensa are registered trademarks of Tensilica, Inc.

Times and Helvetica are registered trademarks of Linotype AG.

TimingDesigner and QuickBench are registered trademarks of Forte Design Systems

Tri-State, Tri-State Logic, tri-state, and tri-state logic are registered trademarks of National Semiconductor Corporation.

UNIX, Motif, and OSF/1 are registered trademarks of The Open Group in the United States and other countries.

Versatec is a trademark of Xerox Engineering Systems, Inc.

ViewDraw, Powerview, Motive, and PADS-Perform are registered trademarks of Innoveda, Inc. Crosstalk Toolkit (XTK), Crosstalk Field Solver (XFX), Pre-Route Delay Quantifier (PDQ), and Mentor Graphics Board Station Translator (MBX) are trademarks of Innoveda, Inc.

Visula is a registered trademark of Zuken-Redac.

VxSim, VxWorks and Wind River Systems are trademarks or registered trademarks of Wind River Systems, Inc.

XVision is a registered trademark of Tarantella, Inc.

X Window System is a trademark of MIT (Massachusetts Institute of Technology).

Z80 is a registered trademark of Zilog, Inc.

ZSP and ZSP400 are trademarks of LSI Logic Corporation.

Other brand or product names that appear in Mentor Graphics product publications are trademarks or registered trademarks of their respective holders.

Updated 2/13/02

# **End-User License Agreement**

# IMPORTANT - USE OF THIS SOFTWARE IS SUBJECT TO LICENSE RESTRICTIONS CAREFULLY READ THIS LICENSE AGREEMENT BEFORE USING THE SOFTWARE

This license is a legal "Agreement" concerning the use of Software between you, the end-user, either individually or as an authorized representative of the company purchasing the license, and Mentor Graphics Corporation, Mentor Graphics (Ireland) Limited, Mentor Graphics (Singapore) Private Limited, and their majority-owned subsidiaries ("Mentor Graphics"). USE OF SOFTWARE INDICATES YOUR COMPLETE AND UNCONDITIONAL ACCEPTANCE OF THE TERMS AND CONDITIONS SET FORTH IN THIS AGREEMENT. If you do not agree to these terms and conditions, promptly return or, if received electronically, certify destruction of Software and all accompanying items within 10 days after receipt of Software and receive a full refund of any license fee paid

#### **END-USER LICENSE AGREEMENT**

- 1. **GRANT OF LICENSE**. The software programs you are installing, downloading, or have acquired with this Agreement, including any updates, modifications, revisions, copies, and documentation ("Software") are copyrighted, trade secret and confidential information of Mentor Graphics or its licensors who maintain exclusive title to all Software and retain all rights not expressly granted by this Agreement. Mentor Graphics or its authorized distributor grants to you, subject to payment of appropriate license fees, a nontransferable, nonexclusive license to use Software solely: (a) (in machine-readable, object-code form; (b) for your internal business purposes; and (c) on the computer hardware or at the site for which an applicable license fee is paid, or as authorized by Mentor Graphics. A site is restricted to a one-half mile (800 meter) radius. Mentor Graphics' then-current standard policies, which vary depending on Software, license fees paid or service plan purchased, apply to the following and are subject to change: (a) relocation of Software; (b) use of Software, which may be limited, for example, to execution of a single session by a single user on the authorized hardware or for a restricted period of time (such limitations may be communicated and technically implemented through the use of authorization codes or similar devices); (c) eligibility to receive updates, modifications, and revisions; and (d) support services provided. Current standard policies are available upon request.
- 2. **ESD SOFTWARE**. If you purchased a license to use embedded software development (ESD) Software, Mentor Graphics or its authorized distributor grants to you a nontransferable, nonexclusive license to reproduce and distribute executable files created using ESD compilers, including the ESD run-time libraries distributed with ESD C and C++ compiler Software that are linked into a composite program as an integral part of your compiled computer program, provided that you distribute these files only in conjunction with your compiled computer program. Mentor Graphics does NOT grant you any right to duplicate or incorporate copies of Mentor Graphics' real-time operating systems or other ESD Software, except those explicitly granted in this section, into your products without first signing a separate agreement with Mentor Graphics for such purpose.

#### 3. BETA CODE

- 3.1. Portions or all of certain Software may contain code for experimental testing and evaluation ("Beta Code"), which may not be used without Mentor Graphics' explicit authorization. Upon Mentor Graphics' authorization, Mentor Graphics grants to you a temporary, nontransferable, nonexclusive license for experimental use to test and evaluate the Beta Code without charge for a limited period of time specified by Mentor Graphics. This grant and your use of the Beta Code shall not be construed as marketing or offering to sell a license to the Beta Code, which Mentor Graphics may choose not to release commercially in any form.
- 3.2. If Mentor Graphics authorizes you to use the Beta Code, you agree to evaluate and test the Beta Code under normal conditions as directed by Mentor Graphics. You will contact Mentor Graphics

- periodically during your use of the Beta Code to discuss any malfunctions or suggested improvements. Upon completion of your evaluation and testing, you will send to Mentor Graphics a written evaluation of the Beta Code, including its strengths, weaknesses and recommended improvements.
- 3.3. You agree that any written evaluations and all inventions, product improvements, modifications or developments that Mentor Graphics conceives or makes during or subsequent to this Agreement, including those based partly or wholly on your feedback, will be the exclusive property of Mentor Graphics. Mentor Graphics will have exclusive rights, title and interest in all such property. The provisions of this subsection shall survive termination or expiration of this Agreement.
- 4. **RESTRICTIONS ON USE**. You may copy Software only as reasonably necessary to support the authorized use. Each copy must include all notices and legends embedded in Software and affixed to its medium and container as received from Mentor Graphics. All copies shall remain the property of Mentor Graphics or its licensors. You shall maintain a record of the number and primary location of all copies of Software, including copies merged with other software, and shall make those records available to Mentor Graphics upon request. You shall not make Software available in any form to any person other than your employer's employees and contractors, excluding Mentor Graphics' competitors, whose job performance requires access. You shall take appropriate action to protect the confidentiality of Software and ensure that any person permitted access to Software does not disclose it or use it except as permitted by this Agreement. Except as otherwise permitted for purposes of interoperability as specified by the European Union Software Directive or local law, you shall not reverse-assemble, reverse-compile, reverse-engineer or in any way derive from Software any source code. You may not sublicense, assign or otherwise transfer Software, this Agreement or the rights under it without Mentor Graphics' prior written consent. The provisions of this section shall survive the termination or expiration of this Agreement.

#### 5. LIMITED WARRANTY

- 5.1. Mentor Graphics warrants that during the warranty period Software, when properly installed, will substantially conform to the functional specifications set forth in the applicable user manual. Mentor Graphics does not warrant that Software will meet your requirements or that operation of Software will be uninterrupted or error free. The warranty period is 90 days starting on the 15th day after delivery or upon installation, whichever first occurs. You must notify Mentor Graphics in writing of any nonconformity within the warranty period. This warranty shall not be valid if Software has been subject to misuse, unauthorized modification or installation. MENTOR GRAPHICS' ENTIRE LIABILITY AND YOUR EXCLUSIVE REMEDY SHALL BE, AT MENTOR GRAPHICS' OPTION, EITHER (A) REFUND OF THE PRICE PAID UPON RETURN OF SOFTWARE TO MENTOR GRAPHICS OR (B) MODIFICATION OR REPLACEMENT OF SOFTWARE THAT DOES NOT MEET THIS LIMITED WARRANTY, PROVIDED YOU HAVE OTHERWISE COMPLIED WITH THIS AGREEMENT. MENTOR GRAPHICS MAKES NO WARRANTIES WITH RESPECT TO: (A) SERVICES; (B) SOFTWARE WHICH IS LOANED TO YOU FOR A LIMITED TERM OR AT NO COST; OR (C) EXPERIMENTAL BETA CODE; ALL OF WHICH ARE PROVIDED "AS IS."
- 5.2. THE WARRANTIES SET FORTH IN THIS SECTION 5 ARE EXCLUSIVE. NEITHER MENTOR GRAPHICS NOR ITS LICENSORS MAKE ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, WITH RESPECT TO SOFTWARE OR OTHER MATERIAL PROVIDED UNDER THIS AGREEMENT. MENTOR GRAPHICS AND ITS LICENSORS SPECIFICALLY DISCLAIM ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.
- 6. **LIMITATION OF LIABILITY**. EXCEPT WHERE THIS EXCLUSION OR RESTRICTION OF LIABILITY WOULD BE VOID OR INEFFECTIVE UNDER APPLICABLE STATUTE OR REGULATION, IN NO EVENT SHALL MENTOR GRAPHICS OR ITS LICENSORS BE LIABLE FOR INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS) WHETHER BASED ON CONTRACT, TORT OR ANY OTHER

LEGAL THEORY, EVEN IF MENTOR GRAPHICS OR ITS LICENSORS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. IN NO EVENT SHALL MENTOR GRAPHICS' OR ITS LICENSORS' LIABILITY UNDER THIS AGREEMENT EXCEED THE AMOUNT PAID BY YOU FOR THE SOFTWARE OR SERVICE GIVING RISE TO THE CLAIM. IN THE CASE WHERE NO AMOUNT WAS PAID, MENTOR GRAPHICS AND ITS LICENSORS SHALL HAVE NO LIABILITY FOR ANY DAMAGES WHATSOEVER.

7. **LIFE ENDANGERING ACTIVITIES**. NEITHER MENTOR GRAPHICS NOR ITS LICENSORS SHALL BE LIABLE FOR ANY DAMAGES RESULTING FROM OR IN CONNECTION WITH THE USE OF SOFTWARE IN ANY APPLICATION WHERE THE FAILURE OR INACCURACY OF THE SOFTWARE MIGHT RESULT IN DEATH OR PERSONAL INJURY. YOU AGREE TO INDEMNIFY AND HOLD HARMLESS MENTOR GRAPHICS AND ITS LICENSORS FROM ANY CLAIMS, LOSS, COST, DAMAGE, EXPENSE, OR LIABILITY, INCLUDING ATTORNEYS' FEES, ARISING OUT OF OR IN CONNECTION WITH SUCH USE.

#### 8. INFRINGEMENT

- 8.1. Mentor Graphics will defend or settle, at its option and expense, any action brought against you alleging that Software infringes a patent or copyright in the United States, Canada, Japan, Switzerland, Norway, Israel, Egypt, or the European Union. Mentor Graphics will pay any costs and damages finally awarded against you that are attributable to the claim, provided that you: (a) notify Mentor Graphics promptly in writing of the action; (b) provide Mentor Graphics all reasonable information and assistance to settle or defend the claim; and (c) grant Mentor Graphics sole authority and control of the defense or settlement of the claim.
- 8.2. If an infringement claim is made, Mentor Graphics may, at its option and expense, either (a) replace or modify Software so that it becomes noninfringing, or (b) procure for you the right to continue using Software. If Mentor Graphics determines that neither of those alternatives is financially practical or otherwise reasonably available, Mentor Graphics may require the return of Software and refund to you any license fee paid, less a reasonable allowance for use.
- 8.3. Mentor Graphics has no liability to you if the alleged infringement is based upon: (a) the combination of Software with any product not furnished by Mentor Graphics; (b) the modification of Software other than by Mentor Graphics; (c) the use of other than a current unaltered release of Software; (d) the use of Software as part of an infringing process; (e) a product that you design or market; (f) any Beta Code contained in Software; or (g) any Software provided by Mentor Graphics' licensors which do not provide such indemnification to Mentor Graphics' customers.
- 8.4. THIS SECTION 8 STATES THE ENTIRE LIABILITY OF MENTOR GRAPHICS AND ITS LICENSORS AND YOUR SOLE AND EXCLUSIVE REMEDY WITH RESPECT TO ANY ALLEGED PATENT OR COPYRIGHT INFRINGEMENT BY ANY SOFTWARE LICENSED UNDER THIS AGREEMENT.
- 9. **TERM**. This Agreement remains effective until expiration or termination. This Agreement will automatically terminate if you fail to comply with any term or condition of this Agreement or if you fail to pay for the license when due and such failure to pay continues for a period of 30 days after written notice from Mentor Graphics. If Software was provided for limited term use, this Agreement will automatically expire at the end of the authorized term. Upon any termination or expiration, you agree to cease all use of Software and return it to Mentor Graphics or certify deletion and destruction of Software, including all copies, to Mentor Graphics' reasonable satisfaction.
- 10. **EXPORT**. Software is subject to regulation by local laws and United States government agencies, which prohibit export or diversion of certain products, information about the products, and direct products of the products to certain countries and certain persons. You agree that you will not export in any manner any Software or direct product of Software, without first obtaining all necessary approval from appropriate local and United States government agencies.

- 11. **RESTRICTED RIGHTS NOTICE**. Software has been developed entirely at private expense and is commercial computer software provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the U.S. Government or a U.S. Government subcontractor is subject to the restrictions set forth in the license agreement under which Software was obtained pursuant to DFARS 227.7202-3(a) or as set forth in subparagraphs (c)(1) and (2) of the Commercial Computer Software Restricted Rights clause at FAR 52.227-19, as applicable. Contractor/manufacturer is Mentor Graphics Corporation, 8005 Boeckman Road, Wilsonville, Oregon 97070-7777 USA.
- 12. **THIRD PARTY BENEFICIARY**. For any Software under this Agreement licensed by Mentor Graphics from Microsoft or other licensors, Microsoft or the applicable licensor is a third party beneficiary of this Agreement with the right to enforce the obligations set forth in this Agreement.
- 13. **CONTROLLING LAW**. This Agreement shall be governed by and construed under the laws of Ireland if the Software is licensed for use in Israel, Egypt, Switzerland, Norway, South Africa, or the European Union, the laws of Japan if the Software is licensed for use in Japan, the laws of Singapore if the Software is licensed for use in Singapore, People's Republic of China, Republic of China, India, or Korea, and the laws of the state of Oregon if the Software is licensed for use in the United States of America, Canada, Mexico, South America or anywhere else worldwide not provided for in this section
- 14. **SEVERABILITY**. If any provision of this Agreement is held by a court of competent jurisdiction to be void, invalid, unenforceable or illegal, such provision shall be severed from this Agreement and the remaining provisions will remain in full force and effect.
- 15. **MISCELLANEOUS**. This Agreement contains the entire understanding between the parties relating to its subject matter and supersedes all prior or contemporaneous agreements, including but not limited to any purchase order terms and conditions, except valid license agreements related to the subject matter of this Agreement which are physically signed by you and an authorized agent of Mentor Graphics. This Agreement may only be modified by a physically signed writing between you and an authorized agent of Mentor Graphics. Waiver of terms or excuse of breach must be in writing and shall not constitute subsequent consent, waiver or excuse. The prevailing party in any legal action regarding the subject matter of this Agreement shall be entitled to recover, in addition to other relief, reasonable attorneys' fees and expenses.

(10/99 rev B)