
Temporary 600 A Contactor Replacement Procedure

Temporary Contactor Installation
The temporary 600 A contactor is not a direct fit replacement. This procedure provides a temporary installation method until the correct replacement contactor is available.

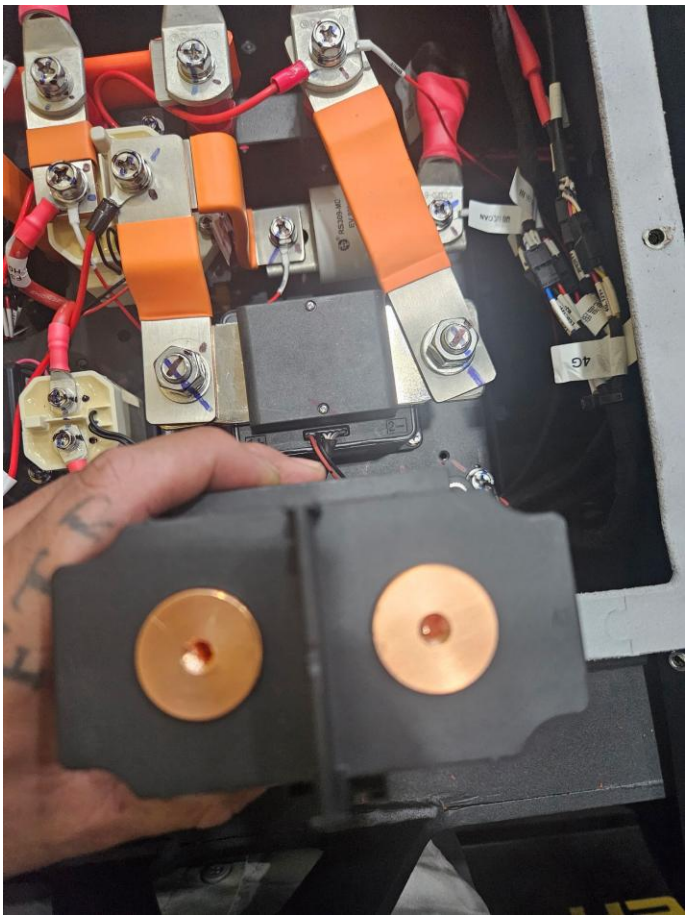




1. Remove Faulty Contactor
Record the polarity of the contactor's 12 V control wiring. Remove the busbars and the faulty contactor.

2. Install Busbars on Temporary Contactor
Attach the busbars to the temporary contactor. Leave the mounting bolts loose to allow for adjustment.

3.Mount Temporary Contactor
Position the temporary contactor inside the battery. Since the mounting holes do not align for all four screws, secure it using the two screws on the left side of the base plate.

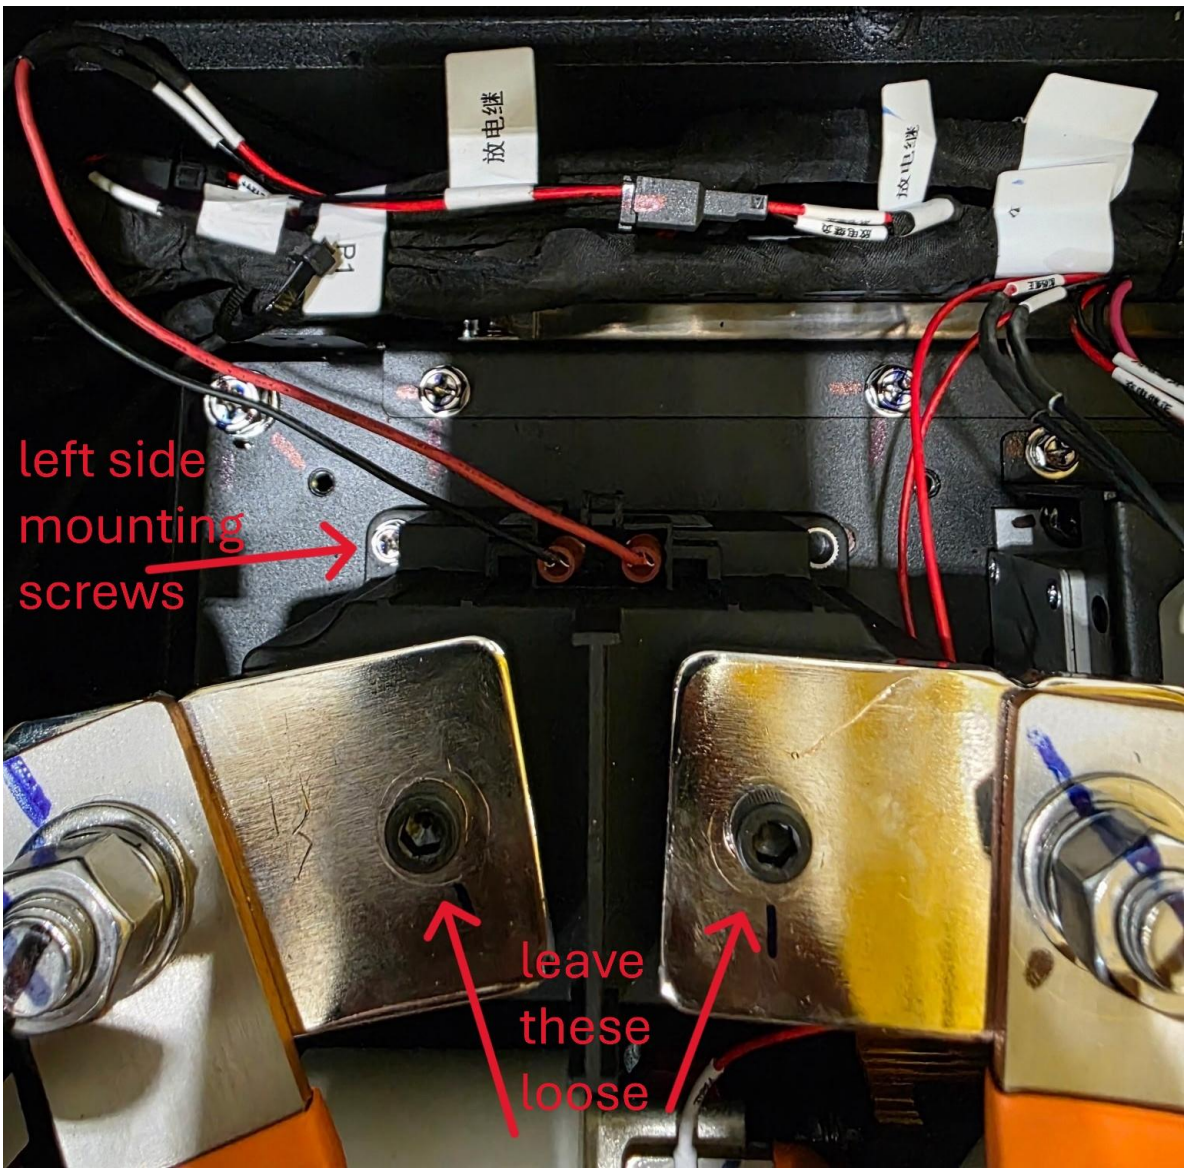

4. Align and Torque Busbars
Adjust the busbars as necessary to align with the existing circuit connections. Once properly aligned, torque the busbar bolts to 13 N·m.

5. Connect Control Wiring
The temporary contactor has the opposite 12 V polarity from the original contactor. Connect the control wires accordingly and verify polarity before energizing the system.

