
600 A Contactor Replacement Procedure

Contactor Installation
The new 600 A contactor is not a direct fit replacement. This procedure provides an installation method for replacement.

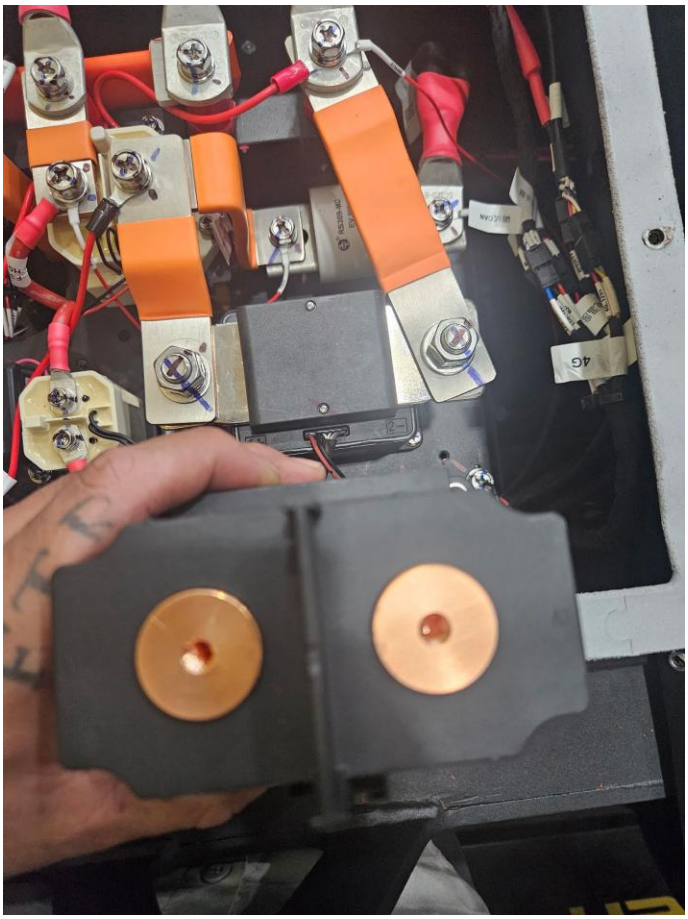




1. Remove Faulty Contactor
Record the polarity of the contactor's 12 V control wiring. Remove the busbars and the faulty contactor.

2. Install Busbars on Contactor
Attach the busbars to the new contactor. Leave the mounting bolts loose to allow for adjustment.

3.Mount New Contactor
Position the new contactor inside the battery. Since the mounting holes do not align for all four screws, secure it using the two screws on the left side of the base plate.

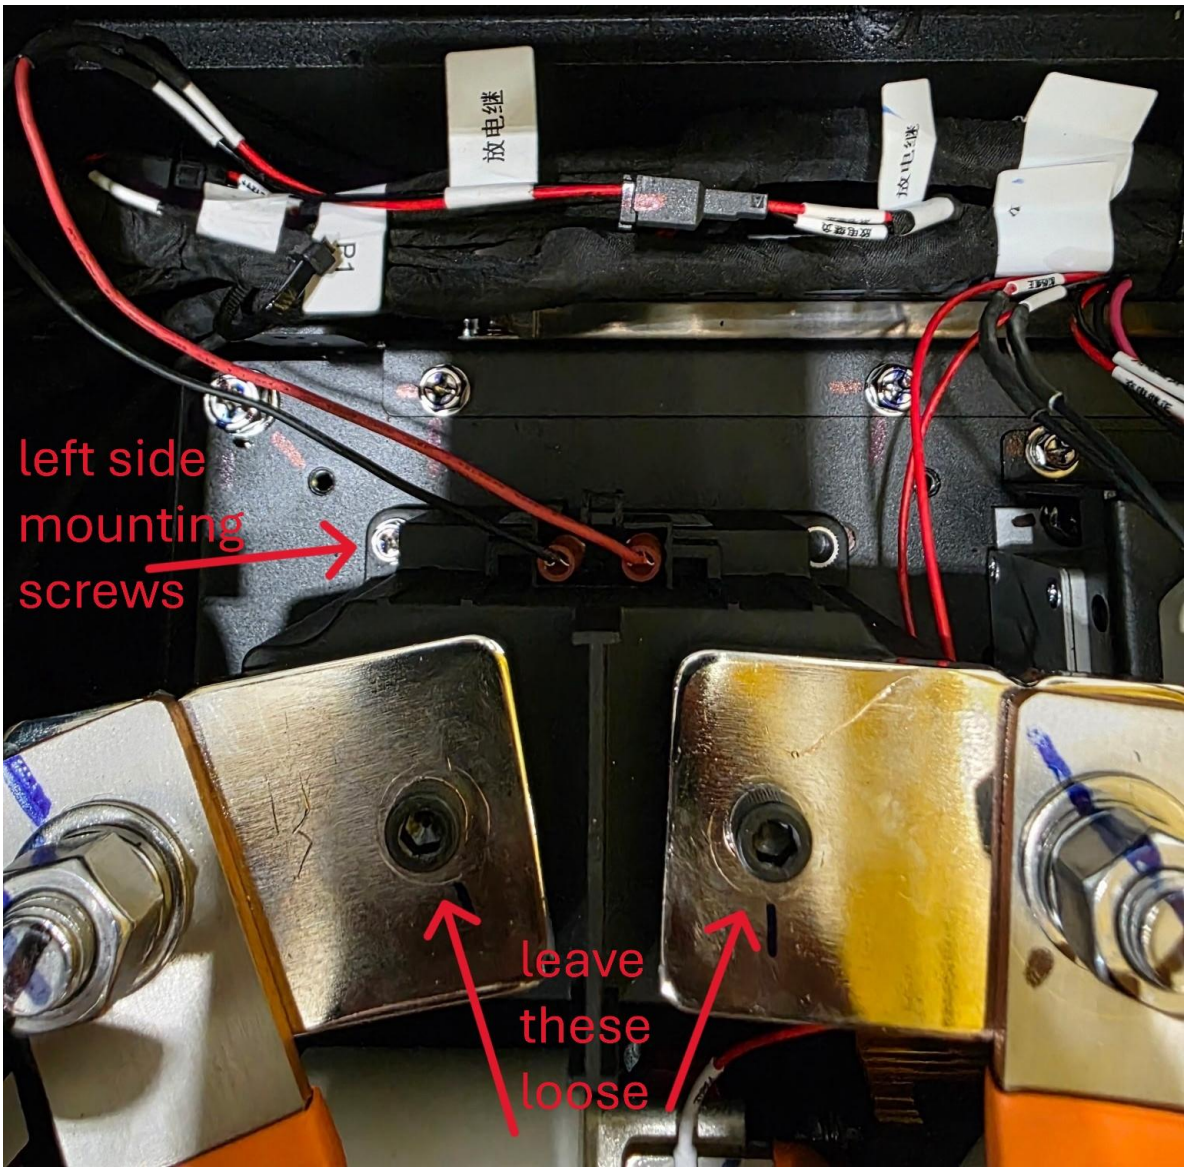

4. Align and Torque Busbars
Adjust the busbars as necessary to align with the existing circuit connections. Once properly aligned, torque the busbar bolts to 13 N·m.

5. Connect Control Wiring
The new contactor has the opposite 12 V polarity from the original contactor. Connect the control wires accordingly and verify polarity before energizing the system.

