
ROADPRO v3.5

Test Report

Every step of the user guide — tested, checked and listed

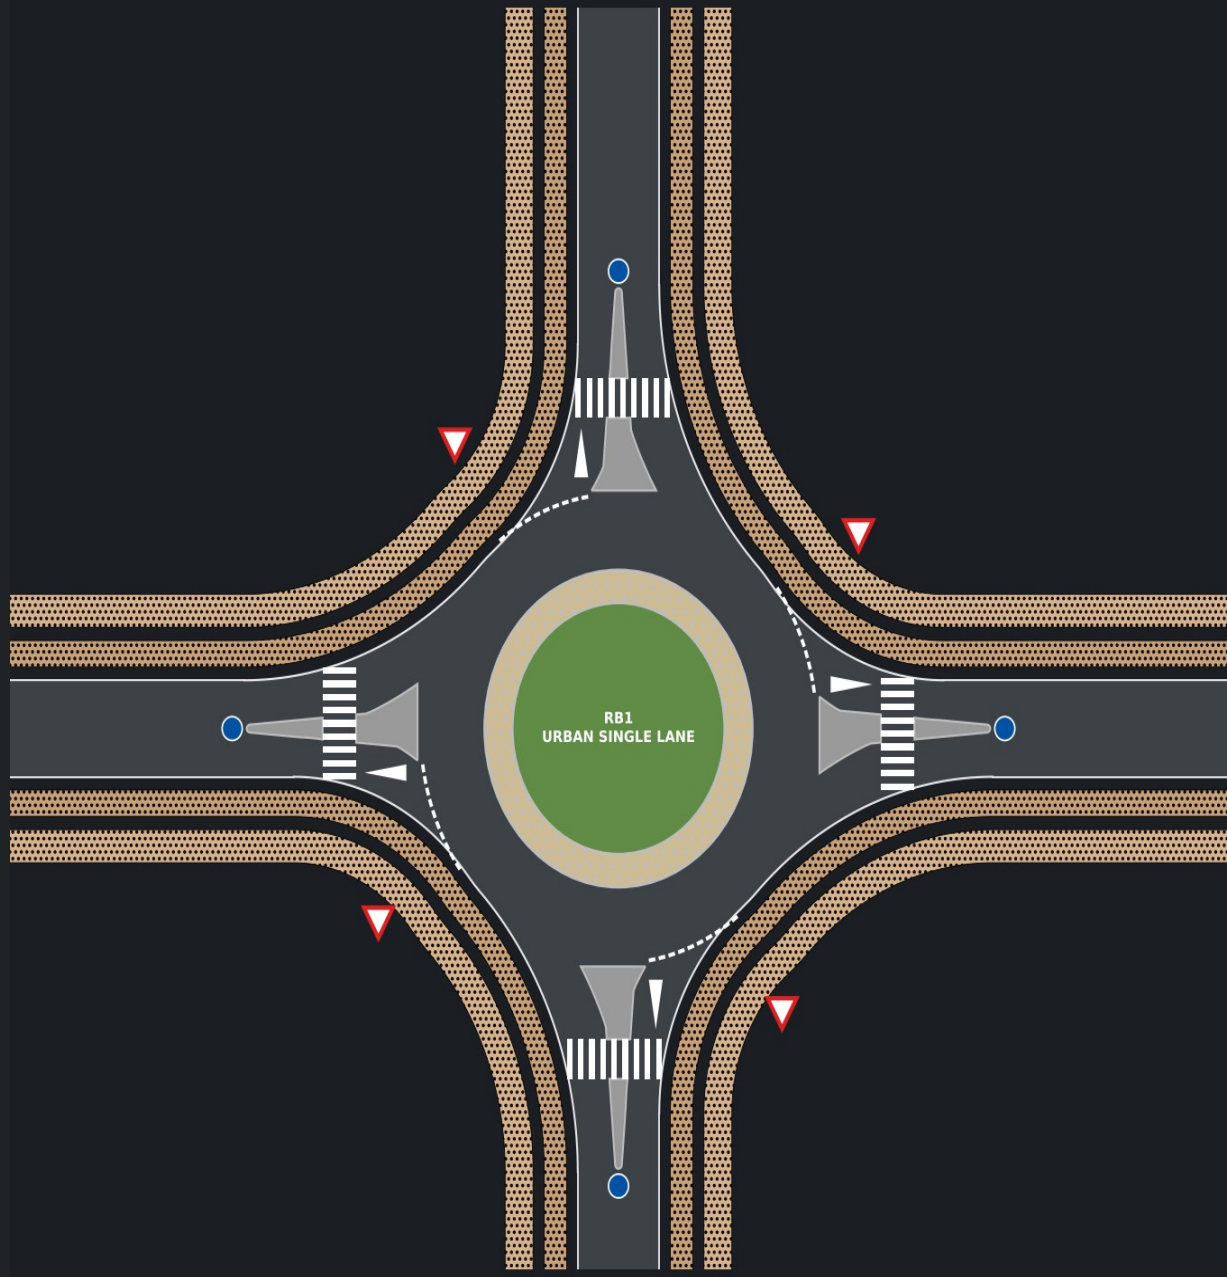

Test date 03-Nov-2026 · RoadPro.lsp v3.5 (8,702 lines)

Developed by https://www.exceltokml.com/

Result at a glance

122	121	0	6
checks run	passed	failed	bugs found and fixed

Verdict: ready for the field test in AutoCAD / Civil 3D

All 121 automated checks pass after the fixes. The roundabout code had 6 upper/lower-case variable clashes that would have broken RDRB in AutoCAD — fixed and re-tested. Updated RoadPro.lsp is in both packages.

01	02	03	04	05	06	07	08	09
22/22	18/18	21/21	5/5	16/16	22/22	5/5	3/3	9/9
Install	Build a road	Corridor & pavement	Widening & tapers	Junctions	Roundabouts	Live update	Lines & labels	Code & documents

How every step was tested

METHOD

Ran the real plugin code

RoadPro.lsp was loaded in an AutoLISP test interpreter. Its own functions were executed — chainage, settings, Saudi values, roundabout geometry, quantities. The AutoCAD drawing API is simulated.

Opened every dialog

Each dialog was built from the DCL the plugin writes. Every tile key was checked, every button and list action fired, OK pressed — and invalid input typed to see it refused.

Checked the numbers

Results were compared with independent hand calculations and the AASHTO / FHWA tables: concrete and steel quantities, ISD, roundabout radii, fillets and splitter islands.

Checked package & code

Add-in bundle, PackageContents.xml, installer scripts, shortcuts sheet and user guide were inspected; the whole file was scanned for syntax, undefined calls, argument counts and case clashes.

LIMIT AutoCAD itself cannot run here, so drawing output (entities, hatches, reactors) still needs the field-test checklist at the end of this report. The test harness was itself checked: a planted wrong tile key and a removed validation were both caught.


Bugs found by the tests — and fixed

Function	What was wrong	Effect in AutoCAD	Fix	Status
`rp:rb-fil`	Arguments R (inscribed radius) and r (fillet radius) are the same AutoLISP variable	Entry / exit kerb fillets missed the circle	renamed Rin / rfl	FIXED
`rp:rb-fit`	Centre point O was overwritten by the local o	RDRB stopped with "bad argument type" when fitting side roads	local renamed ob	FIXED
`rp:rb-clear`	Same O / o clash	Clearing old markings inside the circle failed	local renamed ob	FIXED
`rp:rb-island`	Same O / o clash	Splitter islands at risk	local renamed ob	FIXED
`rp:rb-ring`	Same O / o clash	Island and apron rings at risk	local renamed ob	FIXED
`rp:rb-spiral`	Argument R and local r clash	Spiral lane line at risk	local renamed rs	FIXED

WHY AutoLISP ignores upper / lower case, so R and r — or O and o — are one variable. The earlier Python simulation is case-sensitive, so it could not see this; running the real LISP code did. One harmless duplicate (sB / sb in rp:junction-run, from v3.4) was left as is.

Re-tested after the fix: all roundabout checks pass — see the Roundabouts results.

Before and after the roundabout fix

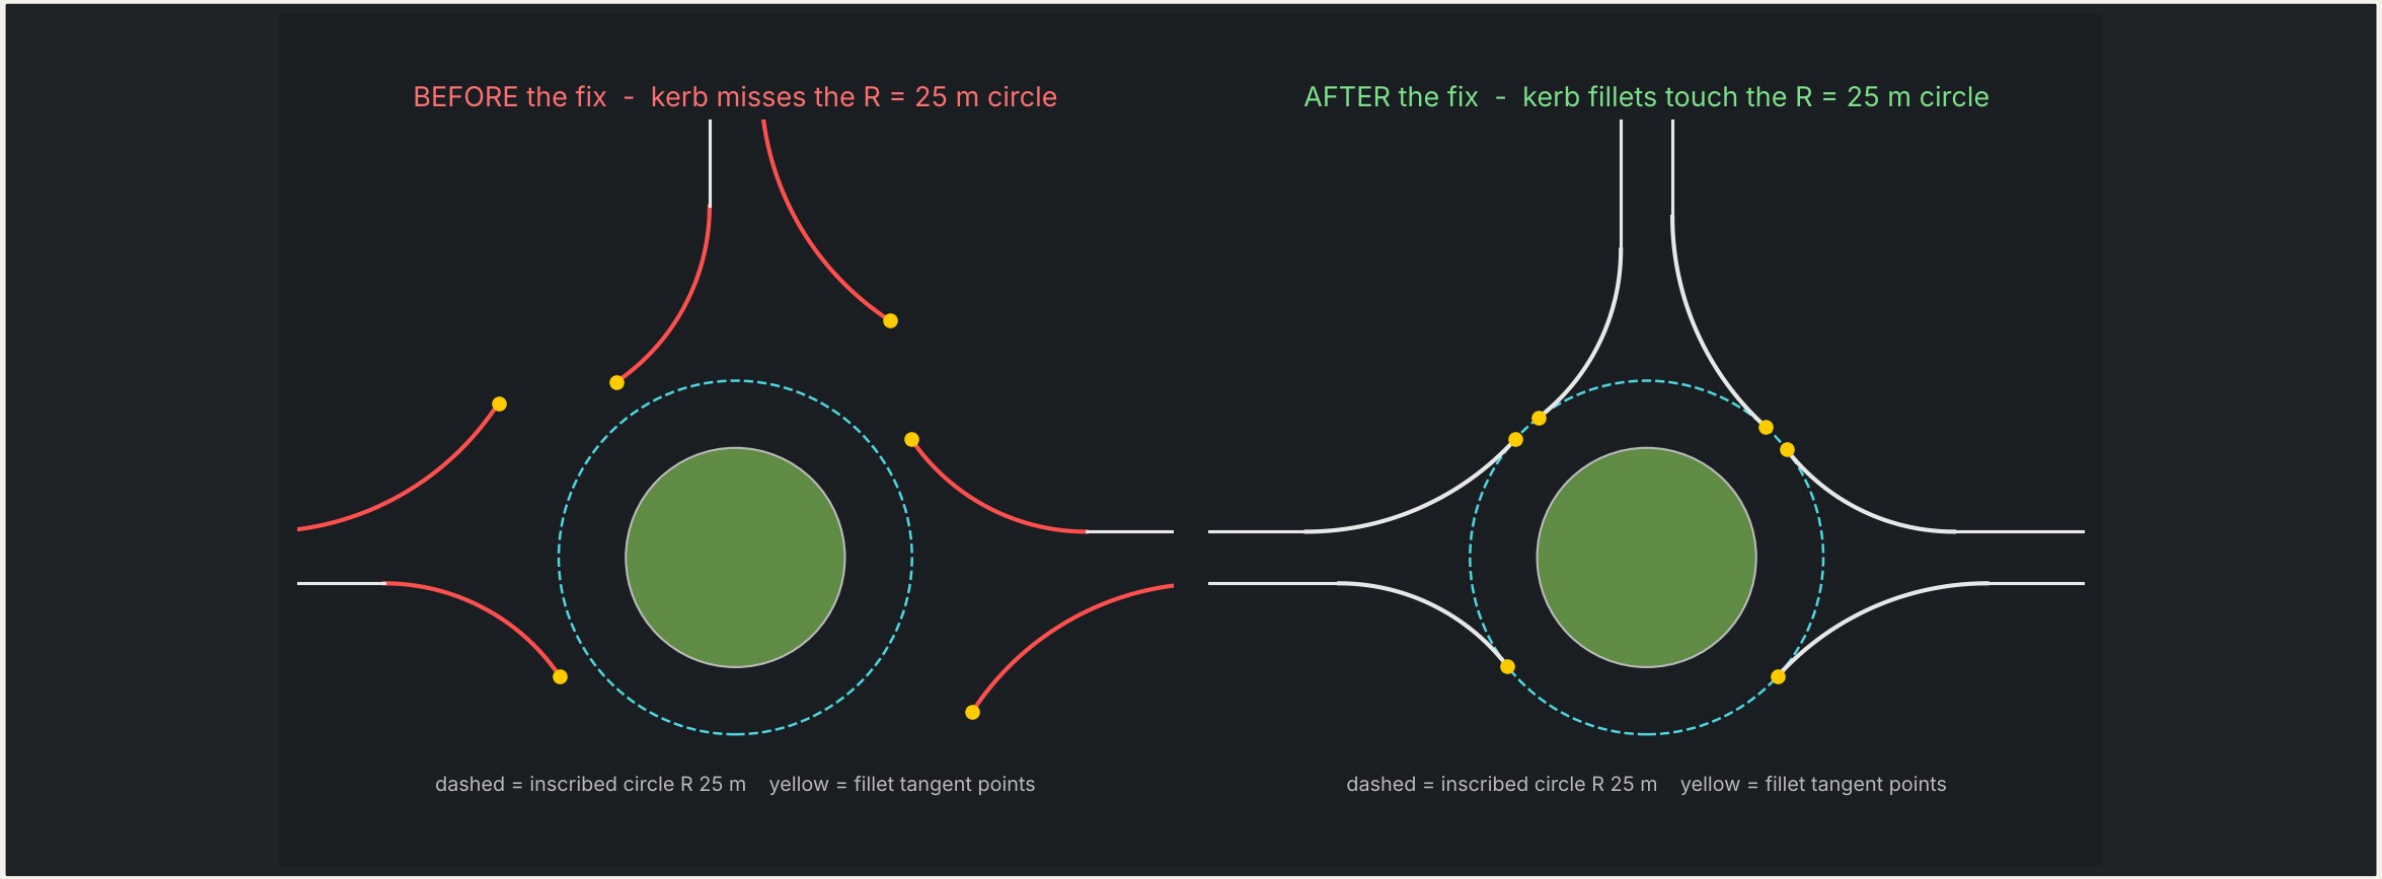

Check	Before	After
Fillet tangent point (R 25, entry r 30)	30.000 m from the centre	25.000 m — on the circle
rp:rb-fit — fit a side road to the circle	ERROR: bad argument type	runs

01 Install the add-in (1/3)

22/22 PASSED

Guide step	Check	Result	Status
1.1 package	**Add-in zip contents**	9/9 required files present	PASS
	Bundle carries the tested RoadPro.lsp	byte-identical to the tested file	PASS
	Plain package (APPLOAD) contents	6/6 files	PASS
1.1 PackageContents.xml	**PackageContents.xml is valid XML**	parsed without errors	PASS
	Runtime: AutoCAD 2013+ and all AutoCAD-based products	SeriesMin=R19.0, Platform=AutoCAD*	PASS
	Component points to RoadPro.lsp inside the bundle	ModuleName=./Contents/RoadPro.lsp	PASS
	Loads at start-up in every drawing	LoadOnAutoCADStartup=True, PerDocument=True	PASS
	Package identity	AppVersion=3.5.0, ProductCode={1BD9D2E3-6DF...	PASS
1.1 installer scripts	**Installer target = Autodesk ApplicationPlugins (per user, no admin)**	copies RoadPro.bundle to %APPDATA%\Autodesk\ApplicationPlugins	PASS

01 Install the add-in (2/3)

22/22 PASSED

Guide step	Check	Result	Status
1.1 installer scripts	Installer unblocks downloaded files	PowerShell Unblock-File on every copied file	PASS
	Installer stops if the bundle folder is missing	checks PackageContents.xml before copying	PASS
	Installer warns when AutoCAD is running	tasklist check for acad.exe	PASS
	Uninstaller removes the same folder	rmdir of the installed bundle	PASS
	Batch files use Windows line endings (CRLF)	CRLF	PASS
1.3 Start AutoCAD - load	RoadPro.lsp loads with no error	471 top-level forms evaluated, 0 errors	PASS
	Load message	prints "Road Pro v3.5 loaded … live update ON … RDHELP = all commands" + credit line	PASS
	Version constant	*rp:ver* = 3.5	PASS
	Functions defined	429 functions; 254 AutoCAD/ActiveX functions are mocked for this test	INFO

01 Install the add-in (3/3)

22/22 PASSED

Guide step	Check	Result	Status
1.4 Commands - menu and RDHELP	**Every listed command has its shortcut and full name**	22 commands, 22 complete	**PASS**
	RDHELP runs and lists all commands	22/22 commands printed, plus live-update and install state	**PASS**
	Helper commands exist	ROADPROLIVEUPDATE (used by live update) and ROADPRORESET are defined	**PASS**
1.5 Startup Suite method	**Install flag is kept per AutoCAD profile**	RoadPro_inst_Metric / RoadPro_inst_Imperial	**PASS**
	Startup Suite registry key	HKEY_CURRENT_USER\Software\Autodesk\AutoCAD\R24.3\ACAD-7101:409\Profiles\Imperial\Dialogs\Appload\Startup	**PASS**

02 Build a road (RDP) (1/2)

18/18 PASSED

Guide step	Check	Result	Status
2.1 Road Pro dialog	RDP dialog opens and OK works	opened 'roadpro' (54 tiles), 28 list items in 11 lists, all actions fired, OK -> OK; sub-dialogs opened and closed: roadcorr, roadpave	PASS
	RDP defaults	width 7.30 m, radius 10.0 m, chainage interval 20 m	PASS
2.2 road geometry	Change width 9.50, manual radius 15, millimetre units, select existing line	opened 'roadpro' (54 tiles), 28 list items in 11 lists, all actions fired, OK -> OK; sub-dialogs opened and closed: roadcorr, roadpave	PASS
	Change width 9.50, manual radius 15, millimetre units, select existing line - settings saved	saved: width=9.50, rmode=1, radius=15, units=1, mode=1	PASS
	ROADPRORESET restores the defaults	after reset: width 7.30, units 0; message: Road Pro settings restored to defaults (width 7.30 m, radius 10 m).	PASS
	Invalid road width is refused	OK refused, message shown: "Road width must be a number greater than zero."	PASS
	Zero road width is refused	OK refused, message shown: "Road width must be a number greater than zero."	PASS
2.3 edges, signs, markings	Cones, centre barricades, permanent signs, GIVE WAY at the tie-in	opened 'roadpro' (54 tiles), 28 list items in 11 lists, all actions fired, OK -> OK; sub-dialogs opened and closed: roadcorr, roadpave	PASS
	Cones, centre barricades, permanent signs, GIVE WAY at the tie-in - settings saved	saved: etype=1, ctype=1, sset=0, jctl=1, sspeed=0	PASS

02 Build a road (RDP) (2/2)

18/18 PASSED

Guide step	Check	Result	Status
2.4 surface, chainage, ends	Chainage every 50 m from 1+250, road closed at the end, no hatch	opened 'roadpro' (54 tiles), 28 list items in 11 lists, all actions fired, OK -> OK; sub-dialogs opened and closed: roadcorr, roadpave	PASS
	Chainage every 50 m from 1+250, road closed at the end, no hatch - settings saved	saved: chint=50, chst=1+250, endfn=1, hatch=0	PASS
	Chainage input parsing (rp:dist)	"0+100" -> 100.0; "1+250.5" -> 1250.5; "+100" -> 100.0; "250" -> 250.0; " 2+000 " -> 2000.0; "abc" -> nil; "1+x" -> nil	PASS
	Chainage labels (rp:chfmt) with DIMZIN=0	0.0 -> 0+000; 100.0 -> 0+100; 1250.5 -> 1+250.500; 12345.0 -> 12+345; 5.25 -> 0+005.250	PASS
	Chainage labels (rp:chfmt) with DIMZIN=8	0.0 -> 0+000; 100.0 -> 0+100; 1250.5 -> 1+250.5; 12345.0 -> 12+345; 5.25 -> 0+005.25	PASS
	Chainage labels (rp:chfmt) with DIMZIN=12	0.0 -> 0+000; 100.0 -> 0+100; 1250.5 -> 1+250.5; 12345.0 -> 12+345; 5.25 -> 0+005.25	PASS
2.5 centre line geometry	Arc centre from bulge (rp:arc-centre) vs reference	200 random arcs, 0 mismatches (tolerance 1e-7 m)	PASS
	Polyline sampling with arcs (rp:pl-sample)	61 points, max difference 2.7e-14 m	PASS
	Polygon area (rp:parea)	10 x 5 rectangle -> 50.000 m2	PASS

03 Corridor, pavement & quantities (1/3)

21/21 PASSED

Guide step	Check	Result	Status
3.1 RDC - corridor dialog	**Corridor dialog opens, Check layout runs, OK works**	opened 'roadcorr' (41 tiles), 14 list items in 5 lists, all actions fired, OK -> OK	PASS
	Dual carriageway, 2 + 2 lanes, 3 m median	opened 'roadcorr' (41 tiles), 14 list items in 5 lists, all actions fired, OK -> OK	PASS
3.2 RDPV - pavement dialog	**Pavement dialog - Flexible (asphalt)**	opened 'roadpave' (23 tiles), 3 list items in 1 lists, all actions fired, OK -> OK	PASS
	Pavement dialog - Flexible (asphalt) - settings saved	saved: ptype=0	PASS
	Pavement dialog - Concrete JPCP	opened 'roadpave' (23 tiles), 3 list items in 1 lists, all actions fired, OK -> OK	PASS
	Pavement dialog - Concrete JPCP - settings saved	saved: ptype=1	PASS
	Pavement dialog - Concrete JRCP with mesh	opened 'roadpave' (23 tiles), 3 list items in 1 lists, all actions fired, OK -> OK	PASS
	Pavement dialog - Concrete JRCP with mesh - settings saved	saved: ptype=2	PASS
3.3 Concrete quantities	**Concrete slab quantity**	plugin: 250 mm C40, area 1660.00 m2, volume 415.00 m3 | hand calc: 415.00 m3	PASS

03 Corridor, pavement & quantities (2/3)

21/21 PASSED

Guide step	Check	Result	Status
3.3 Concrete quantities	Stone base quantity	plugin: 200 mm CRUSHED STONE BASE, volume 332.00 m3 | hand calc: 332.00 m3	PASS
	Earthwork quantity	plugin: 300 mm EARTHWORK FILL 95% MDD, formation 1660.00 m2, volume 498.00 m3 | hand calc: 498.00 m3	PASS
	Dowel bars quantity	plugin: dia 32 x 450 mm @ 300 mm : 1188 nos, 3379.2 kg | hand calc: 1188 nos, 3379.2 kg	PASS
	Tie bars quantity	plugin: dia 16 x 800 mm @ 750 mm : 800 nos, 1011.4 kg | hand calc: 800 nos, 1011.4 kg	PASS
	TOTAL steel quantity	plugin: 4.391 t | hand calc: 4.391 t	PASS
	Steel unit weight $d^2/162$ kg/m	Ø32 = 6.32 kg/m (table 6.31), Ø16 = 1.58 kg/m (table 1.58)	PASS
	JRCP steel mesh incl. 10% laps	plugin: A393 (6.16 kg/m2) incl. 10% laps : 1826.0 m2, 11248.2 kg | hand calc: 1826.0 m2, 11248.2 kg	PASS
	Flexible pavement layer volumes	ASPHALT WEARING COURSE: 50 mm, area 1660.00 m2, volume 83.00 m3; AGGREGATE BASE COURSE: 200 mm, area 1660.00 m2, volume 332.00 m3; GRANULAR SUB-BASE: 150 mm, area 1660.00 m2, volume…	PASS
	Longitudinal joints - 2 lanes	offsets (0.0) (centre line)	PASS

03 Corridor, pavement & quantities (3/3)

21/21 PASSED

Guide step	Check	Result	Status
3.3 Concrete quantities	**Longitudinal joints - 4 lanes**	offsets (-3.65 0.0 3.65)	PASS
3.4 RDX - cross sections	**Cross-section dialog - typical section**	opened 'roadxsec' (20 tiles), 8 list items in 3 lists, all actions fired, OK -> OK	PASS
	Cross-section dialog - every chainage interval, 3% one-way	opened 'roadxsec' (20 tiles), 8 list items in 3 lists, all actions fired, OK -> OK	PASS

04 Widening & tapers

5/5 PASSED

Guide step	Check	Result	Status
4.1 RDW - lane widening	**Widening dialog - right side +3.65 m, CH 100-200**	opened 'roadwiden' (23 tiles), 7 list items in 3 lists, all actions fired, OK -> OK	PASS
	End chainage before start is refused	OK refused, message shown: "End chainage must be greater than the start chainage."	PASS
4.2 RDT - taper	**Taper dialog - both sides +1.00 m**	opened 'roadtaper' (18 tiles), 7 list items in 3 lists, all actions fired, OK -> OK	PASS
	Taper dialog - narrower road (-0.50 m)	opened 'roadtaper' (18 tiles), 7 list items in 3 lists, all actions fired, OK -> OK	PASS
	Taper end before start is refused	OK refused, message shown: "Taper end chainage must be greater than the start chainage."	PASS

05 Junctions & Saudi standard (1/2)

16/16 PASSED

Guide step	Check	Result	Status
5.1 junction dialog	Junction dialog - manual priority junction	opened 'roadjunc' (28 tiles), 33 list items in 8 lists, all actions fired, OK -> OK; sub-dialogs opened and closed: roadrbt	PASS
5.2 Saudi standard values	Class 1 (P) at 60 km/h	R 9.0 m, lane 3.0 m, approach taper 30 m, departure 25 m, storage 65 m, island 1.8 x 15 m, tg 7.5 s	PASS
	Class 1 values fill the dialog and are saved	saved corner radius 9.0, aux lane 3.00, sight triangles 1	PASS
	Class 2 (SU) at 60 km/h	R 12.0 m, lane 3.5 m, approach taper 35 m, departure 30 m, storage 60 m, island 1.8 x 15 m, tg 9.5 s	PASS
	Class 2 values fill the dialog and are saved	saved corner radius 12.0, aux lane 3.50, sight triangles 1	PASS
	Class 3 (WB-15) at 60 km/h	R 15.0 m, lane 3.65 m, approach taper 40 m, departure 30 m, storage 55 m, island 2.4 x 15 m, tg 11.5 s	PASS
	Class 3 values fill the dialog and are saved	saved corner radius 15.0, aux lane 3.65, sight triangles 1	PASS
	Class 4 (WB-19) at 60 km/h	R 18.0 m, lane 3.65 m, approach taper 40 m, departure 30 m, storage 55 m, island 2.4 x 15 m, tg 11.5 s	PASS
	Class 4 values fill the dialog and are saved	saved corner radius 18.0, aux lane 3.65, sight triangles 1	PASS

05 Junctions & Saudi standard (2/2)

16/16 PASSED

Guide step	Check	Result	Status
5.2 Saudi standard values	Intersection sight distance ISD = 0.278 V tg	60 km/h, tg 7.5 s -> 125 m (AASHTO 125 m); 60 km/h, tg 9.5 s -> 158 m (AASHTO 158 m); 60 km/h, tg 11.5 s -> 192 m (AASHTO 192 m); 80 km/h, tg 7.5 s -> 167 m (AASHTO 167 m)	PASS
5.3 roundabout type	Junction type = Roundabout, More roundabout settings	opened 'roadjunc' (28 tiles), 33 list items in 8 lists, all actions fired, OK -> OK; sub-dialogs opened and closed: roadrbt	PASS
	Inscribed radius too small is refused	OK refused, message shown: "The inscribed radius must be more than half the branch width + 1 m."	PASS
5.4 Junction corners - corridor wrap	Corner wrap R=10 m, branch at 90°	sidewalk / walkway / drain / utility: overlap 0.000 m², 2 corner pieces each	PASS
	Corner wrap R=15 m, branch at 90°	sidewalk / walkway / drain / utility: overlap 0.000 m², 2 corner pieces each	PASS
	Corner wrap R=10 m, branch at 70°	sidewalk / walkway / drain / utility: overlap 0.000 m², 2 corner pieces each	PASS
	Half-plane clipping (rp:clip-half)	10 x 10 square clipped at x = 5 -> 4 vertices, x from 5.0 to 10.0	PASS

06 Roundabouts (1/3)

22/22 PASSED

Guide step	Check	Result	Status
6.1 Roundabout standards	13 standards in the list (Manual + 8 FHWA 2000 + 4 Guide 2010)	13 rows	PASS
	Default ICD inside the guide range for every standard	all 12 standards: ICD min <= default <= max	PASS
	Urban Double Lane Spiral (default) values	R 25.00, circ. width 9.50, apron 2.00, entry/exit 30.00/40.00, lanes index 1, spiral 1	PASS
	FHWA 2000: Mini Roundabout	pick in RDRB -> saved R 11.00 m (ICD 22), circ. width 5.00 m, entry 10.00 m, exit 15.00 m	PASS
	FHWA 2000: Rural Double Lane Roundabout	pick in RDRB -> saved R 29.00 m (ICD 58), circ. width 10.00 m, entry 35.00 m, exit 50.00 m	PASS
	FHWA 2000: Rural Double Lane Spiral Marking Roundabout	pick in RDRB -> saved R 29.00 m (ICD 58), circ. width 10.00 m, entry 35.00 m, exit 50.00 m	PASS
	FHWA 2000: Rural Single Lane Roundabout	pick in RDRB -> saved R 19.00 m (ICD 38), circ. width 5.50 m, entry 25.00 m, exit 40.00 m	PASS
	FHWA 2000: Urban Compact Roundabout	pick in RDRB -> saved R 14.00 m (ICD 28), circ. width 5.00 m, entry 12.00 m, exit 15.00 m	PASS
	FHWA 2000: Urban Double Lane Roundabout	pick in RDRB -> saved R 25.00 m (ICD 50), circ. width 9.50 m, entry 30.00 m, exit 40.00 m	PASS

06 Roundabouts (2/3)

22/22 PASSED

Guide step	Check	Result	Status
6.1 Roundabout standards	FHWA 2000: Urban Double Lane Spiral Marking Roundabout	pick in RDRB -> saved R 25.00 m (ICD 50), circ. width 9.50 m, entry 30.00 m, exit 40.00 m	PASS
	FHWA 2000: Urban Single Lane Roundabout	pick in RDRB -> saved R 17.50 m (ICD 35), circ. width 5.50 m, entry 20.00 m, exit 30.00 m	PASS
	Guide 2010 (NCHRP 672): Mini-Roundabout	pick in RDRB -> saved R 11.00 m (ICD 22), circ. width 5.00 m, entry 10.00 m, exit 15.00 m	PASS
	Guide 2010 (NCHRP 672): Single-Lane Roundabout	pick in RDRB -> saved R 20.00 m (ICD 40), circ. width 5.50 m, entry 20.00 m, exit 30.00 m	PASS
	Guide 2010 (NCHRP 672): Multilane Roundabout	pick in RDRB -> saved R 27.50 m (ICD 55), circ. width 9.50 m, entry 30.00 m, exit 45.00 m	PASS
	Guide 2010 (NCHRP 672): Multilane Spiral Marking	pick in RDRB -> saved R 27.50 m (ICD 55), circ. width 9.50 m, entry 30.00 m, exit 45.00 m	PASS
6.2 RDRB - roundabout dialog	Roundabout dialog - both side roads, draw new	opened 'roadrbt' (25 tiles), 23 list items in 5 lists, all actions fired, OK -> OK	PASS
	Roundabout radius smaller than the circulatory width is refused	OK refused, message shown: "The circulatory width must be smaller than the inscribed radius."	PASS
6.3 Roundabout geometry	Entry fillets tangent to the circle - LISP matches reference	120 leg/corner cases over 12 standards x T, cross and Y layouts; max difference 0.0e+00 m	PASS

06 Roundabouts (3/3)

22/22 PASSED

Guide step	Check	Result	Status
6.3 Roundabout geometry	**Splitter islands leave at least 3 m entry lane**	132 sections along the islands of 12 standards; LISP = reference; kerb-to-island >= 3.0 m	PASS
6.4 Regression - bugs found by this test	**Entry fillet touches the inscribed circle (R 25, entry r 30)**	tangent point 25.000 m from the centre (was 30.000 m before the fix: R and r are the same AutoLISP variable)	PASS
	Side road is fitted to the circle (rp:rb-fit)	runs (before the fix: "bad argument type" - the centre O was overwritten by the local o)	PASS
	No function mixes names that differ only by upper / lower case	only rp:junction-run lists the unused local sB twice (sB / sb, harmless, from v3.4)	PASS

07 Edit & live update

5/5 PASSED

Guide step	Check	Result	Status
7.1 RDLIVE - live update switch	**RDLIVE Off**	setting live = 0; message: RoadPro LIVE update is OFF : run RDB after editing a centre line....	PASS
	RDLIVE On	setting live = 1; message: RoadPro LIVE update is ON : grip-edit / MOVE / ROTATE / STRETCH / PEDIT a road centre line...	PASS
	Live-update wiring	present: object reactor on centre lines, command reactor (commandEnded), cancel / fail handled, rebuild sent as a command, re-entry guard while rebuilding	PASS
	Replay of widenings, tapers, junctions, roundabouts	rp:replay-w, rp:replay-t, rp:replay-j, rp:replay-r, rp:rebuild, rp:move-branches, rp:live-process defined	PASS
7.2 RDB / RDER / RDU	**Rebuild and edit commands defined**	RDB, RDER, RDU and their full names are defined	PASS

08 Lines, labels & exchange

3/3 PASSED

Guide step	Check	Result	Status
8.1 RDL - single line	**Single-line dialog - barricades, offset 0.50**	opened 'roadline' (12 tiles), 7 list items in 2 lists, all actions fired, OK -> OK	PASS
	Single-line dialog - cones, from 10 m to 80 m	opened 'roadline' (12 tiles), 7 list items in 2 lists, all actions fired, OK -> OK	PASS
8.2 RDM / RDRAD / RDSEC / LandXML	**Commands defined**	RDM, RDRAD, RDSEC, RDLX, RDLXI	PASS

09 Code checks, shortcuts & guide

9/9 PASSED

Guide step	Check	Result	Status
9.1 Code checks	Brackets balanced in all 471 forms	parser read every form	PASS
	No call to an undefined function	none	PASS
	No wrong number of arguments	every call matches its defun	PASS
	DCL braces balanced in all dialogs	9 dialogs: *rp:dcl* 67/67, *rp:xdcl* 27/27, *rp:wdcl* 25/25, *rp:tdcl* 22/22, *rp:jdcl* 38/38, *rp:cdcl* 57/57, *rp:ldcl* 15/15, *rp:rbdcl* 32/32, *rp:pdcl* 30/30	PASS
	Local variables declared	5 notes, all false alarms: 4 are ActiveX constants (vlax-vbDouble ...), 1 is a lambda-local the checker does not see	PASS
9.2 Shortcuts sheet and guide	Shortcuts sheet lists every command	22/22 shortcuts found	PASS
	Shortcuts sheet dated 03-Nov-2026	dates found: ['03-Nov-2026']	PASS
	Every command named in the user guide exists	45 command names in the guide, all defined	PASS
	Guide covers every command	22/22 commands appear in the guide	PASS

Dialog coverage

ALL 9 DIALOGS

Command	Dialog	Tiles checked	Lists / items	Opens sub-dialog	All actions fired	OK closes	Bad input refused
RDP	`roadpro`	54	11 / 28	roadcorr, roadpave	✓	✓	✓ width
RDC	`roadcorr`	41	5 / 14	—	✓	✓	—
RDPV	`roadpave`	23	1 / 3	—	✓	✓	—
RDX	`roadxsec`	20	3 / 8	—	✓	✓	—
RDW	`roadwiden`	23	3 / 7	—	✓	✓	✓ chainage
RDT	`roadtaper`	18	3 / 7	—	✓	✓	✓ chainage
RDJ	`roadjunc`	28	8 / 33	roadrbt	✓	✓	✓ radius
RDRB	`roadrbt`	25	5 / 23	—	✓	✓	✓ circ. width
RDL	`roadline`	12	2 / 7	—	✓	✓	—

RESULT Every set_tile, get_tile, mode_tile and action_tile call was matched against the dialog file: 0 unknown keys, 0 empty lists, 0 errors.

AutoCAD field-test checklist (1/2)

TO DO IN AUTOCAD

#	Guide step	Do this	Expected	Pass	Fail	Notes
1	1.1	Run Install_RoadPro.bat, start AutoCAD	"Road Pro v3.5 loaded" on the command line	☐	☐	
2	1.2	Start Civil 3D (Metric profile)	Same message; RDHELP shows "add-in bundle"	☐	☐	
3	1.4	MENUBAR 1, open the RoadPro menu	All 22 commands in the menu	☐	☐	
4	2.5	RDP: pick points, 2 bends	Edges, barricades, markings, chainage, signs, curve labels	☐	☐	
5	2.2	RDP: select an existing polyline / Civil 3D alignment	Road built on the selected line	☐	☐	
6	3.1	RDC: sidewalks, walkway, drain, utilities	Strips on both sides with paver hatch	☐	☐	
7	3.3	RDPV concrete JPCP, then RDX	Joints on plan; slab, base, earthwork and steel in section	☐	☐	
8	3.5	RDR, answer Yes for Excel	Tables + CSV; concrete 415.00 m^3 for 200 m × 7.30 m	☐	☐	
9	4.1	RDW right +3.65 m, CH 100–200	Widening with tapers, barricades moved	☐	☐	

AutoCAD field-test checklist (2/2)

#	Guide step	Do this	Expected	Pass	Fail	Notes
10	5.1	RDJ Saudi, Arterial WB-15	R 15 corners, sight triangles, corridor wraps corners	☐	☐	
11	5.3	RDJ type Roundabout, draw the branch	Roundabout with the branch as a leg	☐	☐	
12	6.3	RDRB on a road, both sides	Kerb fillets on the circle, islands, crossings, signs	☐	☐	
13	6.1	RDRB with Mini, Urban single, Rural double	Values of each standard; drawing completes	☐	☐	
14	7.1	Grip-edit a centre line; MOVE a main road	Road rebuilds; side roads follow; U undoes	☐	☐	
15	7.2	RDB on a v3.4 road; RDER radius 30	Widenings / junctions kept; radius changed	☐	☐	
16	8.1	RDL on a polyline; RDM; RDRAD; RDSEC	Units placed; markings and labels drawn	☐	☐	
17	8.2	RDLX then RDLXI in Civil 3D	LandXML round trip	☐	☐	
18	1.5	Run Uninstall_RoadPro.bat, restart	RoadPro no longer loads	☐	☐	

Tested. Fixed. Ready for AutoCAD.


RoadPro v3.5 — test report 03-Nov-2026

Updated files

RoadPro.lsp — roundabout fix (6 functions)

RoadPro_v3.5_AddIn.zip and RoadPro_v3.5.zip — carry the fixed file

Next: run the field-test checklist on a copy of a drawing

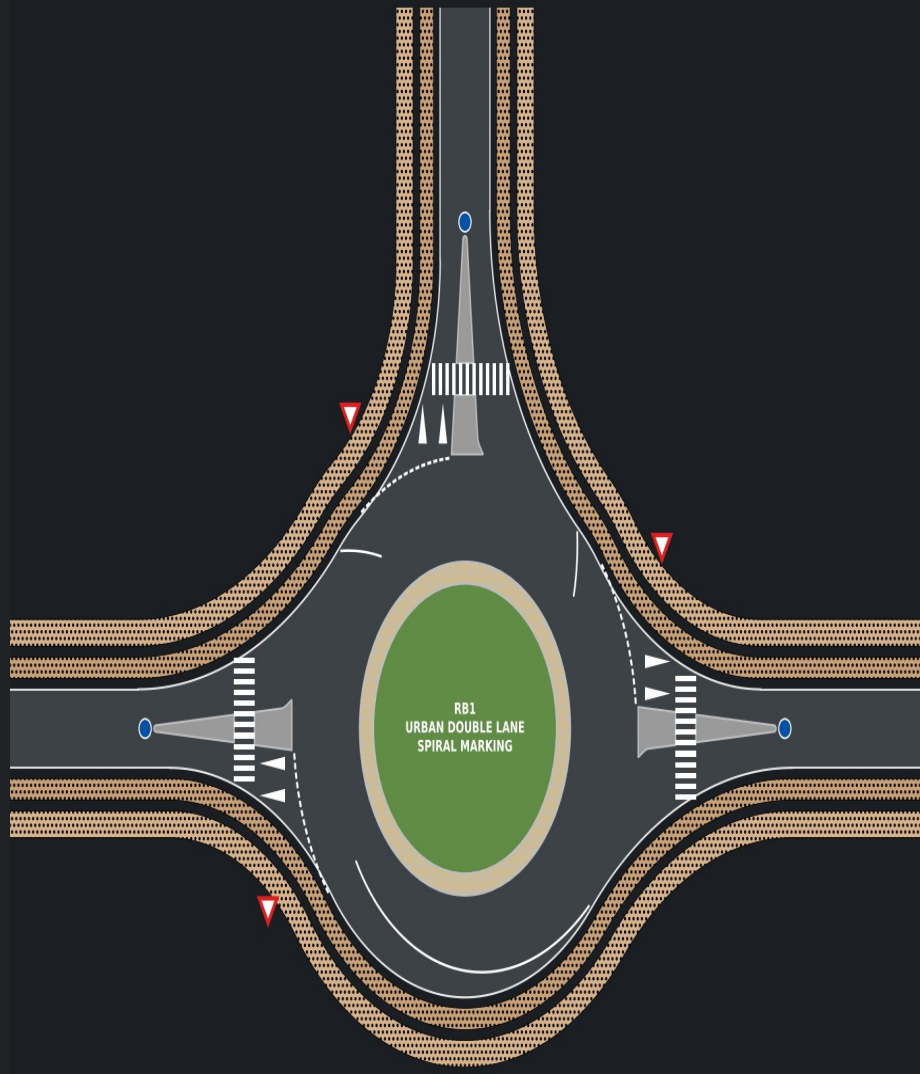

Developed by https://www.exceltokml.com/