

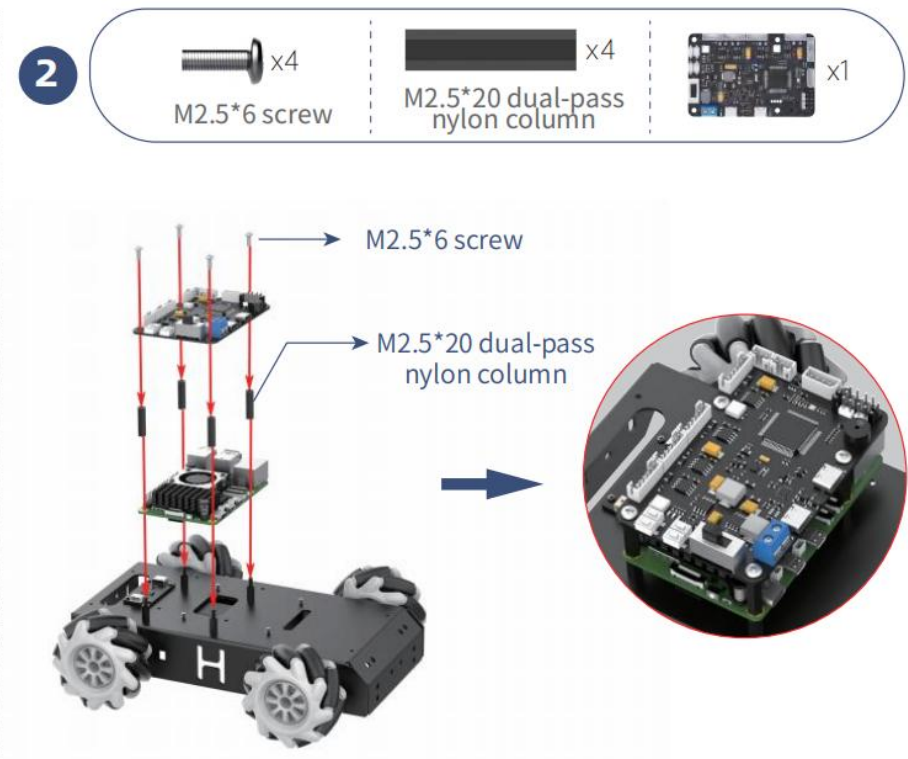
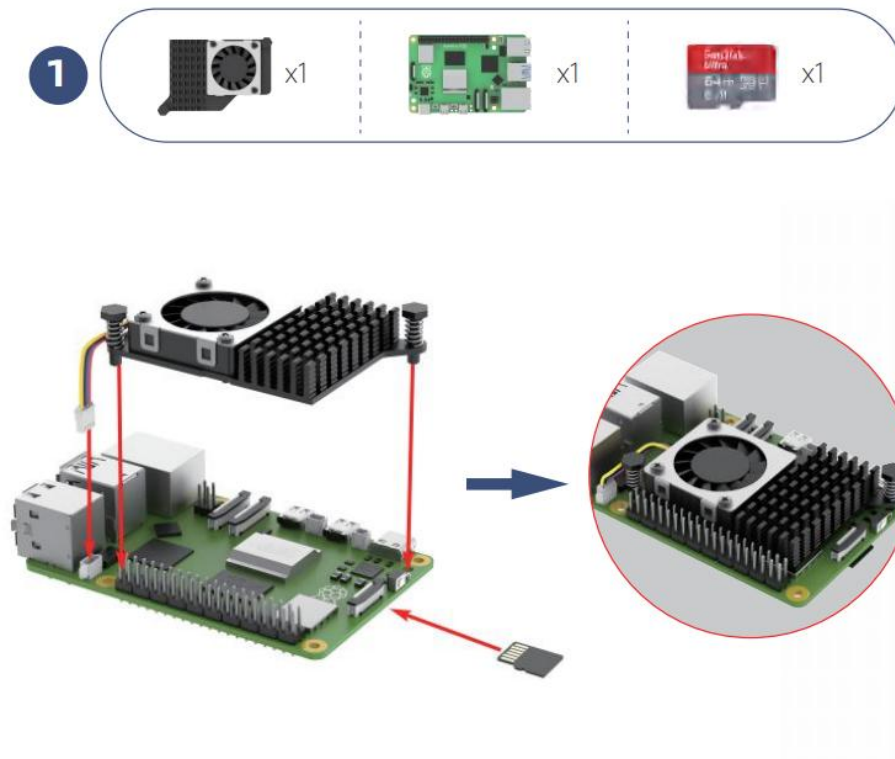


Note: The assembly instructions use the MentorPi-M1 Mecanum-wheel version as an example, but they also apply to the MentorPi-A1 Ackermann version.

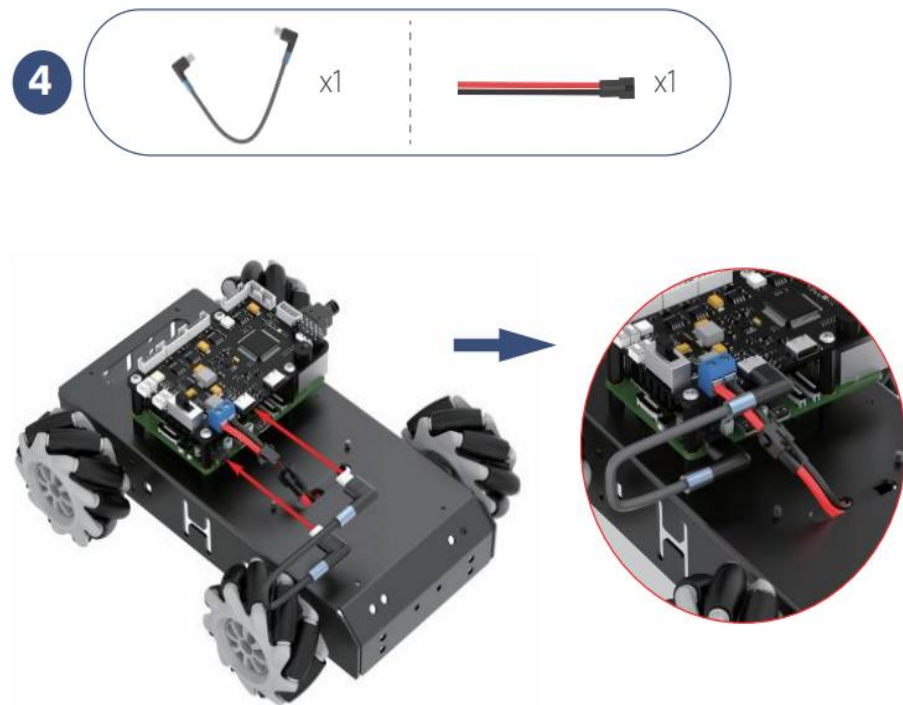

These two steps are only applicable to the Mecanum-wheel version.

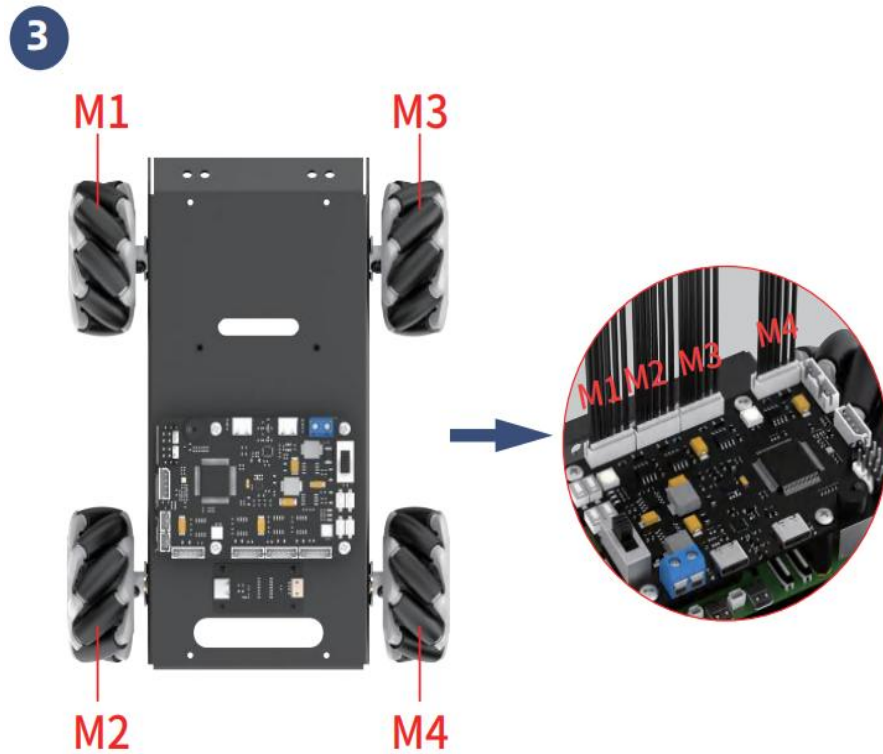

5



x1



x1



6




x8

M3*6 screw




x1

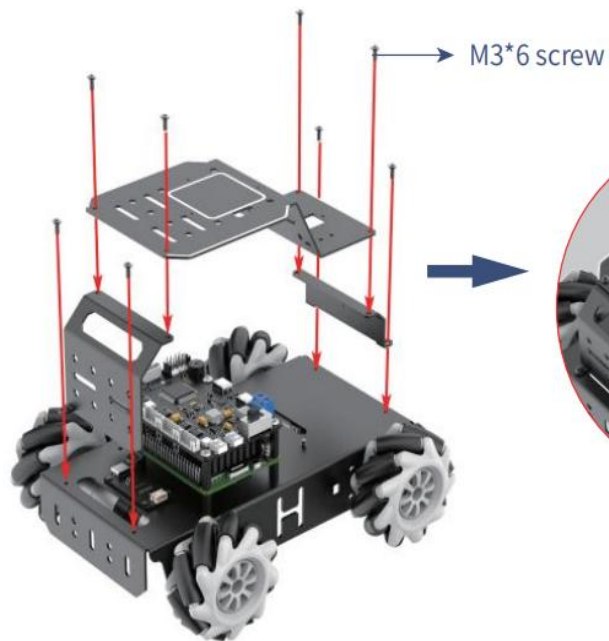

7

x2
M3*6 screw

x1

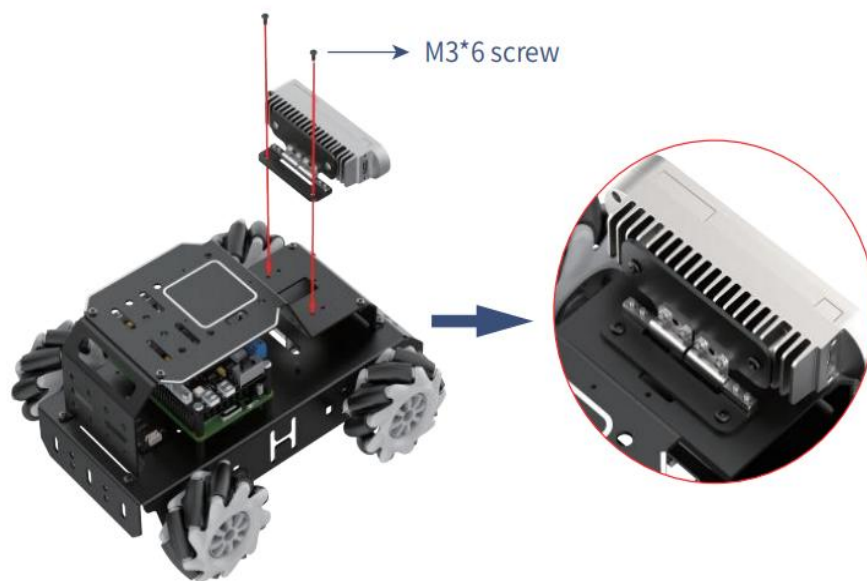


8

x3
M2.5*6 screw


x1

x1


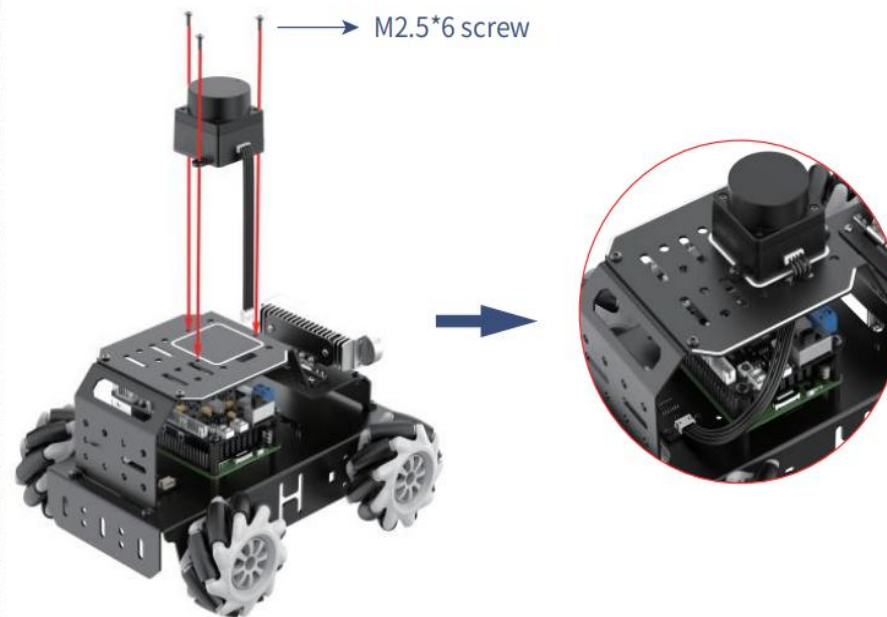


The wiring instructions for Ackerman version are shown below:


1

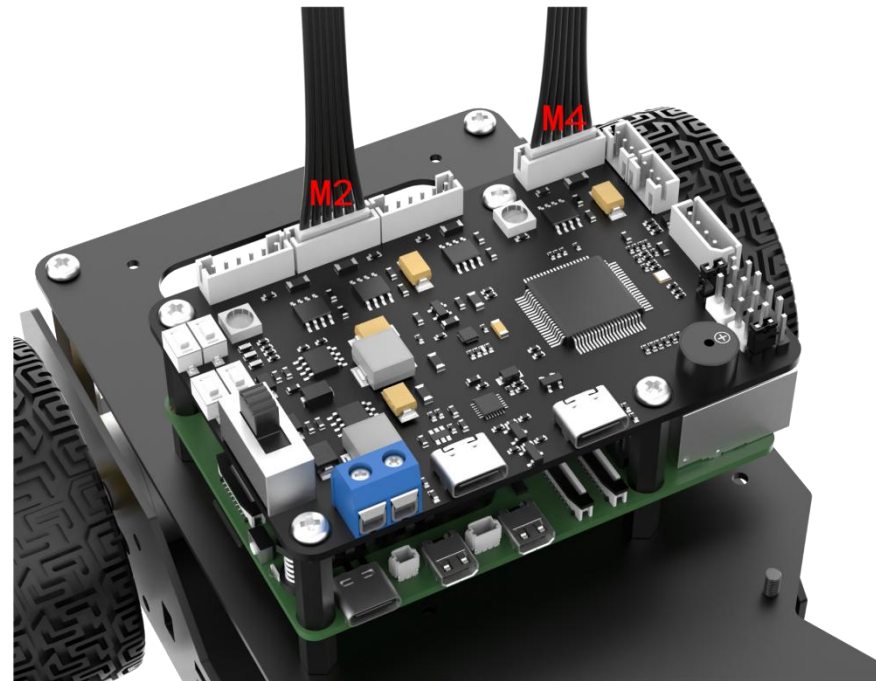


2

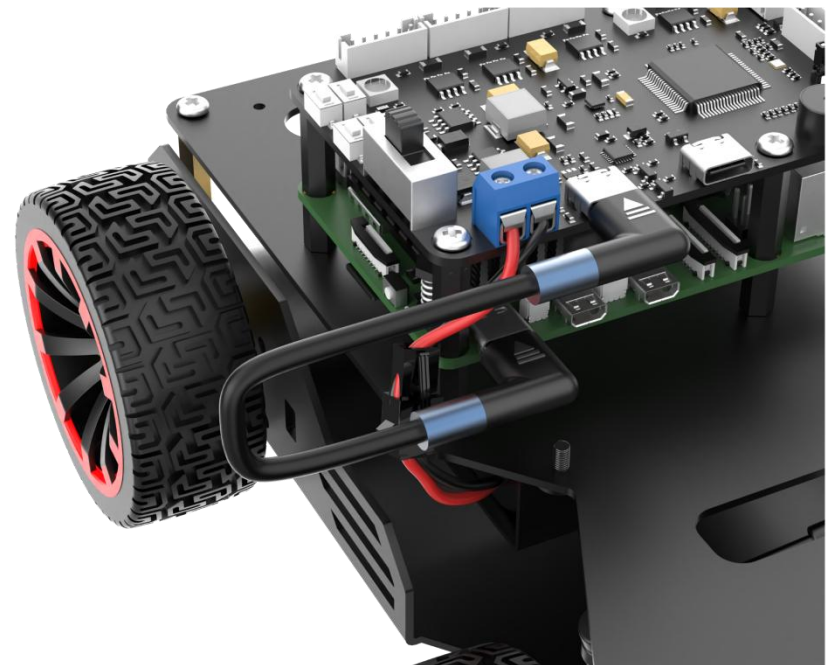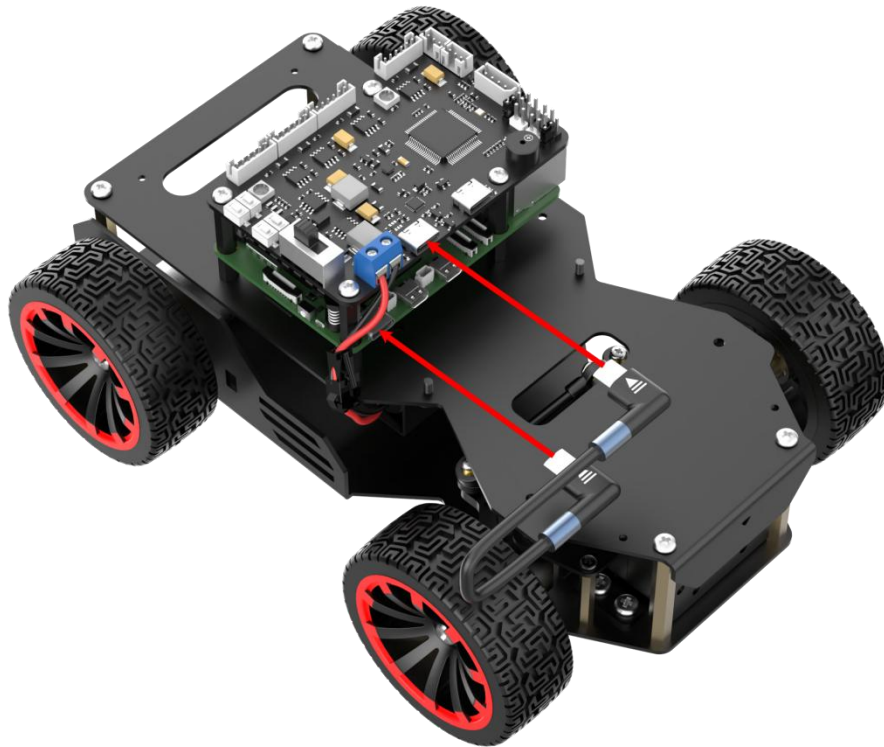


3

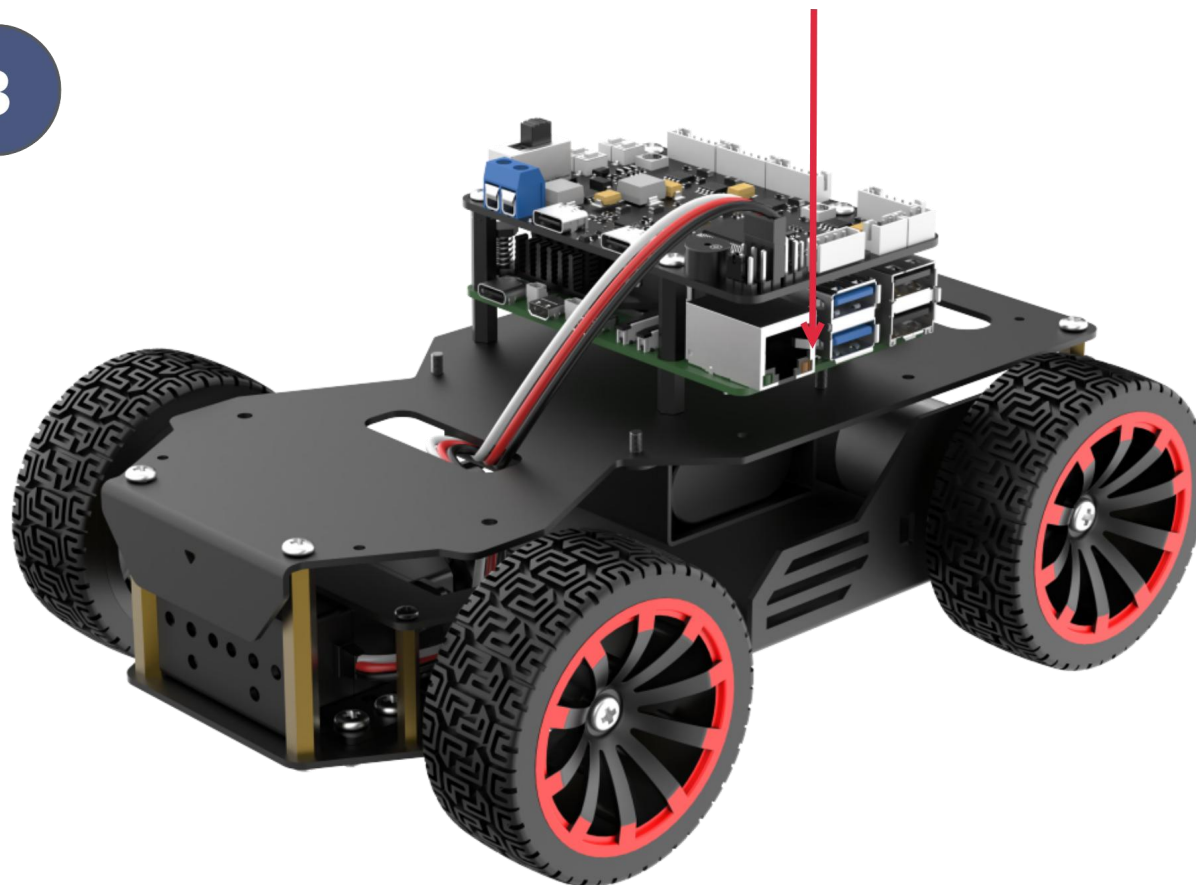


If your purchased MentorPi includes a monocular camera, please install it based on the following steps.

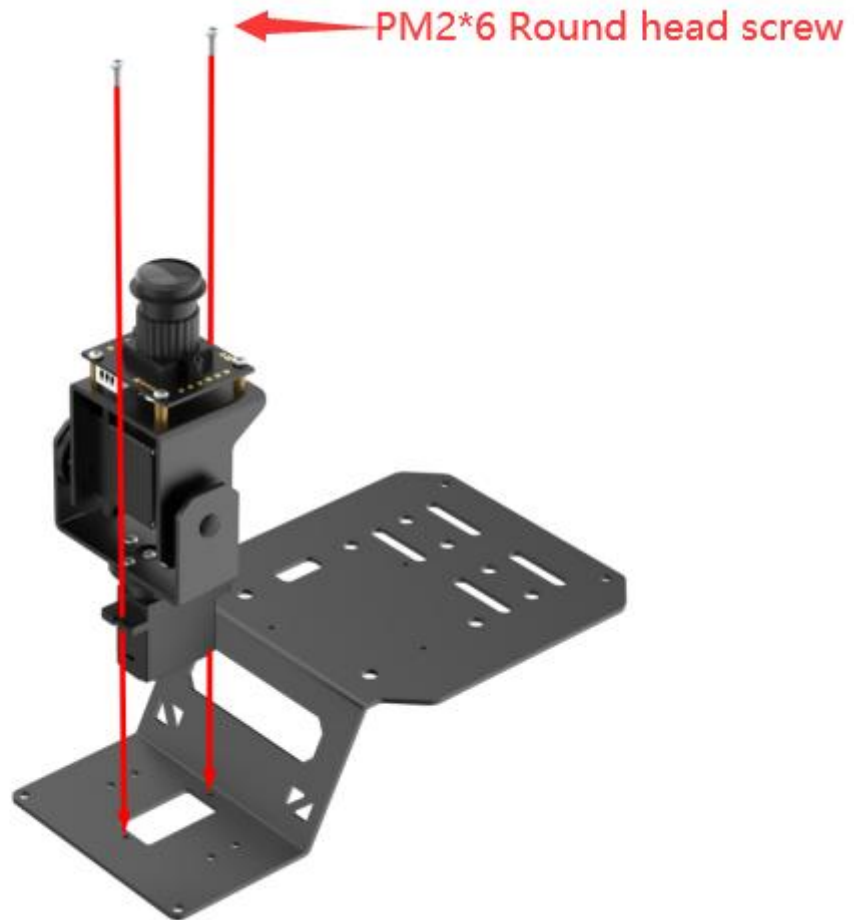


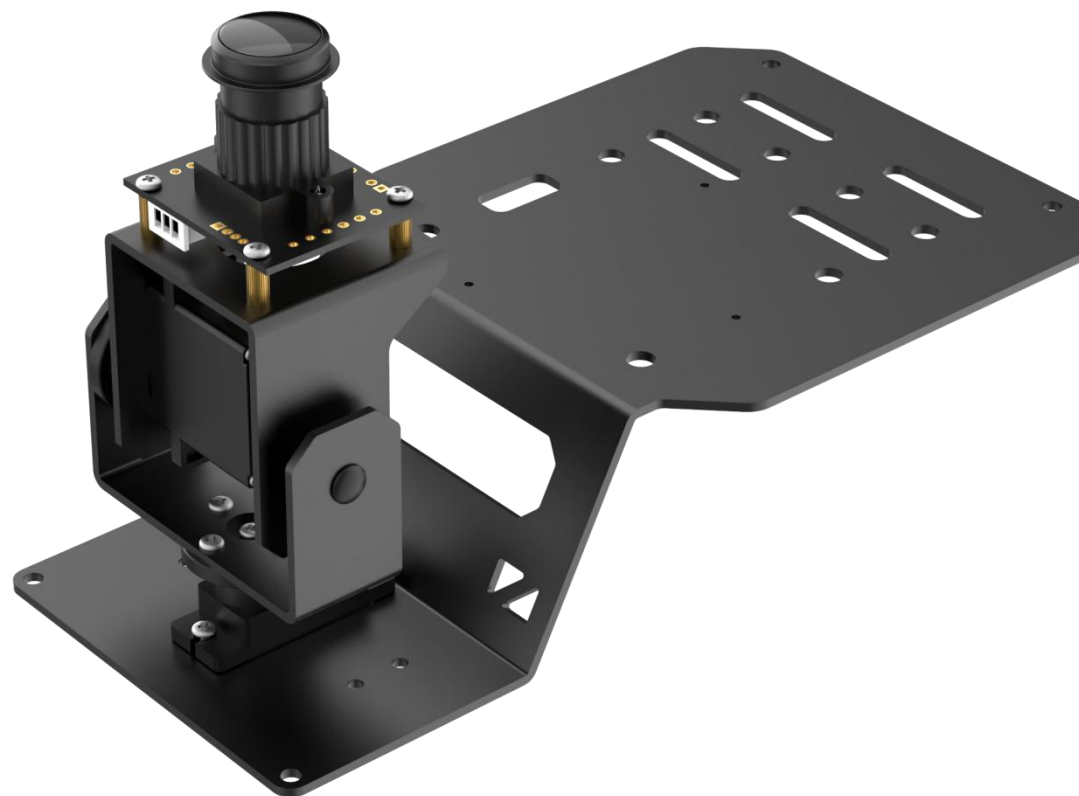


Connect the pin headers to the 5V pin with jumper caps. (It is already connected before delivery, you can check with this diagram.)

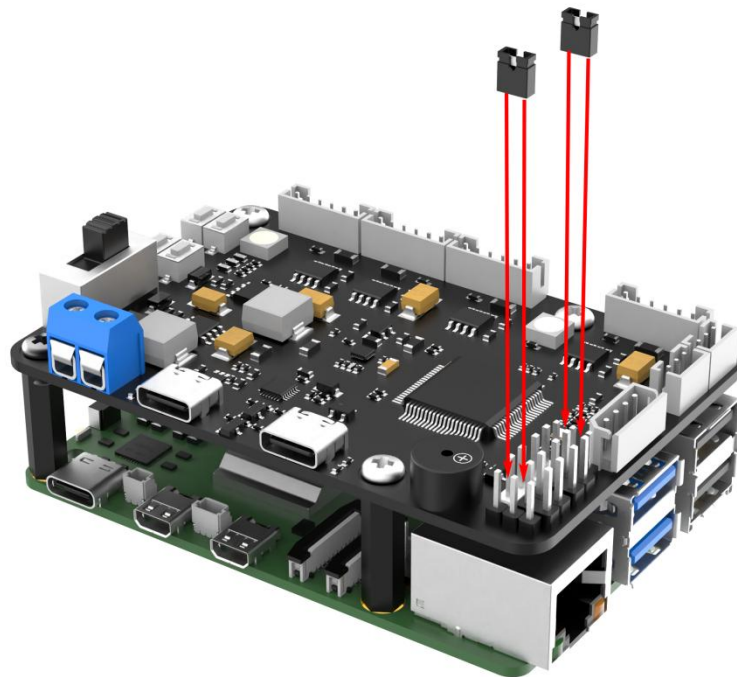

After assembly (partial diagram):

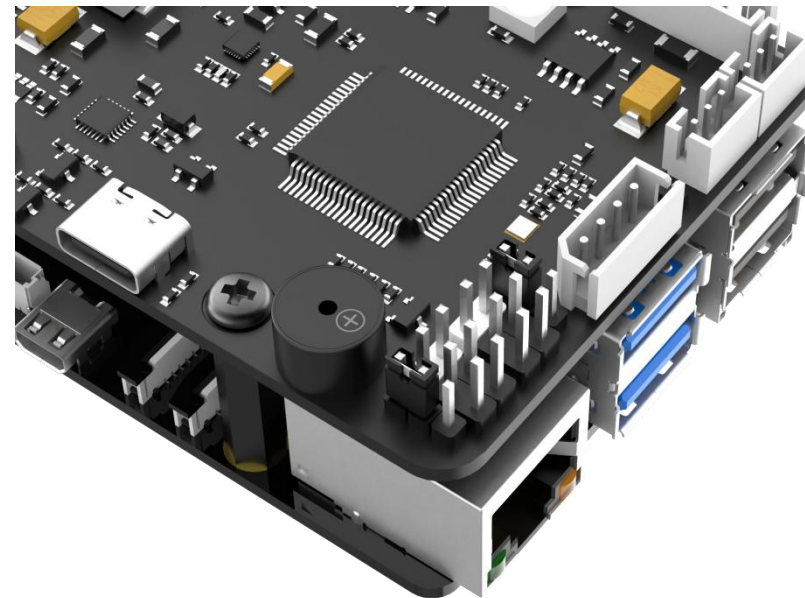

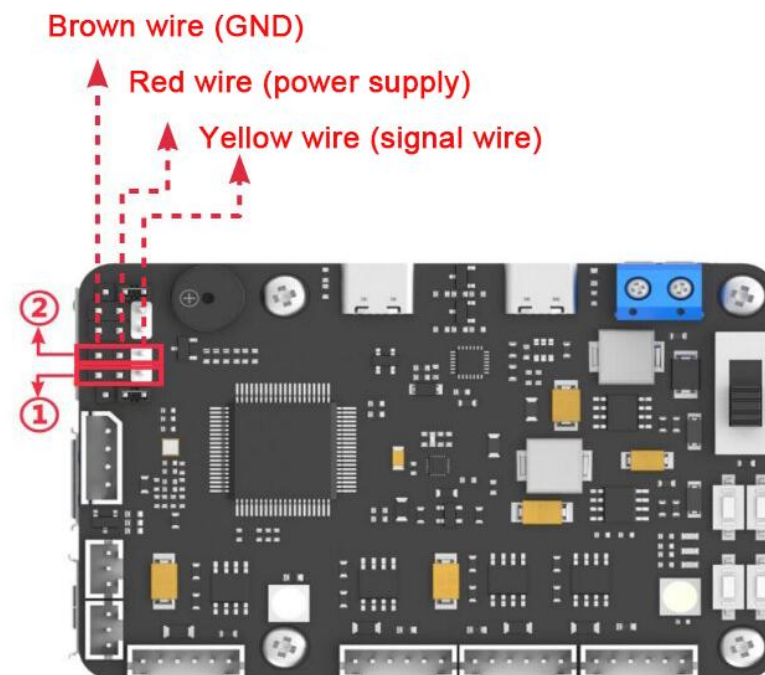

Final effect diagram
(take mecanum wheel version
as an example)

