


KQ-504 baggage demo · boardroom setup

Floor plan for the setup team. One Alien ALR-9900+ reader, four antennas, three airport areas. A bag travels left to right: check-in (take-on) → sorting tunnel → loading at Hold 2.

Room ≈ 15 m × 6 m · scale 1 square = 1 m
Reader 192.168.0.161 · laptop 192.168.0.3

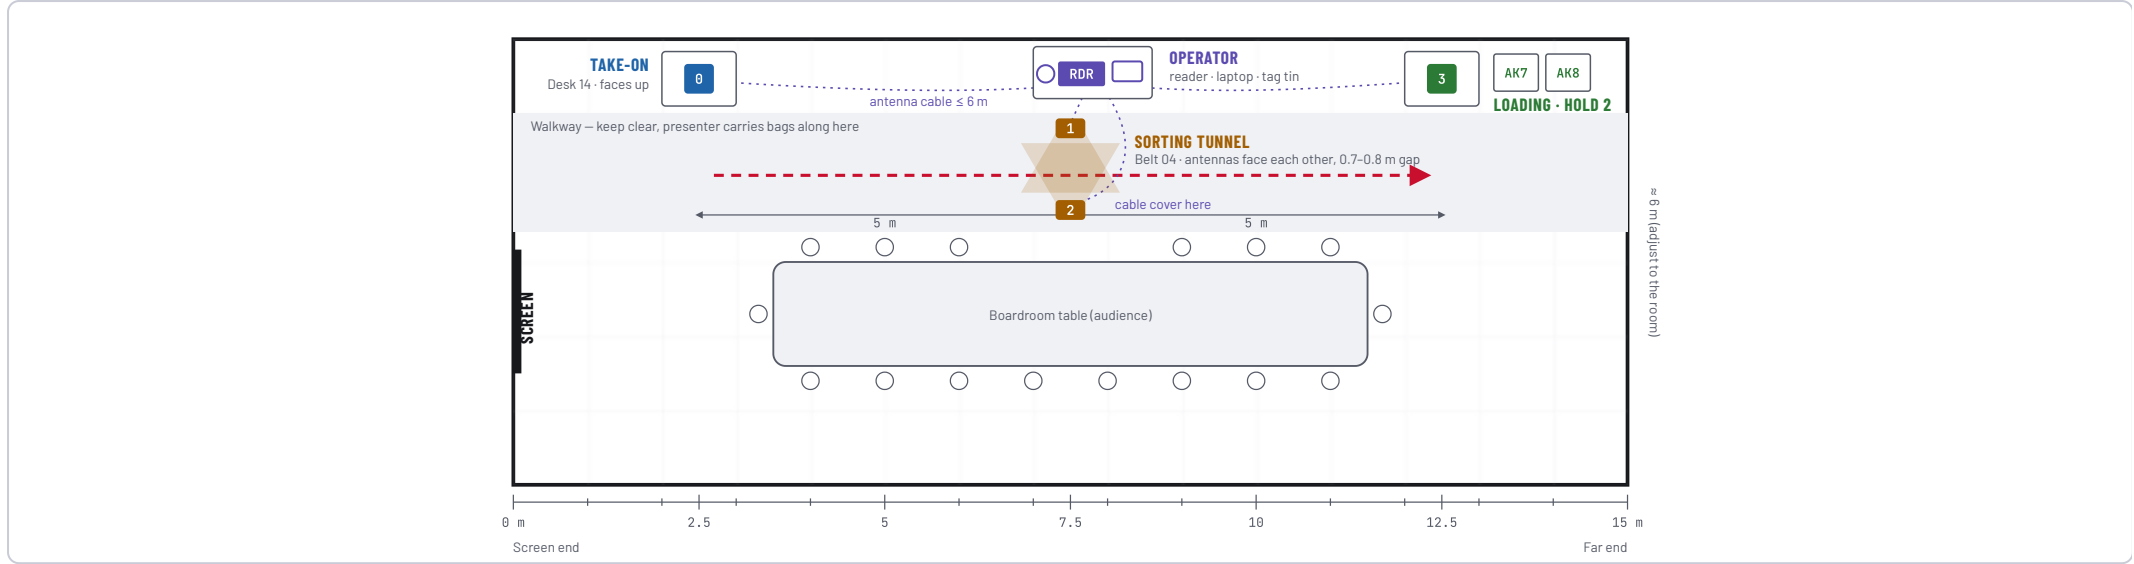

1 · Check-in (take-on) – Desk 14

antenna port 0

WHERE	2.5 m from the screen wall, beside the walkway.
MOUNT	Flat on a small table or chair, facing up . Hold the bag 20–30 cm above it.
PROPS	Luggage labels and a marker: write the licence plate from the "tag printed" toast on the bag.
SCREEN	Bag tag printed → bag CheckedIn .

2 · Sorting tunnel – Belt 04

antenna ports 1 + 2

WHERE	Room centre, 7.5 m , one antenna each side of the walkway.
MOUNT	On chairs or stands at waist height , facing each other , 0.7–0.8 m apart. Walk through with the bag at your side.
SCREEN	Bag Sorted + BPM sent. A KQ-412 bag sets off the alarm here.

3 · Loading – Hold 2

antenna port 3

WHERE	2.5 m from the far wall, beside the walkway.
MOUNT	Flat, facing up . Two open boxes labelled AK7 and AK8 next to it.
SCREEN	Green LOAD → AK7/AK8 or red DO NOT LOAD . Arm the ramp in the app only when loading.

SETUP CHECKLIST

- T-60** ☐ Tape floor marks at 2.5 m, 7.5 m, 12.5 m. Place the three stations and the operator table against the wall at the centre.
- T-50** ☐ Plug antennas into reader ports **0, 1, 2, 3** exactly as above. Tape cables down; cable cover where port 2 crosses the walkway.
- T-45** ☐ Power the reader, network cable to the laptop, HDMI to the screen. Close RFIDPoc.
- T-40** ☐ Start **KQ.Brs.Poc**. Allow it through Windows Firewall if asked. Reader pill turns green: "Reader streaming".
- T-35** ☐ **Calibrate** on Live reads: all tags in the tin → all four antennas at 0 reads/s. Walk one tag desk → tunnel → ramp; only that area's antenna should read.
- T-25** ☐ Cross-reads? Settings → Antenna → **Min RSSI** halfway between the weak and strong reading (e.g. 1,500 and 9,000 → 4,000). Save, walk again.
- T-10** ☐ Settings → **Reset demo** (empty flight, bindings unticked). Dashboard → **Add passenger** for each guest. Loading page: ULD **AK8**, loading antenna **not armed**.
- T-0** ☐ Screen on the Dashboard. Spare tags in the closed tin.

KIT

- ALR-9900+ reader and power supply
- 4 antennas + 4 cables (**check ≥ 6 m**)
- Network cable reader → laptop
- Laptop with KQ.Brs.Poc, HDMI to the screen
- 2 small tables or chairs (desk, ramp)
- 2 chairs or stands (tunnel)
- 2 boxes labelled AK7 and AK8
- Metal tin with lid (tag store)
- 3–5 tagged props, luggage labels, marker
- Gaffer tape and a cable cover

ASSUMPTIONS

Room about 15 × 6 m with the screen at one end. Reader and laptop sit at the centre so every antenna is within **5 m** of the reader.

Cables shorter than 6 m? Move the desk and ramp inwards to the cable limit and keep the tunnel centred.

Reader power stays at full (RFAttenuation 0) unless Min RSSI can't stop cross-reads.

Two people: a presenter carries the bags; an operator drives the laptop.