
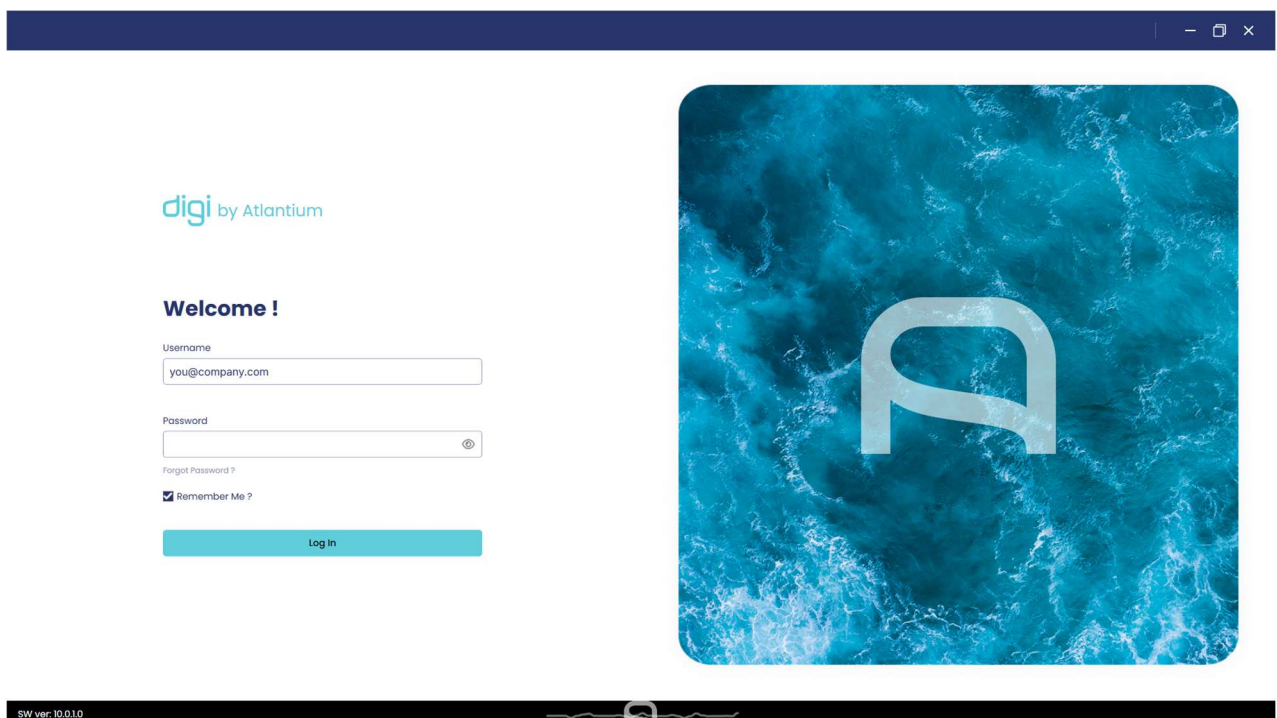


The Digi is a desktop dashboard that monitors Atlantium Systems.

Topology

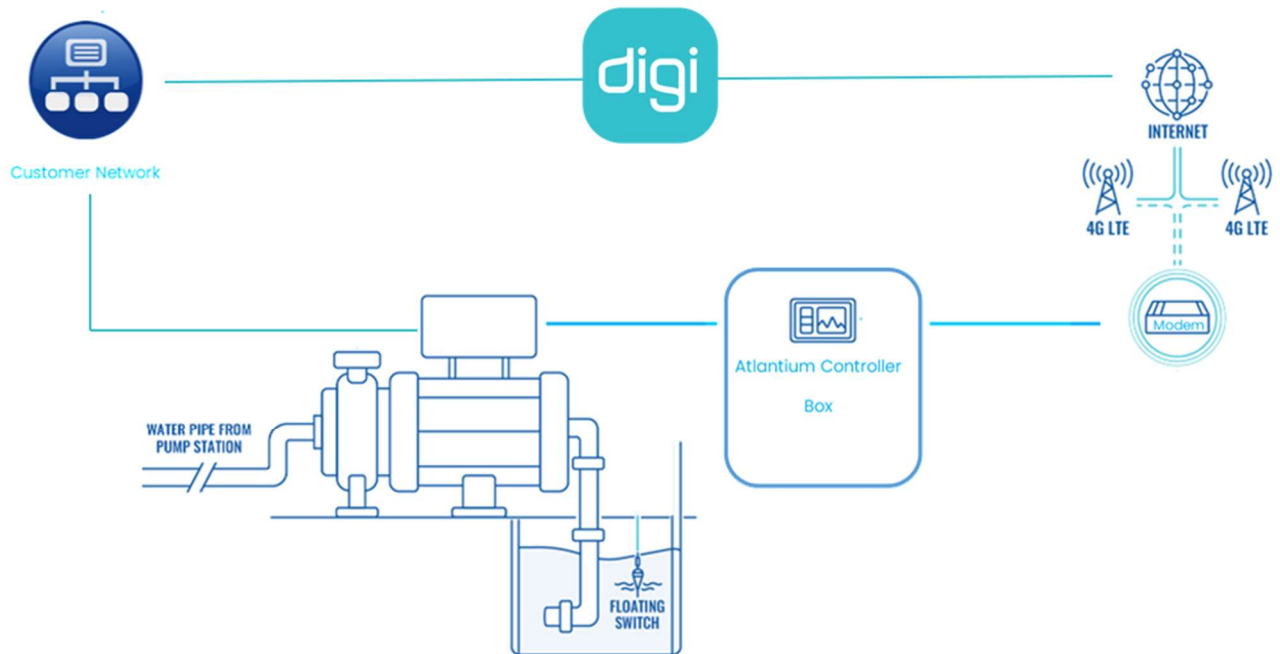

Overview


The digi monitor provides real-time oversight of multiple systems, showing status (Operational, Malfunction, Disconnected), key metrics like Dose, UVT, Flow, and Power, and tools for maintenance.

Using the local network or mobile VPN through the system's IP address.

Login and Home Screen


Log in as a "Guest" user without a password to access the welcome screen.

Select one of the options.

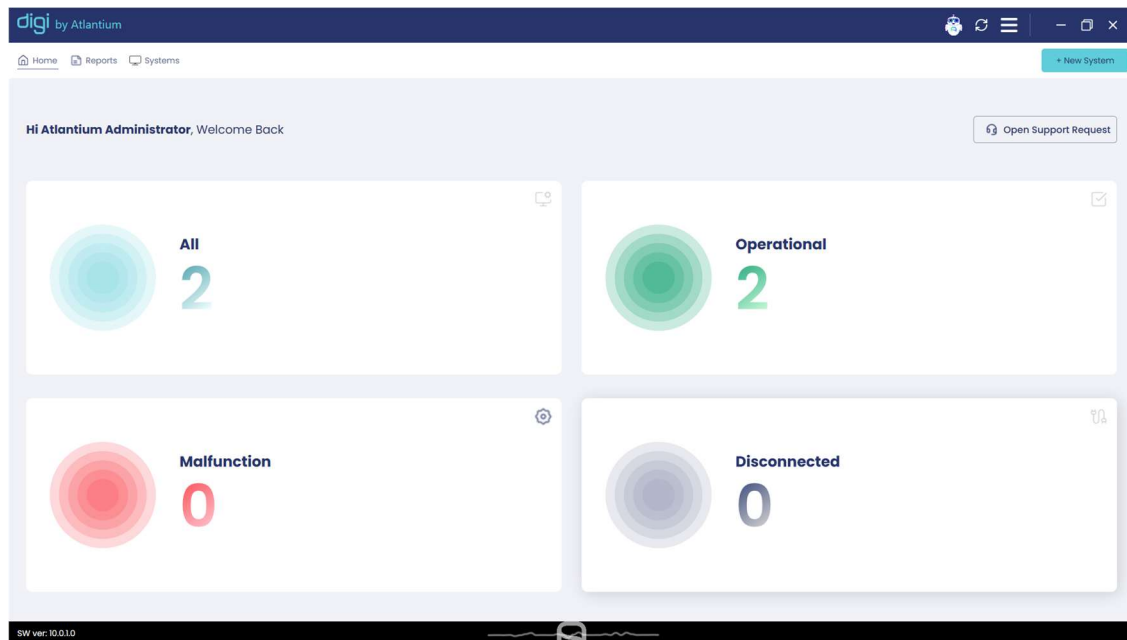


Register Atlantium Systems

*This screen will be empty on the first login

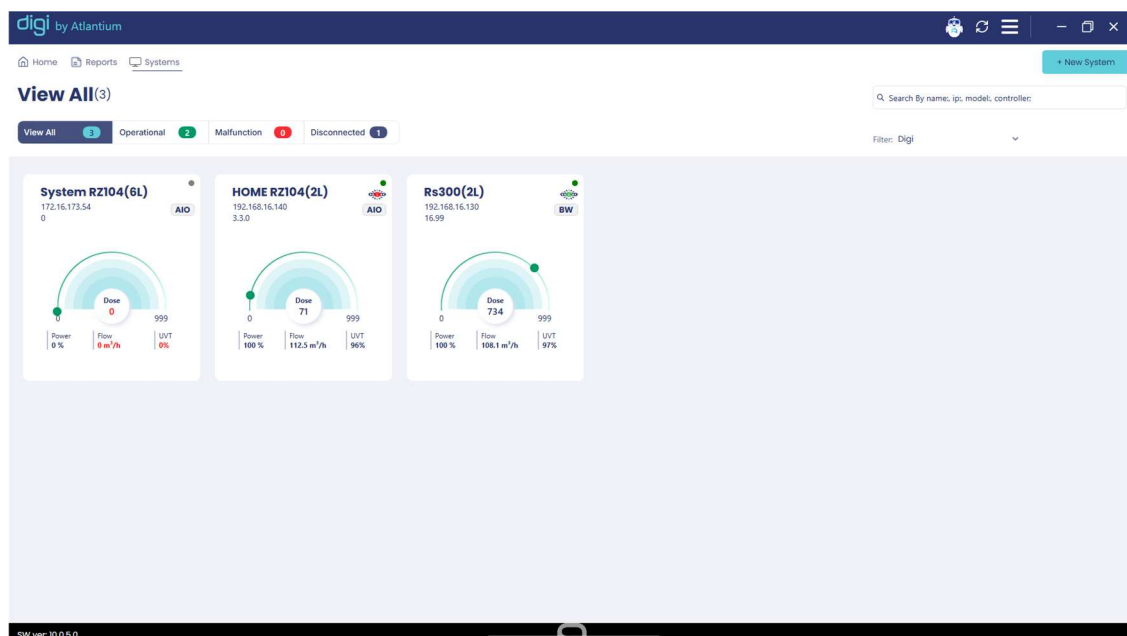

Extended mode screen

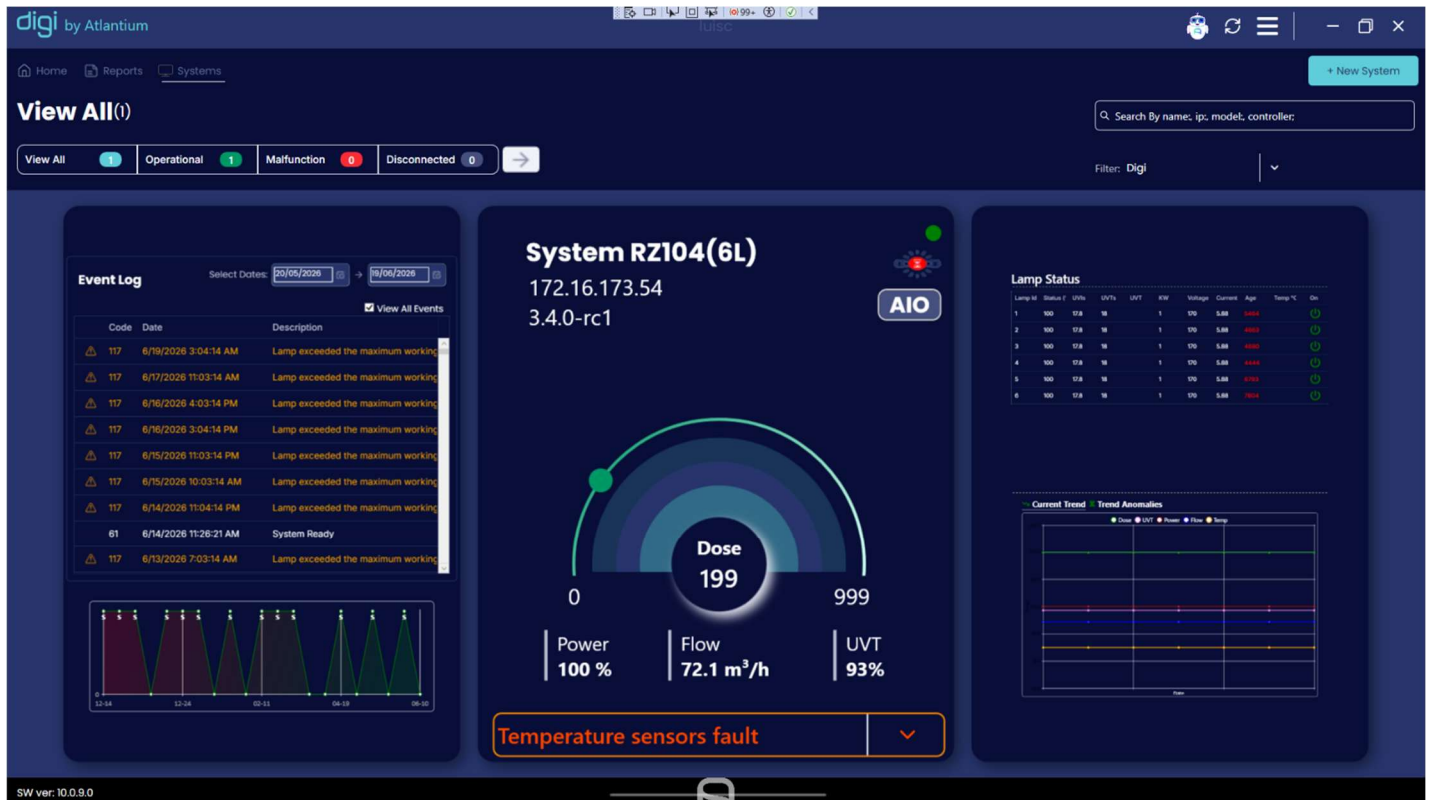

Add a new system

Fill the Register new system checklist form for each system you want to monitor

*form in the appendix part

*Must have digi license and serial number for each system

+ New System

1.- Press add new system button

2.- Insert IP Address

*No need to check the TCP/IP check box

The screenshot shows the 'Add New System' form in the digi by Atlantium web application. The form is titled 'Add New System' and includes a search bar for IP Address (172.16.173.58) and a 'Search System' button. Below the search bar, there are several input fields for system details: Serial Number (ATL-SN-xxxx), Customer Id (with a green 'G' icon and a red asterisk indicating a required field), Name, Plant, Application (validated), Model (RZ104), Software Version (3.4.0-rc1), Lamps (6), Application Mode (validated), Device Id String (bb1c16cd-b568-400f-8207-0d8a46c6b209), and Units Format (m³/h). A 'Connectivity' section includes fields for Group, Host Id (1), Port (2221), Direct Port (1502), Converter (None), Username (username), Password (password), Sd Card (32), Latitude Position, Longitude Position, and Controller Model. There are also checkboxes for 'Automatic Backup' (checked) and 'Send Mail Notifications To Customer' (unchecked). At the bottom, there are buttons for 'Save Changes', 'Delete', and 'Load PIF', along with a 'Copy License Key Here' button. The interface has a dark blue header with the 'digi by Atlantium' logo and a user profile 'luisc'. The footer shows 'SW ver 11.0.0.0'.

3.- Press Search System Button

If the IP address owner is an Atlantium System, Digi will read the system details



4.- Fill or update the system detail fields.

5.- If you have pif file for the system, import it.

6.- To allow mail notifications, select the checkbox

Select the correct Ethernet connection and port.

Set the protocol converter type


Set the corresponding port

Set the controller model

Controllers List Screen

This screen displays the register Atlantium systems.

Use the filter box to select groups.

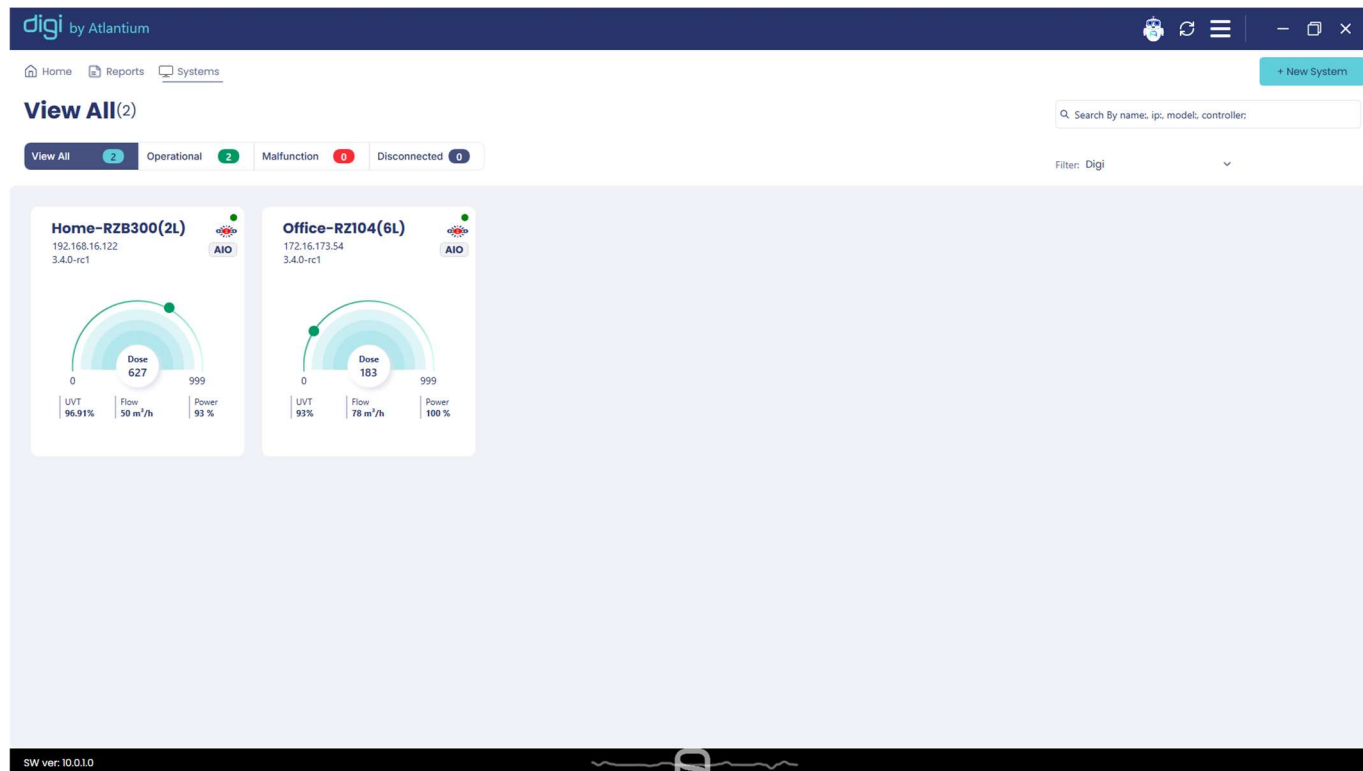


Main System Dashboard Screen


- **Event Log:** Filter by dates, display the main system event log, monthly event summary, and ignition trend.

Status Indicators

Green: On/Operational; Gray: Off; Red: Error.

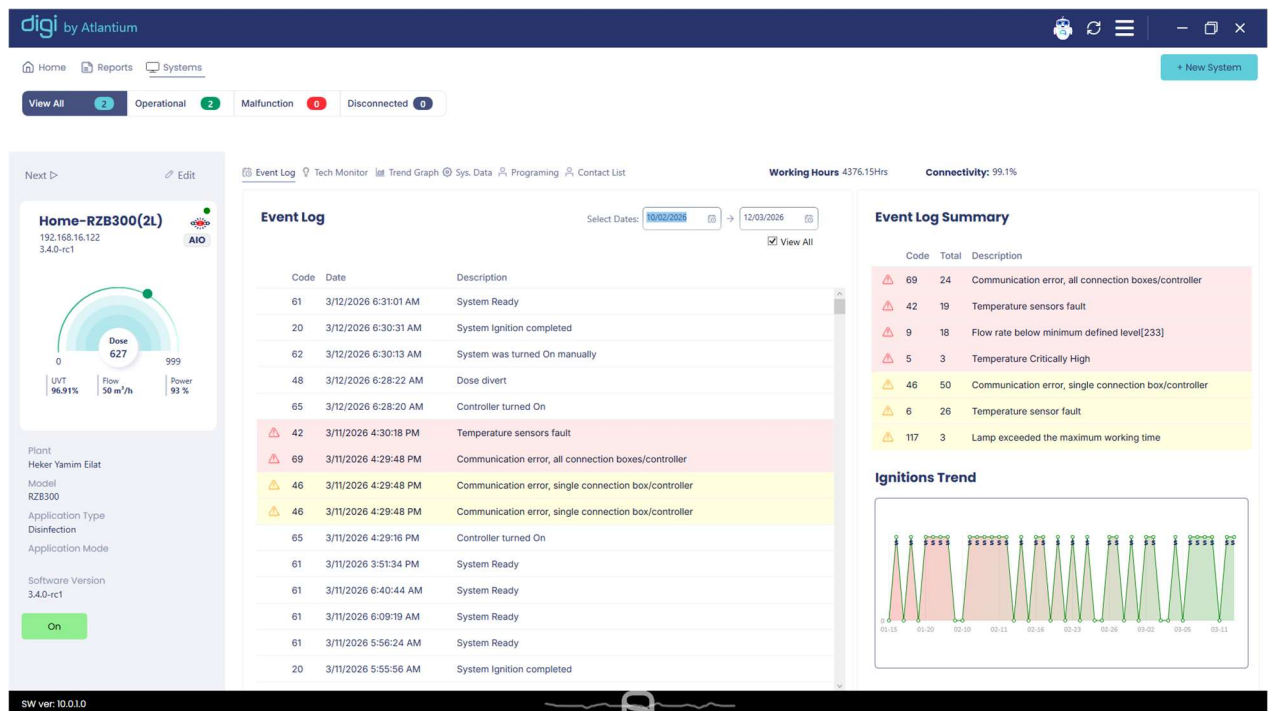

- **Tech Monitor:** Check lamp details (ID, UVIs/UVTs mA, UVT %, kW, voltage, current, age in hours, temp.

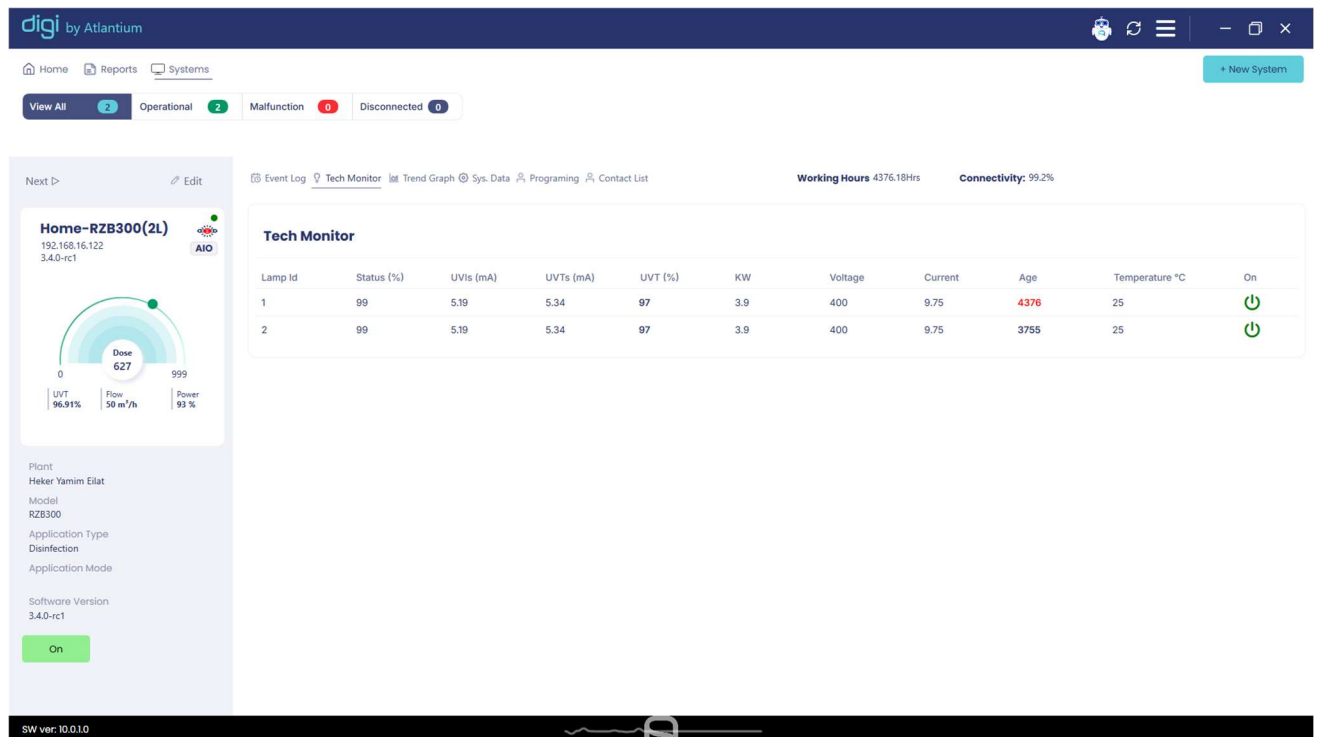

- **Trend Graph:** Plot Dose (mJ/cm²), UVT, Flow (mL/h), Power over time; spot anomalies like system errors.

- **Sys. Data:** View System data, alarms, real-time graph, and anomalies for Dose/UVT/Power/Flow/Temp, working hours (e.g., 5489 hrs).

The screenshot displays the 'digi by Atlantium' web interface. The top navigation bar includes 'Home', 'Reports', and 'Systems'. A status bar shows 'View All' (2), 'Operational' (2), 'Malfunction' (0), and 'Disconnected' (0). The main content area is titled 'System Data' and features a sidebar for 'Home-RZB300(2L)' with a circular gauge showing 'Dose 627' and 'UVT 96.91%'. The main panel contains various data fields and tables.

System Data

Customer: Heker Yamim Eliat
 Site: Heker Yamim Eliat
 Room: Clean room assembly:
 Segment: Aquaculture
 Subsegment: Other
 Application: Disinfection

Required UV Dose: 120
 UVT: 95
 Flow Rate: 5
 Water Type: Sea water
 Water Temp: Below 50°C (120°F)
 Electricity: 400

Flow Rate: 50, Minimum Flow: 10, Maximum Flow: 2000, Flow Delay: 0
 Dose: 627, Minimum Dose: 20, Maximum Dose: 999
 UVT: 96.91, Minimum UVT: 50, UVT Delta: 0
 Power (%): 93
 Temperature: 25, Maximum: 0

Alarms

Description	Value
System error	0
Over dose	0
Under dose	0
High temp. #4	0
Over temp. #5	0

Current Trend **Trend Anomalies**

Date	Name	Start	End	Period
12/03/2026 06:30	Power	100.00	93.00	2.00
12/03/2026 06:30	Dose	697.00	642.00	2.00

SW ver: 10.010

- **Programming:**

Edit settings;

The screenshot displays the Atlantium digi by Atlantium web interface. The top navigation bar includes links for Home, Reports, and Systems, along with a '+ New System' button. Below the navigation bar, there are status indicators for View All (2), Operational (2), Malfunction (0), and Disconnected (0). The main content area is divided into two sections. On the left, a sidebar for 'Home-RZB300(2L)' shows a circular gauge with a 'Dose' of 627 and three data points: UVT (96.91%), Flow (50 m³/h), and Power (93%). Below the gauge, a list of system details includes Plant (Heker Yamim Eilat), Model (RZB300), Application Type (Disinfection), Application Mode, Software Version (3.4.0-rc1), and an 'On' button. On the right, the 'Programming' section contains three input fields: Minimum Flow (10), Maximum Flow (2000), and Set Power (93), each with a 'Send' button. The bottom status bar shows 'SW ver: 10.0.1.0' and a stylized logo.

- **Reports:** Generate compliance, health, or maintenance reports (e.g., UVT calibration, lamp audits); select time periods like "Last Week"

The screenshot shows the 'digi by Atlantium' web interface. The top navigation bar includes 'Home', 'Reports', and 'Systems'. A 'New System' button is visible in the top right. The 'Search Reports' section on the left allows users to filter reports by system (currently 'Home-RZB300'), compliance (with 'Health Report' selected), maintenance, and time period (currently 'Last Month'). A 'Generate Report' button is at the bottom of this section. On the right, a 'Health Report' card indicates it provides a comprehensive overview of maintenance activities and includes a 'View Report' button. The bottom status bar shows 'SW ver: 10.0.1.0'.

The screenshot shows the 'digi by Atlantium' web interface with the 'Your Monthly Atlantium System Health Report' displayed. The report includes system details, calculated values, and a table of parameters.

System Details:

- Date: 13/03/2026 06:31
- Period: 10/02/2026 - 12/03/2026
- Operator: RZB300Q2L1
- Plant: Haker Yaron Elad
- IP address: 192.168.16.122
- Software ver: 3.4.0-rc1

Calculated Values:

Parameter	Average	Minimum	Maximum	Last value
Flow	432.47	827	864	827
Flow	83.37	50	97	93
Flow	50	50	50	50
Temperature	25	25	25	25
UVT	95.93	95.9	97	95.9
UVTs	5.31	5.3	5.4	5.3
UVTs	5.2	5.2	5.2	5.2
Lamp/UVT	95.93	95.9	97	95.9

The bottom status bar shows 'SW ver: 10.0.1.0'.



Trouble shooting

1. No system was found after the search process.

- Try to make a ping from the command line, if return ok

Check the SD card on the AIO controller.

deleted files or change for an empty one.

2. The Atlantium system was displayed but without data.

-Wait a few minutes, the digi system is copying all the data from the controller and can take a few minutes.

-Check the software version controller (AIO)

if its lower or than 3.3.0 (The System works through FTP)

Uncheck the checkbox in the system details screen.

System Details ×

Buscar dirección IP

192.168.16.140 Q Buscar sistema

☒ TCP/IP

Número de serie	ID del cliente	Nombre
	Heker Yamim Eilat	HOME RZ104

-For an AIO software version up to 3.3.0, check on the controller

General tab -> Connection settings

If you use a converter, try to work on a baud rate of 9600

-If it is an AIO controller, try to close the digi and log in again.

The first connection with the AIO controller is through FTP (historical reasons)

After that, the communication changes to TCP/IP automatically.



VS



Aspect	Digi	Scada
Role	Real-time supervisory, Control, and data acquisition designed for Atlantium systems. Access to private Atlantium data systems	A rea-time system category (Supervisory Control and Data Acquisition) – industrial control system hardware + software
Scope	Enterprise-wide: connects to PLCs/RTUs, sensors, valves, and pumps across multiple locations	Enterprise-wide: connects to PLCs/RTUs, sensors, valves, and pumps across multiple locations
Data	Complete access to Atlantium systems, lamp, and sensors history data (change, installation, and last calibration) General information about Atlantium systems. Historical data analysis, alarms for data trends, anomaly trends	Any process tags exposed by PLCs/RTUs/sensors

Integration	Connects to Atlantium systems over local network/VPN, with IP-based discovery and report features	Integrates with many vendors and protocols, often across an entire facility
AI	Integrated AI module to give help, information, and analyze historical data	Not included
Offline mode	Offline mode is designed to analyze trends and alarms (without system connection)	None
Line live report	Periodic graphic report that displays a periodic system behavior	None
System control	Completed access to all Atlantium Modbus tags and internal database	Only what suppliers are exposed to..
Data backup	Complete Atlantium data back To recovery systems	Partial
Atlantium systems	Support all Atlantium controllers (AIO, B&W, OC...) for all software Versions automatically do not need to be defined, and complete plugin support	Need to define for every new system or connection
Remote alarms	Mail and sms alarm support	support

RUT956 security features



security features supported by Teltonika's RUT956 device.

Category	Feature	Default	Purpose/Description
DDoS Protection	SYN Attack Protection	On	Blocks excessive SYN requests to prevent resource exhaustion.
	Ping Attack Protection	Off	Mitigates ICMP (Ping) flood attacks.
	SSH Attack Prevention	Off	Blocks excessive SSH requests.
	HTTP Attack Prevention	Off	Blocks excessive HTTP requests.
	HTTPS Attack Prevention	Off	Blocks excessive HTTPS requests.
Custom Configuration	Custom Rules	Empty	Allows adding custom firewall rules via iptables commands.
	DMZ	Off	Allows separating LAN-side network into separate zones with heavily restricted access.
Port Scan & TCP Attack Protection	Port Scan Prevention	Off	Detects and blocks port scanning attempts.
	SYN-FIN Attack	Off	Blocks packets with both SYN and FIN flags set.
	SYN-RST Attack	Off	Prevents abrupt TCP session resets.
	X-Mas Attack	Off	Blocks TCP packets with multiple unusual flags set.
	FIN Scan	Off	Blocks FIN packets used to bypass firewalls.
	NULL Flags Attack	Off	Blocks TCP packets with no flags set.

Access Control – Remote	SSH Access	Off	Disabled by default; use only with strong passwords.
	HTTP Access	Off	Disabled by default; use only with strong passwords.
	HTTPS Access	Off	Disabled by default; use only with strong passwords.
	CLI Access	Off	Disabled by default; use only with strong passwords.
Access Control – Local	SSH Access	On	Allows local configuration over LAN.
	HTTP Access	On	Allows local WebUI configuration over LAN.
	HTTPS Access	On	Allows local WebUI configuration over LAN.
	CLI Access	On	Allows local command-line configuration over LAN.
Login Protection	SSH Login Attempts	On	Blocks IP after 10 failed attempts (default).
	WebUI Login Attempts	On	Blocks IP after 10 failed attempts (default).
	2FA	Off	Enables two-factor authentication (2FA) using the OTP verification method to enhance access security.
Configuration Security	SMS Utilities	Admin password	SMS commands require admin password.
	Default Admin Password	On	Default password is present on the device label.
Certificates	Root CA	Preloaded	Default root certificate included; can be replaced.

Other Protections	UPnP	Not installed / Off	Disabled to prevent unauthorized port forwarding.
	UART Interface	Admin password	Requires password to prevent unauthorized physical access.
System integrity	Integrity	Not generated	Generates and verifies the integrity of specified system files. Ensure detection of unauthorized modifications.



Connectivity:

1) 1.- On Local Network

1.1 Version under AIO-3.3.0, connected through ethernet plug
not "realtime", sampling time should be set on AIO controller.

1.2 New AIO versions, connected through ethernet plug with
TcpIp support, real-time monitoring

2)Through the external modem

2.1 Connected to ISO card(serial RTU)

2.2 Connected to ethernet plug

2.3 Connected to the Local network

Register Atlantium Systems checklist.

	Digi System License, get from the Atlantium representative
	Atlantium System Serial number, one per system
	System HostId, IP Address, Port. One per system
	Site, Room
	Atlantium Customer ID

