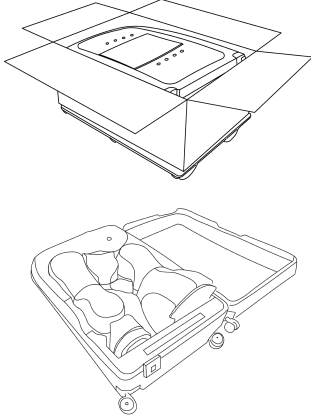
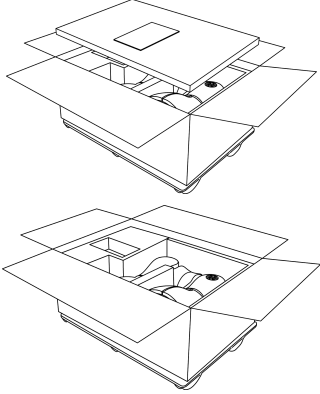
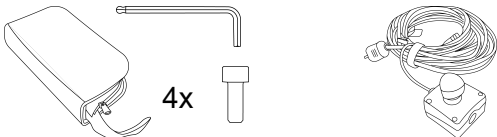
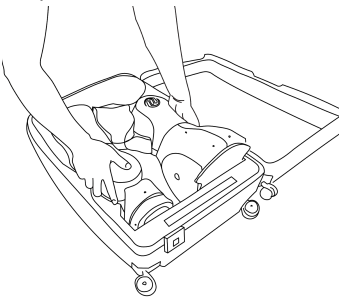
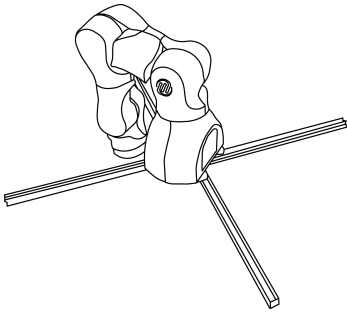


4. Installation and First use

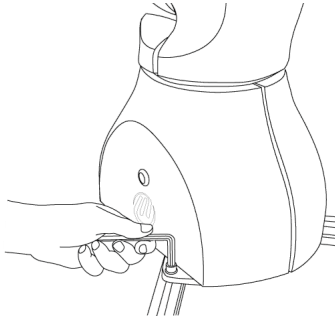
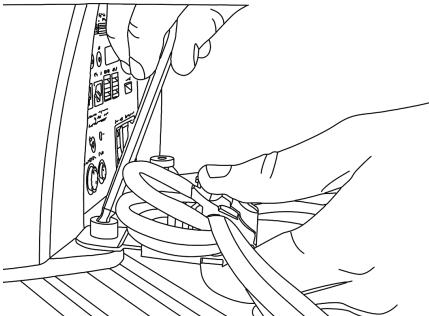
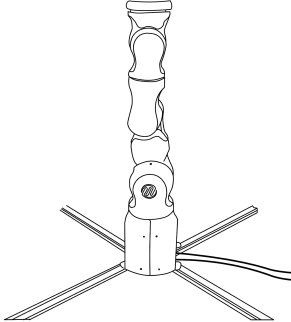
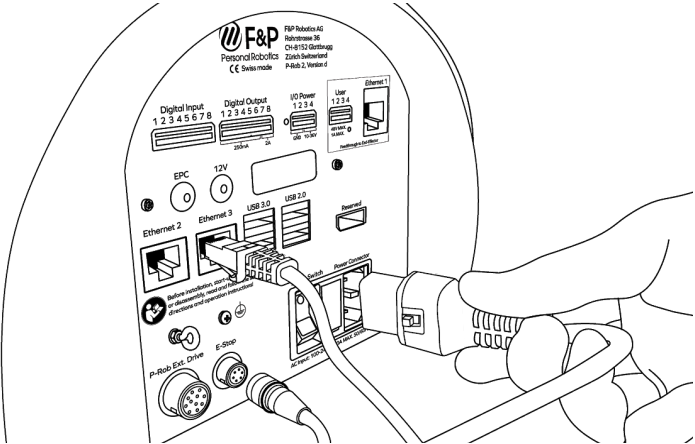
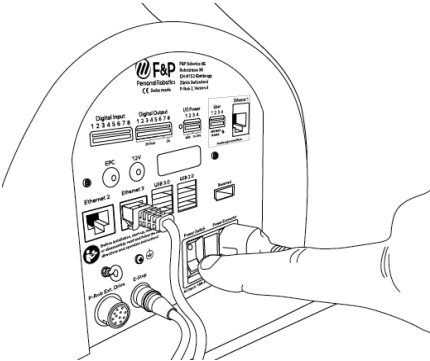
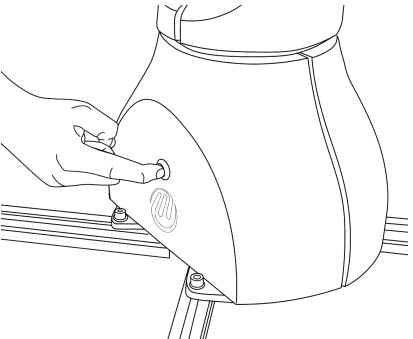


Please follow the instructions here below only after carefully reading and understanding Chapter 1 related to "[Safety](#)" and Chapter 2 "[Proper Use](#)".

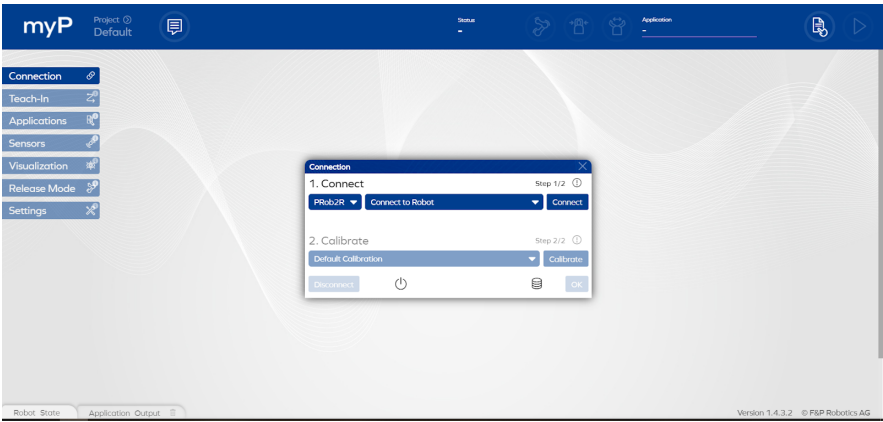
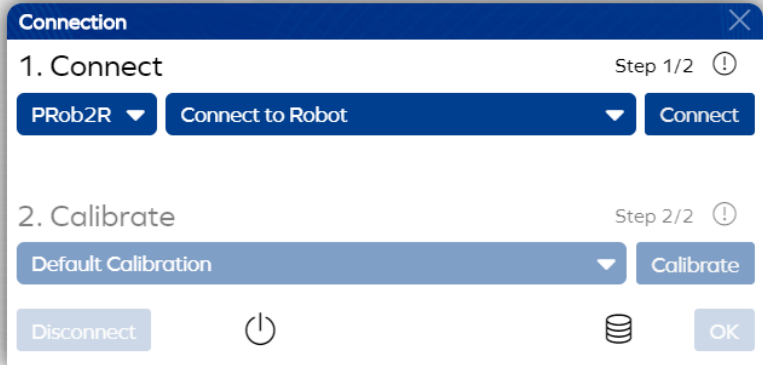
4.1 Unpacking

1) Open your package from F&P Robotics a) With suitcase b) Without suitcase	a) With suitcase 	b) Without suitcase 
2) Find this equipment in your package: a) Tool set with allen key, 4 screws and connector kit b) Cable set with Power cable, Ethernet cable and Emergency button	Tool set and Cable set 	
3) Lift the robot out of your package a) From suitcase b) From cardboard box	a) From suitcase 	b) From cardboard box 
4) Place your robot directly on a surface with suitable screw holes (e.g. the floor stand)		

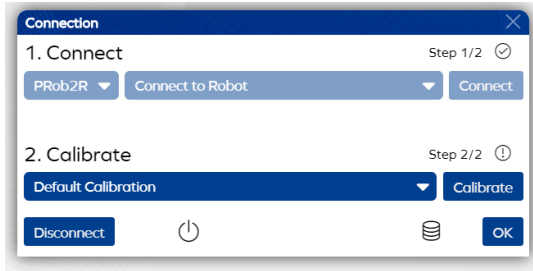
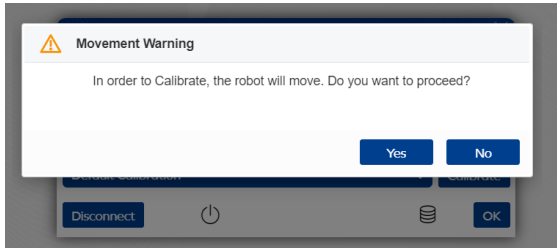
4.2 Mount and Power Your Robot

1) Fix the robot with 4 screws. Make sure that you mount the cable clamp on the left side of the back panel (between robot and screw)	 Tightening screws	 Mount cable clamp
2) Move the robot in upright position		
3) Plug the three cables from the cable set: a) Power b) Ethernet (in E3) c) E-Stop (Also refer to Chapter “Technical specification”)		
4) Power on your robot a) Main switch b) Power button	a) Main switch 	b) Front power button 

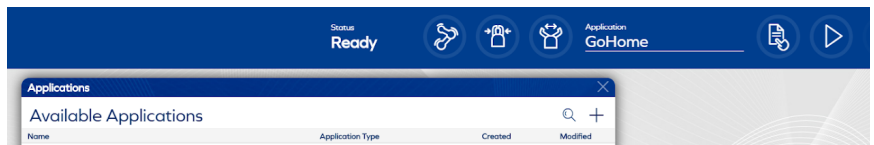
4.3 Connect to myP

1) Connect your computer to the robot with the Ethernet cable		
2) Adapt the network settings on your device:	IP: 10.0.0.100 Network: 255.255.255.0 Gateway: 10.0.0.1	For more information refer to " Setting up your network "
3) Access myP via a browser	Type the IP of the robot in the address line of your browser: https://10.0.0.203:8889	
4) Access myP with advanced settings	Use advanced, unsecure settings (refer to " Advanced browser settings ") to access myP 	
5) Connect to myP		

4.4 Calibrating

1) Safety check (Also refer to Chapter 1 “ Safety ”)	Make sure that - the workspace of the robot is clearly visible - no obstacles or people are in the workspace of the robot - the E-stop is placed outside the workspace of the robot, in the reach of the operator	
2) Run default calibration and confirm movement	 	All joints of the robot will move for about 5° and will then stop the movement.

4.5 First Use

1) Select and run “GoHome” script 		
2) Release and move the robot an arbitrary position 		
3) Go back to hold mode 		
4) Select and run “GoHome” script 		

For detailed information about how to operate P-Rob 3 using myP and all its available functions, please refer to the myP User Manual.

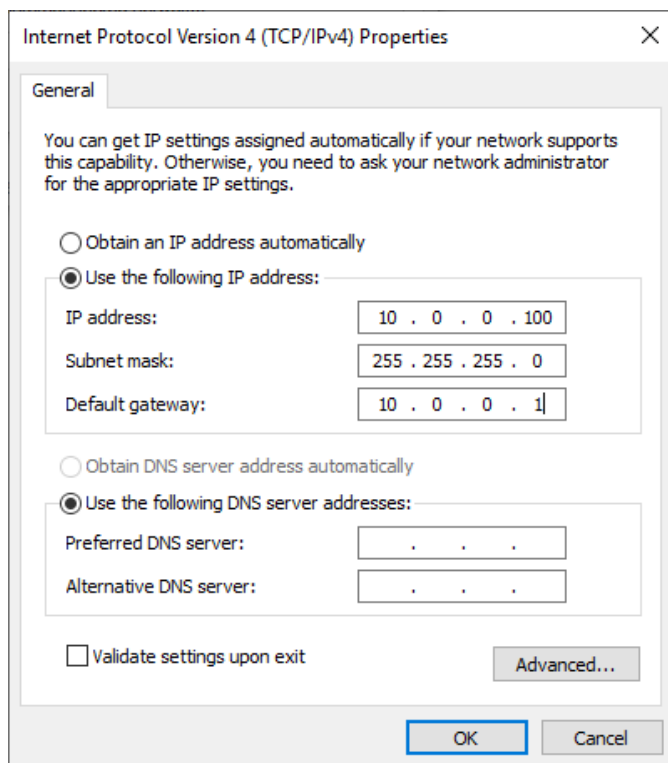
Annex

A. Setting Up Your Network

In order to use the computer to control and communicate with the robot, the network setup needs to be configured. Both devices have to be in the same network. The following steps are defined for Windows, Linux and macOS. Please note that for different versions of Windows, Linux and macOS some of the points may slightly vary.

A.1 Windows 10

1. Open the “Control Panel” and navigate to the “Network and Sharing Center”
2. Navigate further to the “Change adapter settings” subpage
3. Amongst the available adapters, look for the adapter you want to modify, usually called “Ethernet”, right click and choose “Properties”
4. In the Ethernet Properties look for “Internet Protocol Version 4”(TCP/IPv4), enable and select it, then once again click on “Properties”
5. Enter an IP address that is located in the same network as the robot’s IP address, e.g.:



6. Press “OK” to save the network settings

A.2 Ubuntu 18

1. Open the “Settings” and navigate to the “Network” section
2. In the “Wired” section you’ll find your Ethernet connection, click on the settings symbol there

3. Navigate to the “IPv4” tab
4. Enter an IP address that is located in the same network as the robot’s IP address, e.g.:

The screenshot shows a network configuration window titled 'Wired'. It has tabs for 'Details', 'Identity', 'IPv4', 'IPv6', and 'Security'. The 'IPv4' tab is active. Under 'IPv4 Method', there are three radio buttons: 'Automatic (DHCP)', 'Link-Local Only', and 'Manual' (which is selected). Below this is the 'Addresses' section with a table-like structure with columns 'Address', 'Netmask', and 'Gateway'. The first row contains '10.0.0.100', '255.255.255.0', and '10.0.0.1'. There is a second empty row. Below the addresses is a 'DNS' section with a text input field and an 'Automatic' toggle set to 'ON'. A note says 'Separate IP addresses with commas'. At the bottom is a 'Routes' section with a similar table structure and an 'Automatic' toggle set to 'ON'.

5. Press “Apply” to save the network settings

A.3 macOS 10

1. Go to “System Preferences” and navigate to “Network”
2. On the left side of the window, select “Ethernet”
3. In the “Configure IPv4” dropdown list, select “Manually”
4. Enter an IP address that is located in the same network as the robot’s IP address, e.g.:

The screenshot shows the 'Network' system preference window on a Mac. On the left sidebar, 'Ethernet' is selected. The main pane shows the status 'Cable Unplugged' with a message: 'Either the cable for Ethernet is not plugged in or the device at the other end is not responding.' Below this, 'Configure IPv4' is set to 'Manually'. The 'IP Address' field contains '10.0.0.100', 'Subnet Mask' is '255.255.255.0', and 'Router' is '10.0.0.1'. The 'DNS Server' is set to '8.8.8.8'. At the bottom, there is a 'Connect' button, an 'Advanced...' button with a help icon, and 'Revert' and 'Apply' buttons.

5. Press “Apply” to save the network settings

B. Advanced Browser Settings

Browser	Enter advanced settings	Enter unsecure web page
Google Chrome 	 Your connection is not private Attackers might be trying to steal your information from [redacted] for example, passwords, messages, or credit cards. Learn more NET::ERR_CERT_COMMON_NAME_INVALID ☐ Help improve Chrome security by sending URLs of some pages you visit, limited system information, and some page content to Google. Privacy policy Advanced Back to safety	Hide advanced Back to safety This server could not prove that it is [redacted] its security certificate is from *.p-rob.com. This may be caused by a misconfiguration or an attacker intercepting your connection. Proceed to [redacted] unsafe
Firefox 	 Warning: Potential Security Risk Ahead Firefox detected a potential security threat and did not continue to [redacted] If you visit this site, attackers could try to steal information like your passwords, emails, or credit card details. What can you do about it? The issue is most likely with the website, and there is nothing you can do to resolve it. You can notify the website's administrator about the problem. Learn more... Go Back (Recommended) Advanced... ☐ Report errors like this to help Mozilla identify and block malicious sites	Websites prove their identity via certificates. Firefox does not trust this site because it uses a certificate that is not valid for [redacted] The certificate is only valid for the following names: *.p-rob.com, p-rob.com Error code: SSL_ERROR_BAD_CERT_DOMAIN View Certificate Go Back (Recommended) Accept the Risk and Continue ☐ Report errors like this to help Mozilla identify and block malicious sites
Edge 	This site is not secure This might mean that someone's trying to fool you or steal any info you send to the server. You should close this site immediately. Go to your Start page Details	The hostname in the website's security certificate differs from the website you are trying to visit. Error Code: DLG_FLAGS_SEC_CERT_CN_INVALID Go on to the webpage (not recommended)
Safari 	 This Connection Is Not Private This website may be impersonating [redacted] to steal your personal or financial information. You should go back to the previous page. Show Details Go Back	 This Connection Is Not Private This website may be impersonating [redacted] to steal your personal or financial information. You should go back to the previous page. Go Back Safari warns you when a website has a certificate that is not valid. This may happen if the website is misconfigured or an attacker has compromised your connection. To learn more, you can view the certificate. If you understand the risks involved, you can visit this website.