Technical Note NXP-TN-2012-0080

Issued: 12/2013

PSP 103.3

The PSP model is a joint development of Delft University of Technology and NXP Semiconductors

G.D.J. Smit, A.J. Scholten, and D.B.M. Klaassen (NXP Semiconductors)

R. van der Toorn(Delft University of Technology)

Unclassified Report

© NXP Semiconductors 2013

PSP developers (present and past)

- At NXP Semiconductors
 - Geert D.J. Smit
 - Andries J. Scholten
 - Dirk B.M. Klaassen
 - Ronald van Langevelde
- At Delft University of Technology
 - Ramses van der Toorn
- At Arizona State University
 - Gennady Gildenblat (until 2011)
 - Hailing Wang (until 2005)
 - Xin Li (until 2011)
 - Weimin Wu (until 2011)

Authors' address R. van der Toorn
G.D.J. Smit
A.J. Scholten
D.B.M. Klaassen

PSP_Support@tudelft.nl
Gert-Jan.Smit@nxp.com
Andries.Scholten@nxp.com
D.B.M.Klaassen@nxp.com

© NXP SEMICONDUCTORS 2013

All rights reserved. Reproduction or dissemination in whole or in part is prohibited without the prior written consent of the copyright holder.

Title: PSP 103.3

Author(s): G.D.J. Smit, A.J. Scholten, and D.B.M. Klaassen (NXP Semiconductors)

R. van der Toorn (Delft University of Technology)

Reviewer(s):

Technical Note: NXP-TN-2012-0080

Additional Numbers:

Subcategory:

Abstract:

Project: -

Customer: Export control:

SGI: 0

ECCN: 3E001 US Origin: No

Keywords: PSP Model, compact modeling, MOSFET, CMOS, circuit simulation, integrated circuits

The PSP model is a compact MOSFET model intended for analog, RF, and digital design. It is jointly developed by NXP Semiconductors and Delft University of Technology. (Until 2011, it was jointly developed by NXP Semiconductors and Arizona State University. The roots of PSP lie in both *MOS Model 11* (developed by NXP Semiconductors) and *SP* (developed at the Pennsylvania State University and later at Arizona State University). PSP is a surface-potential based MOS Model, containing all relevant physical effects (mobility reduction, velocity saturation, DIBL, gate current, lateral doping gradient effects, STI stress, etc.) to model present-day and upcoming deep-submicron bulk CMOS technologies. The source/drain junction model, c.q. the JUNCAP2 model, is fully integrated in PSP. This report contains a full description of the PSP model, including parameter sets, scaling rules, model equations, and a description of the parameter extraction procedure.

In December 2005, the Compact Model Council (CMC) has elected PSP as the new industrial standard model for compact MOSFET modeling.

Since December 2012, Delft University of Technology replaces Arizona State University as the supporting institution.

Conclusions:

History of model and documentation

History of the model

April 2005 Release of PSP 100.0 (which includes JUNCAP2 200.0) as part of SiMKit 2.1. A Verilog-A implementation of the PSP-model is made available as well. The PSP-NQS model is released as Verilog-A code only.

August 2005 Release of PSP 100.1 (which includes JUNCAP2 200.1) as part of SiMKit 2.2. Similar to the previous version, a Verilog-A implementation of the PSP-model is made available as well and the PSP-NQS model is released as Verilog-A code only. Focus of this release was mainly on the optimization of the evaluation speed of PSP. Moreover, the PSP implementation has been extended with operating point output (SiMKit-version only).

March 2006 Release of PSP 101.0 (which includes JUNCAP2 200.1) as part of SiMKit 2.3. PSP 101.0 is *not* backward compatible with PSP 100.1. Similar to the previous version, a Verilog-A implementation of the PSP-model is made available as well and the PSP-NQS model is released as Verilog-A code only. Focus of this release was on the implementation of requirements for CMC standardization, especially those which could not preserve backward compatibility.

June 2006 Release of PSP 102.0 (which includes JUNCAP2 200.1) as part of SiMKit 2.3.2. PSP 102.0 is backward compatible with PSP 101.0 in all practical cases, provided a simple transformation to the parameter set is applied (see description below). Similar to the previous version, a Verilog-A implementation of the PSP-model is made available as well and the PSP-NQS model is released as Verilog-A code only.

Global parameter sets for PSP 101.0 can be transformed to PSP 102.0 by replacing **DPHIBL** (in 102.0 parameter set) by **DPHIBO** · **DPHIBL** (from 101.0 parameter set). After this transformation, the simulation results of PSP 102.0 are identical to those of PSP 101.0 in all practical situations.

October 2006 Release of PSP 102.1 (which includes JUNCAP2 200.2) as part of SiMKit 2.4. PSP 102.1 is backward compatible with PSP 102.0. SiMKit 2.4 includes a preliminary implementation of the PSP-NQS model. Similar to the previous version, a Verilog-A implementation of the PSP-model is available as well.

October 2007 Release of PSP 102.2 (which includes JUNCAP2 200.3). PSP 102.2 is backward compatible with PSP 102.1. This release provides an express version of JUNCAP2.

April 2008 Release of PSP 102.3 (which includes JUNCAP2 200.3) as part of SiMKit 3.1. PSP 102.3 is backward compatible with PSP 102.2. Focus of this release is on the implementation of asymmetric models for both junction and overlap regions of the drain side.

November 2008 Release of PSP 103.0 (which includes JUNCAP 200.3) as part of SiMKit 3.2. PSP 103.0 is *not* fully backward compatible with PSP 102.3. The main changes are:

- Global, local and binning models are unified. When **SWGEO** = 1 (default) global model is used. When **SWGEO** = 0 local model is selected. The binning model is invoked if **SWGEO** is set to 2.
- Added non-uniform doping (NUD) model. The model can be invoked on by setting SWNUD = 1 or 2.
 When SWNUD = 1, a separate surface potential calculation is carried out and the NUD model does not affect the CV results. This avoids non-reciprocal capacitances. When SWNUD = 2, the extra surface potential calculation is skipped and this may result in non-reciprocal capacitances.
 Added related model parameters GFACNUDO, GFACNUDL, GFACNUDLEXP, GFACNUDW, GFACNUDLW, VSBNUDO and DVSBNUDO to global, GFACNUD, VSBNUD and DVSBNUD to local and POGFACNUD,

PLGFACNUD, PWGFACNUD, PLWGFACNUD, POVSBNUD and PODVSBNUD to binning models.

- Added $V_{\rm th}$ -adjustment model for CV. It can be turned on by setting SWDELVTAC = 1. Note that this requires extra computation of surface potentials. Added related model parameters FACNEFFACO, FACNEFFACL, FACNEFFACW, FACNEFFACLW, DELVTACO, DELVTACL, DELVTACLEXP, DELVTACW and DELVTACLW to global, FACNEFFAC and DELVTAC to local and POFACNEFFAC, PLFACNEFFAC, PWFACNEFFAC, PLWFACNEFFAC, PODELVTAC, PLDELVTAC, PWDELVTAC and PLWDELVTAC to binning model.
- Added external diffusion resistances to source and drain. Added instance parameters NRS and NRD;
 added model parameters RSH to global and binning, RSE and RDE to local model.
- Modified the geometrical scaling rules of following parameters: VFB, STVFB, DPHIB, STBET and STTHESAT.
- Modified the binning rule of **BETN**.
- Removed the effect of **FETA** from CV.
- Added local parameter values to OP-output.
- Some minor bug-fixes and implementation changes.

May 2009 Release of PSP 103.1 (which includes JUNCAP 200.3) as part of SiMKit 3.3. The main changes are:

- Added external sheet resistance **RSHD** for drain diffusion (used when **SWJUNASYM** = 1)
- Bug-fix and minor implementation change in NUD-model
- Minor bug fix in conditional for SP-calculation of overlap areas.
- Added noise source labeling (vA-code only)

December 2009 Release of PSP 103.1.1 (which includes JUNCAP 200.3) as part of SiMKit 3.4. The main changes are:

- Modified implementation of the asymmetrical junction model to improve simulation speed of verilog-A
 code.
- Modified implementation of the stand-alone JUNCAP2 model.
- Modified implementation of the MULT-scaling factor.
- Modified implementation of NUD model.
- Minor bug fixes.

July 2010 Release of PSP 103.1.2 β as part of SiMKit 3.5. The main changes are:

• Changes in the calculation of the surface-potential in the overlap regions and the calculation of the gate-current. These modifications lead to an 7% simulation speed increase, but leads to some small changes in the overlap-capacitance, gate-current, and GIDL-current w.r.t. the previous version.

December 2012 Release of PSP 103.2.0 (which includes JUNCAP 200.4) as part of SiMKit 4.0.1. The main changes are:

- Changes in the calculation of the surface potential in the overlap regions (see July 2010).
- Introduction of self heating. The self heating version of the model has a fifth terminal (dt) to represent the temperature increase. New parameters: **RTH**, **CTH**, **STRTH** (local model), **RTHO**, **CTHO**, **STRTHO** (global model and binning model).
- Some minor bug-fixes in the calculation of the OP-output.
- Several improvements in the noise-model implementation
 - Fixed sign of correlation coefficient (Verilog-A only).
 - Simplified implementation and better scaled noise amplitude at internal nodes (Verilog-A only).
 - Improved behavior when crossing $V_{\rm ds} = 0$ at high-frequency.
- Scaled junction parameters added to OP-output.
- New parameter **PARAMCHK** to set level of clip warnings (SiMKit only).
- More efficient model evaluation when $\mathbf{MULT} = 0$ (SiMKit only).

December 2013 Release of PSP 103.3.0 (which includes JUNCAP 200.4) as part of SiMKit 4.2. The main changes are:

- Addition of excess noise, which is important for sub-100-nm channel lengths. This addition is backwards compatible with PSP 103.2. New parameters: FNTEXC (local model), FNTEXCL (global model), and POFNTEXC, PLFNTEXC, PWFNTEXC, PLWFNTEXC (binning model).
- · Minor bugfixes.

History of the documentation

April 2005 First release of PSP (PSP 100.0) documentation.

August 2005 Documentation updated for PSP 100.1, errors corrected and new items added.

March 2006 Documentation adapted to PSP 101.0. Added more details on noise-model implementation and a full description of the NQS-model.

June 2006 Documentation adapted to PSP 102.0 and some errors corrected.

October 2006 Documentation adapted to PSP 102.1 and some errors corrected.

October 2007 Documentation adapted to PSP 102.2 and some errors corrected.

April 2008 Documentation adapted to PSP 102.3 and some errors corrected.

November 2008 Documentation adapted to PSP 103.0 and some errors corrected.

June 2009 Documentation adapted to PSP 103.1 and some errors corrected.

PSP 103.3

December 2012 Documentation adapted to PSP 103.2.

December 2013 Documentation adapted to PSP 103.3 and some errors corrected.

Contents

1	Intr	oduction	1
	1.1	Origin and purpose	1
	1.2	Structure of PSP	1
	1.3	Availability	3
		1.3.1 SiMKit	3
2	Con	stants and Parameters	4
	2.1	Nomenclature	4
	2.2	Parameter clipping	4
	2.3	Circuit simulator variables	4
	2.4	Model constants	5
	2.5	Model parameters	6
		2.5.1 Instance parameters	7
		2.5.2 Intrinsic model	9
		2.5.3 Parameters for stress model	25
		2.5.4 Parameters for well proximity effect model	26
		2.5.5 Parameters for source-bulk and drain-bulk junction model	27
		2.5.6 Parameters for parasitic resistances	34
		2.5.7 Parameters for self heating	35
		2.5.8 Parameters for NQS	36
3	Geo	metry dependence and Other effects	37
	3.1	Introduction	37
	3.2	Geometrical scaling rules	37
	3.3	Binning equations	46
	3.4	Parasitic resistances	55
	3.5	Stress effects	56
		3.5.1 Layout effects for multi-finger devices	56
		3.5.2 Layout effects for regular shapes	56
		3.5.3 Parameter modifications	56
	3.6	Well proximity effects	59
		3.6.1 Parameters for pre-layout simulation	59

		3.6.2	Calculation of parameter modifications	60
	3.7	Asymm	netric junctions	61
4	PSP	Model I	Equations	63
	4.1		Parameters (including Temperature Scaling)	63
	4.2		Model	68
			Conditioning of Terminal Voltages	68
			Bias-Dependent Body Factor	69
			Surface Potential at Source Side and Related Variables	69
			Drain Saturation Voltage	70
			Surface Potential at Drain Side and Related Variables	72
			Mid-Point Surface Potential and Related Variables	73
			Polysilicon Depletion	73
			Potential Mid-Point Inversion Charge and Related Variables	74
			Drain-Source Channel Current	75
			Impact Ionization or Weak-Avalanche	76
			Surface Potential in Gate Overlap Regions	76
			Gate Current	77
			Gate-Induced Drain/Source Leakage Current	79
			Total Terminal Currents	79
	4.3		Model	80
	т.Э	_	Quantum-Mechanical Corrections	80
			Intrinsic Charge Model	80
			Extrinsic Charge Model	80
			Total Terminal Charges	81
	4.4		Model	82
	т.т		Flicker noise	82
				82
			Thermal noise	84
	4.5		ating	85
	4.5	Sell lica	uing	0.5
5	Non	-quasi-st	tatic RF model	87
	5.1	Introdu	ction	87
	5.2	NQS-ef	fects	87
	5.3	NQS M	odel Equations	87
		5.3.1	Internal constants	88
		5.3.2	Position independent quantities	89
		5.3.3	Position dependent surface potential and charge	89
		5.3.4	Cubic spline interpolation	91
		5.3.5	Continuity equation	91
		5.3.6	Non-quasi-static terminal charges	92

6	Emb	bedding	94
	6.1	Model selection	94
	6.2	Case of parameters	94
	6.3	Embedding PSP in a Circuit Simulator	94
		6.3.1 Selection of device type	95
	6.4	Integration of JUNCAP2 in PSP	97
	6.5	Verilog-A versus C	98
		6.5.1 Implementation of GMIN	98
		6.5.2 Implementation of parasitic resistances	98
		6.5.3 Implementation of the noise-equations	99
		6.5.4 Clip warnings	102
7	Para	ameter extraction	105
	7.1	Measurements	105
	7.2	Extraction of local parameters at room temperature	106
	7.3	Extraction of Temperature Scaling Parameters	110
	7.4	Extraction of Geometry Scaling Parameters	111
	7.5	Summary – Geometrical scaling	113
	7.6	Extraction of Binning Parameters	113
		7.6.1 Binning of BETN	114
8	DC	Operating Point Output	115
A	Aux	ciliary Equations	124
В	Lay	out parameter calculation	126
	B.1	Stress parameters	126
		B.1.1 Layout effects for irregular shapes	126
	B.2	Well proximity effect parameters	126

Section 1

Introduction

1.1 Origin and purpose

The PSP model is a compact MOSFET model intended for analog, RF, and digital design. It is jointly developed by NXP Semiconductors and Delft University of Technology. (Until 2011, it was jointly developed by NXP Semiconductors and Arizona State University. The roots of PSP lie in both *MOS Model 11* (developed by NXP Semiconductors) and *SP* (developed at the Pennsylvania State University and later at Arizona State University). PSP is a surface-potential based MOS Model, containing all relevant physical effects (mobility reduction, velocity saturation, DIBL, gate current, lateral doping gradient effects, STI stress, etc.) to model present-day and upcoming deep-submicron bulk CMOS technologies. The source/drain junction model, c.q. the JUNCAP2 model, is fully integrated in PSP.

PSP not only gives an accurate description of currents, charges, and their first order derivatives (i.e. transconductance, conductance and capacitances), but also of the higher order derivatives, resulting in an accurate description of electrical distortion behavior. The latter is especially important for analog and RF circuit design. The model furthermore gives an accurate description of the noise behavior of MOSFETs. Finally, PSP has an option for simulation of non-quasi-static (NQS) effects.

The source code of PSP and the most recent version of this documentation are available on the PSP model web site: psp.ewi.tudelft.nl and the NXP Semiconductors web site: www.nxp.com/models.

1.2 Structure of PSP

The PSP model has a hierarchical structure, similar to that of MOS Model 11 and SP. This means that there is a strict separation of the geometry scaling in the global model and the model equations in the local model.

As a consequence, PSP can be used at either one of two levels.

- Global level One uses a global parameter set, which describes a whole geometry range. Combined with instance parameters (such as L and W), a local parameter set is internally generated and further processed at the local level in exactly the same way as a custom-made local parameter set.
- Local level One uses a custom-made local parameter set to simulate a transistor with a specific geometry. Temperature scaling is included at this level.

The set of parameters which occur in the equations for the various electrical quantities is called the *local* parameter set. In PSP, temperature scaling parameters are included in the local parameter set. An overview of the local parameters in PSP is given in Section 2.5.2. Each of these parameters can be determined by purely electrical measurements. As a consequence, a local parameter set gives a complete description of the electrical properties of a device of *one* particular geometry.

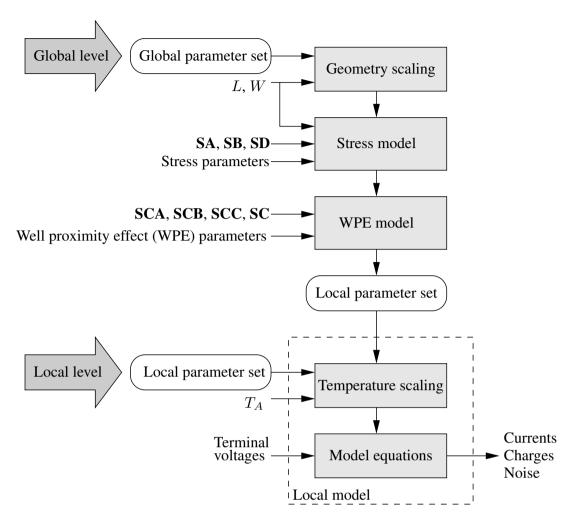


Figure 1.1: Simplified schematic overview of PSP's hierarchical structure.

Since most of these (local) parameters scale with geometry, all transistors of a particular process can be described by a (larger) set of parameters, called the *global* parameter set. An overview of the global parameters in PSP is given in Section 2.5.2. Roughly speaking, this set contains all local parameters for a long/wide device plus a number of sensitivity coefficients. From the global parameter set, one can obtain a local parameter set for a specific device by applying a set of scaling rules (see Section 3.2). The geometric properties of that specific device (such as its length and width) enter these scaling rules as *instance parameters*.

From PSP 101.0 onwards it is possible to use a set of binning rules (see Section 3.3) as an alternative to the geometrical (physics based) scaling rules. These binning rules come with their own set of parameters (see Section 2.5.2). Similar to the geometrical scaling rules, the binning rules yield a local parameter set which is used as input for the local model.

PSP is preferably used at global level when designing a circuit in a specific technology for which a global parameter set is available. On the other hand, using PSP at local level can be advantageous during parameter extraction.

As an option, it is possible to deal with the modifications of transistor properties due to stress and well proximity effect (WPE). In PSP, this is implemented by additional sets of transformation rules, which are optionally applied to the intermediate local parameter set generated at the global level. The parameters associated with the stress and WPE models are consequently part of the global parameter set (both geometrical and binning).

The model structure described above is schematically depicted in Fig. 1.1.

The JUNCAP2 model is implemented in such a way that the same set of JUNCAP2 parameters can be used at

both the global and the local level. This is further explained in Section 6.4.

1.3 Availability

The PSP model developers (Delft University of Technology and NXP Semiconductors) distribute the PSP code in two formats:

- 1. Verilog-A code
- 2. C-code (as part of SiMKit-library)

The C-version is automatically generated from the Verilog-A version by the software package ADMS [1]. This procedure guarantees the two implementations to contain identical equations. Nevertheless—due to some specific limitations/capabilities of the two formats—there are a few minor differences, which are described in Section 6.5.

1.3.1 SiMKit

SiMKit is a simulator-independent compact transistor model library. Simulator-specific connections are handled through so-called adapters that provide the correct interfacing to the circuit simulator of choice. Currently, adapters to the following circuit simulators are provided:

- 1. Spectre (Cadence)
- 2. Pstar (NXP Semiconductors)
- 3. ADS (Agilent)

Some other circuit simulators vendors provide their own SiMKit adapter, such that simulations with models in SiMKit are possible.

Section 2

Constants and Parameters

2.1 Nomenclature

The nomenclature of the quantities listed in the following sections has been chosen to express their purpose and their relation to other quantities and to preclude ambiguity and inconsistency. Throughout this document, all PSP parameter names are printed in boldface capitals. Parameters which refer to the long transistor limit and/or the reference temperature have a name containing an 'O', while the names of scaling parameters end with the letter 'L' and/or 'W' for length or width scaling, respectively. Parameters for temperature scaling start with 'ST', followed by the name of the parameter to which the temperature scaling applies. Parameters used for the binning model start with 'PO', 'PL', 'PW', or 'PLW', followed by the name of the local parameter they refer to.

2.2 Parameter clipping

For most parameters, a maximum and/or minimum value is given in the tables below. In PSP, all parameters are limited (clipped) to this pre-specified range in order to prevent difficulties in the numerical evaluation of the model, such as division by zero.

N.B. After computation of the scaling rules (either physical or binning), stress and well proximity effect equations, the resulting local parameters are subjected to the clipping values as given in Section 2.5.2.

2.3 Circuit simulator variables

External electrical variables

The definitions of the external electrical variables are illustrated in Fig. 2.1. The relationship between these external variables and the internal variables used in Chapter 4 is given in Fig. 6.1.

Symbol	Unit	Description
V_{D}^{e}	V	Potential applied to drain node
$V_{ m G}^e$	V	Potential applied to gate node
$V_{ m S}^e$	V	Potential applied to source node
$V_{ m B}^e$	V	Potential applied to bulk node
$I_{ m D}^e$	A	DC current into drain node

continued on next page...

4

... continued from previous page

Symbol	Unit	Description
$I_{ m G}^e$	A	DC current into gate node
$I_{ m S}^e$	A	DC current into source node
$I_{ m B}^e$	A	DC current into bulk node
$S_{ m fl}^e$	A^2s	Spectral density of flicker noise current in the channel
S_{id}^e	A^2s	Spectral density of thermal noise current in the channel
$S^e_{\mathrm{ig,S}}$	A^2s	Spectral density of induced gate noise at source side
$S_{ m ig,D}^e$	A^2s	Spectral density of induced gate noise at drain side
$S_{ m igs}^e$	A^2s	Spectral density of gate current shot noise at source side
$S_{ m igd}^e$	A^2s	Spectral density of gate current shot noise at drain side
$S_{ m j,S}^e$	A^2s	Spectral density of source junction shot noise
$S_{ m j,D}^e$	A^2s	Spectral density of drain junction shot noise
S_{igid}^{e}	A^2s	Cross spectral density between S_{id}^e and $(S_{\mathrm{igS}}^e$ or $S_{\mathrm{igD}}^e)$

Other circuit simulator variables

Next to the electrical variables described above, the quantities in the table below are also provided to the model by the circuit simulator.

Symbol	Unit	Description
$T_{ m A}$	°C	Ambient circuit temperature
$f_{ m op}$	Hz	Operation frequency

2.4 Model constants

In the following table the symbolic representation, the value and the description of the various physical constants used in the PSP model are given.

No.	Symbol	Unit	Value	Description
1	T_0	K	273.15	Offset between Celsius and Kelvin temperature scale
2	$k_{ m B}$	J/K	$1.3806505 \cdot 10^{-23}$	Boltzmann constant
3	\hbar	J s	$1.05457168 \cdot 10^{-34}$	Reduced Planck constant
4	q	C	$1.6021918 \cdot 10^{-19}$	Elementary unit charge
5	m_0	kg	$9.1093826 \cdot 10^{-31}$	Electron rest mass
6	ϵ_0	F/m	$8.8541878176 \cdot 10^{-12}$	Permittivity of free space
7	$\epsilon_{r,Si}$	_	11.8	Relative permittivity of silicon
8	$QM_{ m N}$	$V m^{\frac{4}{3}} C^{-\frac{2}{3}}$	5.951993	Constant of quantum-mechanical behavior of electrons
9	$QM_{ m P}$	$V m^{\frac{4}{3}} C^{-\frac{2}{3}}$	7.448711	Constant of quantum-mechanical behavior of holes

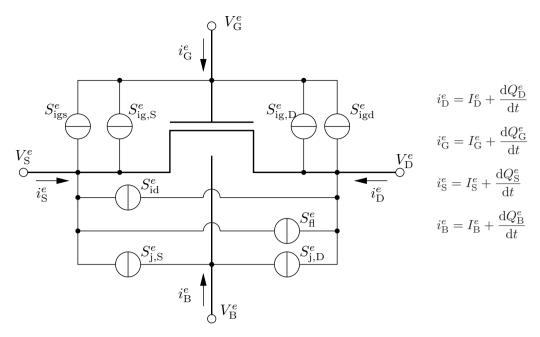


Figure 2.1: Definition of external electrical quantities.

2.5 Model parameters

In this section all parameters of the PSP-model are described. The parameters for the intrinsic MOS model, the stress and well proximity effect models and the junction model are given in separate tables. The complete parameter list for each of the model entry levels is composed of several parts, as indicated in the table below.

Entry level	Sections
Global (geometrical scaling)	2.5.1 (instance parameters)
	2.5.2 (intrinsic MOS)
	2.5.3 (stress)
	2.5.4 (well proximity effect)
	2.5.5 (junctions)
	2.5.6 (parasitic resistances)
Binning	2.5.1 (instance parameters)
	2.5.2 (intrinsic MOS)
	2.5.3 (stress)
	2.5.4 (well proximity effect)
	2.5.5 (junctions)
	2.5.6 (parasitic resistances)
Local	2.5.1 (instance parameters)
	2.5.2 (intrinsic MOS)
	2.5.5 (junctions)
	2.5.6 (parasitic resistances)

2.5.1 Instance parameters

The instant parameters for global, local and binning models are listed in the table below. The last column of **Geo.** shows for which value of **SWGEO** the listed parameter is used. Note that, as explained in Section 6.4, the instance parameters for the JUNCAP2 model are used at the local level as well.

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
0	L	m	10^{-6}	10^{-9}	_	Drawn channel length	1, 2
1	W	m	10^{-6}	10^{-9}	_	Drawn channel width (total width)	1, 2
2	ABSOURCE	m^2	10^{-12}	0	_	Source junction area	0, 1, 2
3	LSSOURCE	m	10^{-6}	0	_	STI-edge part of source junction perimeter	0, 1, 2
4	LGSOURCE	m	10^{-6}	0	_	 Gate-edge part of source junction perimeter 	
5	ABDRAIN	m^2	10^{-12}	0	_	Drain junction area	0, 1, 2
6	LSDRAIN	m	10^{-6}	0	_	STI-edge part of drain junction perimeter	0, 1, 2
7	LGDRAIN	m	10^{-6}	0	_	Gate-edge part of drain junction perimeter	0, 1, 2
8	AS	m^2	10^{-12}	0	_	Source junction area (alternative spec.)	0, 1, 2
9	PS	m	10^{-6}	0	_	Source STI-edge perimeter (alternative spec.)	0, 1, 2
10	AD	m^2	10^{-12}	0	_	Drain junction area (alternative spec.)	0, 1, 2
11	PD	m	10^{-6}	0	_	Drain STI-edge perimeter (alternative spec.)	0, 1, 2
12	\mathbf{JW}	m	$1\cdot 10^{-6}$	0	_	Junction width	0
13	DELVTO	V	0	_	_	Threshold voltage shift parameter	0, 1, 2
14	FACTUO	_	1	0	_	Zero-field mobility pre-factor	0, 1, 2
15	SA	m	0	_	_	Distance between OD-edge and poly at source side	1, 2
16	SB	m	0	_	_	Distance between OD-edge and poly at drain side	1, 2
17	SD	m	0	_	_	Distance between neighboring fingers	1, 2
18	SCA	-	0	0	_	Integral of the first distribution function for scattered well dopant	1, 2
19	SCB	-	0	0	_	Integral of the second distribution function for scattered well dopant	1, 2
20	SCC	-	0	0	_	Integral of the third distribution function for scattered well dopant	
21	SC	m	0	-	-	Distance between OD edge and nearest well edge	1, 2
22	NRS	-	0	_	_	 Number of squares of source diffusion 	
23	NRD	-	0	_	_	Number of squares of drain diffusion	1, 2
24	NGCON	_	1	1	2	Number of gate contacts	1, 2

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
25	XGW	m	10^{-7}	_	_	Distance from the gate contact to the channel edge	1, 2
26	NF	_	1	1	_	Number of fingers; internally rounded to the nearest integer	1, 2
27	MULT	_	1	0	_	Number of devices in parallel	0, 1, 2

Note that if both **SA** and **SB** are set to 0 the stress-equations are not computed. If **SCA**, **SCB**, **SCC** and **SC** are all set to 0 the well proximity effect equations are not computed.

The switching parameter **SWJUNCAP** is used to determine the meaning and usage of the junction instance parameters, where **AB** (junction area), **LS** (STI-edge part of junction perimeter), and **LG** (gate-edge part of junction perimeter) are the instance parameters of a single instance (source or drain) of the JUNCAP2 model.

		source			drain	
SWJUNCAP	AB	LS	LG	AB	LS	LG
0	0	0	0	0	0	0
1	ABSOURCE	LSSOURCE	LGSOURCE	ABDRAIN	LSDRAIN	LGDRAIN
2	AS	PS	$W_{ m E}$	AD	PD	$W_{ m E}$
3	\mathbf{AS}	$\mathbf{PS} - W_{\mathrm{E}}$	$W_{ m E}$	AD	$\mathbf{PD} - W_{\mathrm{E}}$	$W_{ m E}$

At the local level, the switching parameter **SWJUNCAP** is used to determine the meaning and usage of the junction instance parameters, where **AB** (junction area), **LS** (STI-edge part of junction perimeter), and **LG** (gate-edge part of junction perimeter) are the instance parameters of a single instance (source or drain) of the JUNCAP2 model. Because the transistor width W is not available at the local level, an additional instance parameter **JW** (junction width) is required when **SWJUNCAP** = 2 or 3.

		source			drain	
SWJUNCAP	AB	LS	LG	AB	LS	LG
0	0	0	0	0	0	0
1	ABSOURCE	LSSOURCE	LGSOURCE	ABDRAIN	LSDRAIN	LGDRAIN
2	\mathbf{AS}	PS	JW	AD	PD	\mathbf{JW}
3	AS	$\mathbf{PS} - \mathbf{JW}$	JW	AD	$\mathbf{PD} - \mathbf{JW}$	$\mathbf{J}\mathbf{W}$

2.5.2 Intrinsic model

The model parameters for the intrinsic part of the MOSFET are listed in the table below. The last column—labeled 'Geo.'—shows for which value of SWGEO the parameter is used. The convention used in this table is that, if a scaling rule exists for a local parameter its scaling (global and/or binning) parameters are grouped underneath. Note also some parameters do not have their local counterparts.

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
0	LEVEL	_	103	_	_	Model selection parameter; see Sec. 6.1	0, 1, 2
1	TYPE	-	1	-1	1	Channel type parameter; $1 \leftrightarrow NMOS, -1 \leftrightarrow PMOS^1$	0, 1, 2
2	TR	$^{\circ}\mathrm{C}$	21	-273	_	Reference temperature	0, 1, 2
3	DTA	K	0	_	_	Temperature offset w.r.t. ambient circuit temperature	0, 1, 2
			S	Switche	S		
4	PARAMCHK	_	0	_	_	Level of clip-warning info ²	0, 1, 2
5	SWGEO	_	1	0	2	Flag for geometrical model (0 \leftrightarrow local, 1 \leftrightarrow global, 2 \leftrightarrow binning)	0, 1, 2
6	SWIGATE	-	0	0	1	Flag for gate current $(0 \leftrightarrow \text{``off''})$	0, 1, 2
7	SWIMPACT	-	0	0	1	Flag for impact ionization current $(0 \leftrightarrow \text{``off''})$	0, 1, 2
8	SWGIDL	_	0	0	1	Flag for GIDL/GISL current (0 \leftrightarrow "off")	0, 1, 2
9	SWJUNCAP	_	0	0	3	Flag for JUNCAP (0 \leftrightarrow "off")	0, 1, 2
10	SWJUNASYM	_	0	_	_	Flag for asymmetric junctions (0 ↔ "off")	0, 1, 2
11	SWNUD	_	0	0	2	Flag for NUD-effect (0 \leftrightarrow "off")	0, 1, 2
12	SWDELVTAC	_	0	0	1	Flag for separate charge calculation $(0 \leftrightarrow \text{``off''})$	0, 1, 2
13	QMC	_	1	0	-	Quantum-mechanical correction factor	0, 1, 2
			Labels	for binı	ning se	et	
14	LMIN	m	0	_	_	Dummy parameter to label binning set	2
15	LMAX	m	1	_	_	Dummy parameter to label binning set	2
16	WMIN	m	0	_	-	Dummy parameter to label binning set	2
17	WMAX	m	1	_	-	Dummy parameter to label binning set	2
			Proces	ss Parar	neters		
18	LVARO	m	0	_	_	Geometry independent difference between actual and programmed poly-silicon gate length	1, 2

¹See Section 6.3.1 for more information on usage of **TYPE** in various simulators.

²Only in SiMKit-version of PSP. See Section 6.5.4 for more information.

PSP 103.3

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo
19	LVARL	_	0	_	_	Length dependence of $\Delta L_{ m PS}$	1, 2
20	LVARW	_	0	_	_	Width dependence of ΔL_{PS}	1, 2
21	LAP	m	0	_	_	Effective channel length reduction per side due to lateral diffusion of source/drain dopant ions	1, 2
22	WVARO	m	0	_	-	Geometry independent difference between actual and programmed field-oxide opening	1, 2
23	WVARL	_	0	_	_	Length dependence of $\Delta W_{ m OD}$	1, 2
24	WVARW	_	0	_	_	Width dependence of ΔW_{OD}	1, 2
25	WOT	m	0	-	_	Effective reduction of channel width per side due to lateral diffusion of channel-stop dopant ions	1, 2
26	DLQ	m	0	_	_	Effective channel length offset for CV	1, 2
27	DWQ	m	0	_	_	Effective channel width offset for CV	1, 2
28	VFB	V	-1	_	_	Flat-band voltage at TR	0
29	VFBO	V	-1	_	_	Geometry-independent part	1
30	VFBL	V	0	_	_	Length dependence	1
31	VFBW	V	0	_	_	Width dependence	1
32	VFBLW	V	0	_	_	Area dependence	1
33	POVFB	V	-1	_	_	Geometry independent part	2
34	PLVFB	V	0	_	_	Length dependence	2
35	PWVFB	V	0	_	_	Width dependence	2
36	PLWVFB	V	0	_	_	Length times width dependence	2
37	STVFB	V/K	$5\cdot 10^{-4}$	_	_	Temperature dependence of VFB	0
38	STVFBO	V/K	$5\cdot 10^{-4}$	_	_	Geometry-independent part	1
39	STVFBL	V/K	0	_	_	Length dependence	1
40	STVFBW	V/K	0	_	_	Width dependence	1
41	STVFBLW	V/K	0	_	_	Area dependence	1
42	POSTVFB	V/K	$5\cdot 10^{-4}$	_	_	Geometry independent part	2
43	PLSTVFB	V/K	0	_	_	Length dependence	2
44	PWSTVFB	V/K	0	_	_	Width dependence	2
45	PLWSTVFB	V/K	0	_	_	Length times width dependence	2
46	TOX	m	$2\cdot 10^{-9}$	10^{-10}	_	Gate oxide thickness	0
47	TOXO	m	$2\cdot 10^{-9}$	10^{-10}	_	Gate oxide thickness	1
48	POTOX	m	$2\cdot 10^{-9}$	_	_	Geometry independent part	2
49	EPSROX	_	3.9	1	_	Relative permittivity of gate dielectric	0

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo
50	EPSROXO	_	3.9	1	_	Geometry independent part	1
51	POEPSROX	_	3.9	1	_	Geometry independent part	2
52	NEFF	${\rm m}^{-3}$	$5\cdot 10^{23}$	10^{20}	10^{26}	Substrate doping	0
53	NSUBO	m^{-3}	$3\cdot 10^{23}$	10^{20}	_	Geometry independent substrate doping	1
54	NSUBW	-	0	_	_	Width dependence of substrate doping due to segregation	1
55	WSEG	m	10^{-8}	10^{-10}	_	Characteristic length for segregation of substrate doping	1
56	NPCK	m^{-3}	10^{24}	0	_	Pocket doping level	1
57	NPCKW	_	0	_	-	Width dependence of NPCK due to segregation	1
58	WSEGP	m	10^{-8}	10^{-10}	-	Characteristic length for segregation of pocket doping	1
59	LPCK	m	10^{-8}	10^{-10}	_	Characteristic length for lateral doping profile	1
60	LPCKW	_	0	_	_	Width dependence of LPCK due to segregation	1
61	FOL1	_	0	_	-	First order length dependence of short channel body-effect	1
62	FOL2	_	0	_	-	Second order length dependence of short channel body-effect	1
63	PONEFF	m^{-3}	$5\cdot 10^{23}$	_	_	Geometry independent part	2
54	PLNEFF	m^{-3}	0	_	_	Length dependence	2
65	PWNEFF	m^{-3}	0	_	_	Width dependence	2
66	PLWNEFF	m^{-3}	0	_	_	Length times width dependence	2
67	FACNEFFAC	-	1	0	_	Pre-factor for effective substrate doping in separate charge calculation when SWDELVTAC = 1	0
68	FACNEFFACO	-	1	0	_	Geometry independent part	1
59	FACNEFFACL	-	0	_	_	Length dependence	1
70	FACNEFFACW	-	0	_	_	Width dependence	1
71	FACNEFFACLW	-	0	_	_	Area dependence	1
72	POFACNEFFAC	_	1	_	_	Geometry independent part	2
73	PLFACNEFFAC	_	0	_	_	Length dependence	2
74	PWFACNEFFAC	-	0	_	_	Width dependence	2
75	PLWFACNEFFAC	_	0	_	_	Area dependence	2
76	GFACNUD	_	1	0.01	_	Bodyfactor change due to NUD-effect	0
77	GFACNUDO	_	1	_	_	Geometry independent part	1
78	GFACNUDL	_	0	_	_	Length dependence	1

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
79	GFACNUDLEXP	_	1	_	_	Exponent for length dependence	1
80	GFACNUDW	_	0	_	_	Width dependence	1
81	GFACNUDLW	-	0	_	_	Area dependence	1
82	POGFACNUD	_	1	_	_	Geometry independent part	2
83	PLGFACNUD	_	0	_	_	Length dependence	2
84	PWGFACNUD	_	0	_	_	Width dependence	2
85	PLWGFACNUD	_	0			Area dependence	2
86	VSBNUD	V	0	0	_	Lower V_{SB} -value for NUD-effect	0
87	VSBNUDO	V	0	_	_	Geometry independent part	1
88	POVSBNUD	V	0	_	_	Geometry independent part	2
89	DVSBNUD	V	1	0.1	_	V_{SB} -range for NUD-effect	0
90	DVSBNUDO	V	1	_	_	Geometry independent part	1
91	PODVSBNUD	V	1	_	_	Geometry independent part	2
92	VNSUB	V	0	-	_	Effective doping bias-dependence parameter	0
93	VNSUBO	V	0	_	_	Geometry independent part	1
94	POVNSUB	V	0	_	_	Geometry independent part	2
95	NSLP	V	0.05	10^{-3}	_	Effective doping bias-dependence parameter	0
96	NSLPO	V	0.05	_	_	Geometry independent part	1
97	PONSLP	V	0.05	_	_	Geometry independent part	2
98	DNSUB	V^{-1}	0	0	1	Effective doping bias-dependence parameter	0
99	DNSUBO	V^{-1}	0	_	_	Geometry independent part	1
100	PODNSUB	V^{-1}	0	_	_	Geometry independent part	2
101	DPHIB	V	0	_	_	Offset of φ_{B}	0
102	DPHIBO	V	0	_	_	Geometry independent part	1
103	DPHIBL	V	0	_	_	Length dependence	1
104	DPHIBLEXP	_	1	_	_	Exponent for length dependence	1
105	DPHIBW	V	0	_	_	Width dependence	1
106	DPHIBLW	V	0	_	_	Area dependence	1
107	PODPHIB	V	0	_	_	Geometry independent part	2
108	PLDPHIB	V	0	_	_	Length dependence	2
109	PWDPHIB	V	0	_	_	Width dependence	2
110	PLWDPHIB	V	0	_	_	Length times width dependence	2

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
111	DELVTAC	V	0	_	-	Offset of φ_B in separate charge calculation when $ \mathbf{SWDELVTAC} = 1 $	0
112	DELVTACO	V	0	_	_	Geometry independent part	1
113	DELVTACL	V	0	_	_	Length dependence	1
114	DELVTACLEXP	_	1	_	_	Exponent for length dependence	1
115	DELVTACW	V	0	_	_	Width dependence	1
116	DELVTACLW	V	0	_	_	Area dependence	1
117	PODELVTAC	V	0	_	_	Geometry independent part	2
118	PLDELVTAC	V	0	_	_	Length dependence	2
119	PWDELVTAC	V	0	_	_	Width dependence	2
120	PLWDELVTAC	V	0	_	_	Length times width dependence	2
121	NP	m^{-3}	10^{26}	0	_	Gate poly-silicon doping	0
122	NPO	m^{-3}	10^{26}	_	_	Geometry-independent part	1
123	NPL	_	0	_	_	Length dependence	1
124	PONP	m^{-3}	10^{26}	_	_	Geometry independent part	2
125	PLNP	m^{-3}	0	_	_	Length dependence	2
126	PWNP	m^{-3}	0	_	_	Width dependence	2
127	PLWNP	m^{-3}	0	_	_	Length times width dependence	2
128	CT	_	0	0	_	Interface states factor	0
129	СТО	_	0	_	_	Geometry-independent part	1
130	CTL	_	0	_	_	Length dependence	1
131	CTLEXP	_	1	_	_	Exponent for length dependence	1
132	CTW	_	0	_	_	Width dependence	1
133	CTLW	-	0	_	_	Area dependence	1
134	POCT	_	0	_	_	Geometry independent part	2
135	PLCT	_	0	_	_	Length dependence	2
136	PWCT	_	0	_	_	Width dependence	2
137	PLWCT	_	0			Length times width dependence	2
138	TOXOV	m	$2\cdot 10^{-9}$	10^{-10}	_	Overlap oxide thickness	0
139	TOXOVO	m	$2\cdot 10^{-9}$	10^{-10}	-	Geometry independent part	1
140	POTOXOV	m	$2\cdot 10^{-9}$	_	_	Geometry independent part	2
141	TOXOVD	m	$2\cdot 10^{-9}$	10^{-10}	_	Overlap oxide thickness for drain side	0
142	TOXOVDO	m	$2\cdot 10^{-9}$	10^{-10}	_	Geometry independent part	1
143	POTOXOVD	m	$2\cdot 10^{-9}$	_	_	Geometry independent part	2
144	LOV	m	0	0	-	Overlap length for overlap capacitance	1

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
145	LOVD	m	0	0	_	Overlap length for gate/drain overlap capacitance	1
146	NOV	m^{-3}	$5\cdot 10^{25}$	10^{20}	10^{27}	Effective doping of overlap region	0
147	NOVO	m^{-3}	$5\cdot 10^{25}$	_	-	Geometry independent part	1
148	PONOV	m^{-3}	$5\cdot 10^{25}$	_	_	Geometry independent part	2
149	PLNOV	m^{-3}	0	_	_	Length dependence	2
150	PWNOV	m^{-3}	0	_	_	Width dependence	2
151	PLWNOV	m^{-3}	0	_	_	Length times width dependence	2
152	NOVD	m^{-3}	$5\cdot 10^{25}$	10^{20}	10^{27}	Effective doping of overlap region for drain side	0
153	NOVDO	m^{-3}	$5\cdot 10^{25}$	_	_	Geometry independent part	1
154	PONOVD	m^{-3}	$5\cdot 10^{25}$	_	_	Geometry independent part	2
155	PLNOVD	m^{-3}	0	_	_	Length dependence	2
156	PWNOVD	m^{-3}	0	_	_	Width dependence	2
157	PLWNOVD	m^{-3}	0	_	_	Length times width dependence	2
			DIBI	. Param	eters		
158	CF	_	0	0	_	DIBL parameter	0
159	CFL	_	0	_	_	Length dependence	1
160	CFLEXP	_	2	_	_	Exponent for length dependence	1
161	CFW	_	0	_	_	Width dependence	1
162	POCF	_	0	_	_	Geometry independent part	2
163	PLCF	_	0	_	_	Length dependence	2
164	PWCF	-	0	_	_	Width dependence	2
165	PLWCF	-	0	_	_	Length times width dependence	2
166	CFB	V^{-1}	0	0	1	Back-bias dependence of CF	0
167	CFBO	V^{-1}	0	_	-	Geometry independent part	1
168	POCFB	V^{-1}	0	_	_	Geometry independent part	2
			Mobili	ty Para	meter	s	
169	BETN	m ² /V/s	$7 \cdot 10^{-2}$	0	_	Product of channel aspect ratio and zero-field mobility at TR	0
170	UO	$m^2/V/s$	$5\cdot 10^{-2}$	_	_	Zero-field mobility at TR	1
171	FBET1	_	0	_	-	Relative mobility decrease due to first lateral profile	1
172	FBET1W	_	0	_	_	Width dependence of FBET1	1
173	LP1	m	10^{-8}	10^{-10}	_	Mobility-related characteristic length of first lateral profile	1
						Width dependence of LP1	

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
175	FBET2	-	0	_	_	Relative mobility decrease due to second lateral profile	1
176	LP2	m	10^{-8}	10^{-10}	_	Mobility-related characteristic length of second lateral profile	1
177	BETW1	_	0	-	-	First higher-order width scaling coefficient of BETN	1
178	BETW2	_	0	_	-	Second higher-order width scaling coefficient of BETN	1
179	WBET	m	10^{-9}	10^{-10}	_	Characteristic width for width scaling of BETN	1
180	POBETN	$m^2/V/s$	$7 \cdot 10^{-2}$	_	_	Geometry independent part	2
181	PLBETN	$m^2/V/s$	0	_	_	Length dependence	2
182	PWBETN	$m^2/V/s$	0	_	_	Width dependence	2
183	PLWBETN	$m^2/V/s$	0	_	_	Length times width dependence	2
184	STBET	-	1	_	_	Temperature dependence of BETN	0
185	STBETO	_	1	_	_	Geometry independent part	1
186	STBETL	_	0	_	_	Length dependence	1
187	STBETW	_	0	_	_	Width dependence	1
188	STBETLW	_	0	_	_	Area dependence	1
189	POSTBET	_	1	_	_	Geometry independent part	2
190	PLSTBET	_	0	_	_	Length dependence	2
191	PWSTBET	_	0	_	_	Width dependence	2
192	PLWSTBET	_	0	_	_	Length times width dependence	2
193	MUE	m/V	0.5	0	-	Mobility reduction coefficient at TR	0
194	MUEO	m/V	0.5	_	_	Geometry independent part	1
195	MUEW	_	0	_	_	Width dependence	1
196	POMUE	m/V	0.5	_	_	Geometry independent part	2
197	PLMUE	m/V	0	_	_	Length dependence	2
198	PWMUE	m/V	0	_	_	Width dependence	2
199	PLWMUE	m/V	0	_	_	Length times width dependence	2
200	STMUE	-	0	_	_	Temperature dependence of MUE	0
201	STMUEO	_	0	_	_	Geometry independent part	1
202	POSTMUE	_	0		_	Geometry independent part	2
203	THEMU	_	1.5	0	_	Mobility reduction exponent at TR	0
204	THEMUO	_	1.5	0	_	Geometry independent part	1
205	POTHEMU	_	1.5	_	_	Geometry independent part	2
206	STTHEMU	_	1.5	_	-	Temperature dependence of THEMU	0

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
207	STTHEMUO	_	1.5	_	_	Geometry independent part	1
208	POSTTHEMU	_	1.5	_	_	Geometry independent part	2
209	CS	-	0	0	_	Coulomb scattering parameter at TR	0
210	CSO	_	0	_	_	Geometry independent part	1
211	CSL	-	0	_	_	Length dependence	1
212	CSLEXP	_	1	_	_	Exponent for length dependence	1
213	CSW	-	0	_	_	Width dependence	1
214	CSLW	_	0	_	_	Area dependence	1
215	POCS	_	0	_	_	Geometry independent part	2
216	PLCS	_	0	_	_	Length dependence	2
217	PWCS	_	0	_	_	Width dependence	2
218	PLWCS	_	0	_	_	Length times width dependence	2
219	STCS	_	0	_	_	Temperature dependence of CS	0
220	STCSO	-	0	_	_	Geometry independent part	1
221	POSTCS	-	0	_	_	Geometry independent part	2
222	XCOR	V^{-1}	0	0	_	Non-universality parameter	0
223	XCORO	V^{-1}	0	_	_	Geometry independent part	1
224	XCORL	_	0	_	_	Length dependence	1
225	XCORW	_	0	_	_	Width dependence	1
226	XCORLW	_	0	_	_	Area dependence	1
227	POXCOR	V^{-1}	0	_	_	Geometry independent part	2
228	PLXCOR	V^{-1}	0	_	_	Length dependence	2
229	PWXCOR	V^{-1}	0	_	_	Width dependence	2
230	PLWXCOR	V^{-1}	0	_	_	Length times width dependence	2
231	STXCOR	-	0	_	_	Temperature dependence of XCOR	0
232	STXCORO	-	0	_	_	Geometry independent part	1
233	POSTXCOR	-	0	_	_	Geometry independent part	2
234	FETA	_	1	0	_	Effective field parameter	0
235	FETAO	-	1	_	_	Geometry independent part	1
236	POFETA	_	1	_	_	Geometry independent part	2
			Series Resi	stance]	Param	neters	
237	RS	Ω	30	0	_	Source/drain series resistance at TR	0
238	RSW1	Ω	50	_	_	Source/drain series resistance for a channel width W_{EN}	1

	c		
continued	from	previous	page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
239	RSW2	_	0	_	_	Higher-order width scaling	1
240	PORS	Ω	30	_	_	Geometry independent part	2
241	PLRS	Ω	0	_	_	Length dependence	2
242	PWRS	Ω	0	_	_	Width dependence	2
243	PLWRS	Ω	0	_	_	Length times width dependence	2
244	STRS	_	1	_	_	Temperature dependence of RS	0
245	STRSO	_	1	_	_	Geometry dependent part	1
246	POSTRS	_	1	_	_	Geometry independent part	2
247	RSB	V^{-1}	0	-0.5	1	Back-bias dependence of RS	0
248	RSBO	V^{-1}	0	_	_	Geometry independent part	1
249	PORSB	V^{-1}	0	_	_	Geometry independent part	2
250	RSG	V^{-1}	0	-0.5	_	Gate-bias dependence of RS	0
251	RSGO	V^{-1}	0	_	_	Geometry independent part	1
252	PORSG	V^{-1}	0	_	_	Geometry independent part	2
		,	Velocity Satı	ıration	Parar	neters	
253	THESAT	V^{-1}	1	0	-	Velocity saturation parameter at TR	0
254	THESATO	V^{-1}	0	_	_	Geometry independent part	1
255	THESATL	V^{-1}	0.05	_	_	Length dependence	1
256	THESATLEXP	_	1	_	_	Exponent for length dependence	1
257	THESATW	-	0	_	_	Width dependence	1
258	THESATLW	_	0	_	-	Area dependence	1
259	POTHESAT	V^{-1}	1	_	_	Geometry independent part	2
260	PLTHESAT	V^{-1}	0	_	_	Length dependence	2
261	PWTHESAT	V^{-1}	0	_	_	Width dependence	2
262	PLWTHESAT	V^{-1}	0	_	-	Length times width dependence	2
263	STTHESAT	-	1	-	-	Temperature dependence of THESAT	0
264	STTHESATO	-	1	_	_	Geometry independent temperature dependence	1
265	STTHESATL	_	0	_	_	Length dependence	1
266	STTHESATW	_	0	_	_	Width dependence	1
267	STTHESATLW	-	0	_	_	Area dependence	1
268	POSTTHESAT	_	1	_	_	Geometry independent part	2
269	PLSTTHESAT	_	0	_	_	Length dependence	2
270	PWSTTHESAT	_	0	_	_	Width dependence	2
271	PLWSTTHESAT	-	0	_	-	Length times width dependence of temperature dependence	2

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
272	THESATB	V^{-1}	0	-0.5	1	Back-bias dependence of velocity saturation	0
273	THESATBO	V^{-1}	0	_	-	Geometry independent part	1
274	POTHESATB	V^{-1}	0	_	_	Geometry independent part	2
275	PLTHESATB	V^{-1}	0	_	_	Length dependence	2
276	PWTHESATB	V^{-1}	0	_	_	Width dependence	2
277	PLWTHESATB	V^{-1}	0	_	_	Length times width dependence	2
278	THESATG	V ⁻¹	0	-0.5	_	Gate-bias dependence of velocity saturation	0
279	THESATGO	V^{-1}	0	_	_	Geometry independent part	1
280	POTHESATG	V^{-1}	0	_	_	Geometry independent part	2
281	PLTHESATG	V^{-1}	0	_	_	Length dependence	2
282	PWTHESATG	V^{-1}	0	_	_	Width dependence	2
283	PLWTHESATG	V^{-1}	0	_	_	Length times width dependence	2
			Saturation	Voltage	Parai	meter	
284	AX	-	3	2	_	Linear/saturation transition factor	0
285	AXO	_	18	_	_	Geometry independent	1
286	AXL	_	0.4	0	_	Length dependence	1
287	POAX	_	3	_	_	Geometry independent part	2
288	PLAX	_	0	_	_	Length dependence	2
289	PWAX	_	0	_	_	Width dependence	2
290	PLWAX	_	0	_	_	Length times width dependence	2
		Channel	Length Mo	dulatio	n (CLI	M) Parameters	
 291	ALP	_	0.01	0	_	CLM pre-factor	0
292	ALPL	_	$5 \cdot 10^{-4}$	_	_	Length dependence	1
293	ALPLEXP	_	1	_	_	Exponent for length dependence	1
294	ALPW	_	0	_	_	Width dependence	1
295	POALP	_	0.01	_	_	Geometry independent part	2
296	PLALP	_	0	_	_	Length dependence	2
297	PWALP	_	0	_	_	Width dependence	2
298	PLWALP	_	0	_	_	Length times width dependence	2
299	ALP1	V	0	0	_	CLM enhancement factor above threshold	0
	ALP1L1	V	0	_	_	Length dependence	1
300			0.5	_	_	Exponent for length dependence	1
	ALP1LEXP	_					
301	ALP1LEXP ALP1L2	_	0	0	_	Second order length dependence	1
300 301 302 303		_ _ _	0 0	0	_ _	Second order length dependence Width dependence	1 1

	c		
continued	trom	previous	page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
305	PLALP1	V	0	_	_	Length dependence	2
306	PWALP1	V	0	_	_	Width dependence	2
307	PLWALP1	V	0	_	_	Length times width dependence	2
308	ALP2	V^{-1}	0	0	_	CLM enhancement factor below threshold	0
309	ALP2L1	V	0	_	_	Length dependence	1
310	ALP2LEXP	_	0.5	_	_	Exponent for length dependence	1
311	ALP2L2	-	0	0	-	Second order length dependence	1
312	ALP2W	_	0	_	_	Width dependence	1
313	POALP2	V^{-1}	0	_	_	Geometry independent part	2
314	PLALP2	V^{-1}	0	_	_	Length dependence	2
315	PWALP2	V^{-1}	0	_	_	Width dependence	2
316	PLWALP2	V^{-1}	0	_	_	Length times width dependence	2
317	VP	V	0.05	10^{-10}	_	CLM logarithmic dependence parameter	0
318	VPO	V	0.05	_	_	Geometry independent part	1
319	POVP	V	0.05	_	_	Geometry independent part	2
		Iı	npact Ioniza	ation (II) Para	ameters	
320	A1	_	1	0	_	Impact-ionization pre-factor	0
321	A10	_	1	_	_	Geometry independent part	1
322	A1L	_	0	_	_	Length dependence	1
323	A1W	_	0	_	_	Width dependence	1
324	POA1	_	1	_	_	Geometry independent part	2
325	PLA1	_	0	_	_	Length dependence	2
326	PWA1	_	0	_	_	Width dependence	2
327	PLWA1	_	0	_	_	Length times width dependence	2
328	A2	V	10	0	_	Impact-ionization exponent at TR	0
329	A2O	V	10	_	_	Geometry independent part	1
330	POA2	V	10	_	_	Geometry independent part	2
331	STA2	V	0	_	_	Temperature dependence of A2	0
332	STA2O	V	0	_	_	Geometry independent part	1
333	POSTA2	V	0		_	Geometry independent part	2
334	A3	_	1	0	_	Saturation-voltage dependence of II	0
335	A3O	_	1	_	_	Geometry independent part	1
336	A3L	_	0	_	_	Length dependence	1
337	A3W	_	0	_	_	Width dependence	1

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
338	POA3	_	1	_	_	Geometry independent part	2
339	PLA3	_	0	_	_	Length dependence	2
340	PWA3	_	0	_	_	Width dependence	2
341	PLWA3	_	0	_	_	Length times width dependence	2
342	A4	$V^{-\frac{1}{2}}$	0	0	_	Back-bias dependence of II	0
343	A4O	$V^{-\frac{1}{2}}$	0	_	_	Geometry independent part	1
344	A4L	_	0	_	_	Length dependence	1
345	A4W	_	0	_	_	Width dependence	1
346	POA4	$V^{-\frac{1}{2}}$	0	_	_	Geometry independent part	2
347	PLA4	$V^{-\frac{1}{2}}$	0	_	_	Length dependence	2
348	PWA4	$V^{-\frac{1}{2}}$	0	_	_	Width dependence	2
349	PLWA4	$V^{-\frac{1}{2}}$	0	_	_	Length times width dependence	2
			Gate Cur	rent Pa	ramet	ters	
350	GCO	_	0	-10	10	Gate tunnelling energy adjustment	0
351	GCOO	_	0	_	_	Geometry independent part	1
352	POGCO	_	0	_	_	Geometry independent part	2
353	IGINV	A	0	0	_	Gate channel current pre-factor	0
354	IGINVLW	A	0	_	_	Gate channel current pre-factor for a channel area of $W_{\rm EN} \cdot L_{\rm EN}$	1
355	POIGINV	A	0	_	_	Geometry independent part	2
356	PLIGINV	A	0	_	_	Length dependence	2
357	PWIGINV	A	0	_	_	Width dependence	2
358	PLWIGINV	A	0	_	_	Length times width dependence	2
359	IGOV	A	0	0	-	Gate overlap current pre-factor	0
360	IGOVW	A	0	_	_	Gate overlap current pre-factor for a channel width of $W_{\rm EN}$	1
361	POIGOV	A	0	_	_	Geometry independent part	2
362	PLIGOV	A	0	_	_	Length dependence	2
363	PWIGOV	A	0	_	_	Width dependence	2
364	PLWIGOV	A	0	_	_	Length times width dependence	2
365	IGOVD	A	0	0	-	Gate overlap current pre-factor for drain side	0
366	IGOVDW	A	0	_	_	Gate overlap current pre-factor for a channel width of $W_{\rm EN}$ for drain side	1
367	POIGOVD	A	0	_	_	Geometry independent part	2
368	PLIGOVD	A	0	_	_	Length dependence	2
369	PWIGOVD	A	0	_	_	Width dependence	2

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
370	PLWIGOVD	A	0	_	_	Length times width dependence	2
371	STIG	_	2	_	_	Temperature dependence of gate current	0
372	STIGO	_	2	_	_	Geometry independent part	1
373	POSTIG	_	2	_	_	Geometry independent part	2
374	GC2	_	0.375	0	10	Gate current slope factor	0
375	GC2O	_	0.375	_	_	Geometry independent part	1
376	POGC2	_	$3.75 \cdot 10^{-1}$	_	_	Geometry independent part	2
377	GC3	_	0.063	-2	2	Gate current curvature factor	0
378	GC3O	_	0.063	_	_	Geometry independent part	1
379	POGC3	_	$6.3\cdot10^{-2}$	_	_	Geometry independent part	2
380	СНІВ	V	3.1	1	_	Tunnelling barrier height	0
381	СНІВО	V	3.1	_	_	Geometry independent part	1
382	POCHIB	V	3.1	_	_	Geometry independent part	2
		Gate-Ind	uced Drain I	Leakag	ge (GII	DL) Parameters	
383	AGIDL	A/V ³	0	0	_	GIDL pre-factor	0
384	AGIDLW	A/V^3	0	_	_	Width dependence	1
385	POAGIDL	A/V^3	0	_	_	Geometry independent part	2
386	PLAGIDL	A/V^3	0	_	_	Length dependence	2
387	PWAGIDL	A/V^3	0	_	_	Width dependence	2
388	PLWAGIDL	A/V^3	0	_	_	Length times width dependence	2
389	AGIDLD	A/V ³	0	0	_	GIDL pre-factor for drain side	0
390	AGIDLDW	A/V^3	0	_	_	Width dependence	1
391	POAGIDLD	A/V ³	0	_	_	Geometry independent part	2
392	PLAGIDLD	A/V^3	0	_	_	Length dependenceof	2
393	PWAGIDLD	A/V^3	0	_	_	Width dependence of	2
394	PLWAGIDLD	A/V^3	0	_	_	Length times width dependence	2
395	BGIDL	V	41	0		GIDL probability factor at TR	0
396	BGIDLO	V	41	_	_	Geometry independent part	1
397	POBGIDL	V	41	_	_	Geometry independent part	2
398	BGIDLD	V	41	0	_	GIDL probability factor at TR for drain side	0
399	BGIDLDO	V	41	_	_	Geometry independent part	1
400	POBGIDLD	V	41	_	_	Geometry independent part	2
===		•	11			- Comea j macpendent part	

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
401	STBGIDL	V/K	0	_	_	Temperature dependence of BGIDL	0
402	STBGIDLO	V/K	0	_	_	Geometry independent part	1
403	POSTBGIDL	V/K	0	_	_	Geometry independent part	2
404	STBGIDLD	V/K	0	_	_	Temperature dependence of BGIDL for drain side	0
405	STBGIDLDO	V/K	0	_	_	Geometry independent part	1
406	POSTBGIDLD	V/K	0	_	_	Geometry independent part	2
407	CGIDL	-	0	_	_	Back-bias dependence of GIDL	0
408	CGIDLO	_	0	_	_	Geometry independent part	1
409	POCGIDL	_	0	_	_	Geometry independent part	2
410	CGIDLD	-	0	_	_	Back-bias dependence of GIDL for drain side	0
411	CGIDLDO	_	0	_	_	Geometry independent part	1
412	POCGIDLD	_	0	_	_	Geometry independent part	2
			Charge M	lodel P	arame	ters	
413	COX	F	10^{-14}	0	_	Oxide capacitance for intrinsic channel	0
414	POCOX	F	10^{-14}	_	_	Geometry independent part	2
415	PLCOX	F	0	_	_	Length dependence	2
416	PWCOX	F	0	_	_	Width dependence	2
417	PLWCOX	F	0	_	_	Length times width dependence	2
418	CGOV	F	10^{-15}	0	_	Oxide capacitance for gate-drain/source overlap	0
419	POCGOV	F	10^{-15}	_	_	Geometry independent part	2
420	PLCGOV	F	0	_	_	Length dependence	2
421	PWCGOV	F	0	_	_	Width dependence	2
422	PLWCGOV	F	0	_	_	Length times width dependence	2
423	CGOVD	F	10^{-15}	0	_	Oxide capacitance for gate–drain/source overlap for drain side	0
424	POCGOVD	F	10^{-15}	_	_	Geometry independent part	2
425	PLCGOVD	F	0	_	_	Length dependence	2
426	PWCGOVD	F	0	_	_	Width dependence	2
427	PLWCGOVD	F	0	_	_	Length times width dependence	2
428	CGBOV	F	0	0	_	Oxide capacitance for gate-bulk overlap	0

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
429	CGBOVL	F	0	_	_	Oxide capacitance for gate-bulk overlap for a channel length of L_{EN}	1
430	POCGBOV	F	0	_	_	Geometry independent part	2
431	PLCGBOV	F	0	_	_	Length dependence	2
432	PWCGBOV	F	0	_	_	Width dependence	2
433	PLWCGBOV	F	0	_	_	Length times width dependence	2
434	CFR	F	0	0	_	Outer fringe capacitance	0
435	CFRW	F	0	-	_	Outer fringe capacitance for a channel width of W_{EN}	1
436	POCFR	F	0	_	_	Geometry independent part	2
437	PLCFR	F	0	_	_	Length dependence	2
438	PWCFR	F	0	_	_	Width dependence	2
439	PLWCFR	F	0	_	_	Length times width dependence	2
440	CFRD	F	0	0	_	Outer fringe capacitance for drain side	0
441	CFRDW	F	0	_	_	Outer fringe capacitance for a channel width of $W_{\rm EN}$ for drain side	1
442	POCFRD	F	0	_	_	Geometry independent part	2
443	PLCFRD	F	0	_	_	Length dependence	2
444	PWCFRD	F	0	_	_	Width dependence	2
445	PLWCFRD	F	0	_	_	Length times width dependence	2
			Noise Mo	odel Pa	ramet	ers	
446	FNT	_	1	0	_	Thermal noise coefficient	0
447	FNTO	-	1	_	_	Geometry independent part	1
448	POFNT	-	1	_	_	Geometry independent part	2
449	FNTEXC	-	0	0	_	Excess noise coefficient	0
450	FNTEXCL	-	0	0	_	Length-dependence of excess noise	1
451	POFNTEXC	_	0	_	_	Geometry independent part	2
452	PLFNTEXC	_	0	_	_	Length dependence	2
453	PWFNTEXC	_	0	_	_	Width dependence	2
454	PLWFNTEXC	_	0	_	_	Length times width dependence	2
455	NFA	V^{-1}/m^4	$8\cdot 10^{22}$	0	_	First coefficient of flicker noise	0
456	NFALW	$\mathrm{V}^{-1}/\mathrm{m}^4$	$8\cdot 10^{22}$	-	_	First coefficient of flicker noise for a channel area of $W_{\rm EN} \cdot L_{\rm EN}$	1
							_
457	PONFA	$\mathrm{V}^{-1}/\mathrm{m}^4$	$8 \cdot 10^{22}$	_	_	Geometry independent part	2

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
459	PWNFA	V^{-1}/m^4	0	_	_	Width dependence	2
460	PLWNFA	$\mathrm{V}^{-1}/\mathrm{m}^4$	0	_	_	Length times width dependence	2
461	NFB	$\mathrm{V}^{-1}/\mathrm{m}^2$	$3 \cdot 10^7$	0	_	Second coefficient of flicker noise	0
462	NFBLW	V^{-1}/m^2	$3 \cdot 10^7$	_	_	Second coefficient of flicker noise for a channel area of $W_{\rm EN} \cdot L_{\rm EN}$	1
463	PONFB	$\mathrm{V}^{-1}/\mathrm{m}^2$	$3 \cdot 10^7$	_	_	Geometry independent part	2
464	PLNFB	$ m V^{-1}/m^2$	0	_	_	Length dependence	2
465	PWNFB	$ m V^{-1}/m^2$	0	_	_	Width dependence	2
466	PLWNFB	$\mathrm{V}^{-1}/\mathrm{m}^2$	0	_	_	Length times width dependence	2
467	NFC	V^{-1}	0	0	_	Third coefficient of flicker noise	0
468	NFCLW	V^{-1}	0	_	_	Third coefficient of flicker noise for a channel area of $W_{\rm EN} \cdot L_{\rm EN}$	1
469	PONFC	V^{-1}	0	_	_	Geometry independent part	2
470	PLNFC	V^{-1}	0	_	_	Length dependence	2
471	PWNFC	V^{-1}	0	_	_	Width dependence	2
472	PLWNFC	V^{-1}	0	_	_	Length times width dependence	2
473	EF	-	1	0	_	Flicker noise frequency exponent	0
474	EFO	-	1	_	_	Geometry independent part	1
475	POEF	_	1	_	_	Geometry independent part	2
476	LINTNOI	m	0	_		Length offset for flicker noise	1
477	ALPNOI	_	2	_	_	Exponent for length offset	1

2.5.3 Parameters for stress model

The stress model of BSIM4.4.0 has been adopted in PSP with as little modifications as possible. Parameter names have been copied, but they have been subjected to PSP conventions by replacing every zero by an 'O'. Moreover, the parameters STK2 and LODK2 are not available in PSP. Except for these changes, stress parameters determined for BSIM can be directly applied in PSP. Some trivial conversion of parameters BSIM→PSP is still necessary, see [2].

The parameters in this section are part of PSP's global parameter set (both geometrical and binning).

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
0	SAREF	m	10^{-6}	10^{-9}	-	Reference distance between OD edge to Poly from one side	1, 2
1	SBREF	m	10^{-6}	10^{-9}	_	Reference distance between OD edge to Poly from other side	1, 2
2	WLOD	m	0	_	_	Width parameter	1, 2
3	KUO	m	0	_	_	Mobility degradation/enhancement coefficient	1, 2
4	KVSAT	m	0	-1	1	Saturation velocity degradation/enhancement parameter	1, 2
5	TKUO	_	0	_	_	Temperature coefficient of KUO	1, 2
6	LKUO	m ^{LLODKUO}	0	_	_	Length dependence of KUO	1, 2
7	WKUO	mWLODKUO	0	_	_	Width dependence of KUO	1, 2
8	PKUO	$m^{\textbf{LLODKUO} + \textbf{WLODKUO}}$	0	_	_	Cross-term dependence of KUO	1, 2
9	LLODKUO	-	0	0	_	Length parameter for mobility stress effect	1, 2
10	WLODKUO	-	0	0	_	Width parameter for mobility stress effect	1, 2
11	KVTHO	Vm	0	_	_	Threshold shift parameter	1, 2
12	LKVTHO	m ^{LLODVTH}	0	_	_	Length dependence of KVTHO	1, 2
13	WKVTHO	mWLODVTH	0	_	_	Width dependence of KVTHO	1, 2
14	PKVTHO	$m^{LLODVTH+WLODVTH}$	0	-	_	Cross-term dependence of KVTHO	1, 2
15	LLODVTH	-	0	0	_	Length parameter for threshold voltage stress effect	1, 2
16	WLODVTH	-	0	0	_	Width parameter for threshold voltage stress effect	1, 2
17	STETAO	m	0	_	_	ETAO shift factor related to threshold voltage change	1, 2
18	LODETAO	_	1	0	_	ETAO shift modification factor	1, 2

2.5.4 Parameters for well proximity effect model

The WPE model of BSIM4.5.0 has been adopted in PSP with as little modifications as possible. Parameter names have been copied, but they have been subjected to PSP conventions by replacing every zero by an 'O'. Moreover, the parameter **K2WE** is not available in PSP. Except for some trivial conversion of parameters BSIM \rightarrow PSP [2], WPE parameters from BSIM can be used directly in PSP. The WPE parameters have both geometrical and binning rules included as explained in Section 3.6.2. The last column—labeled 'Geo.'—shows for which value of **SWGEO** the parameter is used.

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
0	SCREF	m	$1\cdot 10^{-6}$	0	_	Distance between OD-edge and well edge of a reference device	1, 2
1	WEB	_	0	_	_	Coefficient for SCB	1, 2
2	WEC	_	0	_	_	Coefficient for SCC	1, 2
3	KVTHOWEO	-	0	-	-	Geometry independent threshold shift parameter	1
4	KVTHOWEL	_	0	_	_	Length dependence	1
5	KVTHOWEW	_	0	_	_	Width dependence	1
6	KVTHOWELW	_	0	_	_	Area dependence	1
7	POKVTHOWE	_	0	_	_	Geometry independent part of threshold shift parameter	2
8	PLKVTHOWE	_	0	_	_	Length dependence	2
9	PWKVTHOWE	_	0	_	_	Width dependence	2
10	PLWKVTHOWE	_	0	_	_	Length times width dependence	2
11	KUOWEO	_	0	_	-	Geometry independent mobility degradation factor	1
12	KUOWEL	_	0	_	_	Length dependence	1
13	KUOWEW	_	0	_	_	Width dependence	1
14	KUOWELW	_	0	_	_	Area dependence	1
15	POKUOWE	-	0	_	_	Geometry independent part of mobility degradation factor	2
16	PLKUOWE	_	0	_	_	Length dependence	2
17	PWKUOWE	_	0	_	_	Width dependence	2
18	PLWKUOWE	_	0	_	_	Length times width dependence	2

2.5.5 Parameters for source-bulk and drain-bulk junction model

The JUNCAP2 parameters are part of both the global and the local parameter sets. The last column of **Asym.** shows for which value of **SWJUNASYM** the listed parameter is enabled: i.e., when **SWJUNASYM** = 0, parameters No. 3-45 are used for both source-bulk and drain-bulk junctions and parameters No. 46-88 are ignored; when **SWJUNASYM** = 1, parameters No. 3-45 are used for source-bulk junction and No. 46-88 are used for drain-bulk junction; parameters No. 0-2 are used in both situations.

No.	Name	Unit	Default	Min.	Max.	Description	Asym
0	TRJ	°C	21	T_{\min}	_	Reference temperature	0, 1
1	SWJUNEXP	_	0	0	1	Flag for JUNCAP2 Express; $0 \leftrightarrow$ full JUNCAP2 model, $1 \leftrightarrow$ Express model	0, 1
2	IMAX	A	1000	10^{-12}	_	Maximum current up to which forward current behaves exponentially	0, 1
			Capacita	nce Para	meters	5	
3	CJORBOT	F/m ²	10^{-3}	10^{-12}	_	Zero-bias capacitance per unit-of-area of bottom component for source-bulk junction	0, 1
4	CJORSTI	F/m	10^{-9}	10^{-18}	_	Zero-bias capacitance per unit-of-length of STI-edge component for source-bulk junction	0, 1
5	CJORGAT	F/m	10^{-9}	10^{-18}	_	Zero-bias capacitance per unit-of-length of gate-edge component for source-bulk junction	0, 1
6	VBIRBOT	V	1	$V_{ m bi,low}$	_	Built-in voltage at the reference temperature of bottom component for source-bulk junction	0, 1
7	VBIRSTI	V	1	$V_{ m bi,low}$	_	Built-in voltage at the reference temperature of STI-edge component for source-bulk junction	0, 1
8	VBIRGAT	V	1	$V_{ m bi,low}$	_	Built-in voltage at the reference temperature of gate-edge component for source-bulk junction	0, 1
9	PBOT	-	0.5	0.05	0.95	Grading coefficient of bottom component for source-bulk junction	0, 1
10	PSTI	-	0.5	0.05	0.95	Grading coefficient of STI-edge component for source-bulk junction	0, 1
11	PGAT	-	0.5	0.05	0.95	Grading coefficient of gate-edge component for source-bulk junction	0, 1

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Asym.			
12	PHIGBOT	V	1.16	_	_	Zero-temperature bandgap voltage of bottom component for source-bulk junction	0, 1			
13	PHIGSTI	V	1.16	_	_	Zero-temperature bandgap voltage of STI-edge component for source-bulk junction	0, 1			
14	PHIGGAT	V	1.16	_	_	Zero-temperature bandgap voltage of gate-edge component for source-bulk junction	0, 1			
15	IDSATRBOT	A/m ²	10^{-12}	0	_	Saturation current density at the reference temperature of bottom component for source-bulk junction	0, 1			
16	IDSATRSTI	A/m	10^{-18}	0	_	Saturation current density at the reference temperature of STI-edge component for source-bulk junction	0, 1			
17	IDSATRGAT	A/m	10^{-18}	0	_	Saturation current density at the reference temperature of gate-edge component for source-bulk junction	0, 1			
Shockley-Read-Hall Parameters										
18	CSRHBOT	A/m ³	10^{2}	0	-	Shockley-Read-Hall prefactor of bottom component for source-bulk junction	0, 1			
19	CSRHSTI	A/m ²	10^{-4}	0	_	Shockley-Read-Hall prefactor of STI-edge component for source-bulk junction	0, 1			
20	CSRHGAT	A/m ²	10^{-4}	0	_	Shockley-Read-Hall prefactor of gate-edge component for source-bulk junction	0, 1			
21	XJUNSTI	m	10^{-7}	10^{-9}	_	Junction depth of STI-edge component for source-bulk junction	0, 1			
22	XJUNGAT	m	10^{-7}	10^{-9}	_	Junction depth of gate-edge component for source-bulk junction	0, 1			
		Trap	o-assisted T	unnelin	g Paraı	neters				
23	СТАТВОТ	A/m ³	10^{2}	0	_	Trap-assisted tunneling prefactor of bottom component for source-bulk junction	0, 1			
24	CTATSTI	A/m ²	10^{-4}	0	_	Trap-assisted tunneling prefactor of STI-edge component for source-bulk junction	0, 1			
25	CTATGAT	A/m ²	10^{-4}	0	_	Trap-assisted tunneling prefactor of gate-edge component for source-bulk junction	0, 1			

	c		
continued	from	previous	page

No.	Name	Unit	Default	Min.	Max.	Description	Asym
26	MEFFTATBOT	_	0.25	.01	_	Effective mass (in units of m_0) for trap-assisted tunneling of bottom component for source-bulk junction	0, 1
27	MEFFTATSTI	_	0.25	.01	_	Effective mass (in units of m_0) for trap-assisted tunneling of STI-edge component for source-bulk junction	0, 1
28	MEFFTATGAT	-	0.25	.01	_	Effective mass (in units of m_0) for trap-assisted tunneling of gate-edge component for source-bulk junction	0, 1
		Band	-to-band T	Tunnelin	ıg Para	meters	
29	СВВТВОТ	AV^{-3}	10^{-12}	0	_	Band-to-band tunneling prefactor of bottom component for source-bulk junction	0, 1
30	CBBTSTI	$AV^{-3}m$	10^{-18}	0	_	Band-to-band tunneling prefactor of STI-edge component for source-bulk junction	0, 1
31	CBBTGAT	$AV^{-3}m$	10^{-18}	0	_	Band-to-band tunneling prefactor of gate-edge component for source-bulk junction	0, 1
32	FBBTRBOT	Vm^{-1}	10^{9}	_	_	Normalization field at the reference temperature for band-to-band tunneling of bottom component for source-bulk junction	0, 1
33	FBBTRSTI	Vm^{-1}	10^{9}	_	_	Normalization field at the reference temperature for band-to-band tunneling of STI-edge component for source-bulk junction	0, 1
34	FBBTRGAT	$\mathrm{Vm^{-1}}$	10 ⁹	_	_	Normalization field at the reference temperature for band-to-band tunneling of gate-edge component for source-bulk junction	0, 1
35	STFBBTBOT	K^{-1}	-10^{-3}	_	_	Temperature scaling parameter for band-to-band tunneling of bottom component for source-bulk junction	0, 1
36	STFBBTSTI	K^{-1}	-10^{-3}	_	_	Temperature scaling parameter for band-to-band tunneling of STI-edge component for source-bulk junction	0, 1
37	STFBBTGAT	K ⁻¹	-10^{-3}	_	_	Temperature scaling parameter for band-to-band tunneling of gate-edge component for source-bulk junction	0, 1

Avalanche and Breakdown Parameters

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Asym.
38	VBRBOT	V	10	0.1	_ <u>_</u>	Breakdown voltage of bottom component for source-bulk junction	0, 1
39	VBRSTI	V	10	0.1	_	Breakdown voltage of STI-edge component for source-bulk junction	0, 1
40	VBRGAT	V	10	0.1	_	Breakdown voltage of gate-edge component for source-bulk junction	0, 1
41	PBRBOT	V	4	0.1	_	Breakdown onset tuning parameter of bottom component for source-bulk junction	0, 1
42	PBRSTI	V	4	0.1	_	Breakdown onset tuning parameter of STI-edge component for source-bulk junction	0, 1
43	PBRGAT	V	4	0.1	_	Breakdown onset tuning parameter of gate-edge component for source-bulk junction	0, 1
		J	UNCAP E	xpress P	aramet	ers	
44	VJUNREF	V	2.5	0.5	_	Typical maximum source-bulk junction voltage; usually about $2 \cdot V_{\text{sup}}$	0, 1
45	FJUNQ	V	0.03	0	-	Fraction below which source-bulk junction capacitance components are neglected	0, 1
			Capacita	nce Para	ameters	5	
46	CJORBOTD	F/m ²	10^{-3}	10^{-12}	_	Zero-bias capacitance per unit-of-area of bottom component for drain-bulk junction	1
47	CJORSTID	F/m	10^{-9}	10^{-18}	_	Zero-bias capacitance per unit-of-length of STI-edge component for drain-bulk junction	1
48	CJORGATD	F/m	10^{-9}	10^{-18}	_	Zero-bias capacitance per unit-of-length of gate-edge component for drain-bulk junction	1
49	VBIRBOTD	V	1	$V_{ m bi,low}$	_	Built-in voltage at the reference temperature of bottom component for drain-bulk junction	1
50	VBIRSTID	V	1	$V_{ m bi,low}$	_	Built-in voltage at the reference temperature of STI-edge component for drain-bulk junction	1
51	VBIRGATD	V	1	$V_{ m bi,low}$	_	Built-in voltage at the reference temperature of gate-edge component for drain-bulk junction	1
52	PBOTD	-	0.5	0.05	0.95	Grading coefficient of bottom component for drain-bulk junction	1

continued from previous page					
	C	continued	trom	previous	page

No.	Name	Unit	Default	Min.	Max.	Description	Asym
53	PSTID	-	0.5	0.05	0.95	Grading coefficient of STI-edge component for drain-bulk junction	1
54	PGATD	-	0.5	0.05	0.95	Grading coefficient of gate-edge component for drain-bulk junction	1
			Ideal-curr	ent Par	ameter	s	
55	PHIGBOTD	V	1.16	_	_	Zero-temperature bandgap voltage of bottom component for drain-bulk junction	1
56	PHIGSTID	V	1.16	_	_	Zero-temperature bandgap voltage of STI-edge component for drain-bulk junction	1
57	PHIGGATD	V	1.16	_	_	Zero-temperature bandgap voltage of gate-edge component for drain-bulk junction	1
58	IDSATRBOTD	A/m ²	10^{-12}	0	_	Saturation current density at the reference temperature of bottom component for drain-bulk junction	1
59	IDSATRSTID	A/m	10^{-18}	0	_	Saturation current density at the reference temperature of STI-edge component for drain-bulk junction	1
60	IDSATRGATD	A/m	10^{-18}	0	_	Saturation current density at the reference temperature of gate-edge component for drain-bulk junction	1
		Sh	ockley-Rea	d-Hall	Parame	eters	
61	CSRHBOTD	A/m ³	10^{2}	0	_	Shockley-Read-Hall prefactor of bottom component for drain-bulk junction	1
62	CSRHSTID	A/m ²	10^{-4}	0	_	Shockley-Read-Hall prefactor of STI-edge component for drain-bulk junction	1
63	CSRHGATD	A/m ²	10^{-4}	0	_	Shockley-Read-Hall prefactor of gate-edge component for drain-bulk junction	1
64	XJUNSTID	m	10^{-7}	10^{-9}	_	Junction depth of STI-edge component for drain-bulk junction	1
55	XJUNGATD	m	10^{-7}	10^{-9}	-	Junction depth of gate-edge component for drain-bulk junction	1
		Traj	o-assisted T	unnelin	g Parar	neters	
56	CTATBOTD	A/m ³	10^{2}	0	_	Trap-assisted tunneling prefactor of bottom component for drain-bulk junction	1
67	CTATSTID	A/m ²	10^{-4}	0	_	Trap-assisted tunneling prefactor of STI-edge component for drain-bulk junction	1

		c		
 	continued	trom	previous	page

No.	Name	Unit	Default	Min.	Max.	Description	Asym
68	CTATGATD	A/m ²	10^{-4}	0	_	Trap-assisted tunneling prefactor of gate-edge component for drain-bulk junction	1
69	MEFFTATBOTD	-	0.25	.01	_	Effective mass (in units of m_0) for trap-assisted tunneling of bottom component for drain-bulk junction	1
70	MEFFTATSTID	_	0.25	.01	_	Effective mass (in units of m_0) for trap-assisted tunneling of STI-edge component for drain-bulk junction	1
71	MEFFTATGATD	_	0.25	.01	_	Effective mass (in units of m_0) for trap-assisted tunneling of gate-edge component for drain-bulk junction	1
		Band	-to-band T	Tunnelir	g Para	meters	
72	CBBTBOTD	AV^{-3}	10^{-12}	0	_	Band-to-band tunneling prefactor of bottom component for drain-bulk junction	1
73	CBBTSTID	AV^{-3} m	10^{-18}	0	_	Band-to-band tunneling prefactor of STI-edge component for drain-bulk junction	1
74	CBBTGATD	AV^{-3} m	10^{-18}	0	_	Band-to-band tunneling prefactor of gate-edge component for drain-bulk junction	1
75	FBBTRBOTD	Vm^{-1}	10^{9}	_	_	Normalization field at the reference temperature for band-to-band tunneling of bottom component for drain-bulk junction	1
76	FBBTRSTID	Vm ⁻¹	10^{9}	_	_	Normalization field at the reference temperature for band-to-band tunneling of STI-edge component for drain-bulk junction	1
77	FBBTRGATD	Vm ⁻¹	10^{9}	_	_	Normalization field at the reference temperature for band-to-band tunneling of gate-edge component for drain-bulk junction	1
78	STFBBTBOTD	K^{-1}	-10^{-3}	_	_	Temperature scaling parameter for band-to-band tunneling of bottom component for drain-bulk junction	1
79	STFBBTSTID	K^{-1}	-10^{-3}	_	_	Temperature scaling parameter for band-to-band tunneling of STI-edge component for drain-bulk junction	1
80	STFBBTGATD	K^{-1}	-10^{-3}	_	_	Temperature scaling parameter for band-to-band tunneling of gate-edge component for drain-bulk junction	1

Avalanche and Breakdown Parameters

... continued from previous page

No.	Name	Unit	Default	Min.	Max.	Description	Asym.
81	VBRBOTD	V	10	0.1	_	Breakdown voltage of bottom component for drain-bulk junction	1
82	VBRSTID	V	10	0.1	_	Breakdown voltage of STI-edge component for drain-bulk junction	1
83	VBRGATD	V	10	0.1	_	Breakdown voltage of gate-edge component for drain-bulk junction	1
84	PBRBOTD	V	4	0.1	_	Breakdown onset tuning parameter of bottom component for drain-bulk junction	1
85	PBRSTID	V	4	0.1	_	Breakdown onset tuning parameter of STI-edge component for drain-bulk junction	1
86	PBRGATD	V	4	0.1	_	Breakdown onset tuning parameter of gate-edge component for drain-bulk junction	1
		J	UNCAP Ex	xpress P	aramet	ers	
87	VJUNREFD	V	2.5	0.5	_	Typical maximum drain-bulk junction voltage; usually about $2 \cdot V_{\mathrm{sup}}$	1
88	FJUNQD	V	0.03	0	_	Fraction below which drain-bulk junction capacitance components are neglected	1

2.5.6 Parameters for parasitic resistances

The parameters for parasitic resistances are listed in the table below. The last column—labeled 'Geo.'—shows for which value of SWGEO the parameter is used.

No.	Name	Unit	Default	Min.	Max.	Description	
0	RG	Ω	0	0	_	Gate resistance $R_{ m gate}$	0
1	RGO	Ω	0	_	_	Gate resistance R_{gate}	1, 2
2	RINT	Ω ·m ²	0	0	_	Contact resistance between silicide and ploy	1, 2
3	RVPOLY	$\Omega{\cdot}m^2$	0	0	_	Vertical poly resistance	1, 2
4	RSHG	Ω/\Box	0	0	_	Gate electrode diffusion sheet resistance	1, 2
5	DLSIL	m	0	_	_	Silicide extension over the physical gate length	
6	RSE	Ω	0	0	_	External source resistance	0
7	RDE	Ω	0	0	_	External drain resistance	0
8	RSH	Ω/\Box	0	_	_	Sheet resistance of source diffusion	1, 2
9	RSHD	Ω/\Box	0	_	_	Sheet resistance of drain diffusion	1, 2
10	RBULK	Ω	0	0	_	Bulk resistance $R_{ m bulk}$	
11	RBULKO	Ω	0	_	_	Bulk resistance R_{bulk}	1, 2
12	RWELL	Ω	0	0	-	Well resistance $R_{ m well}$	
13	RWELLO	Ω	0	_	_	Well resistance $R_{ m well}$	1, 2
14	RJUNS	Ω	0	0	_	Source-side bulk resistance $R_{ m juns}$	
15	RJUNSO	Ω	0	_	_	Source-side bulk resistance $R_{ m juns}$	
16	RJUND	Ω	0	0	_	Drain-side bulk resistance $R_{ m jund}$	
17	RJUNDO	Ω	0	_	_	Drain-side bulk resistance $R_{ m jund}$	1, 2

2.5.7 Parameters for self heating

The parameters for self heating are listed below. They are only available in the self heating version of the model. The last column—labeled 'Geo.'—shows for which value of SWGEO the parameter is used.

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
0	RTH	K/W	0	0	_	Thermal resistance	0
1	RTHO	K/W	0	_	_	Geometry independent part	1, 2
2	RTHW1	K/W	0	_	_	Width dependence	1, 2
3	RTHW2	_	0	_	_	Offset in width dependence	1, 2
4	RTHLW	-	0	-	_	Length-correction to width dependence	1, 2
5	СТН	J/K	0	0	_	Thermal capacitance	0
6	СТНО	J/K	0	_	_	Geometry independent part	1, 2
7	CTHW1	J/K	0	_	_	Width dependence	1, 2
8	CTHW2	_	0	_	_	Offset in width dependence	1, 2
9	CTHLW	-	0	-	_	Length-correction to width dependence	1, 2
10	STRTH	_	0	_	_	Temperature sensitivity of RTH	0
11	STRTHO	_	0	_	_	Geometry independent part	1, 2

2.5.8 Parameters for NQS

The parameters for non-quasi-static effects are listed below. They are only available in the NQS-version of the model. The last column—labeled 'Geo.'—shows for which value of SWGEO the parameter is used.

No.	Name	Unit	Default	Min.	Max.	Description	Geo.
0	SWNQS	-	0	0	9	Switch for NQS effects / number of collocation points	0, 1, 2
1	MUNQS	-	1	0	_	Relative mobility for NQS modeling	0
2	MUNQSO	_	1	_	_	Relative mobility for NQS modeling	1, 2

Section 3

Geometry dependence and Other effects

3.1 Introduction

The physical geometry scaling rules of PSP (Section 3.2) have been developed to give a good description over the whole geometry range of CMOS technologies. As an alternative, the binning-rules can be used (Section 3.3) to allow for a more phenomenological geometry dependency. (Note that the user has to choose between the two options; the geometrical scaling rules and the binning scaling rules cannot be used at the same time.) In both cases, the result is a local parameter set (for a transistor of the specified L and W), which is fed into the local model.

Stress and well proximity effects are included in PSP. Use of the stress model (Section 3.5) and/or well proximity effect model (Section 3.6) leads to modification of some of the local parameters calculated from the geometrical or binning scaling rules.

3.2 Geometrical scaling rules

The physical scaling rules to calculate the local parameters from a global parameter set are given in this section.

Note:

- After calculation of the local parameters (and possible application of the stress equations in Section 3.5), clipping is applied according to Section 2.5.2.
- The geometrical scaling equations are *only* calculated when **SWGEO** = 1.

Effective length and width

$$W_{\rm f} = \frac{W}{\mathbf{NF}} \tag{3.1}$$

$$L_{\rm EN} = 10^{-6} \tag{3.2}$$

$$W_{\rm EN} = 10^{-6} \tag{3.3}$$

$$\Delta L_{\rm PS} = \mathbf{LVARO} \cdot \left(1 + \mathbf{LVARL} \cdot \frac{L_{\rm EN}}{L} \right) \cdot \left(1 + \mathbf{LVARW} \cdot \frac{W_{\rm EN}}{W_{\rm f}} \right) \tag{3.4}$$

$$\Delta W_{\rm OD} = \mathbf{WVARO} \cdot \left(1 + \mathbf{WVARL} \cdot \frac{L_{\rm EN}}{L} \right) \cdot \left(1 + \mathbf{WVARW} \cdot \frac{W_{\rm EN}}{W_{\rm f}} \right)$$
(3.5)

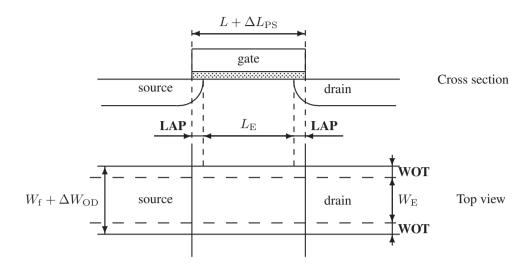


Figure 3.1: Specification of the dimensions of a MOS transistor

$$L_{\rm E} = L - \Delta L = L + \Delta L_{\rm PS} - 2 \cdot \text{LAP}$$
(3.6)

$$W_{\rm E} = W_{\rm f} - \Delta W = W_{\rm f} + \Delta W_{\rm OD} - 2 \cdot \mathbf{WOT}$$
(3.7)

$$L_{\text{E,CV}} = L + \Delta L_{\text{PS}} - 2 \cdot \mathbf{LAP} + \mathbf{DLQ}$$
(3.8)

$$W_{\text{E.CV}} = W_{\text{f}} + \Delta W_{\text{OD}} - 2 \cdot \mathbf{WOT} + \mathbf{DWQ}$$
 (3.9)

$$L_{G,CV} = L + \Delta L_{PS} + \mathbf{DLQ} \tag{3.10}$$

$$W_{\rm G,CV} = W_{\rm f} + \Delta W_{\rm OD} + \mathbf{DWQ} \tag{3.11}$$

Note: If the calculated $L_{\rm E}$, $W_{\rm E}$, $L_{\rm E,CV}$, $W_{\rm E,CV}$, $L_{\rm G,CV}$, or $W_{\rm G,CV}$ is smaller than 1 nm (10⁻⁹ m), the value is clipped to this lower bound of 1 nm.

Process Parameters

$$\mathbf{VFB} = \mathbf{VFBO} + \mathbf{VFBL} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{VFBW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{VFBLW} \cdot \frac{W_{\mathrm{EN}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{E}} \cdot L_{\mathrm{E}}} \quad (3.12)$$

$$\mathbf{STVFB} = \mathbf{STVFBO} + \mathbf{STVFBL} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{STVFBW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{STVFBLW} \cdot \frac{W_{\mathrm{EN}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{E}} \cdot L_{\mathrm{E}}} \quad (3.13)$$

$$TOX = TOXO (3.14)$$

$$EPSROX = EPSROXO (3.15)$$

$$N_{\rm sub0,eff} = \text{NSUBO} \cdot \text{MAX} \left(\left[1 + \text{NSUBW} \cdot \frac{W_{\rm EN}}{W_{\rm E}} \cdot \ln \left(1 + \frac{W_{\rm E}}{\text{WSEG}} \right) \right], 10^{-3} \right)$$
(3.16)

$$N_{\text{pck,eff}} = \text{NPCK} \cdot \text{MAX} \left(\left[1 + \text{NPCKW} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} \cdot \ln \left(1 + \frac{W_{\text{E}}}{\text{WSEGP}} \right) \right], 10^{-3} \right)$$
(3.17)

$$L_{\rm pck,eff} = \mathbf{LPCK} \cdot \mathbf{MAX} \left(\left[1 + \mathbf{LPCKW} \cdot \frac{W_{\rm EN}}{W_{\rm E}} \cdot \ln \left(1 + \frac{W_{\rm E}}{\mathbf{WSEGP}} \right) \right], 10^{-3} \right)$$
(3.18)

$$a = 7.5 \cdot 10^{10} \tag{3.19}$$

$$b = \sqrt{N_{\text{sub0,eff}} + 0.5 \cdot N_{\text{pck,eff}}} - \sqrt{N_{\text{sub0,eff}}}$$
(3.20)

$$N_{\rm sub0,eff} + N_{\rm pck,eff} \cdot \left[2 - \frac{L_{\rm E}}{L_{\rm pck,eff}} \right] \qquad \text{for } L_{\rm E} < L_{\rm pck,eff}$$

$$N_{\rm sub0,eff} + N_{\rm pck,eff} \cdot \frac{L_{\rm pck,eff}}{L_{\rm E}} \qquad \text{for } L_{\rm pck,eff} \le L_{\rm E} \le 2 \cdot L_{\rm pck,eff}$$

$$\left[\sqrt{N_{\rm sub0,eff}} + a \cdot \ln \left(1 + 2 \cdot \frac{L_{\rm pck,eff}}{L_{\rm E}} \cdot \left[\exp \left(\frac{b}{a} \right) - 1 \right] \right) \right]^2 \qquad \text{for } L_{\rm E} > 2 \cdot L_{\rm pck,eff}$$

$$(3.21)$$

$$\mathbf{NEFF} = N_{\text{sub}} \cdot \left(1 - \mathbf{FOL1} \cdot \frac{L_{\text{EN}}}{L_{\text{E}}} - \mathbf{FOL2} \cdot \left[\frac{L_{\text{EN}}}{L_{\text{E}}} \right]^2 \right)$$
(3.22)

 $\mathbf{FACNEFFAC} = \mathbf{FACNEFFACO} + \mathbf{FACNEFFACL} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

$$+ \ \mathbf{FACNEFFACW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{FACNEFFACLW} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}} \quad (3.23)$$

 $\mathbf{GFACNUD} = \mathbf{GFACNUDO} + \mathbf{GFACNUDL} \cdot \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}\right]^{\mathbf{GFACNUDLEXP}}$

$$+ \, \mathbf{GFACNUDW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{GFACNUDLW} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}} \quad (3.24)$$

$$VSBNUD = VSBNUDO (3.25)$$

$$DVSBNUD = DVSBNUDO (3.26)$$

$$VNSUB = VNSUBO (3.27)$$

$$NSLP = NSLPO (3.28)$$

$$DNSUB = DNSUBO (3.29)$$

$$\mathbf{DPHIB} = \mathbf{DPHIBO} + \mathbf{DPHIBL} \cdot \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} \right]^{\mathbf{DPHIBLEXP}}$$

$$+$$
 DPHIBW $\cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} +$ **DPHIBLW** $\cdot \frac{W_{\mathrm{EN}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{E}} \cdot L_{\mathrm{E}}}$ (3.30)

$$\mathbf{DELVTAC} = \mathbf{DELVTACO} + \mathbf{DELVTACL} \cdot \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} \right]^{\mathbf{DELVTACLEXP}}$$

+ **DELVTACW**
$$\cdot \frac{W_{\text{EN}}}{W_{\text{E}}}$$
 + **DELVTACLW** $\cdot \frac{W_{\text{EN}} \cdot L_{\text{EN}}}{W_{\text{E}} \cdot L_{\text{E}}}$ (3.31)

$$\mathbf{NP} = \mathbf{NPO} \cdot \text{MAX} \left(10^{-6}, 1 + \mathbf{NPL} \cdot \frac{L_{\text{EN}}}{L_{\text{E}}} \right)$$
 (3.32)

$$\mathbf{CT} = \left(\mathbf{CTO} + \mathbf{CTL} \cdot \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}\right]^{\mathbf{CTLEXP}}\right) \cdot \left(1 + \mathbf{CTW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}}\right)$$

$$\cdot \left(1 + \mathbf{CTLW} \cdot \frac{W_{\mathrm{EN}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{E}} \cdot L_{\mathrm{E}}}\right) \quad (3.33)$$

$$TOXOV = TOXOVO (3.34)$$

$$TOXOVD = TOXOVDO (3.35)$$

$$NOV = NOVO (3.36)$$

$$NOVD = NOVDO (3.37)$$

DIBL Parameters

$$\mathbf{CF} = \mathbf{CFL} \cdot \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} \right]^{\mathbf{CFLEXP}} \cdot \left(1 + \mathbf{CFW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} \right)$$
(3.38)

$$\mathbf{CFB} = \mathbf{CFBO} \tag{3.39}$$

Mobility Parameters

$$F_{\beta 1,\text{eff}} = \mathbf{FBET1} \cdot \left(1 + \mathbf{FBET1W} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} \right)$$
 (3.40)

$$L_{\text{P1,eff}} = \mathbf{LP1} \cdot \text{MAX} \left(\left[1 + \mathbf{LP1W} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} \right], 10^{-3} \right)$$
 (3.41)

$$G_{\rm P,E} = 1 + F_{\beta 1,\rm eff} \cdot \frac{L_{\rm P1,eff}}{L_{\rm E}} \cdot \left[1 - \exp\left(-\frac{L_{\rm E}}{L_{\rm P1,eff}}\right) \right]$$
(3.42)

$$+ \mathbf{FBET2} \cdot \frac{\mathbf{LP2}}{L_{\mathrm{E}}} \cdot \left[1 - \exp\left(-\frac{L_{\mathrm{E}}}{\mathbf{LP2}}\right)\right]$$

$$G_{\text{W,E}} = 1 + \textbf{BETW1} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} + \textbf{BETW2} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} \cdot \ln\left(1 + \frac{W_{\text{E}}}{\textbf{WBET}}\right)$$
 (3.43)

$$\mathbf{BETN} = \frac{\mathbf{UO}}{G_{\mathrm{P.E}}} \cdot \frac{W_{\mathrm{E}}}{L_{\mathrm{E}}} \cdot G_{\mathrm{W,E}} \tag{3.44}$$

$$\mathbf{STBET} = \mathbf{STBETO} + \mathbf{STBETL} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{STBETW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{STBETLW} \cdot \frac{W_{\mathrm{EN}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{E}} \cdot L_{\mathrm{E}}} \quad (3.45)$$

$$\mathbf{MUE} = \mathbf{MUEO} \cdot \left[1 + \mathbf{MUEW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} \right]$$
 (3.46)

$$\mathbf{STMUE} = \mathbf{STMUEO} \tag{3.47}$$

$$THEMU = THEMUO (3.48)$$

$$STTHEMU = STTHEMUO (3.49)$$

$$\mathbf{CS} = \left(\mathbf{CSO} + \mathbf{CSL} \cdot \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}\right]^{\mathbf{CSLEXP}}\right) \cdot \left(1 + \mathbf{CSW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}}\right)$$

$$\cdot \left(1 + \mathbf{CSLW} \cdot \frac{W_{\mathrm{EN}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{E}} \cdot L_{\mathrm{E}}}\right) \quad (3.50)$$

$$STCS = STCSO (3.51)$$

$$\begin{aligned} \mathbf{XCOR} &= \mathbf{XCORO} \cdot \left(1 + \mathbf{XCORL} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}\right) \cdot \left(1 + \mathbf{XCORW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}}\right) \\ & \cdot \left(1 + \mathbf{XCORLW} \cdot \frac{W_{\mathrm{EN}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{E}} \cdot L_{\mathrm{E}}}\right) \end{aligned} \tag{3.52}$$

$$STXCOR = STXCORO (3.53)$$

$$\mathbf{FETA} = \mathbf{FETAO} \tag{3.54}$$

Series Resistance Parameters

$$\mathbf{RS} = \mathbf{RSW1} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} \cdot \left[1 + \mathbf{RSW2} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} \right]$$
(3.55)

$$STRS = STRSO (3.56)$$

$$\mathbf{RSB} = \mathbf{RSBO} \tag{3.57}$$

$$RSG = RSGO (3.58)$$

Velocity Saturation Parameters

$$\begin{aligned} \textbf{THESAT} &= \left(\textbf{THESATO} + \textbf{THESATL} \cdot \frac{G_{\text{W,E}}}{G_{\text{P,E}}} \cdot \left[\frac{L_{\text{EN}}}{L_{\text{E}}} \right]^{\textbf{THESATLEXP}} \right) \\ & \cdot \left(1 + \textbf{THESATW} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} \right) \cdot \left(1 + \textbf{THESATLW} \cdot \frac{W_{\text{EN}} \cdot L_{\text{EN}}}{W_{\text{E}} \cdot L_{\text{E}}} \right) \end{aligned} \tag{3.59}$$

 $\mathbf{STTHESAT} = \mathbf{STTHESATO} + \mathbf{STTHESATL} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

$$+$$
 STTHESATW $\cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} +$ STTHESATLW $\cdot \frac{W_{\mathrm{EN}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{E}} \cdot L_{\mathrm{E}}}$ (3.60)

$$THESATB = THESATBO (3.61)$$

$$THESATG = THESATGO (3.62)$$

Saturation Voltage Parameter

$$\mathbf{AX} = \frac{\mathbf{AXO}}{1 + \mathbf{AXL} \cdot \frac{L_{\text{EN}}}{L_{\text{E}}}}$$
(3.63)

Channel Length Modulation (CLM) Parameters

$$\mathbf{ALP} = \mathbf{ALPL} \cdot \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} \right]^{\mathbf{ALPLEXP}} \cdot \left(1 + \mathbf{ALPW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} \right)$$
(3.64)

$$\mathbf{ALP1} = \frac{\mathbf{ALP1L1} \cdot \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}\right]^{\mathbf{ALP1LEXP}}}{1 + \mathbf{ALP1L2} \cdot \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}\right]^{\mathbf{ALP1LEXP+1}} \cdot \left(1 + \mathbf{ALP1W} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}}\right)}$$
(3.65)

$$\mathbf{ALP2} = \frac{\mathbf{ALP2L1} \cdot \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}\right]^{\mathbf{ALP2LEXP}}}{1 + \mathbf{ALP2L2} \cdot \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}\right]^{\mathbf{ALP2LEXP}+1}} \cdot \left(1 + \mathbf{ALP2W} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}}\right)$$
(3.66)

$$\mathbf{VP} = \mathbf{VPO} \tag{3.67}$$

Impact Ionization (II) Parameters

$$\mathbf{A1} = \mathbf{A10} \cdot \left(1 + \mathbf{A1L} \cdot \frac{L_{\text{EN}}}{L_{\text{E}}} \right) \cdot \left(1 + \mathbf{A1W} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} \right)$$
(3.68)

$$\mathbf{A2} = \mathbf{A2O} \tag{3.69}$$

$$STA2 = STA2O (3.70)$$

$$\mathbf{A3} = \mathbf{A30} \cdot \left(1 + \mathbf{A3L} \cdot \frac{L_{\text{EN}}}{L_{\text{E}}} \right) \cdot \left(1 + \mathbf{A3W} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} \right)$$
(3.71)

$$\mathbf{A4} = \mathbf{A4O} \cdot \left(1 + \mathbf{A4L} \cdot \frac{L_{\text{EN}}}{L_{\text{E}}} \right) \cdot \left(1 + \mathbf{A4W} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} \right)$$
(3.72)

Gate Current Parameters

$$GCO = GCOO (3.73)$$

$$\mathbf{IGINV} = \mathbf{IGINVLW} \cdot \frac{W_{\mathrm{E}} \cdot L_{\mathrm{E}}}{W_{\mathrm{EN}} \cdot L_{\mathrm{EN}}}$$
(3.74)

$$\mathbf{IGOV} = \mathbf{IGOVW} \cdot \frac{W_{\text{E}} \cdot \mathbf{LOV}}{W_{\text{EN}} \cdot L_{\text{EN}}}$$
(3.75)

$$\mathbf{IGOVD} = \mathbf{IGOVDW} \cdot \frac{W_{\text{E}} \cdot \mathbf{LOVD}}{W_{\text{EN}} \cdot L_{\text{EN}}}$$
(3.76)

$$STIG = STIGO (3.77)$$

$$GC2 = GC2O (3.78)$$

$$GC3 = GC3O (3.79)$$

$$\mathbf{CHIB} = \mathbf{CHIBO} \tag{3.80}$$

Gate-Induced Drain Leakage (GIDL) Parameters

$$\mathbf{AGIDL} = \mathbf{AGIDLW} \cdot \frac{W_{\mathrm{E}} \cdot \mathbf{LOV}}{W_{\mathrm{EN}} \cdot L_{\mathrm{EN}}}$$
(3.81)

$$\mathbf{AGIDLD} = \mathbf{AGIDLDW} \cdot \frac{W_{\mathrm{E}} \cdot \mathbf{LOVD}}{W_{\mathrm{EN}} \cdot L_{\mathrm{EN}}}$$
(3.82)

$$BGIDL = BGIDLO (3.83)$$

$$BGIDLD = BGIDLDO (3.84)$$

$$STBGIDL = STBGIDLO (3.85)$$

$$STBGIDLD = STBGIDLDO (3.86)$$

$$CGIDL = CGIDLO (3.87)$$

$$CGIDLD = CGIDLDO (3.88)$$

Charge Model Parameters

$$\epsilon_{\text{ox}} = \epsilon_0 \cdot \mathbf{EPSROX} \tag{3.89}$$

$$\mathbf{COX} = \epsilon_{\text{ox}} \cdot \frac{W_{\text{E,CV}} \cdot L_{\text{E,CV}}}{\mathbf{TOX}}$$
(3.90)

$$\mathbf{CGOV} = \epsilon_{\mathbf{ox}} \cdot \frac{W_{\mathbf{E}, \mathbf{CV}} \cdot \mathbf{LOV}}{\mathbf{TOXOV}}$$
(3.91)

$$\mathbf{CGOVD} = \epsilon_{ox} \cdot \frac{W_{E,CV} \cdot \mathbf{LOVD}}{\mathbf{TOXOVD}}$$
(3.92)

$$\mathbf{CGBOV} = \mathbf{CGBOVL} \cdot \frac{L_{\mathrm{G,CV}}}{L_{\mathrm{EN}}}$$
(3.93)

$$\mathbf{CFR} = \mathbf{CFRW} \cdot \frac{W_{G,CV}}{W_{EN}} \tag{3.94}$$

$$\mathbf{CFRD} = \mathbf{CFRDW} \cdot \frac{W_{\mathrm{G,CV}}}{W_{\mathrm{EN}}} \tag{3.95}$$

Thermal Noise Model Parameters

Note that the equation below makes use of the value of **BETN** calculated in Eq. (3.44). Because **BETN** is roughly proportional to $W_{\rm E}/L_{\rm E}$, the resulting **FNTEXC** is roughly proportional to $1/L_{\rm E}^2$. In addition, it will inherit some minor L- and W-dependence from **BETN**.

$$\mathbf{FNTEXC} = \mathbf{FNTEXCL} \cdot \mathbf{BETN}^2 \cdot \left[\frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} \right]^2$$
 (3.96)

Flicker Noise Model Parameters

$$L_{\text{noi}} = \text{MAX}\left(1 - \frac{2 \cdot \textbf{LINTNOI}}{L_{\text{E}}}, 10^{-3}\right)$$
(3.97)

$$L_{\rm red} = \frac{1}{L_{\rm noi}^{\rm ALPNOI}}$$
 (3.98)

$$NFA = L_{red} \cdot NFALW \cdot \frac{W_{EN} \cdot L_{EN}}{W_{E} \cdot L_{E}}$$
(3.99)

$$\mathbf{NFB} = L_{\text{red}} \cdot \mathbf{NFBLW} \cdot \frac{W_{\text{EN}} \cdot L_{\text{EN}}}{W_{\text{E}} \cdot L_{\text{E}}}$$
(3.100)

$$NFC = L_{red} \cdot NFCLW \cdot \frac{W_{EN} \cdot L_{EN}}{W_{E} \cdot L_{E}}$$
(3.101)

$$\mathbf{EF} = \mathbf{EFO} \tag{3.102}$$

WPE parameters

$$K_{\rm vthowe} = \textbf{KVTHOWEO} + \textbf{KVTHOWEL} \cdot \frac{L_{\rm EN}}{L_{\rm E}} + \textbf{KVTHOWEW} \cdot \frac{W_{\rm EN}}{W_{\rm E}} \\ + \textbf{KVTHOWELW} \cdot \frac{L_{\rm EN} \cdot W_{\rm EN}}{L_{\rm E} \cdot W_{\rm E}} \quad (3.103)$$

$$K_{\mathrm{uowe}} = \mathbf{KUOWEO} + \mathbf{KUOWEL} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{KUOWEW} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}}$$

+ **KUOWELW** ·
$$\frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
 (3.104)

Self heating parameters

$$\mathbf{RTH} = \mathbf{RTHO} + \frac{\mathbf{RTHW1}}{\mathbf{RTHW2} + \frac{W_{\mathrm{E}}}{W_{\mathrm{EN}}} \cdot \left[1 + \mathbf{RTHLW} \cdot \frac{L_{\mathrm{E}}}{L_{\mathrm{EN}}}\right]} \tag{3.105}$$

$$\mathbf{CTH} = \mathbf{CTHO} + \mathbf{CTHW1} \cdot \left\{ \mathbf{CTHW2} + \frac{W_{\mathrm{E}}}{W_{\mathrm{EN}}} \cdot \left[1 + \mathbf{CTHLW} \cdot \frac{L_{\mathrm{E}}}{L_{\mathrm{EN}}} \right] \right\}$$
(3.106)

$$\mathbf{STRTH} = \mathbf{STRTHO} \tag{3.107}$$

NQS parameters

$$MUNQS = MUNQSO (3.108)$$

3.3 Binning equations

The binning equations are provided as a (phenomenological) alternative to the physical scaling equations for computing local parameters. The physical geometrical scaling rules have been developed to give a good description over the whole geometry range of CMOS technologies. For processes under development, however, it is sometimes useful to have more flexible scaling relations. In that case on could opt for a binning strategy, where the accuracy with geometry is mostly determined by the number of bins used. The physical scaling rules of Section 3.2 are generally not suitable for binning strategies, since they may result in discontinuities in local parameter values at the bin boundaries. Consequently, special binning geometrical scaling relations have been developed, which guarantee continuity of the resulting local model parameters at the bin boundaries.

Note: The binning equations are *only* calculated when **SWGEO** = 2.

Only four different types of binning scaling rules are used, which are based on first order developments of the geometrical scaling rules in terms of $L_{\rm E}$, $1/L_{\rm E}$, $W_{\rm E}$, and $1/W_{\rm E}$ (examples below are for a fictitious parameter YYY):

1. Type I

$$\mathbf{YYY} = \mathbf{POYYY} + \mathbf{PLYYY} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWYYY} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWYYY} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.109)

2. Type II

$$\mathbf{YYY} = \mathbf{POYYY} + \mathbf{PLYYY} \cdot \frac{L_{\mathrm{E}}}{L_{\mathrm{EN}}} + \mathbf{PWYYY} \cdot \frac{W_{\mathrm{E}}}{W_{\mathrm{EN}}} + \mathbf{PLWYYY} \cdot \frac{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}$$
(3.110)

3. Type III

$$\mathbf{YYY} = \mathbf{POYYY} + \mathbf{PLYYY} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWYYY} \cdot \frac{W_{\mathrm{E}}}{W_{\mathrm{EN}}} + \mathbf{PLWYYY} \cdot \frac{W_{\mathrm{E}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{EN}} \cdot L_{\mathrm{E}}}$$
(3.111)

4. Type IV (no binning)

$$\mathbf{YYY} = \mathbf{POYYY} \tag{3.112}$$

In Table 3.1 a survey of the binning type used for each local parameter is given. In some cases where the geometrical scaling rule is constant, the binning rule is chosen to be more flexible.

When using the binning rules above, the binning parameters for one bin can be directly calculated from the local parameter sets of the four corner devices of the bin (see Sec. 7.6). This results in a *separate parameter set* for each bin. The binning scheme ensures that the local parameters are exactly reproduced at the bin corners and that no humps occur in the local parameter values across bin boundaries.

Note: After calculation of the local parameters from the binning rules (and possible applications of the stress equations in Section 3.5 and well proximity equations in Section 3.6), clipping is applied according to Section 2.5.2.

Table 3.1: Overview of local parameters and binning type. The third column indicates whether there is a physical geometrical scaling rule for the local parameters.

#	parameter	physical scaling	binning	#	parameter	physical scaling	binning
0	VFB	yes	type I	40	THESATG	no	type I
1	STVFB	yes	type I	41	$\mathbf{A}\mathbf{X}$	yes	type I
2	TOX	no	no	42	ALP	yes	type I
3	EPSROX	no	no	43	ALP1	yes	type I
4	NEFF	yes	type I	44	ALP2	yes	type I
5	FACNEFFAC	yes	type I	45	VP	no	no
6	GFACNUD	yes	type I	46	A1	yes	type I
7	VSBNUD	no	no	47	A2	no	no
8	DVSBNUD	no	no	48	STA2	no	no
9	VNSUB	no	no	49	A3	yes	type I
10	NSLP	no	no	50	A4	yes	type I
11	DNSUB	no	no	51	GCO	no	no
12	DPHIB	yes	type I	52	IGINV	yes	type II
13	DELVTAC	yes	type I	53	IGOV	yes	type III
14	NP	yes	type I	54	IGOVD	yes	type III
15	CT	yes	type I	55	STIG	no	no
16	TOXOV	no	no	56	GC2	no	no
17	TOXOVD	no	no	57	GC3	no	no
18	NOV	no	type I	58	CHIB	no	no
19	NOVD	no	type I	59	AGIDL	yes	type III
20	CF	yes	type I	60	AGIDLD	yes	type III
21	CFB	no	no	61	BGIDL	no	no
22	BETN	yes	type I	62	BGIDLD	no	no
23	STBET	yes	type I	63	STBGIDL	no	no
24	MUE	yes	type I	64	STBGIDLD	no	no
25	STMUE	no	no	65	CGIDL	no	no
26	THEMU	no	no	66	CGIDLD	no	no
27	STTHEMU	no	no	67	COX	yes	type II
28	CS	yes	type I	68	CGOV	yes	type III
29	STCS	no	no	69	CGOVD	yes	type III
30	XCOR	yes	type I	70	CGBOV	yes	type II
31	STXCOR	no	no	71	CFR	yes	type III
32	FETA	no	no	72	CFRD	yes	type III
33	RS	yes	type I	73	FNT	no	no
34	STRS	no	no	74	FNTEXC	yes	type I
35	RSB	no	no	75	NFA	yes	type I
36	RSG	no	no	76	NFB	yes	type I
37	THESAT	yes	type I	77	NFC	yes	type I
38	STTHESAT	yes	type I	78	EF	no	no
39	THESATB	no	type I	79	DTA	no	no

Effective length and width

$$L_{\rm EN} = 10^{-6} \tag{3.113}$$

$$W_{\rm EN} = 10^{-6} \tag{3.114}$$

$$\Delta L_{\rm PS} = \mathbf{LVARO} \cdot \left(1 + \mathbf{LVARL} \cdot \frac{L_{\rm EN}}{L} \right)$$
 (3.115)

$$\Delta W_{\rm OD} = \mathbf{WVARO} \cdot \left(1 + \mathbf{WVARW} \cdot \frac{W_{\rm EN}}{W_{\rm f}}\right)$$
(3.116)

$$L_{\rm E} = L - \Delta L = L + \Delta L_{\rm PS} - 2 \cdot \mathbf{LAP} \tag{3.117}$$

$$W_{\rm E} = W_{\rm f} - \Delta W = W_{\rm f} + \Delta W_{\rm OD} - 2 \cdot \mathbf{WOT}$$
(3.118)

$$L_{\rm E,CV} = L + \Delta L_{\rm PS} - 2 \cdot \mathbf{LAP} + \mathbf{DLQ}$$
(3.119)

$$W_{\text{E,CV}} = W_{\text{f}} + \Delta W_{\text{OD}} - 2 \cdot \mathbf{WOT} + \mathbf{DWQ}$$
 (3.120)

$$L_{G,CV} = L + \Delta L_{PS} + \mathbf{DLQ} \tag{3.121}$$

$$W_{G,CV} = W_f + \Delta W_{OD} + \mathbf{DWQ} \tag{3.122}$$

Note: If the calculated $L_{\rm E}$, $W_{\rm E}$, $L_{\rm E,CV}$, $W_{\rm E,CV}$, $L_{\rm G,CV}$, or $W_{\rm G,CV}$ is smaller than 1 nm (10⁻⁹ m), the value is clipped to this lower bound of 1 nm.

Process Parameters

$$\mathbf{VFB} = \mathbf{POVFB} + \mathbf{PLVFB} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWVFB} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWVFB} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.123)

 $\mathbf{STVFB} = \mathbf{POSTVFB} + \mathbf{PLSTVFB} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

+ PWSTVFB
$$\cdot \frac{W_{\text{EN}}}{W_{\text{E}}}$$
 + PLWSTVFB $\cdot \frac{L_{\text{EN}} \cdot W_{\text{EN}}}{L_{\text{E}} \cdot W_{\text{E}}}$ (3.124)

$$TOX = POTOX (3.125)$$

$$EPSROX = POEPSROX (3.126)$$

$$\mathbf{NEFF} = \mathbf{PONEFF} + \mathbf{PLNEFF} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWNEFF} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWNEFF} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.127)

 $\label{eq:facneffac} \mathbf{FACNEFFAC} = \mathbf{POFACNEFFAC} + \mathbf{PLFACNEFFAC} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

+ PWFACNEFFAC
$$\cdot \frac{W_{\text{EN}}}{W_{\text{E}}}$$
 + PLWFACNEFFAC $\cdot \frac{L_{\text{EN}} \cdot W_{\text{EN}}}{L_{\text{E}} \cdot W_{\text{E}}}$ (3.128)

 $\mathbf{GFACNUD} = \mathbf{POGFACNUD} + \mathbf{PLGFACNUD} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

+ PWGFACNUD ·
$$\frac{W_{\text{EN}}}{W_{\text{E}}}$$
 + PLWGFACNUD · $\frac{L_{\text{EN}} \cdot W_{\text{EN}}}{L_{\text{E}} \cdot W_{\text{E}}}$ (3.129)

$$VSBNUD = POVSBNUD (3.130)$$

$$DVSBNUD = PODVSBNUD (3.131)$$

$$VNSUB = POVNSUB$$
 (3.132)

$$NSLP = PONSLP \tag{3.133}$$

$$DNSUB = PODNSUB$$
 (3.134)

 $\mathbf{DPHIB} = \mathbf{PODPHIB} + \mathbf{PLDPHIB} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

$$+$$
 PWDPHIB $\cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} +$ **PLWDPHIB** $\cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$ (3.135)

 $\mathbf{DELVTAC} = \mathbf{PODELVTAC} + \mathbf{PLDELVTAC} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

$$+ \mathbf{PWDELVTAC} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWDELVTAC} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}} \quad (3.136)$$

$$\mathbf{NP} = \mathbf{PONP} + \mathbf{PLNP} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWNP} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWNP} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.137)

$$\mathbf{CT} = \mathbf{POCT} + \mathbf{PLCT} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWCT} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWCT} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.138)

$$TOXOV = POTOXOV (3.139)$$

$$TOXOVD = POTOXOVD (3.140)$$

$$\mathbf{NOV} = \mathbf{PONOV} + \mathbf{PLNOV} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWNOV} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWNOV} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.141)

$$\mathbf{NOVD} = \mathbf{PONOVD} + \mathbf{PLNOVD} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWNOVD} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWNOVD} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.142)

DIBL Parameters

$$\mathbf{CF} = \mathbf{POCF} + \mathbf{PLCF} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWCF} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWCF} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.143)

$$\mathbf{CFB} = \mathbf{POCFB} \tag{3.144}$$

Mobility Parameters

$$\begin{aligned} \mathbf{BETN} &= \frac{W_{\mathrm{E}}}{L_{\mathrm{E}}} \cdot \left(\mathbf{POBETN} + \mathbf{PLBETN} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} \right. \\ &+ \mathbf{PWBETN} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWBETN} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}} \right) \end{aligned} \tag{3.145}$$

(See Section 7.6.1 for an explanation of this binning rule.)

$$\mathbf{STBET} = \mathbf{POSTBET} + \mathbf{PLSTBET} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$$

+ PWSTBET
$$\cdot \frac{W_{\text{EN}}}{W_{\text{E}}}$$
 + PLWSTBET $\cdot \frac{L_{\text{EN}} \cdot W_{\text{EN}}}{L_{\text{E}} \cdot W_{\text{E}}}$ (3.146)

$$\mathbf{MUE} = \mathbf{POMUE} + \mathbf{PLMUE} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWMUE} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWMUE} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.147)

$$STMUE = POSTMUE \tag{3.148}$$

$$THEMU = POTHEMU (3.149)$$

$$\mathbf{STTHEMU} = \mathbf{POSTTHEMU} \tag{3.150}$$

$$\mathbf{CS} = \mathbf{POCS} + \mathbf{PLCS} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWCS} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWCS} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.151)

$$STCS = POSTCS (3.152)$$

$$\mathbf{XCOR} = \mathbf{POXCOR} + \mathbf{PLXCOR} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWXCOR} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWXCOR} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}} \quad (3.153)$$

$$STXCOR = POSTXCOR (3.154)$$

$$\mathbf{FETA} = \mathbf{POFETA} \tag{3.155}$$

Series Resistance Parameters

$$\mathbf{RS} = \mathbf{PORS} + \mathbf{PLRS} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWRS} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWRS} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.156)

$$STRS = POSTRS \tag{3.157}$$

$$\mathbf{RSB} = \mathbf{PORSB} \tag{3.158}$$

$$RSG = PORSG \tag{3.159}$$

Velocity Saturation Parameters

$$\mathbf{THESAT} = \mathbf{POTHESAT} + \mathbf{PLTHESAT} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$$

+ PWTHESAT ·
$$\frac{W_{\text{EN}}}{W_{\text{E}}}$$
 + PLWTHESAT · $\frac{L_{\text{EN}} \cdot W_{\text{EN}}}{L_{\text{E}} \cdot W_{\text{E}}}$ (3.160)

 $\mathbf{STTHESAT} = \mathbf{POSTTHESAT} + \mathbf{PLSTTHESAT} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{F}}}$

$$+ \, \mathbf{PWSTTHESAT} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWSTTHESAT} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}} \quad (3.161)$$

 $\mathbf{THESATB} = \mathbf{POTHESATB} + \mathbf{PLTHESATB} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

$$+ \mathbf{PWTHESATB} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWTHESATB} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}} \quad (3.162)$$

 $\mathbf{THESATG} = \mathbf{POTHESATG} + \mathbf{PLTHESATG} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

+ **PWTHESATG**
$$\cdot \frac{W_{\rm EN}}{W_{\rm E}}$$
 + **PLWTHESATG** $\cdot \frac{L_{\rm EN} \cdot W_{\rm EN}}{L_{\rm E} \cdot W_{\rm E}}$ (3.163)

Saturation Voltage Parameters

$$\mathbf{AX} = \mathbf{POAX} + \mathbf{PLAX} \cdot \frac{L_{\text{EN}}}{L_{\text{E}}} + \mathbf{PWAX} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} + \mathbf{PLWAX} \cdot \frac{L_{\text{EN}} \cdot W_{\text{EN}}}{L_{\text{E}} \cdot W_{\text{E}}}$$
(3.164)

Channel Length Modulation (CLM) Parameters

$$\mathbf{ALP} = \mathbf{POALP} + \mathbf{PLALP} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWALP} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWALP} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.165)

$$\mathbf{ALP1} = \mathbf{POALP1} + \mathbf{PLALP1} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWALP1} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWALP1} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.166)

$$\mathbf{ALP2} = \mathbf{POALP2} + \mathbf{PLALP2} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWALP2} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWALP2} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}} \tag{3.167}$$

$$\mathbf{VP} = \mathbf{POVP} \tag{3.168}$$

Impact Ionization (II) Parameters

$$\mathbf{A1} = \mathbf{POA1} + \mathbf{PLA1} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWA1} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWA1} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.169)

$$\mathbf{A2} = \mathbf{POA2} \tag{3.170}$$

$$STA2 = POSTA2 (3.171)$$

$$\mathbf{A3} = \mathbf{POA3} + \mathbf{PLA3} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWA3} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWA3} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.172)

$$\mathbf{A4} = \mathbf{POA4} + \mathbf{PLA4} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWA4} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWA4} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.173)

Gate Current Parameters

$$GCO = POGCO (3.174)$$

 $\mathbf{IGINV} = \mathbf{POIGINV} + \mathbf{PLIGINV} \cdot \frac{L_{\mathrm{E}}}{L_{\mathrm{EN}}}$

$$+ \mathbf{PWIGINV} \cdot \frac{W_{\mathrm{E}}}{W_{\mathrm{EN}}} + \mathbf{PLWIGINV} \cdot \frac{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}} \quad (3.175)$$

$$\mathbf{IGOV} = \mathbf{POIGOV} + \mathbf{PLIGOV} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWIGOV} \cdot \frac{W_{\mathrm{E}}}{W_{\mathrm{EN}}} + \mathbf{PLWIGOV} \cdot \frac{W_{\mathrm{E}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{EN}} \cdot L_{\mathrm{E}}}$$
(3.176)

 $\mathbf{IGOVD} = \mathbf{POIGOVD} + \mathbf{PLIGOVD} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

$$+ \mathbf{PWIGOVD} \cdot \frac{W_{\mathrm{E}}}{W_{\mathrm{EN}}} + \mathbf{PLWIGOVD} \cdot \frac{W_{\mathrm{E}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{EN}} \cdot L_{\mathrm{E}}} \quad (3.177)$$

$$STIG = POSTIG (3.178)$$

$$GC2 = POGC2 \tag{3.179}$$

$$GC3 = POGC3 \tag{3.180}$$

$$\mathbf{CHIB} = \mathbf{POCHIB} \tag{3.181}$$

Gate-Induced Drain Leakage (GIDL) Parameters

 $\mathbf{AGIDL} = \mathbf{POAGIDL} + \mathbf{PLAGIDL} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

$$+$$
 PWAGIDL $\cdot \frac{W_{\mathrm{E}}}{W_{\mathrm{EN}}}$ $+$ **PLWAGIDL** $\cdot \frac{W_{\mathrm{E}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{EN}} \cdot L_{\mathrm{E}}}$ (3.182)

 $\mathbf{AGIDLD} = \mathbf{POAGIDLD} + \mathbf{PLAGIDLD} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}$

$$+ \mathbf{PWAGIDLD} \cdot \frac{W_{\mathrm{E}}}{W_{\mathrm{EN}}} + \mathbf{PLWAGIDLD} \cdot \frac{W_{\mathrm{E}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{EN}} \cdot L_{\mathrm{E}}} \quad (3.183)$$

$$BGIDL = POBGIDL (3.184)$$

$$BGIDLD = POBGIDLD (3.185)$$

$$\mathbf{STBGIDL} = \mathbf{POSTBGIDL} \tag{3.186}$$

$$STBGIDLD = POSTBGIDLD (3.187)$$

$$CGIDL = POCGIDL (3.188)$$

$$CGIDLD = POCGIDLD (3.189)$$

Charge Model Parameters

$$\mathbf{COX} = \mathbf{POCOX} + \mathbf{PLCOX} \cdot \frac{L_{\mathrm{E,CV}}}{L_{\mathrm{EN}}} + \mathbf{PWCOX} \cdot \frac{W_{\mathrm{E,CV}}}{W_{\mathrm{EN}}} + \mathbf{PLWCOX} \cdot \frac{L_{\mathrm{E,CV}} \cdot W_{\mathrm{E,CV}}}{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}$$
(3.190)

$$\mathbf{CGOV} = \mathbf{POCGOV} + \mathbf{PLCGOV} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E.CV}}}$$

+ **PWCGOV** ·
$$\frac{W_{\text{E,CV}}}{W_{\text{EN}}}$$
 + **PLWCGOV** · $\frac{W_{\text{E,CV}} \cdot L_{\text{EN}}}{W_{\text{EN}} \cdot L_{\text{E,CV}}}$ (3.191)

$$\mathbf{CGOVD} = \mathbf{POCGOVD} + \mathbf{PLCGOVD} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E,CV}}}$$

$$+\operatorname{PWCGOVD} \cdot \frac{W_{\mathrm{E,CV}}}{W_{\mathrm{EN}}} + \operatorname{PLWCGOVD} \cdot \frac{W_{\mathrm{E,CV}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{EN}} \cdot L_{\mathrm{E,CV}}} \quad (3.192)$$

$$\mathbf{CGBOV} = \mathbf{POCGBOV} + \mathbf{PLCGBOV} \cdot \frac{L_{\mathrm{G,CV}}}{L_{\mathrm{EN}}}$$

$$+ \mathbf{PWCGBOV} \cdot \frac{W_{\mathrm{G,CV}}}{W_{\mathrm{EN}}} + \mathbf{PLWCGBOV} \cdot \frac{L_{\mathrm{G,CV}} \cdot W_{\mathrm{G,CV}}}{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}} \quad (3.193)$$

$$\mathbf{CFR} = \mathbf{POCFR} + \mathbf{PLCFR} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{G,CV}}} + \mathbf{PWCFR} \cdot \frac{W_{\mathrm{G,CV}}}{W_{\mathrm{EN}}} + \mathbf{PLWCFR} \cdot \frac{W_{\mathrm{G,CV}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{EN}} \cdot L_{\mathrm{G,CV}}}$$
(3.194)

$$\mathbf{CFRD} = \mathbf{POCFRD} + \mathbf{PLCFRD} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{G,CV}}} + \mathbf{PWCFRD} \cdot \frac{W_{\mathrm{G,CV}}}{W_{\mathrm{EN}}} + \mathbf{PLWCFRD} \cdot \frac{W_{\mathrm{G,CV}} \cdot L_{\mathrm{EN}}}{W_{\mathrm{EN}} \cdot L_{\mathrm{G,CV}}} (3.195)$$

Thermal Noise Model Parameters

$$\mathbf{FNT} = \mathbf{POFNT} \tag{3.196}$$

$$\mathbf{FNTEXC} = \left[\frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}\right]^2 \cdot \left(\mathbf{POFNTEXC} + \mathbf{PLFNTEXC} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}}\right)$$

+ **PWFNTEXC** ·
$$\frac{W_{\text{EN}}}{W_{\text{E}}}$$
 + **PLWFNTEXC** · $\frac{L_{\text{EN}} \cdot W_{\text{EN}}}{L_{\text{E}} \cdot W_{\text{E}}}$ (3.197)

Flicker Noise Model Parameters

$$\mathbf{NFA} = \mathbf{PONFA} + \mathbf{PLNFA} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWNFA} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWNFA} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.198)

$$\mathbf{NFB} = \mathbf{PONFB} + \mathbf{PLNFB} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWNFB} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWNFB} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.199)

$$\mathbf{NFC} = \mathbf{PONFC} + \mathbf{PLNFC} \cdot \frac{L_{\mathrm{EN}}}{L_{\mathrm{E}}} + \mathbf{PWNFC} \cdot \frac{W_{\mathrm{EN}}}{W_{\mathrm{E}}} + \mathbf{PLWNFC} \cdot \frac{L_{\mathrm{EN}} \cdot W_{\mathrm{EN}}}{L_{\mathrm{E}} \cdot W_{\mathrm{E}}}$$
(3.200)

$$\mathbf{EF} = \mathbf{POEF} \tag{3.201}$$

WPE parameters

$$K_{\rm vthowe} = \textbf{POKVTHOWE} + \textbf{PLKVTHOWE} \cdot \frac{L_{\rm EN}}{L_{\rm E}} + \textbf{PWKVTHOWE} \cdot \frac{W_{\rm EN}}{W_{\rm E}} \\ + \textbf{PLWKVTHOWE} \cdot \frac{L_{\rm EN} \cdot W_{\rm EN}}{L_{\rm E} \cdot W_{\rm E}} \quad (3.202)$$

$$\begin{split} K_{\text{uowe}} &= \textbf{POKUOWE} + \textbf{PLKUOWE} \cdot \frac{L_{\text{EN}}}{L_{\text{E}}} + \textbf{PWKUOWE} \cdot \frac{W_{\text{EN}}}{W_{\text{E}}} \\ &+ \textbf{PLWKUOWE} \cdot \frac{L_{\text{EN}} \cdot W_{\text{EN}}}{L_{\text{E}} \cdot W_{\text{E}}} \quad (3.203) \end{split}$$

Self heating parameters

(Also for SWGEO = 2, the geometrical scaling rules are used.)

$$\mathbf{RTH} = \mathbf{RTHO} + \frac{\mathbf{RTHW1}}{\mathbf{RTHW2} + \frac{W_{\mathrm{E}}}{W_{\mathrm{EN}}} \cdot \left[1 + \mathbf{RTHLW} \cdot \frac{L_{\mathrm{E}}}{L_{\mathrm{EN}}}\right]} \tag{3.204}$$

$$\mathbf{CTH} = \mathbf{CTHO} + \mathbf{CTHW1} \cdot \left\{ \mathbf{CTHW2} + \frac{W_{\mathrm{E}}}{W_{\mathrm{EN}}} \cdot \left[1 + \mathbf{CTHLW} \cdot \frac{L_{\mathrm{E}}}{L_{\mathrm{EN}}} \right] \right\}$$
(3.205)

$$\mathbf{STRTH} = \mathbf{STRTHO} \tag{3.206}$$

NQS parameters

(Also for SWGEO = 2, the geometrical scaling rules are used.)

$$MUNQS = MUNQSO (3.207)$$

3.4 Parasitic resistances

PSP model contains a network of parasitic elements: a gate resistance, two diffusion resistances for source and drain, and four bulk resistances. Note that the junction diodes are no longer directly connected to the bulk terminal of the intrinsic MOS-transistor. The complete circuit is shown in Fig. 3.2. At this moment, only the gate resistance is scaled with geometry (facilitating the implementation of multi-finger devices).

Note: The resistance equations are calculated when **SWGEO** = 1 or 2.

$$L_{\rm f} = L + \Delta L_{\rm PS} \tag{3.208}$$

$$L_{\rm sil,f} = L_{\rm f} + \mathbf{DLSIL} \tag{3.209}$$

$$W_{\rm E,f} = W_{\rm f} + \Delta W_{\rm OD} \tag{3.210}$$

$$X_{\text{GWE}} = \mathbf{XGW} - 0.5 \cdot \Delta W_{\text{OD}} \tag{3.211}$$

$$\mathbf{RG} = \mathbf{RGO} + \frac{1}{\mathbf{NF}} \cdot \left[\frac{\mathbf{RSHG} \cdot \left(\frac{W_{\mathrm{E,f}}}{3 \cdot \mathbf{NGCON}} + X_{\mathrm{GWE}} \right)}{\mathbf{NGCON} \cdot L_{\mathrm{sil,f}}} + \frac{\mathbf{RINT} + \mathbf{RVPOLY}}{W_{\mathrm{E,f}} \cdot L_{\mathrm{f}}} \right]$$
(3.212)

$$RSE = NRS \cdot RSH \tag{3.213}$$

$$RDE = NRD \cdot RSHD \tag{3.214}$$

$$\mathbf{RBULK} = \mathbf{RBULKO} \tag{3.215}$$

$$\mathbf{RWELL} = \mathbf{RWELLO} \tag{3.216}$$

$$RJUNS = RJUNSO (3.217)$$

$$RJUND = RJUNDO (3.218)$$

Note: The values of $L_{\rm f}$, $L_{\rm sil,f}$, $W_{\rm E,f}$ and $X_{\rm GWE}$ are clipped to a minimum value of 1 nm. The calculated local parameters are subject to the boundaries specified in Section 2.5.6.

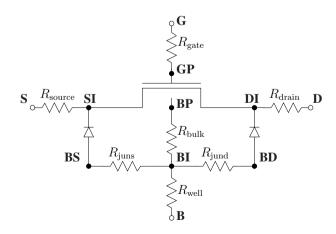


Figure 3.2: Parasitics circuit

3.5 Stress effects

The stress model of BSIM4.4.0 [3] has been adopted in PSP without any modifications, except for two changes: (1) in the original BSIM parameter names all zeros have been replaced by "O"s, in order to comply with PSP conventions and (2) the BSIM parameters *STK2* and *LODK2* are not available in PSP. Some trivial conversion of parameters BSIM→PSP is still necessary, see [2].

The local PSP parameters affected by the stress equations are BETN, THESAT, VFB, and CF.

Calculation of SA and SB for irregular layouts is given in Section B.1.

Note:

- After modification of the local parameters by the stress equations, clipping is applied according to Section 2.5.2.
- If both **SA** and **SB** are set to 0, the stress-equations are *not* computed.
- The stress equations are calculated when SWGEO = 1 or 2.

3.5.1 Layout effects for multi-finger devices

For multi-finger devices, effective values $SA_{\rm eff}$ and $SB_{\rm eff}$ for the instance parameters are calculated (see Fig. 3.3).

$$\frac{1}{\mathbf{SA}_{\text{eff}} + 0.5 \cdot L} = \frac{1}{\mathbf{NF}} \cdot \sum_{i=0}^{\mathbf{NF}-1} \frac{1}{\mathbf{SA} + 0.5 \cdot L + i \cdot (\mathbf{SD} + L)}$$
(3.219)

$$\frac{1}{\mathbf{SB}_{\text{eff}} + 0.5 \cdot L} = \frac{1}{\mathbf{NF}} \cdot \sum_{i=0}^{\mathbf{NF}-1} \frac{1}{\mathbf{SB} + 0.5 \cdot L + i \cdot (\mathbf{SD} + L)}$$
(3.220)

3.5.2 Layout effects for regular shapes

$$R_{\rm A} = \frac{1}{\mathbf{S}\mathbf{A}_{\rm eff} + 0.5 \cdot L} \tag{3.221}$$

$$R_{\rm B} = \frac{1}{\mathbf{SB}_{\rm eff} + 0.5 \cdot L} \tag{3.222}$$

$$R_{\text{A,ref}} = \frac{1}{\text{SAREF} + 0.5 \cdot L} \tag{3.223}$$

$$R_{\text{B,ref}} = \frac{1}{\text{SBREF} + 0.5 \cdot L} \tag{3.224}$$

3.5.3 Parameter modifications

Mobility-related equations

$$\begin{split} K_{\text{u0}} &= \left(1 + \frac{\textbf{LKUO}}{\left(L + \Delta L_{\text{PS}}\right)^{\textbf{LLODKUO}}} + \frac{\textbf{WKUO}}{\left(W_{\text{f}} + \Delta W_{\text{OD}} + \textbf{WLOD}\right)^{\textbf{WLODKUO}}} \right. \\ &\quad \left. + \frac{\textbf{PKUO}}{\left(L + \Delta L_{\text{PS}}\right)^{\textbf{LLODKUO}} \cdot \left(W_{\text{f}} + \Delta W_{\text{OD}} + \textbf{WLOD}\right)^{\textbf{WLODKUO}}} \right) \\ &\quad \left. \cdot \left[1 + \textbf{TKUO} \cdot \left(\frac{T_{\text{KA}}}{T_{\text{KR}}} - 1\right)\right] \quad (3.225) \end{split}$$

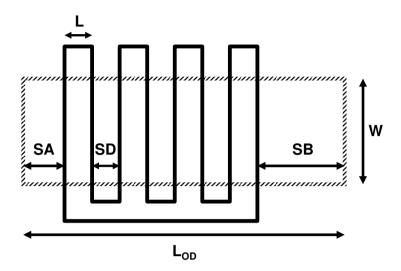


Figure 3.3: A typical layout of multi-finger devices with an additional instance parameters **SD**.

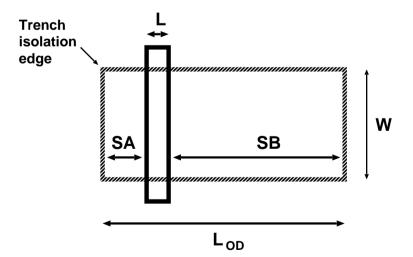


Figure 3.4: Typical layout of a MOSFET. Note that $L_{\rm OD} = {\bf SA} + {\bf SB} + L$, where OD is the active region definition.

$$\rho_{\beta} = \frac{\text{KUO}}{K_{\text{u0}}} \cdot (R_{\text{A}} + R_{\text{B}}) \tag{3.226}$$

$$\rho_{\beta,\text{ref}} = \frac{\text{KUO}}{K_{\text{u0}}} \cdot (R_{\text{A,ref}} + R_{\text{B,ref}}) \tag{3.227}$$

$$\mathbf{BETN} = \frac{1 + \rho_{\beta}}{1 + \rho_{\beta,\text{ref}}} \cdot \mathbf{BETN}_{\text{ref}}$$
(3.228)

$$\mathbf{THESAT} = \frac{1 + \rho_{\beta}}{1 + \rho_{\beta, ref}} \cdot \frac{1 + \mathbf{KVSAT} \cdot \rho_{\beta, ref}}{1 + \mathbf{KVSAT} \cdot \rho_{\beta}} \cdot \mathbf{THESAT}_{ref}$$
(3.229)

Threshold-voltage-related equations

$$\begin{split} K_{\text{vth0}} &= 1 + \frac{\textbf{LKVTHO}}{\left(L + \Delta L_{\text{PS}}\right)^{\textbf{LLODVTH}}} + \frac{\textbf{WKVTHO}}{\left(W_{\text{f}} + \Delta W_{\text{OD}} + \textbf{WLOD}\right)^{\textbf{WLODVTH}}} \\ &\quad + \frac{\textbf{PKVTHO}}{\left(L + \Delta L_{\text{PS}}\right)^{\textbf{LLODVTH}} \cdot \left(W_{\text{f}} + \Delta W_{\text{OD}} + \textbf{WLOD}\right)^{\textbf{WLODVTH}}} \end{split} \tag{3.230}$$

$$\Delta R = R_{\rm A} + R_{\rm B} - R_{\rm A,ref} - R_{\rm B,ref} \tag{3.231}$$

$$\mathbf{VFB} = \mathbf{VFB}_{\text{ref}} + \mathbf{KVTHO} \cdot \frac{\Delta R}{K_{\text{vth0}}}$$
(3.232)

$$\mathbf{CF} = \mathbf{CF}_{ref} + \mathbf{STETAO} \cdot \frac{\Delta R}{K_{\text{orb}0}^{\mathbf{LODETAO}}}$$
(3.233)

3.6 Well proximity effects

The well proximity effect (WPE) model from BSIM4.5.0 [4, 5, 6] has been adopted in PSP with two changes relative to BSIM4.5.0: (1) in the original BSIM parameter names all zeros have been replaced by 'O's in order to comply with PSP naming convention and (2) the BSIM parameter K2WE is not available in PSP. Except for some trivial conversion of parameters BSIM \rightarrow PSP [2], WPE parameters from BSIM can be used directly in PSP.

The local PSP parameters affected by the WPE equations are VFB and BETN.

How to calculate SCA, SCB, and SCC is shown in Section B.2.

Note:

- After modification of the local parameters by the WPE equations, clipping is applied according to Section 2.5.2.
- If SCA, SCB, SCC and SC are all set to 0, the WPE equations are *not* computed.
- The WPE equations are calculated when SWGEO = 1 or 2.

3.6.1 Parameters for pre-layout simulation

If SCA = SCB = SCC = 0 and SC > 0, SCA, SCB, and SCC will be computed from SC according to Eqs. (B.9)–(B.11), as shown below. Here, SC should be taken as the distance to the nearest well edge (see Fig. 3.5). If any of the parameters SCA, SCB, or SCC is positive, all three values as supplied will be used and SC will be ignored.

If SCA = SCB = SCC = 0 and SC > 0

$$\mathbf{SCA} = \frac{\mathbf{SCREF}^2}{W_{\mathrm{f}}} \cdot \left(\frac{1}{\mathbf{SC}} - \frac{1}{\mathbf{SC} + W_{\mathrm{f}}}\right)$$
(3.234)

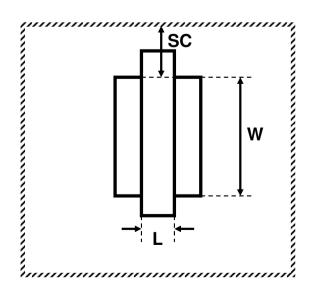


Figure 3.5: A layout of MOS devices for pre-layout simulation using estimated value for SC.

$$\mathbf{SCB} = \frac{1}{W_{\mathrm{f}} \cdot \mathbf{SCREF}} \cdot \left[\frac{\mathbf{SCREF}}{10} \cdot \mathbf{SC} \cdot \exp\left(-10 \cdot \frac{\mathbf{SC}}{\mathbf{SCREF}}\right) + \frac{\mathbf{SCREF}^2}{100} \cdot \exp\left(-10 \cdot \frac{\mathbf{SC}}{\mathbf{SCREF}}\right) - \frac{\mathbf{SCREF}}{10} \cdot (\mathbf{SC} + W_{\mathrm{f}}) \cdot \exp\left(-10 \cdot \frac{\mathbf{SC} + W_{\mathrm{f}}}{\mathbf{SCREF}}\right) - \frac{\mathbf{SCREF}^2}{100} \cdot \exp\left(-10 \cdot \frac{\mathbf{SC} + W_{\mathrm{f}}}{\mathbf{SCREF}}\right) \right] \quad (3.235)$$

$$\mathbf{SCC} = \frac{1}{W_{\mathrm{f}} \cdot \mathbf{SCREF}} \cdot \left[\frac{\mathbf{SCREF}}{20} \cdot \mathbf{SC} \cdot \exp\left(-20 \cdot \frac{\mathbf{SC}}{\mathbf{SCREF}}\right) + \frac{\mathbf{SCREF}^2}{400} \cdot \exp\left(-20 \cdot \frac{\mathbf{SC}}{\mathbf{SCREF}}\right) \right]$$

$$-\frac{\mathbf{SCREF}}{20} \cdot (\mathbf{SC} + W_{\mathrm{f}}) \cdot \exp\left(-20 \cdot \frac{\mathbf{SC} + W_{\mathrm{f}}}{\mathbf{SCREF}}\right)$$

$$-\frac{\mathbf{SCREF}^2}{400} \cdot \exp\left(-20 \cdot \frac{\mathbf{SC} + W_{\mathrm{f}}}{\mathbf{SCREF}}\right)$$
(3.236)

3.6.2 Calculation of parameter modifications

The calculation of K_{vthowe} and K_{uowe} is given in Section 3.2 (global model) or 3.3 (binning model).

$$VFB = VFB_{ref} + K_{vthowe} \cdot (SCA + WEB \cdot SCB + WEC \cdot SCC)$$
(3.237)


$$BETN = BETN_{ref} \cdot [1 + K_{uowe} \cdot (SCA + WEB \cdot SCB + WEC \cdot SCC)]$$
(3.238)

3.7 Asymmetric junctions

From PSP 102.3 onwards, asymmetric junction can be modeled in PSP. This includes asymmetric source-bulk and drain-bulk junctions, GIDL/GISL, overlap gate currents, overlap capacitances and outer fringe capacitances. The asymmetric junction model can be switched on by means of the parameter SWJUNASYM. Note that if SWJUNASYM = 1, the new parameters for the drain side are used all together. Those whose values are not explicitly specified in the model card are set to their default value, *not* to their counterparts for the source side. In other words, it is not possible to activate the parameters for the drain side on a one-by-one basis. The physical scaling and binning rules to calculate the related local parameters for the drain side are given in Section 3.2 and 3.3.

If **SWJUNASYM** = 0, the related parameters for the drain side are ignored. Effectively, the following assignments are applied before evaluation of the calculations described in Section 4.

If SWJUNASYM = 0:

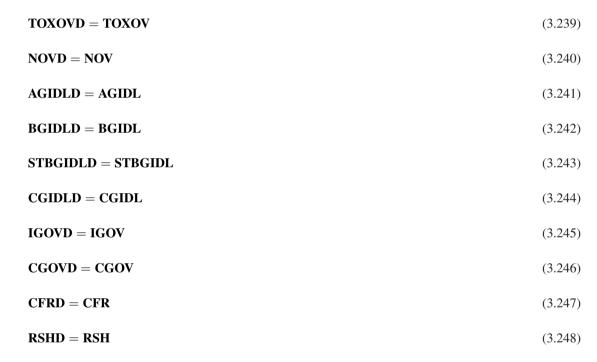

Section 4

PSP Model Equations

4.1 Internal Parameters (including Temperature Scaling)

In this section, bias-independent internal parameters will be calculated, including temperature scaling. These parameters are computed from local parameters. Local parameters are (as usual) denoted by capital characters in bold font, whereas the internal parameters are denoted by symbols in bold font.

Transistor temperature

$$T_{\rm KR} = T_0 + \mathbf{TR} \tag{4.1}$$

$$T_{KA} = T_0 + T_A + \mathbf{DTA} \tag{4.2}$$

$$T_{\rm KD} = T_{\rm KA} + V_{\rm dt} \tag{4.3}$$

$$\Delta T = T_{\rm KD} - T_{\rm KR} \tag{4.4}$$

$$\Delta T_{\rm A} = T_{\rm KA} - T_{\rm KR} \tag{4.5}$$

$$\phi_{\mathbf{T}} = \frac{k_{\mathbf{B}} \cdot T_{\mathbf{KD}}}{q} \tag{4.6}$$

$$\phi_{\mathbf{T}_{\mathbf{A}}} = \frac{k_{\mathbf{B}} \cdot T_{\mathbf{K}\mathbf{A}}}{q} \tag{4.7}$$

Local process parameters

$$\phi_{\mathbf{T}}^* = \phi_{\mathbf{T}} \cdot \left(1 + \mathbf{CT} \cdot \frac{T_{KR}}{T_{KD}} \right) \tag{4.8}$$

$$V_{FB} = VFB + STVFB \cdot \Delta T + DELVTO$$
(4.9)

$$E_{\rm g}/q = 1.179 - 9.025 \cdot 10^{-5} \cdot T_{\rm KD} - 3.05 \cdot 10^{-7} \cdot T_{\rm KD}^{2}$$
 (4.10)

$$r_{\rm T} = (1.045 + 4.5 \cdot 10^{-4} \cdot T_{\rm KD}) \cdot (0.523 + 1.4 \cdot 10^{-3} \cdot T_{\rm KD} - 1.48 \cdot 10^{-6} \cdot T_{\rm KD}^{2})$$
(4.11)

$$n_{\rm i} = 2.5 \cdot 10^{25} \cdot r_{\rm T}^{3/4} \cdot (T_{\rm KD}/300)^{3/2} \cdot \exp\left(-\frac{E_{\rm g}/q}{2 \cdot \phi_{\rm T}}\right)$$
 (4.12)

$$\phi_{\mathrm{B,dc}}^{\mathrm{cl}} = \mathrm{MAX} \left(\mathbf{DPHIB} + 2 \cdot \phi_{\mathbf{T}} \cdot \ln \left[\mathbf{NEFF} / n_{i} \right], 0.05 \right)$$

$$(4.13)$$

$$N_{\text{eff,ac}} = \text{MIN}[\text{MAX}(\textbf{FACNEFFAC} \cdot \textbf{NEFF}, 10^{20}), 10^{26}]$$
(4.14)

$$\phi_{\mathrm{B,ac}}^{\mathrm{cl}} = \mathrm{MAX} \left(\mathbf{DPHIB} + \mathbf{DELVTAC} + 2 \cdot \phi_{\mathbf{T}} \cdot \ln \left[N_{\mathrm{eff,ac}} / n_{\mathrm{i}} \right], \ 0.05 \right) \tag{4.15}$$

$$\epsilon_{\text{ox}} = \mathbf{EPSROX} \cdot \epsilon_0 \tag{4.16}$$

$$C_{\rm ox} = \epsilon_{\rm ox}/{\rm TOX}$$
 (4.17)

$$\epsilon_{\rm Si} = \epsilon_{\rm r,Si} \cdot \epsilon_0 \tag{4.18}$$

$$\gamma_{0,\mathrm{dc}} = \sqrt{2 \cdot q \cdot \epsilon_{\mathrm{Si}} \cdot \mathbf{NEFF}} / C_{\mathrm{ox}}$$
 (4.19)

$$\gamma_{0,\mathrm{ac}} = \sqrt{2 \cdot q \cdot \epsilon_{\mathrm{Si}} \cdot N_{\mathrm{eff,ac}}} / C_{\mathrm{ox}}$$
(4.20)

$$G_{0,\mathrm{dc}}^{\mathrm{cl}} = \gamma_{0,\mathrm{dc}} / \sqrt{\phi_{\mathrm{T}}} \tag{4.21}$$

$$G_{0,\mathrm{ac}}^{\mathrm{cl}} = \gamma_{0,\mathrm{ac}} / \sqrt{\phi_{\mathrm{T}}} \tag{4.22}$$

Polysilicon depletion parameter

$$\mathbf{k_{P}} = \begin{cases} \text{if } \mathbf{NP} = 0 & \left\{ \mathbf{k_{P}} = 0 \\ \\ \text{if } \mathbf{NP} > 0 & \left\{ \begin{array}{l} \text{NP}_{1} = \text{MAX}(\mathbf{NP}, 8 \cdot 10^{7} / \mathbf{TOX}^{2}) \\ \\ \text{NP}_{2} = \text{MAX}(\text{NP}_{1}, 5 \cdot 10^{24}) \\ \\ \mathbf{k_{P}} = 2 \cdot \phi_{\mathbf{T}} \cdot C_{\text{ox}}^{2} / (q \cdot \epsilon_{\text{Si}} \cdot \text{NP}_{2}) \end{array} \right.$$

$$(4.23)$$

Quantum-mechanical correction parameters

$$q_{\lim} = 10 \cdot \phi_{\mathrm{T}} \tag{4.24}$$

$$\boldsymbol{q_{\mathbf{q}}} = \left\{ \begin{array}{l} 0.4 \cdot \mathbf{QMC} \cdot Q\boldsymbol{M}_{\mathrm{N}} \cdot \boldsymbol{C}_{\mathrm{ox}}^{2/3} & \text{for NMOS} \\ \\ 0.4 \cdot \mathbf{QMC} \cdot Q\boldsymbol{M}_{\mathrm{P}} \cdot \boldsymbol{C}_{\mathrm{ox}}^{2/3} & \text{for PMOS} \end{array} \right. \tag{4.25}$$

$$q_{\rm b0,dc} = \gamma_{\rm 0,dc} \cdot \sqrt{\phi_{\rm B,dc}^{\rm cl}} \tag{4.26}$$

$$q_{\rm b0,ac} = \gamma_{\rm 0,ac} \cdot \sqrt{\phi_{\rm B,ac}^{\rm cl}} \tag{4.27}$$

$$\phi_{\mathbf{B}, dc} = \phi_{\mathbf{B}, dc}^{cl} + 0.75 \cdot \mathbf{q_q} \cdot q_{b0, dc}^{2/3}$$
(4.28)

$$\phi_{\mathbf{B}, ac} = \phi_{B, ac}^{cl} + 0.75 \cdot \mathbf{q_q} \cdot q_{b0, ac}^{2/3}$$
 (4.29)

$$\boldsymbol{G}_{0,\mathrm{dc}} = G_{0,\mathrm{dc}}^{\mathrm{cl}} \cdot \left(1 + \boldsymbol{q}_{\mathbf{q}} \cdot q_{\mathrm{b0,dc}}^{-1/3} \right) \tag{4.30}$$

$$G_{0,\mathrm{ac}} = G_{0,\mathrm{ac}}^{\mathrm{cl}} \cdot \left(1 + q_{\mathbf{q}} \cdot q_{\mathrm{b0,ac}}^{-1/3}\right) \tag{4.31}$$

$V_{\mathrm{SB}} ext{-clipping parameters}$

$$\phi_{\mathbf{X},\mathrm{dc}} = 0.95 \cdot \phi_{\mathbf{B},\mathrm{dc}} \tag{4.32}$$

$$\phi_{\mathbf{X}.\mathrm{ac}} = 0.95 \cdot \phi_{\mathbf{B}.\mathrm{ac}} \tag{4.33}$$

$$\boldsymbol{a}_{\phi,\mathrm{dc}} = 2.5 \cdot 10^{-3} \cdot \phi_{\mathbf{B},\mathrm{dc}}^2 \tag{4.34}$$

$$\boldsymbol{a}_{\phi,\mathrm{ac}} = 2.5 \cdot 10^{-3} \cdot \boldsymbol{\phi}_{\mathbf{B},\mathrm{ac}}^2 \tag{4.35}$$

$$b_{\phi, dc} = 2.5 \cdot 10^{-3} \cdot \phi_{\mathbf{B}, dc}^2$$
 (4.36)

$$\boldsymbol{b}_{\phi, ac} = 2.5 \cdot 10^{-3} \cdot \phi_{\mathbf{B} \, ac}^2 \tag{4.37}$$

$$\phi_{\mathbf{X},\mathrm{dc}}^{\star} = 0.5 \cdot \sqrt{b_{\phi,\mathrm{dc}}} \tag{4.38}$$

$$\phi_{\mathbf{X},\mathrm{ac}}^{\star} = 0.5 \cdot \sqrt{b_{\phi,\mathrm{ac}}} \tag{4.39}$$

$$\phi_{\mathbf{X},dc}^* = \text{MINA} \left(\phi_{\mathbf{X},dc} - \phi_{\mathbf{X},dc}^{\star}, 0, \mathbf{a}_{\phi,dc} \right)$$
(4.40)

$$\phi_{\mathbf{X},ac}^* = \text{MINA} \left(\phi_{\mathbf{X},ac} - \phi_{\mathbf{X},ac}^{\star}, 0, \mathbf{a}_{\phi,ac} \right)$$
(4.41)

NUD parameters

$$\mathbf{u_{s1}} = \sqrt{\mathbf{VSBNUD} + \phi_{\mathbf{B}}} - \sqrt{\phi_{\mathbf{B}}} \tag{4.42}$$

$$\mathbf{u_{s21}} = \sqrt{\mathbf{DVSBNUD} + \phi_{\mathbf{B}}} - \sqrt{\phi_{\mathbf{B}}} - \mathbf{u_{s1}} \tag{4.43}$$

Local process parameters in gate overlap regions

$$\gamma_{\rm ov} = \sqrt{2 \cdot q \cdot \epsilon_{\rm Si} \cdot \text{NOV}} \cdot \text{TOXOV} / \epsilon_{\rm ox}$$
 (4.44)

$$\gamma_{\text{dov}} = \sqrt{2 \cdot q \cdot \epsilon_{\text{Si}} \cdot \text{NOVD}} \cdot \text{TOXOVD} / \epsilon_{\text{ox}}$$
(4.45)

$$G_{\rm ov} = \gamma_{\rm ov} / \sqrt{\phi_{\rm T}} \tag{4.46}$$

$$G_{
m dov} = \gamma_{
m dov} / \sqrt{\phi_{
m T}}$$
 (4.47)

$$\varepsilon_{\text{ov}} = 3.1 \cdot G_{\text{ov}} + 8.5 \tag{4.48}$$

$$a_{ov} = \begin{cases} 64/G_{ov} & \text{for } 1/G_{ov} < 0.06 \\ 22/G_{ov} + 3 & \text{for } 0.06 \le 1/G_{ov} \le 0.45 \\ -7.2/G_{ov} + 15.5 & \text{for } 0.45 < 1/G_{ov} \le 1.6 \end{cases}$$

$$G_{ov} & \text{for } 1/G_{ov} > 1.6$$

$$(4.49)$$

$$\delta_{\text{ov}} = \frac{\varepsilon_{\text{ov}}}{2} + \frac{G_{\text{ov}}^2}{2} - G_{\text{ov}} \cdot \sqrt{\frac{\varepsilon_{\text{ov}}}{2} + \frac{G_{\text{ov}}^2}{4} + a_{\text{ov}}}$$
(4.50)

$$\varepsilon_{\text{dov}} = 3.1 \cdot G_{\text{dov}} + 8.5 \tag{4.51}$$

$$a_{\text{dov}} = \begin{cases} 64/G_{\text{dov}} & \text{for } 1/G_{\text{dov}} < 0.06 \\ 22/G_{\text{dov}} + 3 & \text{for } 0.06 \le 1/G_{\text{dov}} \le 0.45 \\ -7.2/G_{\text{dov}} + 15.5 & \text{for } 0.45 < 1/G_{\text{dov}} \le 1.6 \end{cases}$$

$$(4.52)$$

$$G_{\text{dov}} \qquad \text{for } 1/G_{\text{dov}} > 1.6$$

$$\delta_{\text{dov}} = \frac{\varepsilon_{\text{dov}}}{2} + \frac{G_{\text{dov}}^2}{2} - G_{\text{dov}} \cdot \sqrt{\frac{\varepsilon_{\text{dov}}}{2} + \frac{G_{\text{dov}}^2}{4} + a_{\text{dov}}}$$
(4.53)

Mobility parameters

$$\beta = \text{FACTUO} \cdot \text{BETN} \cdot C_{\text{ox}} \cdot (T_{\text{KR}}/T_{\text{KD}})^{\text{STBET}}$$
(4.54)

$$\theta_{\mu} = \text{THEMU} \cdot (T_{\text{KR}}/T_{\text{KD}})^{\text{STTHEMU}}$$
 (4.55)

$$\mu_{\rm E} = {\rm MUE} \cdot (T_{\rm KR}/T_{\rm KD})^{\rm STMUE} \tag{4.56}$$

$$X_{\text{cor}} = \text{XCOR} \cdot (T_{\text{KR}}/T_{\text{KD}})^{\text{STXCOR}}$$
 (4.57)

$$C_{S} = CS \cdot (T_{KR}/T_{KD})^{STCS}$$
(4.58)

$$E_{\text{eff0}} = 10^{-8} \cdot C_{\text{ox}} / \epsilon_{\text{Si}} \tag{4.59}$$

$$\eta_{\mu} = \begin{cases} 1/2 \cdot \mathbf{FETA} & \text{for NMOS} \\ \\ 1/3 \cdot \mathbf{FETA} & \text{for PMOS} \end{cases}$$
 (4.60)

$$\eta_{\mu,\mathrm{ac}} = \begin{cases}
1/2 & \text{for NMOS} \\
1/3 & \text{for PMOS}
\end{cases}$$
(4.61)

Series resistance parameter

$$R_{\rm s} = \mathbf{RS} \cdot (T_{\rm KR}/T_{\rm KD})^{\mathbf{STRS}} \tag{4.62}$$

$$\theta_{\mathbf{R}} = 2 \cdot \beta \cdot R_{\mathbf{s}} \tag{4.63}$$

Velocity saturation parameter

$$\theta_{\text{sat}} = \text{THESAT} \cdot (T_{\text{KR}}/T_{\text{KD}})^{\text{STTHESAT}}$$
 (4.64)

Impact-ionization parameter

$$a_2 = \mathbf{A2} \cdot (T_{\mathrm{KD}}/T_{\mathrm{KR}})^{\mathbf{STA2}} \tag{4.65}$$

Gate current parameters

$$I_{\text{GINV}} = \text{IGINV} \cdot (T_{\text{KA}}/T_{\text{KR}})^{\text{STIG}}$$
 (4.66)

$$I_{\text{GOV}} = \text{IGOV} \cdot (T_{\text{KA}}/T_{\text{KR}})^{\text{STIG}}$$
 (4.67)

$$I_{\text{GOVD}} = \text{IGOVD} \cdot (T_{\text{KA}}/T_{\text{KR}})^{\text{STIG}}$$
 (4.68)

$$\boldsymbol{B} = \frac{4}{3} \cdot \frac{\mathbf{TOX}}{\hbar} \cdot \sqrt{2 \cdot q \cdot m_0 \cdot \mathbf{CHIB}} = 6.830909 \cdot 10^9 \cdot \mathbf{TOX} \cdot \sqrt{\mathbf{CHIB}}$$
(4.69)

$$B_{ov} = B \cdot TOXOV/TOX \tag{4.70}$$

$$B_{\text{ovd}} = B \cdot \text{TOXOVD/TOX} \tag{4.71}$$

$$GC_{\mathbf{Q}} = \begin{cases} -0.99 \cdot \frac{\mathbf{GC2}}{2 \cdot \mathbf{GC3}} & \text{for } \mathbf{GC3} < 0 \\ 0 & \text{for } \mathbf{GC3} \ge 0 \end{cases}$$

$$(4.72)$$

$$\alpha_{\mathbf{b}} = \frac{E_{\mathbf{g}}/q + \phi_{\mathbf{B}}}{2} \tag{4.73}$$

$$D_{\rm ch} = \mathbf{GCO} \cdot \phi_{\rm T}^* \tag{4.74}$$

$$D_{\text{ov}} = \text{GCO} \cdot \phi_{\text{T}_{\text{A}}} \tag{4.75}$$

Gate-induced drain leakage parameters

$$A_{GIDL} = AGIDL \cdot \left(\frac{2 \cdot 10^{-9}}{TOXOV}\right)^2$$
 (4.76)

$$\mathbf{A_{GIDLD}} = \mathbf{AGIDLD} \cdot \left(\frac{2 \cdot 10^{-9}}{\mathbf{TOXOVD}}\right)^{2} \tag{4.77}$$

$$\boldsymbol{B_{\text{GIDL}}} = \mathbf{BGIDL} \cdot \text{MAX} \left(\left[1 + \mathbf{STBGIDL} \cdot \Delta T_{\text{A}} \right], 0 \right) \cdot \left(\frac{\mathbf{TOXOV}}{2 \cdot 10^{-9}} \right)$$
(4.78)

$$\boldsymbol{B_{\text{GIDLD}}} = \mathbf{BGIDLD} \cdot \text{MAX} \left(\left[1 + \mathbf{STBGIDLD} \cdot \Delta T_{\text{A}} \right], 0 \right) \cdot \left(\frac{\mathbf{TOXOVD}}{2 \cdot 10^{-9}} \right)$$
(4.79)

Self heating

$$R_{\text{TH}} = \text{RTH} \cdot \left(\frac{T_{\text{KA}}}{T_{\text{KR}}}\right)^{\text{STRTH}}$$
 (4.80)

Noise parameter

$$N_{\rm T} = FNT \cdot 4 \cdot k_{\rm B} \cdot T_{\rm KD} \tag{4.81}$$

Additional internal parameters

$$x_1 = 1.25$$
 (4.82)

4.2 Current Model

In this section, the current model equations of the PSP-model are given. Use is made of the applied terminal bias values $V_{\rm GS}$, $V_{\rm DS}$ and $V_{\rm SB}$, the local parameters listed in Section 2.5.2 and the internal parameters introduced in Section 4.1. Local parameters are denoted by capital characters in bold font, whereas internal (bias-independent) parameters are denoted by symbols in bold font.

The definitions of the auxiliary functions MINA(.), MAXA(.), $\chi(.)$ and $\sigma_{1,2}(.)$ can be found in Appendix A.

Depending on the value of the parameters **SWNUD** and **SWDELVTAC**, the surface potential (at source- and drain-side of the channel) and associated computations, i.e., Eqs. (4.94)–(4.185), may be evaluated twice: once for the dc-characteristics and a second time for the ac-characteristics of the model. Details are given below.

4.2.1 Conditioning of Terminal Voltages

$$V_{\rm dsx} = \sqrt{V_{\rm DS}^2 + 0.01 - 0.1} \tag{4.83}$$

$$\phi_{V,dc} = MINA (V_{SB}, V_{SB} + V_{DS}, \boldsymbol{b}_{\phi,dc}) + \phi_{\mathbf{X},dc}$$

$$(4.84)$$

$$\phi_{V,ac} = MINA(V_{SB}, V_{SB} + V_{DS}, \boldsymbol{b}_{\phi,ac}) + \phi_{X.ac}$$

$$(4.85)$$

$$V_{\text{SB,dc}}^* = V_{\text{SB}} - \text{MINA} \left(\phi_{\text{V}}, 0, \boldsymbol{a}_{\boldsymbol{\phi}, \text{dc}}\right) + \boldsymbol{\phi}_{\mathbf{X}, \text{dc}}^*$$

$$(4.86)$$

$$V_{\mathrm{SB,ac}}^* = V_{\mathrm{SB}} - \mathrm{MINA}\left(\phi_{\mathrm{V}}, 0, \boldsymbol{a}_{\phi,\mathrm{ac}}\right) + \boldsymbol{\phi}_{\mathbf{X},\mathrm{ac}}^* \tag{4.87}$$

Nonuniform doping effect. Eqs. (4.88)–(4.93) are only evaluated when **SWNUD** \neq 0 and **GFACNUD** \neq 1:

$$V_{\rm mB} = V_{\rm SB}^* + 0.5 \cdot (V_{\rm DS} - V_{\rm dsx}) \tag{4.88}$$

$$u_{\rm s} = \sqrt{V_{\rm mB} + \phi_{\rm B}} - \sqrt{\phi_{\rm B}} \tag{4.89}$$

$$p = 2 \cdot \frac{u_{\mathbf{s}} - \mathbf{u_{\mathbf{s}1}}}{\mathbf{u_{\mathbf{s}21}}} - 1 \tag{4.90}$$

$$u_{\text{s,nud}} = u_{\text{s}} - 0.25 \cdot (1 - \text{GFACNUD}) \cdot \mathbf{u_{s21}} \cdot \left\{ p + \sqrt{p^2 + [\ln(2)]^2} \right\}$$
 (4.91)

$$V_{\rm mB,nud} = \left(u_{\rm s,nud} + 2 \cdot \sqrt{\phi_{\rm B}}\right) \cdot u_{\rm s,nud}$$
 (4.92)

$$V_{\rm SB,dc}^* = V_{\rm mB,nud} - 0.5 \cdot (V_{\rm DS} - V_{\rm dsx})$$
 (4.93)

The surface potential (at source- and drain-side of the channel) and associated computations, i.e., Eqs. (4.94)–(4.185), are evaluated using $V_{\rm SB}^* = V_{\rm SB,dc}^*$, $\phi_{\bf B} = \phi_{\bf B,dc}$, and $G_{\bf 0} = G_{\bf 0,dc}$.

If **SWNUD** = 1 or **SWDELVTAC** = 1, Eqs. (4.94)–(4.185) are evaluated a second time using $V_{\rm SB}^* = V_{\rm SB,ac}^*$, $\phi_{\rm B} = \phi_{\rm B,ac}$, and $G_0 = G_{\rm 0,ac}$.

$$V_{\rm DB}^* = V_{\rm DS} + V_{\rm SB}^* \tag{4.94}$$

$$V_{\rm sbx} = V_{\rm SB}^* + \frac{V_{\rm DS} - V_{\rm dsx}}{2}$$
 (4.95)

Drain-induced barrier lowering:

$$\Delta V_{\rm G} = \mathbf{CF} \cdot V_{\rm dsx} \cdot (1 + \mathbf{CFB} \cdot V_{\rm sbx}) \tag{4.96}$$

$$V_{\rm GB}^* = V_{\rm GS} + V_{\rm SB}^* + \Delta V_{\rm G} - V_{\rm FB} \tag{4.97}$$

$$x_{\rm g} = V_{\rm GB}^* / \phi_{\rm T}^* \tag{4.98}$$

4.2.2 Bias-Dependent Body Factor

$$D_{\text{nsub}} = \mathbf{DNSUB} \cdot \text{MAXA} (0, V_{\text{GS}} + V_{\text{SB}} - \mathbf{VNSUB}, \mathbf{NSLP})$$
(4.99)

$$G = G_0 \cdot \sqrt{1 + D_{\text{nsub}}} \tag{4.100}$$

4.2.3 Surface Potential at Source Side and Related Variables

$$\xi = 1 + G/\sqrt{2} \tag{4.101}$$

$$x_{\rm ns} = \frac{\phi_{\rm B} + V_{\rm SB}^*}{\phi_{\rm T}^*} \tag{4.102}$$

$$\Delta_{\rm ns} = \exp\left(-x_{\rm ns}\right) \tag{4.103}$$

$$x_{\rm mrg} = 10^{-5} \cdot \xi \tag{4.104}$$

$$\begin{cases} y_{\rm g} = -x_{\rm g} \\ z = 1.25 \cdot y_{\rm g}/\xi \\ \eta = \left[z + 10 - \sqrt{(z - 6)^2 + 64}\right]/2 \\ a = (y_{\rm g} - \eta)^2 + G^2 \cdot (\eta + 1) \\ c = 2 \cdot (y_{\rm g} - \eta) - G^2 \\ \tau = -\eta + \ln\left(a/G^2\right) \\ y_0 = \sigma_1(a, c, \tau, \eta) \\ \Delta_0 = \exp\left(y_0\right) \\ p = 2 \cdot (y_{\rm g} - y_0) + G^2 \cdot \left[\Delta_0 - 1 + \Delta_{\rm ns} \cdot (1 - \chi'(y_0) - 1/\Delta_0)\right] \\ q = (y_{\rm g} - y_0)^2 + G^2 \cdot \left[y_0 - \Delta_0 + 1 + \Delta_{\rm ns} \cdot (1 + \chi(y_0) - 1/\Delta_0 - 2 \cdot y_0)\right] \\ x_{\rm s} = -y_0 - \frac{2 \cdot q}{p + \sqrt{p^2 - 2 \cdot q \cdot \{2 - G^2 \cdot [\Delta_0 + \Delta_{\rm ns} \cdot (1/\Delta_0 - \chi''(y_0))]\}}} \end{cases}$$

$$(4.105)$$

if
$$|x_{\rm g}| \le x_{\rm mrg} \left\{ x_{\rm s} = \frac{x_{\rm g}}{\xi} \cdot \left[1 + G \cdot x_{\rm g} \cdot \frac{1 - \Delta_{\rm ns}}{\xi^2 \cdot 6 \cdot \sqrt{2}} \right] \right.$$
 (4.106)

$$\begin{cases} \hat{x}_{\text{g1}} = x_1 + G \cdot \sqrt{\exp(-x_1) + x_1 - 1} \\ \bar{x} = \frac{x_g}{\xi} \cdot \left[1 + x_g \cdot (\xi \cdot x_1 - \hat{x}_{\text{g1}}) / \hat{x}_{\text{g1}}^2 \right] \\ x_0 = x_g + G^2 / 2 - G \cdot \sqrt{x_g + G^2 / 4 - 1 + \exp(-\bar{x})} \\ b_x = x_{\text{ns}} + 3 \\ \eta = \text{MINA}(x_0, b_x, 5) - \left(b_x - \sqrt{b_x^2 + 5} \right) / 2 \\ a = (x_g - \eta)^2 - G^2 \cdot \left[\exp(-\eta) + \eta - 1 - \Delta_{\text{ns}} \cdot (\eta + 1 + \chi(\eta)) \right] \\ b = 1 - G^2 / 2 \cdot \left[\exp(-\eta) - \Delta_{\text{ns}} \cdot \chi''(\eta) \right] \\ c = 2 \cdot (x_g - \eta) + G^2 \cdot \left[1 - \exp(-\eta) - \Delta_{\text{ns}} \cdot (1 + \chi'(\eta)) \right] \\ \tau = x_{\text{ns}} - \eta + \ln\left(a/G^2\right) \\ y_0 = \sigma_2(a, b, c, \tau, \eta) \\ \Delta_0 = \exp\left(y_0\right) \\ p = 2 \cdot (x_g - y_0) + G^2 \cdot \left[1 - 1/\Delta_0 + \Delta_{\text{ns}} \cdot (\Delta_0 - 1 - \chi'(y_0)) \right] \\ q = (x_g - y_0)^2 - G^2 \cdot \left[y_0 + 1/\Delta_0 - 1 + \Delta_{\text{ns}} \cdot (\Delta_0 - y_0 - 1 - \chi(y_0)) \right] \\ x_s = y_0 + \frac{2 \cdot \eta}{p + \sqrt{p^2 - 2 \cdot q \cdot \{2 - G^2 \cdot [1/\Delta_0 + \Delta_{\text{ns}} \cdot (\Delta_0 - \chi''(y_0))]\}} \\ \text{Eqs. (4.108)-(4.110) are only calculated for } x_g > 0. \end{cases}$$

Eqs. (4.108)-(4.110) are only calculated for $x_{\rm g}>0$

$$E_{\rm s} = \exp\left(-x_{\rm s}\right) \tag{4.108}$$

$$D_{s} = [1/E_{s} - x_{s} - 1 - \chi(x_{s})] \cdot \Delta_{ns}$$

$$P_{s} = x_{s} - 1 + E_{s}$$
(4.109)

$$P_{s} = x_{s} - 1 + E_{s} \tag{4.110}$$

$$x_{\rm gs} = \begin{cases} x_{\rm g} - x_{\rm s} & \text{for } x_{\rm g} \le 0 \\ G \cdot \sqrt{D_{\rm s} + P_{\rm s}} & \text{for } x_{\rm g} > 0 \end{cases}$$

$$(4.111)$$

$$\psi_{\rm ss} = \phi_{\rm T}^* \cdot x_{\rm s} \tag{4.112}$$

4.2.4 Drain Saturation Voltage

Eqs. (4.113)-(4.133) are only calculated for $x_{\rm g}>0$.

$$q_{\rm is} = \frac{G^2 \cdot \phi_{\rm T}^* \cdot D_{\rm s}}{x_{\rm gs} + G \cdot \sqrt{P_{\rm s}}} \tag{4.113}$$

$$\alpha_{\rm s} = 1 + \frac{G \cdot (1 - E_{\rm s})}{2 \cdot \sqrt{P_{\rm s}}} \tag{4.114}$$

$$q_{\rm bs} = \phi_{\rm T}^* \cdot G \cdot \sqrt{P_{\rm s}} \tag{4.115}$$

$$\rho_{\rm b} = \begin{cases} 1 + \mathbf{RSB} \cdot V_{\rm sbx} & \text{for } \mathbf{RSB} \ge 0 \\ \frac{1}{1 - \mathbf{RSB} \cdot V_{\rm sbx}} & \text{for } \mathbf{RSB} < 0 \end{cases}$$

$$(4.116)$$

$$\rho_{g,s} = \begin{cases} \frac{1}{1 + \mathbf{RSG} \cdot q_{is}} & \text{for } \mathbf{RSG} \ge 0\\ 1 - \mathbf{RSG} \cdot q_{is} & \text{for } \mathbf{RSG} < 0 \end{cases}$$

$$(4.117)$$

$$\rho_{\rm s} = \boldsymbol{\theta}_{\mathbf{R}} \cdot \rho_{\rm b} \cdot \rho_{\rm g,s} \cdot q_{\rm is} \tag{4.118}$$

$$\mu_{\mathbf{x}} = \frac{1 + \boldsymbol{X}_{\mathbf{cor}} \cdot V_{\mathbf{sbx}}}{1 + 0.2 \cdot \boldsymbol{X}_{\mathbf{cor}} \cdot V_{\mathbf{sbx}}} \tag{4.119}$$

$$E_{\text{eff,s}} = \boldsymbol{E}_{\text{eff0}} \cdot (q_{\text{bs}} + \boldsymbol{\eta}_{\mu} \cdot q_{\text{is}}) \tag{4.120}$$

$$G_{\text{mob,s}} = \frac{1 + (\boldsymbol{\mu}_{\mathbf{E}} \cdot E_{\text{eff,s}})^{\boldsymbol{\theta}_{\mu}} + \boldsymbol{C}_{\mathbf{S}} \cdot \left(\frac{q_{\text{bs}}}{q_{\text{is}} + q_{\text{bs}}}\right)^{2} + \rho_{\text{s}}}{\mu_{\text{x}}}$$
(4.121)

$$\xi_{\rm tb} = \begin{cases} 1 + \text{THESATB} \cdot V_{\rm sbx} & \text{for THESATB} \ge 0 \\ \\ \frac{1}{1 - \text{THESATB} \cdot V_{\rm sbx}} & \text{for THESATB} < 0 \end{cases}$$

$$(4.122)$$

$$w_{\text{sat,s}} = \frac{100 \cdot q_{\text{is}} \cdot \xi_{\text{tb}}}{100 + q_{\text{is}} \cdot \xi_{\text{tb}}}$$
(4.123)

$$\theta_{\text{sat,s}}^* = \begin{cases} \frac{\theta_{\text{sat}}}{G_{\text{mob,s}}} \cdot (1 + \text{THESATG} \cdot w_{\text{sat,s}}) & \text{for THESATG} \ge 0 \\ \frac{\theta_{\text{sat}}}{G_{\text{mob,s}}} \cdot \frac{1}{1 - \text{THESATG} \cdot w_{\text{sat,s}}} & \text{for THESATG} < 0 \end{cases}$$

$$(4.124)$$

$$\phi_{\infty} = q_{\rm is}/\alpha_{\rm s} + \phi_{\rm T}^* \tag{4.125}$$

$$y_{\text{sat}} = \begin{cases} \theta_{\text{sat,s}}^* \cdot \phi_{\infty} / \sqrt{2} & \text{for NMOS} \\ \frac{\theta_{\text{sat,s}}^* \cdot \phi_{\infty} / \sqrt{2}}{\sqrt{1 + \theta_{\text{sat,s}}^* \cdot \phi_{\infty} / \sqrt{2}}} & \text{for PMOS} \end{cases}$$

$$(4.126)$$

$$z_{\rm a} = \frac{2}{1 + \sqrt{1 + 4 \cdot y_{\rm sat}}} \tag{4.127}$$

$$\phi_0 = \phi_{\infty} \cdot z_{\text{a}} \cdot \left[1 + 0.86 \cdot z_{\text{a}} \cdot y_{\text{sat}} \cdot \frac{1 - z_{\text{a}}^2 \cdot y_{\text{sat}}}{1 + 4 \cdot z_{\text{a}}^3 \cdot y_{\text{sat}}^2} \right]$$
(4.128)

$$a_{\rm sat} = x_{\rm gs} + G^2/2 \tag{4.129}$$

$$\phi_2 = \frac{\phi_{\mathbf{T}}^* \cdot 0.98 \cdot G^2 \cdot D_{\mathbf{s}}}{a_{\mathbf{sat}} + \sqrt{a_{\mathbf{sat}}^2 - 0.98 \cdot G^2 \cdot D_{\mathbf{s}}}}$$
(4.130)

$$\phi_{\text{sat}} = \frac{2 \cdot \phi_0 \cdot \phi_2}{\phi_0 + \phi_2 + \sqrt{(\phi_0 + \phi_2)^2 - 3.96 \cdot \phi_0 \cdot \phi_2}}$$
(4.131)

$$V_{\text{dsat}} = \phi_{\text{sat}} - \phi_{\mathbf{T}}^* \cdot \ln \left[1 + \frac{\phi_{\text{sat}} \cdot \left(\phi_{\text{sat}} - 2 \cdot a_{\text{sat}} \cdot \phi_{\mathbf{T}}^* \right)}{G^2 \cdot D_{\text{s}} \cdot {\phi_{\mathbf{T}}^*}^2} \right]$$
(4.132)

$$V_{\rm dse} = \frac{V_{\rm DS}}{\left[1 + (V_{\rm DS}/V_{\rm dsat})^{\mathbf{AX}}\right]^{1/\mathbf{AX}}} \tag{4.133}$$

4.2.5 Surface Potential at Drain Side and Related Variables

Eqs. (4.134)-(4.143) are only calculated for $x_{\rm g}>0$.

$$x_{\rm nd} = \frac{\phi_{\rm B} + V_{\rm SB}^* + V_{\rm dse}}{\phi_{\rm T}^*}$$
 (4.134)

$$k_{\rm ds} = \exp\left(-V_{\rm dse}/\phi_{\rm T}^*\right) \tag{4.135}$$

$$\Delta_{\rm nd} = \Delta_{\rm ns} \cdot k_{\rm ds} \tag{4.136}$$

$$\text{if } x_{\rm g} \le x_{\rm mrg} \left\{ \ x_{\rm d} = \frac{x_{\rm g}}{\xi} \cdot \left[1 + G \cdot x_{\rm g} \cdot \frac{1 - \Delta_{\rm nd}}{\xi^2 \cdot 6 \cdot \sqrt{2}} \right] \right. \tag{4.137}$$

$$\begin{cases} b_{x} = x_{\text{nd}} + 3.0 \\ \eta = \text{MINA}(x_{0}, b_{x}, 5) - \left(b_{x} - \sqrt{b_{x}^{2} + 5}\right) / 2 \\ a = (x_{g} - \eta)^{2} - G^{2} \cdot \left[\exp(-\eta) + \eta - 1 - \Delta_{\text{nd}} \cdot (\eta + 1 + \chi(\eta))\right] \\ b = 1 - G^{2} / 2 \cdot \left[\exp(-\eta) - \Delta_{\text{nd}} \cdot \chi''(\eta)\right] \\ c = 2 \cdot (x_{g} - \eta) + G^{2} \cdot \left[1 - \exp(-\eta) - \Delta_{\text{nd}} \cdot (1 + \chi'(\eta))\right] \\ \tau = x_{\text{nd}} - \eta + \ln\left(a/G^{2}\right) \\ y_{0} = \sigma_{2}(a, b, c, \tau, \eta) \\ \Delta_{0} = \exp\left(y_{0}\right) \\ p = 2 \cdot (x_{g} - y_{0}) + G^{2} \cdot \left[1 - 1/\Delta_{0} + \Delta_{\text{nd}} \cdot (\Delta_{0} - 1 - \chi'(y_{0}))\right] \\ q = (x_{g} - y_{0})^{2} - G^{2} \cdot \left[y_{0} + 1/\Delta_{0} - 1 + \Delta_{\text{nd}} \cdot (\Delta_{0} - y_{0} - 1 - \chi(y_{0}))\right] \\ x_{d} = y_{0} + \frac{2 \cdot q}{p + \sqrt{p^{2} - 2 \cdot q} \cdot \left\{2 - G^{2} \cdot \left[1/\Delta_{0} + \Delta_{\text{nd}} \cdot (\Delta_{0} - \chi''(y_{0}))\right]\right\}} \end{cases}$$

$$(4.138)$$

 $x_{\rm ds} = x_{\rm d} - x_{\rm s} \tag{4.139}$

if
$$x_{\rm ds} < 10^{-10}$$

$$\begin{cases}
p = 2 \cdot x_{\rm gs} + G^2 \cdot [1 - E_{\rm s} + \Delta_{\rm nd} \cdot (1/E_{\rm s} - 1 - \chi'(x_{\rm s}))] \\
q = G^2 \cdot (1 - k_{\rm ds}) \cdot D_{\rm s} \\
\xi = 1 - G^2/2 \cdot [E_{\rm s} + \Delta_{\rm nd} (1/E_{\rm s} - \chi''(x_{\rm s}))] \\
x_{\rm ds} = \frac{2 \cdot q}{p + \sqrt{p^2 - 4 \cdot \xi \cdot q}} \\
x_{\rm d} = x_{\rm s} + x_{\rm ds}
\end{cases}$$
(4.140)

$$E_{\rm d} = \exp\left(-x_{\rm d}\right) \tag{4.141}$$

$$D_{\rm d} = (1/E_{\rm d} - x_{\rm d} - 1 - \chi(x_{\rm d})) \cdot \Delta_{\rm nd}$$
(4.142)

$$\Delta \psi = \phi_{\mathbf{T}}^* \cdot x_{\mathrm{ds}} \tag{4.143}$$

$$\psi_{\rm sd} = \phi_{\rm T}^* \cdot x_{\rm d} \tag{4.144}$$

4.2.6 Mid-Point Surface Potential and Related Variables

if
$$x_{\rm g} > 0$$

$$\begin{cases}
x_{\rm m} = (x_{\rm s} + x_{\rm d})/2 \\
E_{\rm m} = \sqrt{E_{\rm s} \cdot E_{\rm d}} \\
\bar{D} = (D_{\rm s} + D_{\rm d})/2 \\
D_{\rm m} = \bar{D} + x_{\rm ds}^2/8 \cdot (E_{\rm m} - 2/G^2) \\
P_{\rm m} = x_{\rm m} - 1 + E_{\rm m} \\
x_{\rm gm} = G \cdot \sqrt{D_{\rm m} + P_{\rm m}}
\end{cases}$$
(4.145)

if
$$x_{\rm g} \le 0$$

$$\begin{cases} x_{\rm m} = x_{\rm s} \\ x_{\rm gm} = x_{\rm g} - x_{\rm s} \end{cases}$$
 (4.146)

4.2.7 Polysilicon Depletion

Eqs. (4.147)-(4.161) are only calculated for $k_{\rm P}>0$ and $x_{\rm g}>0$ (otherwise $\eta_{\rm p}=1$):

$$x_{\rm m}^{(0)} = x_{\rm m}, \qquad x_{\rm ds}^{(0)} = x_{\rm ds}, \qquad D_{\rm m}^{(0)} = D_{\rm m}, \qquad E_{\rm m}^{(0)} = E_{\rm m},$$
 (4.147)

$$d_0 = 1 - E_{\rm m}^{(0)} + 2 \cdot x_{\rm gm}/G^2 \tag{4.148}$$

$$\eta_{\rm p} = 1/\sqrt{1 + \mathbf{k_P} \cdot x_{\rm gm}} \tag{4.149}$$

$$x_{\rm pm} = \mathbf{k_P} \cdot \left[\frac{\eta_{\rm p} \cdot x_{\rm gm}}{1 + \eta_{\rm p}} \right]^2 \cdot \frac{D_{\rm m}^{(0)}}{D_{\rm m}^{(0)} + P_{\rm m}}$$
(4.150)

$$p = 2 \cdot (x_{\rm gm} - x_{\rm pm}) + G^2 \cdot \left(1 - E_{\rm m}^{(0)} + D_{\rm m}^{(0)}\right)$$
(4.151)

$$q = x_{\text{pm}} \cdot (x_{\text{pm}} - 2 \cdot x_{\text{gm}}) \tag{4.152}$$

$$\xi_{\rm p} = 1 - G^2/2 \cdot \left(E_{\rm m}^{(0)} + D_{\rm m}^{(0)}\right) \tag{4.153}$$

$$u_{\mathbf{p}} = \frac{p \cdot q}{p^2 - \xi_{\mathbf{p}} \cdot q} \tag{4.154}$$

$$x_{\rm m} = x_{\rm m}^{(0)} + u_{\rm p} \tag{4.155}$$

$$E_{\rm m} = E_{\rm m}^{(0)} \cdot \exp\left(-u_{\rm p}\right)$$
 (4.156)

$$D_{\rm m} = D_{\rm m}^{(0)} \cdot \exp\left(u_{\rm p}\right)$$
 (4.157)

$$P_{\rm m} = x_{\rm m} - 1 + E_{\rm m} \tag{4.158}$$

$$x_{\rm gm} = G \cdot \sqrt{D_{\rm m} + P_{\rm m}} \tag{4.159}$$

$$x_{\rm ds} = x_{\rm ds}^{(0)} \cdot \frac{\exp(u_{\rm p}) \cdot \left[\bar{D} + d_{0}\right]}{1 - E_{\rm m} + 2 \cdot x_{\rm gm} \cdot \eta_{\rm p} / G^{2} + \exp(u_{\rm p}) \cdot \bar{D}}$$
(4.160)

$$\Delta \psi = \phi_{\mathbf{T}}^* \cdot x_{\mathrm{ds}} \tag{4.161}$$

4.2.8 Potential Mid-Point Inversion Charge and Related Variables

Eqs. (4.162)-(4.170) are only calculated for $x_g > 0$.

$$q_{\rm im} = \frac{G^2 \cdot \phi_{\mathbf{T}}^* \cdot D_{\rm m}}{x_{\rm gm} + G \cdot \sqrt{P_{\rm m}}}$$
(4.162)

$$\alpha_{\rm m} = \eta_{\rm p} + \frac{G \cdot (1 - E_{\rm m})}{2 \cdot \sqrt{P_{\rm m}}} \tag{4.163}$$

$$q_{\rm im}^* = q_{\rm im} + \boldsymbol{\phi}_{\mathbf{T}}^* \cdot \alpha_{\rm m} \tag{4.164}$$

$$q_{\rm bm} = \phi_{\rm T}^* \cdot G \cdot \sqrt{P_{\rm m}} \tag{4.165}$$

Series resistance:

$$\rho_{\rm g} = \begin{cases} \frac{1}{1 + \mathbf{RSG} \cdot q_{\rm im}} & \text{for } \mathbf{RSG} \ge 0\\ 1 - \mathbf{RSG} \cdot q_{\rm im} & \text{for } \mathbf{RSG} < 0 \end{cases}$$

$$(4.166)$$

$$\rho_{\rm s} = \boldsymbol{\theta}_{\mathbf{R}} \cdot \rho_{\rm b} \cdot \rho_{\rm g} \cdot q_{\rm im} \tag{4.167}$$

Mobility reduction:

$$E_{\text{eff}} = \boldsymbol{E}_{\text{eff0}} \cdot (q_{\text{bm}} + \boldsymbol{\eta}_{\mu} \cdot q_{\text{im}}) \tag{4.168}$$

$$q_{\text{eff1}} = q_{\text{bm}} + \eta_{\mu,ac} \cdot q_{\text{im}} \tag{4.169}$$

$$G_{\text{mob}} = \frac{1 + (\boldsymbol{\mu}_{\mathbf{E}} \cdot E_{\text{eff}})^{\boldsymbol{\theta}_{\boldsymbol{\mu}}} + \boldsymbol{C}_{\mathbf{S}} \cdot \left(\frac{q_{\text{bm}}}{q_{\text{im}} + q_{\text{bm}}}\right)^{2} + \rho}{u_{\text{x}}}$$
(4.170)

4.2.9 Drain-Source Channel Current

Eqs. (4.171)-(4.182) are only calculated for $x_g > 0$:

Channel length modulation:

$$R_1 = q_{\rm im}/q_{\rm im}^* \tag{4.171}$$

$$R_2 = \phi_{\mathbf{T}}^* \cdot \alpha_{\mathbf{m}} / q_{\mathbf{im}}^* \tag{4.172}$$

$$T_{1} = \ln \left(\frac{1 + \frac{V_{DS} - \Delta \psi}{\mathbf{VP}}}{1 + \frac{V_{dse} - \Delta \psi}{\mathbf{VP}}} \right)$$
(4.173)

$$T_2 = \ln\left(1 + \frac{V_{\rm dsx}}{\mathbf{VP}}\right) \tag{4.174}$$

$$\Delta L/L = \mathbf{ALP} \cdot T_1 \tag{4.175}$$

$$G_{\Delta L} = \frac{1}{1 + \Delta L/L + (\Delta L/L)^2} \tag{4.176}$$

$$\Delta L_1/L = \left[\mathbf{ALP} + \frac{\mathbf{ALP1}}{q_{\text{im}}^*} \cdot R_1 \right] \cdot T_1 + \mathbf{ALP2} \cdot q_{\text{bm}} \cdot R_2^2 \cdot T_2$$
(4.177)

$$F_{\Delta L} = \left[1 + \Delta L_1 / L + (\Delta L_1 / L)^2\right] \cdot G_{\Delta L} \tag{4.178}$$

Velocity saturation:

$$w_{\text{sat}} = \frac{100 \cdot q_{\text{im}} \cdot \xi_{\text{tb}}}{100 + q_{\text{im}} \cdot \xi_{\text{tb}}} \tag{4.179}$$

$$\theta_{\text{sat}}^* = \begin{cases} \frac{\boldsymbol{\theta}_{\text{sat}}}{G_{\text{mob,s}} \cdot G_{\Delta L}} \cdot (1 + \text{THESATG} \cdot w_{\text{sat}}) & \text{for THESATG} \ge 0 \\ \frac{\boldsymbol{\theta}_{\text{sat}}}{G_{\text{mob,s}} \cdot G_{\Delta L}} \cdot \frac{1}{1 - \text{THESATG} \cdot w_{\text{sat}}} & \text{for THESATG} < 0 \end{cases}$$

$$(4.180)$$

$$z_{\text{sat}} = \begin{cases} (\theta_{\text{sat}}^* \cdot \Delta \psi)^2 & \text{for NMOS} \\ \frac{(\theta_{\text{sat}}^* \cdot \Delta \psi)^2}{1 + \theta_{\text{sat}}^* \cdot \Delta \psi} & \text{for PMOS} \end{cases}$$
(4.181)

$$G_{\text{vsat}} = \frac{G_{\text{mob}} \cdot G_{\Delta L}}{2} \cdot \left(1 + \sqrt{1 + 2 \cdot z_{\text{sat}}}\right) \tag{4.182}$$

Auxiliary Variables for Calculation of Intrinsic Charges and Gate Current. Eqs. (4.183)-(4.185) are only calculated for $x_{\rm g}>0$.

$$V_{\text{oxm}} = \phi_{\mathbf{T}}^* \cdot x_{\text{gm}} \tag{4.183}$$

$$\alpha_{\rm m}' = \alpha_{\rm m} \cdot \left[1 + \frac{z_{\rm sat}}{2} \cdot \left(\frac{G_{\rm mob} \cdot G_{\Delta L}}{G_{\rm vsat}} \right)^2 \right] \tag{4.184}$$

$$H = \frac{G_{\text{mob}} \cdot G_{\Delta L}}{G_{\text{vsat}}} \cdot \frac{q_{\text{im}}^*}{\alpha_{\text{m}}'}$$
(4.185)

In the remainder of this document, some variables (e.g., x_g) are labeled 'dc' or 'ac' (e.g., $x_{g,dc}$ or $x_{g,ac}$). Variables labeled 'dc' result from the *first* evaluation of Eqs. (4.94)–(4.185). For variables labeled 'ac', there are two possibilities. If **SWNUD** = 1 or **SWDELVTAC** = 1, their values result from the *second* evaluation of Eqs. (4.94)–(4.185). In any other case, their value is equal to their 'dc'-counterpart.

This applies to the following variables: $x_{\rm g}$, $q_{\rm eff1}$, $V_{\rm oxm}$, $q_{\rm im}$, $q_{\rm im}^*$, $\alpha_{\rm m}$, $\Delta \psi$, $G_{\Delta L}$, $F_{\Delta L}$, H, $\eta_{\rm p}$, $G_{\rm vsat}$, $V_{\rm dse}$, $G_{\rm mob}$, $x_{\rm m}$, G, $x_{\rm gm}$, $\theta_{\rm sat}^*$.

Drain-Source channel current:

$$I_{\rm DS} = \begin{cases} 0 & \text{for } x_{\rm g,dc} \le 0 \\ \beta \cdot F_{\Delta L,\rm dc} \cdot \frac{q_{\rm im,dc}^*}{G_{\rm rest,dc}} \cdot \Delta \psi_{\rm dc} & \text{for } x_{\rm g,dc} > 0 \end{cases}$$

$$(4.186)$$

4.2.10 Impact Ionization or Weak-Avalanche

The equations in this Section are only calculated when **SWIMPACT** = 1 and $x_g > 0$.

$$a_2^* = \mathbf{a_2} \cdot \left[1 + \mathbf{A4} \cdot \left(\sqrt{V_{\mathrm{SB,dc}}^* + \phi_{\mathbf{B}}} - \sqrt{\phi_{\mathbf{B}}} \right) \right]$$
(4.187)

$$\Delta V_{\rm sat} = V_{\rm DS} - \mathbf{A3} \cdot \Delta \psi_{\rm dc} \tag{4.188}$$

$$M_{\rm avl} = \begin{cases} 0 & \text{for } \Delta V_{\rm sat} \le 0 \\ \mathbf{A1} \cdot \Delta V_{\rm sat} \cdot \exp\left(-\frac{a_2^*}{\Delta V_{\rm sat}}\right) & \text{for } \Delta V_{\rm sat} > 0 \end{cases}$$

$$(4.189)$$

$$I_{\text{avl}} = M_{\text{avl}} \cdot I_{\text{DS}} \tag{4.190}$$

4.2.11 Surface Potential in Gate Overlap Regions

$$x_{\text{sov}}(x_{\text{g}}) = \begin{cases} x'_{g} = \left(x_{\text{g}} + \sqrt{x_{\text{g}}^{2} + \boldsymbol{\varepsilon}_{\text{ov}}^{2}}\right) / 2\\ x_{\text{sov}} = -x'_{\text{g}} - \boldsymbol{G}_{\text{ov}}^{2} / 2 + \boldsymbol{G}_{\text{ov}} \cdot \sqrt{x'_{\text{g}} + \boldsymbol{G}_{\text{ov}}^{2} / 4 + \boldsymbol{a}_{\text{ov}}} + \boldsymbol{\delta}_{\text{ov}} \end{cases}$$
(4.191)

$$x_{\text{dov}}(x_{\text{g}}) = \begin{cases} x'_{g} = \left(x_{\text{g}} + \sqrt{x_{\text{g}}^{2} + \varepsilon_{\text{dov}}^{2}}\right) / 2\\ x_{\text{dov}} = -x'_{\text{g}} - G_{\text{dov}}^{2} / 2 + G_{\text{dov}} \cdot \sqrt{x'_{\text{g}} + G_{\text{dov}}^{2} / 4 + a_{\text{dov}}} + \delta_{\text{dov}} \end{cases}$$
(4.192)

$$\psi_{\text{sov}} = -\phi_{\mathbf{T}_{A}} \cdot x_{\text{sov}} \left(-\frac{V_{\text{GS}}}{\phi_{\mathbf{T}_{A}}} \right) \tag{4.193}$$

$$\psi_{\text{dov}} = -\phi_{\mathbf{T}_{A}} \cdot x_{\text{dov}} \left(-\frac{V_{\text{GS}} - V_{\text{DS}}}{\phi_{\mathbf{T}_{A}}} \right) \tag{4.194}$$

$$V_{\text{ov}_0} = V_{\text{GS}} - \psi_{\text{sov}} \tag{4.195}$$

$$V_{\text{ov}_{\text{L}}} = V_{\text{GS}} - V_{\text{DS}} - \psi_{\text{dov}} \tag{4.196}$$

4.2.12 **Gate Current**

The equations in this Section are only calculated when SWIGATE = 1.

Source/Drain gate overlap current:

Source/Drain gate overlap current:
$$I_{GSow}(V_{GX}, \psi_{ov}, V_{ow}) = \begin{cases} V_{ov}^* = \sqrt{V_{ov}^2 + 10^{-6}} \\ z_g = \begin{cases} MINA \left(\frac{V_{ow}^*}{CHIB}, GC_{\mathbf{Q}}, 10^{-6} \right) & \text{for } \mathbf{GC3} < 0 \end{cases} \\ V_{OW}^* = V_{OW} & \text{for } \mathbf{GC3} \ge 0 \end{cases}$$

$$I_{GSow}(V_{GX}, \psi_{ov}, V_{ow}) = \begin{cases} F_{S1} = \frac{3.0 \cdot \phi_{F_A} + \psi_{ow}}{\phi_{T_A}} \\ F_{S2} = -3.0 - \mathbf{GCO} \end{cases}$$

$$F_{S3} = 30 \cdot V_{GX}$$

$$F_{Sov} = MXE (F_{S2}, MNE (F_{S1}, F_{S3}, 0.9), 0.3)$$

$$I_{Gov} = I_{GOV} \cdot F_{Sov} \cdot \exp \left(\mathbf{B_{ov}} \cdot \left[-\frac{3}{2} + z_g \cdot (\mathbf{GC2} + \mathbf{GC3} \cdot z_g) \right] \right) \end{cases}$$

$$I_{GDov}(V_{GX}, \psi_{ov}, V_{ov}) = \begin{cases} V_{ov}^* = \sqrt{V_{ov}^2 + 10^{-6}} \\ z_g = \begin{cases} MINA \left(\frac{V_{ov}}{CHIB}, GC_{\mathbf{Q}}, 10^{-6} \right) & \text{for } \mathbf{GC3} < 0 \end{cases}$$

$$\frac{V_{ov}^*}{CHIB} = \frac{3.0 \cdot \phi_{T_A} + \psi_{ov}}{\phi_{T_A}}$$

$$F_{S2} = -3.0 - \mathbf{GCO}$$

$$F_{S3} = 30 \cdot V_{GX}$$

$$F_{Sov} = MXE (F_{S2}, MNE (F_{S1}, F_{S3}, 0.9), 0.3)$$

$$I_{Gov} = I_{GOVD} \cdot F_{Sov} \cdot \\ \exp \left(\mathbf{B_{dov}} \cdot \left[-\frac{3}{2} + z_g \cdot (\mathbf{GC2} + \mathbf{GC3} \cdot z_g) \right] \right) \end{cases}$$

$$I_{GSov} = I_{GSov} (V_{GS}, \psi_{sov}, V_{ovo})$$

$$(4.199)$$

$$I_{\text{GSov}} = I_{\text{GSov}} \left(V_{\text{GS}}, \psi_{\text{sov}}, V_{\text{ov}_0} \right) \tag{4.199}$$

$$I_{\text{GDov}} = I_{\text{GDov}} \left(V_{\text{GS}} - V_{\text{DS}}, \psi_{\text{dov}}, V_{\text{ov_L}} \right) \tag{4.200}$$

Gate-channel current:

$$V_{\rm m} = V_{\rm SB,dc}^* + \phi_{\rm T}^* \cdot \left[\frac{x_{\rm ds,dc}}{2} - \ln \left(\frac{1 + \exp(x_{\rm ds,dc} - V_{\rm dse,dc}/\phi_{\rm T}^*)}{2} \right) \right]$$
(4.201)

$$\psi_{\rm t} = \text{MINA} (0, V_{\rm oxm,dc} + D_{\rm ch}, 0.01)$$
 (4.202)

$$V_{\text{oxm}}^* = \sqrt{V_{\text{oxm,dc}}^2 + 10^{-6}}$$
 (4.203)

$$z_{\rm g} = \begin{cases} & \text{MINA}\left(\frac{V_{\rm oxm}^*}{\mathbf{CHIB}}, \mathbf{GC_Q}, 10^{-6}\right) & \text{for } \mathbf{GC3} < 0\\ & \\ \frac{V_{\rm oxm}^*}{\mathbf{CHIB}} & \text{for } \mathbf{GC3} \ge 0 \end{cases}$$

$$(4.204)$$

$$\Delta_{\rm Si} = \exp\left(x_{\rm m,dc} - \frac{\alpha_{\rm b} + V_{\rm m} - \psi_{\rm t}}{\phi_{\rm T}^*}\right) \tag{4.205}$$

$$F_{\rm S} = \ln \left[\frac{1 + \Delta_{\rm Si}}{1 + \Delta_{\rm Si} \cdot \exp\left(-\frac{V_{\rm GS} + V_{\rm SB,dc}^* - V_{\rm m}}{\phi_{\rm T}^*}\right)} \right]$$
(4.206)

$$I_{\text{GCO}} = I_{\text{GINV}} \cdot F_{\text{S}} \cdot \exp\left(\boldsymbol{B} \cdot \left[-3/2 + z_{\text{g}} \cdot (\mathbf{GC2} + \mathbf{GC3} \cdot z_{\text{g}})\right]\right)$$
(4.207)

$$\text{if } x_{\text{g,dc}} > 0 \begin{cases} u_0 = \text{CHIB} / \left[B \cdot (\text{GC2} + 2 \cdot \text{GC3} \cdot z_{\text{g}}) \right] \\ x = \Delta \psi_{\text{dc}} / \left(2 \cdot u_0 \right) \\ b = u_0 / H_{\text{dc}} \\ B_{\text{g}} = b \cdot \left(1 - b \right) / 2 \\ A_{\text{g}} = 1 / 2 - 3 \cdot B_{\text{g}} \\ p_{\text{gc}} = \left(1 - b \right) \cdot \frac{\sinh(x)}{x} + b \cdot \cosh(x) \\ p_{\text{gd}} = \frac{p_{\text{gc}}}{2} - B_{\text{g}} \cdot \sinh(x) - A_{\text{g}} \cdot \frac{\sinh(x)}{x} \cdot \left[\coth(x) - \frac{1}{x} \right] \end{cases}$$

$$(4.208)$$

if
$$x_{\rm g,dc} \le 0$$

$$\begin{cases} p_{\rm gc} = 1 \\ p_{\rm gd} = 1/2 \end{cases}$$
 (4.209)

$$S_{\rm g} = \frac{1}{2} \cdot \left(1 + \frac{x_{\rm g,dc}}{\sqrt{x_{\rm g,dc}^2 + 10^{-6}}} \right) \tag{4.210}$$

$$I_{\rm GC} = I_{\rm GCO} \cdot p_{\rm gc} \cdot S_{\rm g} \tag{4.211}$$

$$I_{\text{GCD}} = I_{\text{GCO}} \cdot p_{\text{gd}} \cdot S_{\text{g}} \tag{4.212}$$

$$I_{GCS} = I_{GC} - I_{GCD} \tag{4.213}$$

$$I_{\rm GB} = I_{\rm GCO} \cdot p_{\rm gc} \cdot (1 - S_{\rm g}) \tag{4.214}$$

4.2.13 Gate-Induced Drain/Source Leakage Current

The equations in this section are only calculated when SWGIDL = 1.

$$I_{\text{gisl}}(V_{\text{ov}}, V) = \begin{cases} V_{\text{tov}} = \sqrt{V_{\text{ov}}^2 + \mathbf{CGIDL}^2 \cdot V^2 + 10^{-6}} \\ t = V \cdot V_{\text{tov}} \cdot V_{\text{ov}} \\ I_{\text{gisl}} = \begin{cases} -\mathbf{A}_{\text{GIDL}} \cdot t \cdot \exp\left(-\frac{\mathbf{B}_{\text{GIDL}}}{V_{\text{tov}}}\right) & \text{for } V_{\text{ov}} < 0 \\ 0 & \text{for } V_{\text{ov}} \ge 0 \end{cases}$$

$$(4.215)$$

$$I_{\text{gidl}}(V_{\text{ov}}, V) = \begin{cases} V_{\text{tov}} = \sqrt{V_{\text{ov}}^2 + \mathbf{CGIDLD}^2 \cdot V^2 + 10^{-6}} \\ t = V \cdot V_{\text{tov}} \cdot V_{\text{ov}} \\ I_{\text{gidl}} = \begin{cases} -\mathbf{A_{GIDLD}} \cdot t \cdot \exp\left(-\frac{\mathbf{B_{GIDLD}}}{V_{\text{tov}}}\right) & \text{for } V_{\text{ov}} < 0 \\ 0 & \text{for } V_{\text{ov}} \ge 0 \end{cases}$$

$$(4.216)$$

$$I_{\text{gisl}} = I_{\text{gisl}}(V_{\text{ov}_0}, V_{\text{SB}}) \tag{4.217}$$

$$I_{\text{gidl}} = I_{\text{gidl}}(V_{\text{ov}_{\text{L}}}, V_{\text{DS}} + V_{\text{SB}}) \tag{4.218}$$

4.2.14 Total Terminal Currents

$$I_{\rm D} = I_{\rm DS} + I_{\rm avl} - I_{\rm GDov} - I_{\rm GCD} + I_{\rm gidl} \tag{4.219}$$

$$I_{\rm S} = -I_{\rm DS} - I_{\rm GSov} - I_{\rm GCS} + I_{\rm gisl} \tag{4.220}$$

$$I_{\rm G} = I_{\rm GC} + I_{\rm GB} + I_{\rm GDov} + I_{\rm GSov} \tag{4.221}$$

$$I_{\rm B} = -I_{\rm avl} - I_{\rm GB} - I_{\rm gidl} - I_{\rm gisl}$$
 (4.222)

4.3 Charge Model

In this section, the charge model equations of the PSP-model are given. Use is made of the applied terminal bias values $V_{\rm GS}$, $V_{\rm DS}$ and $V_{\rm SB}$, the local parameters listed in Section 2.5.2 and the internal parameters introduced in Section 4.1. Local parameters are denoted by capital characters in bold font, whereas internal (bias-independent) parameters are denoted by symbols in bold font.

The definitions of the auxiliary functions MINA(.), MAXA(.), $\chi(.)$ and $\sigma_{1,2}(.)$ can be found in Appendix A.

4.3.1 Quantum-Mechanical Corrections

$$q_{\rm eff,ac} = \begin{cases} V_{\rm oxm,ac} & \text{for } x_{\rm g,ac} \le 0 \\ q_{\rm eff1,\it ac} & \text{for } x_{\rm g,ac} > 0 \end{cases} \tag{4.223}$$

$$C_{\rm OX}^{\rm qm} = \begin{cases} \mathbf{COX} & \text{for } \boldsymbol{q_{\rm q}} = 0 \\ \\ \frac{\mathbf{COX}}{1 + \boldsymbol{q_{\rm q}}/(q_{\rm eff,ac}^2 + \boldsymbol{q_{\rm lim}}^2)^{1/6}} & \text{for } \boldsymbol{q_{\rm q}} > 0 \end{cases} \tag{4.224}$$

4.3.2 Intrinsic Charge Model

$$\begin{cases} F_{\rm j} = \Delta \psi_{\rm ac} / \left(2 \cdot H_{\rm ac}\right) \\ q_{\Delta L} = \left(1 - G_{\Delta L, \rm ac}\right) \cdot \left(q_{\rm im, ac} - \alpha_{\rm m, ac} \cdot \Delta \psi_{\rm ac} / 2\right) \\ q_{\Delta L}^* = q_{\Delta L, \rm ac} \cdot \left(1 + G_{\Delta L, \rm ac}\right) \\ Q_{\rm G}^{(i)} = C_{\rm OX}^{\rm qm} \cdot \left[V_{\rm oxm, ac} + \frac{\eta_{\rm p, ac} \cdot \Delta \psi_{\rm ac}}{2} \cdot \left(\frac{G_{\Delta L, \rm ac}}{3} \cdot F_{\rm j} + G_{\Delta L, \rm ac} - 1\right)\right] \\ Q_{\rm I}^{(i)} = -C_{\rm OX}^{\rm qm} \cdot \left[G_{\Delta L, \rm ac} \cdot \left(q_{\rm im, ac} + \frac{\alpha_{\rm m, ac} \cdot \Delta \psi_{\rm ac}}{6} \cdot F_{\rm j}\right) + q_{\Delta L, \rm ac}\right] \\ Q_{\rm D}^{(i)} = -\frac{C_{\rm OX}^{\rm qm}}{2} \cdot \left[G_{\Delta L, \rm ac}^2 \cdot \left(q_{\rm im, ac} + \frac{\alpha_{\rm m, ac} \cdot \Delta \psi_{\rm ac}}{6} \cdot \left[\frac{F_{\rm j}^2}{5} + F_{\rm j} - 1\right]\right) + q_{\Delta L}^*\right] \end{cases}$$

if
$$x_{\rm g} \le 0 \begin{cases} Q_{\rm G}^{(i)} = C_{\rm OX}^{\rm qm} \cdot V_{\rm oxm,ac} \\ Q_{\rm I}^{(i)} = 0 \\ Q_{\rm D}^{(i)} = 0 \end{cases}$$
 (4.226)

$$Q_{\rm S}^{(i)} = Q_{\rm I}^{(i)} - Q_{\rm D}^{(i)} \tag{4.227}$$

$$Q_{\rm B}^{(i)} = -Q_{\rm I}^{(i)} - Q_{\rm G}^{(i)} \tag{4.228}$$

4.3.3 Extrinsic Charge Model

The charges of the source and drain overlap regions:

$$Q_{\text{sov}} = \mathbf{CGOV} \cdot (V_{\text{GS}} - \psi_{\text{sov}}) \tag{4.229}$$

$$Q_{\text{dov}} = \mathbf{CGOVD} \cdot (V_{\text{GS}} - V_{\text{DS}} - \psi_{\text{dov}}) \tag{4.230}$$

The charge of the bulk overlap region

$$Q_{\text{bov}} = \mathbf{CGBOV} \cdot (V_{\text{GS}} + V_{\text{SB}}) \tag{4.231}$$

Outer fringe charge:

$$Q_{\text{ofs}} = \mathbf{CFR} \cdot V_{\text{GS}} \tag{4.232}$$

$$Q_{\text{ofd}} = \mathbf{CFRD} \cdot (V_{\text{GS}} - V_{\text{DS}}) \tag{4.233}$$

4.3.4 Total Terminal Charges

$$Q_{\rm G} = Q_{\rm G}^{(i)} + Q_{\rm sov} + Q_{\rm dov} + Q_{\rm ofs} + Q_{\rm ofd} + Q_{\rm bov}$$
(4.234)

$$Q_{\rm S} = Q_{\rm S}^{(i)} - Q_{\rm sov} - Q_{\rm ofs} \tag{4.235}$$

$$Q_{\rm D} = Q_{\rm D}^{(i)} - Q_{\rm dov} - Q_{\rm ofd} \tag{4.236}$$

$$Q_{\rm B} = Q_{\rm B}^{(i)} - Q_{\rm bov} \tag{4.237}$$

4.4 Noise Model

Eqs. (4.238)-(4.264) are only calculated for $x_g > 0$. In these equations f_{op} represents the operation frequency of the transistor and $j = \sqrt{-1}$.

4.4.1 Flicker noise

$$N^* = \frac{C_{\text{ox}}}{q} \cdot \alpha_{\text{m,dc}} \cdot \phi_{\mathbf{T}}$$
 (4.238)

$$N_{\rm m}^* = \frac{C_{\rm ox}}{q} \cdot q_{\rm im,dc}^* \tag{4.239}$$

$$\Delta N = \frac{C_{\text{ox}}}{q} \cdot \alpha_{\text{m,dc}} \cdot \Delta \psi_{\text{dc}}$$
 (4.240)

$$S_{\rm fl} = \frac{q \cdot \phi_{\rm T}^2 \cdot \boldsymbol{\beta} \cdot I_{\rm DS}}{\left(f_{\rm op}\right)^{\rm EF} \cdot C_{\rm ox} \cdot G_{\rm vsat, dc} \cdot N^*} \cdot \left[\left({\bf NFA} - {\bf NFB} \cdot N^* + {\bf NFC} \cdot N^{*\,2} \right) \cdot \ln \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \right] \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm m}^* + \Delta N/2}{N_{\rm m}^* - \Delta N/2} \right) \cdot \left(\frac{N_{\rm$$

+
$$\left(\mathbf{NFB} + \mathbf{NFC} \cdot [N_{\mathrm{m}}^* - 2 \cdot N^*]\right) \cdot \Delta N$$
 (4.241)

4.4.2 Thermal noise

Intrinsic thermal noise

$$H_0 = \frac{q_{\rm im,dc}^*}{\alpha_{\rm m,dc}} \tag{4.242}$$

$$t_1 = \frac{q_{\text{im,dc}}}{q_{\text{im,dc}}^*} \tag{4.243}$$

$$t_2 = \left(\frac{\Delta \psi_{\rm dc}}{12 \cdot H_0}\right)^2 \tag{4.244}$$

$$R = \frac{H_0}{H} - 1 \tag{4.245}$$

$$l_{c} = 1 - 12 \cdot t_{2} \cdot R \tag{4.246}$$

$$g_{\text{ideal}} = \frac{\beta \cdot q_{\text{im,dc}}^*}{G_{\text{vsat,dc}}} \cdot F_{\Delta L,\text{dc}}$$
(4.247)

$$C_{\text{Geff}} = \left(\frac{G_{\text{vsat,ac}}}{G_{\text{mob,ac}} \cdot G_{\Delta L, \text{ac}}}\right)^2 \cdot C_{\text{OX}}^{\text{qm}} \cdot \eta_{\text{p,ac}}$$
(4.248)

$$m_{\rm id,int} = \frac{g_{\rm ideal}}{l_c^2} \cdot [t_1 + 12 \cdot t_2 - 24 \cdot (1 + t_1) \cdot t_2 \cdot R]$$
(4.249)

$$m_{\rm ig,int} = \frac{1}{l_c^2 \cdot q_{\rm ideal}} \cdot \left[\frac{t_1}{12} - t_2 \cdot \left(t_1 + \frac{1}{5} - 12 \cdot t_2 \right) - \frac{8}{5} \cdot t_2 \cdot (t_1 + 1 - 12 \cdot t_2) \cdot R \right]$$
(4.250)

$$m_{\rm igid,int} = \frac{\sqrt{t_2}}{l_{\rm c}^2} \cdot \left[1 - 12 \cdot t_2 - \left(t_1 + \frac{96}{5} \cdot t_2 - 12 \cdot t_1 \cdot t_2 \right) \cdot R \right]$$
 (4.251)

Excess thermal noise

For short (sub-100-nm) devices, it has been shown that the conventional local source for thermal noise gets a field dependent extra term [7, 8] and changes from

$$\langle i_{\rm n}^2 \rangle = 4 \cdot k \cdot T \cdot g$$

to

$$\langle i_{\rm n}^2 \rangle = 4 \cdot k \cdot T \cdot g \cdot \left[1 + 3 \cdot \frac{(q \cdot E \cdot \tau)^2}{m^* \cdot k \cdot T} \right] = 4 \cdot k \cdot T \cdot g + 12 \cdot g \cdot m^* \cdot \mu^2 \cdot E^2.$$

Here, g denotes the local channel conductance. Integration along the channel (following the improved Klaassen-Prins method) leads to expressions for the drain-current noise, induced gate noise, and correlation.

Excess thermal noise equations:

$$\theta_{\text{sat,exc}}^* = \begin{cases} \frac{\theta_{\text{sat}}}{G_{\text{mob,dc}}} \cdot (1 + \text{THESATG} \cdot w_{\text{sat}}) & \text{for THESATG} \ge 0 \\ \frac{\theta_{\text{sat}}}{G_{\text{mob,dc}}} \cdot \frac{1}{1 - \text{THESATG} \cdot w_{\text{sat}}} & \text{for THESATG} < 0 \end{cases}$$

$$(4.252)$$

$$z_{\text{sat,exc}} = \begin{cases} \left(\theta_{\text{sat,exc}}^* \cdot \Delta \psi_{\text{dc}}\right)^2 & \text{for NMOS} \\ \frac{\left(\theta_{\text{sat,exc}}^* \cdot \Delta \psi_{\text{dc}}\right)^2}{1 + \theta_{\text{sat,exc}}^* \cdot \Delta \psi_{\text{dc}}} & \text{for PMOS} \end{cases}$$

$$(4.253)$$

$$G_{\text{vsat,exc}} = \frac{G_{\text{mob,dc}}}{2} \cdot \left(1 + \sqrt{1 + 2 \cdot z_{\text{sat,exc}}}\right)$$
(4.254)

$$g_{\text{fac}} = \frac{G_{\text{mob,dc}}}{G_{\text{vsat,exc}} \cdot l_{\text{c}}}$$
(4.255)

$$m_{\rm id,exc} = \frac{\text{FNTEXC} \cdot m_0}{4 \cdot k_{\rm B} \cdot T_{\rm KD}} \cdot g_{\rm fac}^2 \cdot I_{\rm DS} \cdot V_{\rm dse,dc}$$
(4.256)

$$m_{\rm ig,exc} = m_{\rm id,exc} \cdot \frac{1 + 12 \cdot t_2}{12 \cdot g_{\rm ideal}^2}$$

$$(4.257)$$

$$m_{\text{igid,exc}} = -m_{\text{id,exc}} \cdot \frac{\sqrt{t_2 \cdot (1+R)}}{g_{\text{ideal}}}$$
 (4.258)

Total thermal noise

$$m_{\rm id} = m_{\rm id,int} + m_{\rm id,exc} \tag{4.259}$$

$$m_{\rm ig} = m_{\rm ig,int} + m_{\rm ig,exc} \tag{4.260}$$

$$m_{\text{igid}} = m_{\text{igid,int}} + m_{\text{igid,exc}}$$
 (4.261)

$$S_{\rm id} = N_{\rm T} \cdot m_{\rm id} \tag{4.262}$$

$$S_{ig} = N_{T} \cdot \frac{(2 \cdot \pi \cdot f_{op} \cdot C_{Geff})^{2} \cdot m_{ig}}{1 + (2 \cdot \pi \cdot f_{op} \cdot C_{Geff} \cdot m_{ig})^{2}}$$

$$(4.263)$$

$$S_{\text{igid}} = N_{\text{T}} \cdot \frac{2 \cdot \pi \cdot j \cdot f_{\text{op}} \cdot C_{\text{Geff}} \cdot m_{\text{igid}}}{1 + 2 \cdot \pi \cdot j \cdot f_{\text{op}} \cdot C_{\text{Geff}} \cdot m_{\text{ig}}}$$
(4.264)

Thermal noise for parasitic resistances (see Fig. 3.2)

$$S_{\rm R_G} = 4 \cdot k_{\rm B} \cdot T_{\rm KD} / R_{\rm gate} \tag{4.265}$$

$$S_{R_{\text{BULK}}} = 4 \cdot k_{\text{B}} \cdot T_{\text{KD}} / R_{\text{bulk}} \tag{4.266}$$

$$S_{\text{R}_{\text{WELL}}} = 4 \cdot k_{\text{B}} \cdot T_{\text{KD}} / R_{\text{well}} \tag{4.267}$$

$$S_{\rm R_{\rm JUNS}} = 4 \cdot k_{\rm B} \cdot T_{\rm KD} / R_{\rm juns} \tag{4.268}$$

$$S_{\rm R_{JUND}} = 4 \cdot k_{\rm B} \cdot T_{\rm KD} / R_{\rm jund} \tag{4.269}$$

4.4.3 Shot noise

Gate current shot noise:

$$S_{igs} = 2 \cdot q \cdot (I_{GCS} + I_{GSov}) \tag{4.270}$$

$$S_{\text{igd}} = 2 \cdot q \cdot (I_{\text{GCD}} + I_{\text{GDov}}) \tag{4.271}$$

Avalanche current shot noise:

$$S_{\text{avl}} = 2 \cdot q \cdot (1 + M_{\text{avl}}) \cdot I_{\text{avl}} \tag{4.272}$$

4.5 Self heating

Fig. 4.1 shows the simple thermal network that is implemented in PSP. The current that reflects the power dissipation is given by

$$P_{\text{diss}} = I_{\text{DS}} \cdot V_{\text{DS}} + I_{\text{impact}} \cdot (V_{\text{DS}} + V_{\text{SB}}) + \frac{V_{\text{SIS}}^2}{R_{\text{source}}} + \frac{V_{\text{DID}}^2}{R_{\text{drain}}}.$$
(4.273)

If **RTH** $< 10^{-3}$, $P_{\rm diss} = 0$. This can be used to switch off self heating.

The built-in thermal network of PSP can be bypassed (e.g., to replace it with an externally connected thermal network) by setting $\mathbf{CTH} = 0$ and assigning a very large value to \mathbf{RTH} .

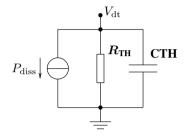


Figure 4.1: Internal thermal network of PSP

Section 5

Non-quasi-static RF model

5.1 Introduction

For high-frequency modeling and fast transient simulations, a special version of the PSP model is available, which enables the simulation of non-quasi-static (NQS) effects, and includes several parasitic resistances.

5.2 NQS-effects

In the PSP-NQS model, NQS-effects are introduced by applying the one-dimensional current continuity equation $(\partial I/\partial y \propto -\partial \rho/\partial t)$ to the channel. A full numerical solution of this equation is too inefficient for compact modeling, therefore an approximate technique is used. The channel is partitioned into N+1 sections of equal length by assigning N equidistant *collocation points*. The charge density (per unit channel area) along the channel is then approximated by a cubic spline through these collocation points, assuring that both the charge and its first and second spatial derivatives are continuous along the channel. Within this approximation, the current continuity equation reduces to a system of N coupled first order ordinary differential equations, from which the channel charge at each collocation point can be found:

$$\begin{cases}
\frac{dQ_1}{dt} = f_1(Q_1, \dots, Q_N) \\
\vdots & \vdots \\
\frac{dQ_N}{dt} = f_N(Q_1, \dots, Q_N)
\end{cases}$$
(5.1)

Here, Q_i is the charge density at the *i*-th collocation point and f_i are functions, which contain the *complete* PSP-charge model. These equations are implemented by the definition of appropriate subcircuits (see left part of Fig. 5.1) and solved by the circuit simulator. Finally, the four terminal charges are calculated from the channel charges, using the Ward-Dutton partitioning scheme for the source and drain charges.

A full description of the PSP-NQS model is given in Section 5.3. More background information can be found in literature [9, 10].

5.3 NQS Model Equations

In this section, several symbols and notations are used which were defined in Section 4. Moreover, y denotes the (normalized) position along the channel (y=0 is source side, y=1 is drain side), while x denotes the surface potential (normalized to ϕ_T^*) at a certain position.

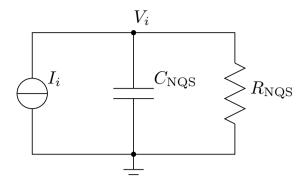


Figure 5.1: The subcircuit used to solve one of the differential equations of Eq. (5.1). The current is set to $I_i = C_{\text{NQS}} \cdot f(V_1, \dots, V_N)$, where the voltage V_i represents the charge density Q_i at the *i*-th collocation point and is solved by the circuit simulator. N of these circuits are defined and they are coupled through the dependence of I_i on the voltages of the other circuits. The resistance R_{NQS} has a very large value and is present only for convergence purposes. Right: The full network of parasitic elements in the PSP-NQS model. The large full dots indicate the five additional internal nodes.

5.3.1 Internal constants

Eqs. (5.2)–(5.7) are independent of bias conditions and time. Consequently, they have to be computed only once.

Note: In PSP only **SWNQS** = 0, 1, 2, 3, 5, 9 are allowed!

$$n = SWNQS + 1 \tag{5.2}$$

$$h = 1/n \tag{5.3}$$

The matrix A is a square $(n+1) \times (n+1)$ -matrix with elements $A_{i,j}$ $(0 \le i, j \le n)$, which are used in Eq. 5.25. They are computed using the following algorithm (adapted from [11]):

1. Initial values:

$$A_{i,j} = 0 \qquad \text{for } 0 \le i, j \le n \tag{5.4}$$

$$v_i = 0 \qquad \text{for } 0 \le i \le n \tag{5.5}$$

2. First loop:

$$p = 2 + v_{i-1}/2$$

$$v_{i} = -1/(2 \cdot p)$$

$$A_{i,i-1} = 1/h$$

$$A_{i,i} = -2/h$$

$$A_{i,i+1} = 1/h$$

$$A_{i,j} = \frac{1}{p} \cdot (3 \cdot A_{i,j}/h - A_{i-1,j}/2)$$
 for $j = 0 \dots n$ (5.6)

3. Second loop (back substitution):

$$A_{i,j} = v_i \cdot A_{i+1,j} + A_{i,j}$$
 for $j = 0 \dots n$
$$\begin{cases} \text{for } i = (n-1) \dots 0 \end{cases}$$
 (5.7)

5.3.2 Position independent quantities

The following quantities depend on the bias conditions, but are constant along the channel:

$$if x_{g,ac} > 0 \begin{cases} y_{m} = \frac{1}{2} \cdot \left(1 + \frac{\Delta \psi_{ac}}{4 \cdot H_{ac}}\right) \\ p_{d} = \frac{x_{gm,ac}}{x_{g,ac} - x_{m,ac}} \\ G_{p} = G_{ac}/p_{d} \end{cases}$$
 (5.8)

if
$$x_{\rm g,ac} \le 0$$

$$\begin{cases} y_{\rm m} = 1/2 \\ p_{\rm d} = 1 \\ G_{\rm p} = G_{\rm ac} \end{cases}$$
(5.9)

$$a_{\rm p} = 1 + G_{\rm p}/\sqrt{2}$$
 (5.10)

$$p_{\rm mrg} = 10^{-5} \cdot a_{\rm p}$$
 (5.11)

5.3.3 Position dependent surface potential and charge

Interpolated (quasi-static) surface potential along the channel:

$$\Psi(y) = x_{\text{m,ac}} + \frac{H_{\text{ac}}}{\phi_{\mathbf{T}}^*} \cdot \left(1 - \sqrt{1 - \frac{2 \cdot \Delta \psi_{\text{ac}}}{H_{\text{ac}}} \cdot (y - y_{\text{m}})}}\right)$$
(5.12)

Normalized bulk-charge and its first two derivatives as functions of surface potential:

$$q_{\rm b}(x) = -\operatorname{sgn}(x) \cdot G_{\rm p} \cdot \sqrt{\exp(-x) + x - 1}$$

$$(5.13)$$

$$q_{\rm b}'(x) = \frac{G_{\rm p}^2 \cdot [1 - \exp(-x)]}{2 \cdot q_{\rm b}(x)}$$
(5.14)

$$q_{\rm b}''(x) = -q_{\rm b}'(x) - \frac{q_{\rm b}'(x)^2 - G_{\rm p}^2/2}{q_{\rm b}(x)}$$
(5.15)

Surface potential as a function of normalized inversion charge (note that these equations are identical to Eq. (4.191), despite the different notation and physical background):

$$\Pi(x_g) = \begin{cases} y_g = -x_g \\ z = 1.25 \cdot y_g/a_p \\ \eta = \left[z + 10 - \sqrt{(z - 6)^2 + 64}\right]/2 \\ a = (y_g - \eta)^2 + G_p^2 \cdot (\eta + 1) \\ c = 2 \cdot (y_g - \eta) - G_p^2 \\ \tau = -\eta + \ln\left(a/G_p^2\right) \\ y_0 = \sigma_1(a, c, \tau, \eta) \\ \Delta_0 = \exp(y_0) \\ \xi = 1 - G_p^2 \cdot \Delta_0/2 \\ p = 2 \cdot (y_g - y_0) + G_p^2 \cdot (\Delta_0 - 1) \\ \eta = (y_g - y_0)^2 + G_p^2 \cdot (y_0 - \Delta_0 + 1) \\ \Pi = -y_0 - \frac{2 \cdot q}{p + \sqrt{p^2 - 4 \cdot q \cdot \xi}} \\ \Pi = \frac{x_g}{a_p} \\ \begin{cases} \hat{x}_{g1} = \mathbf{x}_1 + G_p \cdot \sqrt{\exp(-\mathbf{x}_1) + \mathbf{x}_1 - 1} \\ \bar{x} = \frac{x_g}{a_p} \cdot [1 + x_g \cdot (\mathbf{x}_1 \cdot a_p/\hat{x}_{g1} - 1)/\hat{x}_{g1}] \\ x_0 = x_g + G_p^2/2 - G_p \cdot \sqrt{x_g + G_p^2/4 - 1 + \exp(-\bar{x})} \end{cases}$$

$$\Delta_0 = \exp(-x_0) \\ \xi = 1 - G_p^2 \cdot \Delta_0/2 \\ p = 2 \cdot (x_g - x_0) + G_p^2 \cdot (1 - \Delta_0) \\ q = (x_g - x_0)^2 - G_p^2 \cdot (x_0 + \Delta_0 - 1) \\ \Pi = x_0 + \frac{2 \cdot q}{p + \sqrt{p^2 - 4 \cdot q \cdot \xi}} \end{cases}$$

$$X(x_0, q_{\text{max}}) = \Pi(x_0 + q_{\text{max}}/p_4)$$

$$(5.17)$$

$$X(x_{\rm g}, q_{\rm inv}) = \Pi(x_{\rm g} + q_{\rm inv}/p_{\rm d}) \tag{5.17}$$

Auxiliary functions:

$$q(x) = -p_{d} \cdot (x_{g} - x) - q_{b}(x)$$
(5.18)

$$\psi(q, q_{x1}) = \frac{q}{q_{x1}} - 1 \tag{5.19}$$

$$\phi(q, q_{x1}, q_{x2}) = \left(1 - \frac{q \cdot q_{x2}}{q_{x1}^2}\right) / q_{x1} \tag{5.20}$$

Normalized right-hand-side of continuity equation:

$$f(x_{\rm g},q,q) = \frac{\partial q}{\partial x}(x_{\rm g}) = p_{\rm d} - q_{\rm b}'(x_{\rm g})$$

$$q_{x1} = \frac{\partial q}{\partial x}(x_{\rm g}) = p_{\rm d} - q_{\rm b}'(x_{\rm g})$$

$$q_{x2} = \frac{\partial^2 q}{\partial x^2}(x_{\rm g}) = q_{\rm b}''(x_{\rm g})$$

$$f_0 = \psi(q,q_{x1}) \cdot q'' + \phi(q,q_{x1},q_{x2}) \cdot q'^2$$

$$x_{y1} = \frac{\partial x_{\rm g}}{\partial y} = q'/q_{x1}$$

$$z_{\rm sat} = \begin{cases} \left(\theta_{\rm sat,ac}^* \cdot \phi_{\rm T}^* \cdot x_{y1}\right)^2 & \text{for NMOS} \end{cases}$$

$$z_{\rm sat} = \begin{cases} \left(\theta_{\rm sat,ac}^* \cdot \phi_{\rm T}^* \cdot x_{y1}\right)^2 & \text{for PMOS} \end{cases}$$

$$\zeta = \sqrt{1 + 2 \cdot z_{\rm sat}}$$

$$F_{\rm vsat} = 2/(1 + \zeta)$$

$$f = F_{\rm vsat} \cdot \left[f_0 - F_{\rm vsat} \cdot \frac{z_{\rm sat}}{\zeta} \cdot \psi(q,q_{x1}) \cdot (q'' + x_{y1}^2 \cdot q_{\rm b}''(x_{\rm g}))\right]$$
emalization constant:

Normalization constant:

$$T_{\text{norm}} = \frac{\text{MUNQS} \cdot \phi_{\text{T}}^* \cdot \beta}{C_{\text{OX}}^{\text{qm}}} \cdot G_{\text{mob,ac}} \cdot G_{\Delta L, \text{ac}}$$
(5.22)

5.3.4 Cubic spline interpolation

Using cubic spline interpolation, the spatial derivatives $\frac{\partial q_i}{\partial y}(t)$ and $\frac{\partial^2 q_i}{\partial y^2}(t)$ can be expressed as functions of the $q_i(t)$.

$$q_0'' = 0 (5.23)$$

$$q_n'' = 0 ag{5.24}$$

$$q_i'' = \sum_{j=0}^n A_{i,j} \cdot q_i$$
 for $1 \le i \le n-1$ (5.25)

$$q_i' = \frac{q_{i+1} - q_i}{h} - \frac{h}{6} \cdot (2 \cdot q_i'' + q_{i+1}'') \qquad \text{for } 1 \le i \le n - 1$$
(5.26)

5.3.5 Continuity equation

Initial value for the q_i ($0 \le i \le n$). These values are used for the DC operating point.

$$x_{i,0} = \Psi(i \cdot h) \tag{5.27}$$

$$q_{i,0} = q(x_{i,0}) (5.28)$$

Note: $x_{0,0} = x_s$ and $x_{n,0} = x_d$. Moreover, these values coincide with those in the quasi-static part of PSP.

The core of the NQS-model is the solution of q(y,t) from the charge continuity equation along the channel. By approximating the y-dependence by a cubic spline through a number of collocation points, the problem is reduced to solving the $q_i(t)$ from the following set of coupled differential equations.

$$\begin{cases}
\frac{\partial q_i}{\partial t}(t) + T_{\text{norm}} \cdot f\left(x_{\text{g,ac}}, q_i(t), \frac{\partial q_i}{\partial y}(t), \frac{\partial^2 q_i}{\partial y^2}(t)\right) = 0 \\
q_i(0) = q_{i,0}
\end{cases}$$
for $1 \le i \le n - 1$

Note that the boundary points $q_0(t) = q(x_s) = q_{is}$ and $q_n(t) = q(x_d) = q_{id}$ remain fixed to their quasi-static values; they are not solved from the equation above.

The set of differential equations defined above is solved by the circuit simulator via the subcircuits shown in the left part of Fig. 5.1.

5.3.6 Non-quasi-static terminal charges

Once the q_i are known, the NQS terminal charges can be computed:

$$S_0 = \sum_{i=1}^{n-1} q_i \tag{5.30}$$

$$S_2 = \sum_{i=1}^{n-1} q_i'' \tag{5.31}$$

$$q_{\rm I}^{\rm NQS} = \int_0^1 q(y) \, \mathrm{d}y = h \cdot S_0 + \frac{h}{2} \cdot (u_0 + u_n) - \frac{h^3}{12} \cdot S_2$$
 (5.32)

$$U_0 = \sum_{i=1}^{n-1} i \cdot q_i \tag{5.33}$$

$$U_2 = \sum_{i=1}^{n-1} i \cdot q_i'' \tag{5.34}$$

$$q_{\rm D}^{\rm NQS} = \int_0^1 y \cdot q(y) \, \mathrm{d}y = h^2 \cdot U_0 + \frac{h^2}{6} \cdot [q_0 + (3n - 1)u_n] - \frac{h^4}{12} \cdot U_2$$
 (5.35)

$$q_{\rm S}^{\rm NQS} = q_{\rm I}^{\rm NQS} - q_{\rm D}^{\rm NQS} \tag{5.36}$$

Currently, only **SWNQS** = 0, 1, 2, 3, 5, 9 are allowed. For odd values of **SWNQS** the gate charge is integrated along the channel using "Simpson's rule". If **SWNQS** = 2, "Simpson's 3/8-rule" is used.

• If **SWNQS** is odd (that is, n is even):

$$q_{\mathbf{G}}^{\text{NQS}} = p_{\mathbf{d}} \cdot \left[x_{\text{g,ac}} - \frac{h}{3} \cdot \left(X(x_{\text{g,ac}}, q_0) + 4 \cdot \sum_{i=1}^{n/2} X(x_{\text{g,ac}}, q_{2i-1}) + \frac{1}{2} \cdot \sum_{i=1}^{n/2-1} X(x_{\text{g,ac}}, q_{2i}) + X(x_{\text{g,ac}}, q_n) \right) \right]$$
(5.37)

• If **SWNQS** = 2 (that is, n = 3):

$$q_{\rm G}^{\rm NQS} = p_{\rm d} \cdot \left[x_{\rm g,ac} - \frac{3 \cdot h}{8} \cdot \left(X(x_{\rm g,ac}, q_0) + 3 \cdot X(x_{\rm g,ac}, q_1) + 3 \cdot X(x_{\rm g,ac}, q_2) + X(x_{\rm g,ac}, q_3) \right) \right] (5.38)$$

Convert back to conventional units:

$$Q_{\rm S}^{\rm NQS} = C_{\rm OX}^{\rm qm} \cdot \boldsymbol{\phi}_{\rm T}^* \cdot q_{\rm S}^{\rm NQS} \tag{5.39}$$

$$Q_{\mathrm{D}}^{\mathrm{NQS}} = C_{\mathrm{OX}}^{\mathrm{qm}} \cdot \phi_{\mathbf{T}}^{*} \cdot q_{\mathrm{D}}^{\mathrm{NQS}} \tag{5.40}$$

$$Q_{\rm G}^{\rm NQS} = C_{\rm OX}^{\rm qm} \cdot \phi_{\rm T}^* \cdot q_{\rm G}^{\rm NQS} \tag{5.41}$$

$$Q_{\rm B}^{\rm NQS} = -(Q_{\rm S}^{\rm NQS} + Q_{\rm D}^{\rm NQS} + Q_{\rm G}^{\rm NQS})$$
 (5.42)

Section 6

Embedding

6.1 Model selection

Circuit simulators have different ways for the user to determine which model must be used for simulation. Typically, model selection is either done by *name* or by assigning a value to the parameter **LEVEL**. The method to be used is prescribed by the circuit simulator vendor. If selection is done by name, the value of the parameter **LEVEL** is generally ignored. When Verilog-A code is used, model selection is always done by name.

For the SiMKit and the Verilog-A code provided by the PSP model developers, the method and values to be used are given in the table below. For other implementations, the method/value provided by the circuit simulator vendor is to be used.

From PSP 103.0 onwards, the global, local and binning models are unified. All three models are called by the same *name* or **LEVEL**. Model flavor selection is done by setting parameter **SWGEO**.

Simulator	Model selection by	Global (geom.)	Global (binning)	Local
Spectre Pstar	psp103 LEVEL = 103	CHICEO 1	CHACLEO 0	CWCEO 0
ADS	psp103	$\mathbf{SWGEO} = 1$	SWGEO = 2	$\mathbf{SWGEO} = 0$
Verilog-A	PSP103VA			

6.2 Case of parameters

Throughout this document, all parameter names are printed in uppercase characters. Similarly, in the Verilog-A code provided by the PSP model developers, the parameters are in upper case characters. However, in other PSP implementations a different choice can be made. For example, the parameter names may be in lowercase characters (possibly first character capitalized) if this is conform the conventions of the circuit simulator.

6.3 Embedding PSP in a Circuit Simulator

In CMOS technologies both n- and p-channel MOS transistors are supported. It is convenient to use the same set of equations for both types of transistor instead of two separate models. This is accomplished by mapping a p-channel device with its bias conditions and parameter set onto an equivalent n-channel device with appropriately changed bias conditions (i.e. currents, voltages and charges) and parameters. In this way both types of transistor can be treated internally as an n-channel transistor. Nevertheless, the electrical behavior

of electrons and holes is not exactly the same (e.g., the mobility and tunneling behavior), and consequently slightly different equations have to be used in case of n- or p-type transistors.

Designers are used to the standard terminology of source, drain, gate and bulk. Therefore, in the context of a circuit simulator it is traditionally possible to address, say, the drain of MOST number 17, even if in reality the corresponding source is at a higher potential (n-channel case). More strongly, most circuit simulators provide for model evaluation values for $V_{\rm DS}$, $V_{\rm GS}$, and $V_{\rm SB}$ based on an a priori assignment of source, drain, and bulk, independent of the actual bias conditions. Since PSP assumes that saturation occurs at the drain side of the MOSFET, the basic model cannot cope with bias conditions that correspond to $V_{\rm DS} < 0$. Again a transformation of the bias conditions is necessary. In this case, the transformation corresponds to internally reassigning source and drain, applying the standard electrical model, and then reassigning the currents and charges to the original terminals. In PSP care has been taken to preserve symmetry with respect to drain and source at $V_{\rm DS} = 0$. In other words, no singularities will occur in the higher-order derivatives at $V_{\rm DS} = 0$.

In detail, for correct embedding of PSP into a circuit simulator, the following procedure—illustrated in Fig. 6.1—is followed. It is assumed that the simulator provides the nodal potentials $V_{\rm D}^e$, $V_{\rm G}^e$, $V_{\rm S}^e$ and $V_{\rm B}^e$ based on an a priori assignment of drain, gate, source and bulk.

- Step 1 The voltages $V'_{\rm DS}$, $V'_{\rm GS}$, and $V'_{\rm SB}$ are calculated from the nodal potentials provided by the circuit simulator. In the same step, the value of the parameter **TYPE** is used to deal with the polarity of the device. From here onwards, all transistors can be treated as n-channel devices.
- Step 2 Depending on the sign of V'_{DS} , 'source-drain interchange' is performed. At this level, the voltages comply to all the requirements for input quantities of PSP.
- **Step 3** All the internal output quantities (i.e. channel current, weak-avalanche current, gate current, nodal charges, and noise-power spectral densities) are evaluated using the standard PSP equations (Section 4) and the internal voltages.
- **Step 4** The internal output quantities are corrected for a possible source-drain interchange.
- **Step 5** External output are corrected for a possible *p*-channel transformation and **MULT** is applied. The quantities of the intrinsic MOSFET and the junctions are combined.

In general, separate parameter sets are used for n- and p-channel transistors, which are distinguished by the value of **TYPE**. As a consequence, the changes in the parameter values necessary for a p-channel type transistor are normally already included in the parameter sets on file. The changes should therefore not be included in the simulator.

6.3.1 Selection of device type

In the SiMKit-based and built-in version of PSP in certain circuit simulators, the selection of device type (nmos or pmos) is done using a different parameter, or using different parameter values. The correct values for some circuit simulators are given in the table below.

Simulator	Parameter	Value NMOS	value PMOS
Spectre	type	n	р
Pstar	type	1	-1
ADS	gender	1	0
Verilog-A	TYPE	1	-1

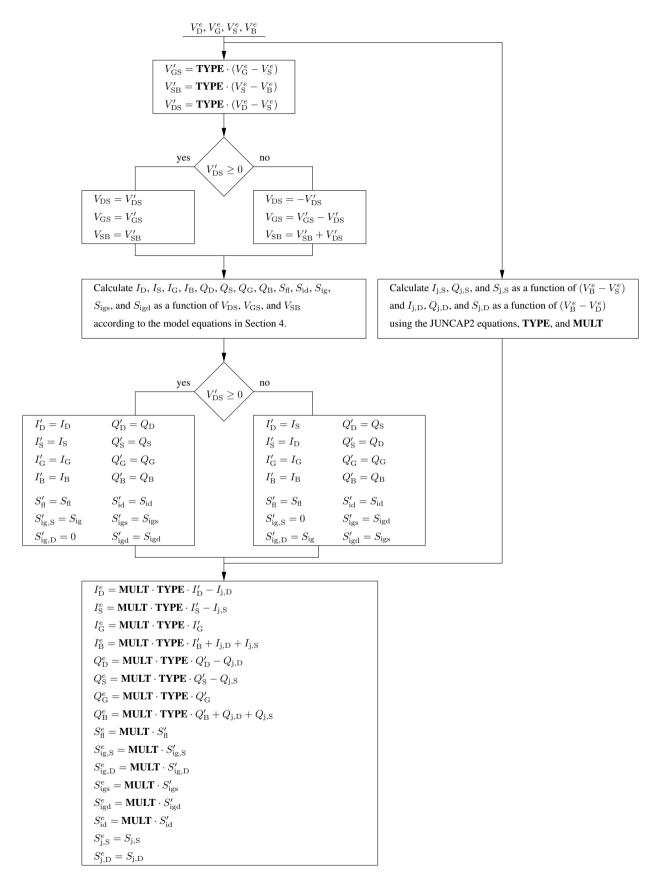


Figure 6.1: Schematic overview of source-drain interchange and handling of **TYPE** and **MULT**. Note that **TYPE** and **MULT** are included in the JUNCAP2 model equations.

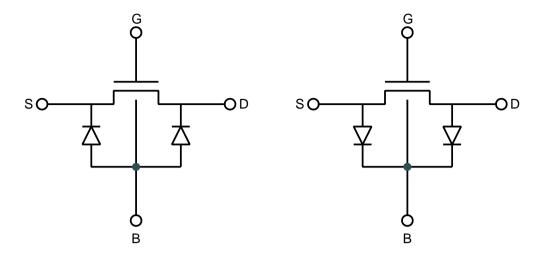


Figure 6.2: Topology of the PSP model. *Left:* n-channel MOSFET; *Right:* p-channel MOSFET. In PSP, the correct diode polarity is automatically chosen via the **TYPE**-parameter.

6.4 Integration of JUNCAP2 in PSP

Introduction

The JUNCAP2 model 200.3 is an integral part of PSP 102.2. In addition, it is available as a stand-alone model. A complete description of the JUNCAP2-model (including all model equations) can be found in the documentation of JUNCAP2's stand alone version [12]. In this section, only the integration of JUNCAP2 in PSP is described.

Topology

In a MOS transistor, there are two junctions: one between source and bulk, and one between drain and bulk. In case of an n-channel MOSFET, the junction anode corresponds to the MOSFET bulk terminal, and the junction cathodes correspond to the source and the drain. In case of a p-channel MOSFET, it is the other way around: now the junction cathode corresponds to the MOSFET bulk terminal, and the junction anodes correspond to the source and the drain. The connections are schematically given in Fig. 6.2. In PSP, this change of junction terminal connections in case of a p-MOSFET is handled automatically via the **TYPE** parameter.

In most cases, the MOSFET is operated in such a way that the junctions are either biased in the reverse mode of operation or not biased at all. In some applications, however, the source-bulk junction has a small forward bias. This is also the case in partially depleted SOI (PDSOI).

As indicated in Fig. 6.1, the interchange of source and drain for $V_{\rm DS} < 0$ (as explained above for the intrinsic MOS model) does *not* apply to the junctions. For example, **ABDRAIN** always refers to junction between the bulk and the terminal known as 'drain' to the simulator, independent of the sign of $V_{\rm DS}$.

Global and local model level

As explained in the introduction, the PSP model has a local and a global level. The JUNCAP2 model is a geometrically scaled model, i.e. it is valid for a range of junction geometries (as described by the geometrical parameters **AB**, **LS**, and **LG**). It has turned out that it is very unnatural to create a local parameter set for JUNCAP2, valid for one particular junction geometry: such a parameter set would have as many parameters as the global parameter set, and would be of no use. (Note that, in contrast, the local model for the intrinsic MOSFET is very useful in, e.g., parameter extraction; this is not the case for JUNCAP2.)

Therefore, the JUNCAP2 model is connected in exactly the same way to both the local and global model levels of PSP. That means that the resulting PSP local model is valid for a MOSFET with one particular channel width

and length, but with arbitrary junction geometry.

Parameters

Both junctions in the MOSFET are modeled with the same set of JUNCAP2 parameters. In the PSP model, the geometrical parameters **AB**, **LS**, and **LG** need to be specified for both source and drain. They will be denoted as **ABSOURCE**, **LSSOURCE**, and **LGSOURCE** for the source junction, and **ABDRAIN**, **LSDRAIN**, and **LGDRAIN** for the drain junction. For compatibility with BSIM instance parameters, there is also an option to use **AS**, **AD**, **PS**, and **PD**. The complete list of instance parameters (PSP and JUNCAP2) can be found in Section 2.5.1.

The parameter **MULT** is merged with the parameter **MULT** of the intrinsic MOSFET model. In other words, both intrinsic currents, charges, and noise as well as junction currents, charges and noise are multiplied by one single parameter **MULT**. Beside **MULT**, also the parameters **DTA** and **TYPE** are shared by the intrinsic MOSFET model and the junction model. For clarity, we mention here that the reference temperatures of the intrinsic MOSFET model and junction model are *not* merged; they each have their own value and name (**TR** and **TRJ**, respectively). The currents, charges and spectral noise densities of the source and drain junctions are labeled $I_{\rm j,S}$, $Q_{\rm j,S}$, $S_{\rm j,S}$, $I_{\rm j,D}$, $I_{\rm j,D}$, and $I_{\rm j,D}$ in Fig. 6.1.

6.5 Verilog-A versus C

As mentioned in Section 1.3, two implementations of the PSP-model are distributed: in Verilog-A language and in C-language (as part of the SiMKit). The C-version is automatically generated from the Verilog-A version by a software package called ADMS [1]. This procedure guarantees that the two implementations contain identical model equations.

Nevertheless, there are a few minor differences between the two, which are due to certain limitations of either the Verilog-A language or the circuit simulators supported in the SiMKit-framework. These differences are described below.

6.5.1 Implementation of GMIN

In both implementations, there is an additional term in Eqs. (4.219) and (4.220), resulting in

$$I_{\rm D} = I_{\rm DS} + I_{\rm avl} - I_{\rm GDov} - I_{\rm GCD} + I_{\rm gidl} + G_{\rm min} \cdot V_{\rm DS}$$

$$(6.1)$$

and

$$I_{\rm S} = -I_{\rm DS} - I_{\rm GSov} - I_{\rm GCS} + I_{\rm gisl} - G_{\rm min} \cdot V_{\rm DS}. \tag{6.2}$$

In the SiMKit, G_{\min} is a variable which is accessible by the circuit simulator. This allows the circuit simulator to improve the convergence properties of a circuit by making use of so-called ' G_{\min} -stepping'.

In the Verilog-A version of PSP, G_{\min} is set to a fixed value $G_{\min} = 1 \cdot 10^{-15} \; \mathrm{S}^{1}$

6.5.2 Implementation of parasitic resistances

From PSP 102.2 and PSP 103.0 onwards, a network of parasitic resistors has been inserted around the intrinsic MOSFET. If the user sets one or more of these resistance values to zero, the associated internal node(s) could be shorted to one of its neighbors, reducing the size of the matrix in the circuit simulator. This phenomenon is called 'node collapse' and is supported by most major circuit simulators.

 $^{^{1}}$ If supported by the circuit simulator, Verilog-A version 2.2 allows the value of G_{\min} to be accessed by the circuit simulator. Once this feature is generally available in Verilog-A compilers, it will be included in PSP as well.

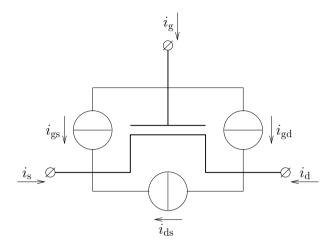


Figure 6.3: Definition of noise currents.

Flexible topology (and thus node collapse) is presently supported by most Verilog-A compilers. As a result, node collapse is functional in the official PSP Verilog-A in the majority of today's circuit simulators.

From SiMKit 3.0 onwards, the SiMKit architecture allows for flexible topologies and therefore supports node collapse in PSP. This functionality is therefore available in circuit simulations with that can work with SiMKit. Besides, many circuit simulators that have a native implementation of PSP support node collapse.

6.5.3 Implementation of the noise-equations

Definition of noise model

Eqs. (4.262), (4.263), and (4.264) describe the noise power spectral density of the thermal noise. In this section, the relationship between the quantities $S_{\rm id}$, $S_{\rm ig}$, and $S_{\rm igid}$ (as calculated in these equations) and noise sources in the model is defined.

Fig. 6.3 shows a schematic representation of a noiseless transistor (model) and three noise sources. The small-signal noise currents of these noise current sources are indicated by $i_{\rm ds}$, $i_{\rm gs}$, and $i_{\rm gd}$. The two noise sources connected to G are fully correlated. Moreover, each of them is partly correlated with the noise source between S and D. More precisely, the noise powers and correlations associated with these sources are given by

$$\langle i_{\rm ds} \cdot i_{\rm ds}^* \rangle = S_{\rm id}$$

$$\langle i_{\rm gd} \cdot i_{\rm ds}^* \rangle = S_{\rm igid}/2$$

$$\langle i_{\rm gs} \cdot i_{\rm ds}^* \rangle = S_{\rm igid}/2$$

$$\langle i_{\rm gd} \cdot i_{\rm gd}^* \rangle = S_{\rm ig}/4$$

$$\langle i_{\rm gs} \cdot i_{\rm gd}^* \rangle = S_{\rm ig}/4$$

$$\langle i_{\rm gs} \cdot i_{\rm gd}^* \rangle = S_{\rm ig}/4$$

$$\langle i_{\rm gs} \cdot i_{\rm gs}^* \rangle = S_{\rm ig}/4$$
(6.3)

The non-listed elements follow from the fact that this is a complex correlation matrix and therefore self-adjoint. This defines the noise model of PSP.

For completeness, we will give the noise correlation matrix associated with the *terminal* currents i_d , i_g and i_s , because it is closer related to the numbers that are obtained in a circuit simulation. Because $i_d = i_{ds} - i_{gs}$,

 $i_{\rm g}=i_{\rm gs}+i_{\rm gd}$ and $i_{\rm s}=i_{\rm gs}-i_{\rm ds}$, we find by straightforward substitution and some basic arithmetic

$$\langle i_{\rm d} \cdot i_{\rm d}^* \rangle = S_{\rm id} + S_{\rm ig}/4 - \operatorname{Re}(S_{\rm igid})$$

$$\langle i_{\rm g} \cdot i_{\rm d}^* \rangle = S_{\rm igid} - S_{\rm ig}/2$$

$$\langle i_{\rm s} \cdot i_{\rm d}^* \rangle = -S_{\rm id} + S_{\rm ig}/4 - \operatorname{Im}(S_{\rm igid})$$

$$\langle i_{\rm g} \cdot i_{\rm g}^* \rangle = S_{\rm ig}$$

$$\langle i_{\rm s} \cdot i_{\rm g}^* \rangle = -S_{\rm igid}^* - S_{\rm ig}/2$$

$$\langle i_{\rm s} \cdot i_{\rm s}^* \rangle = S_{\rm id} + S_{\rm ig}/4 + \operatorname{Re}(S_{\rm igid})$$
(6.4)

Verilog-A

In Verilog-A it is not possible to define noise sources that are frequency dependent (except for 1/f-noise), nor is it possible to directly define correlations between noise sources. Instead, the desired model must be created by using controlled sources and the frequency transfer of passive elements.²

The goal is to create the three noise sources shown in Fig. 6.3 with the noise powers (including frequency dependence and correlation) as described by Eq. (6.3).

To simplify notation, we rewrite Eqs. (4.263) and (4.264) as

$$S_{ig} = \frac{N_{T}}{m_{ig}} \cdot |T|^2 \tag{6.5}$$

and

$$S_{\text{igid}} = \frac{N_{\text{T}}}{m_{\text{ig}}} \cdot m_{\text{igid}} \cdot T, \tag{6.6}$$

where

$$T = \frac{j \cdot \omega \cdot \tau}{1 + j \cdot \omega \cdot \tau},\tag{6.7}$$

 $\tau = m_{\rm ig} \cdot C_{\rm Geff}$ and ω is the operating frequency.

Correlation between noise sources in verilog-A can be created by making linear combinations of independent sources. Therefore, we start with two *independent* white noise sources with current noise spectral densities S_1 and S_2 and noise currents S_2 an

$$i_{\rm gs} = i_{\rm gd} = \frac{1}{2} \cdot \alpha_1 \cdot i_1 \tag{6.8}$$

$$i_{\rm ds} = \beta_1 \cdot i_1 + \beta_2 \cdot i_2, \tag{6.9}$$

where α_1 , β_1 , and β_2 are certain (complex) coefficients, we get

$$S_{ig} = 4 \cdot \langle i_{gd} \cdot i_{gd}^* \rangle = |\alpha_1|^2 \cdot \langle i_1 \cdot i_1^* \rangle$$

= $|\alpha_1|^2 \cdot S_1$ (6.10)

$$S_{id} = \langle i_{ds} \cdot i_{ds}^* \rangle = |\beta_1|^2 \cdot \langle i_1 \cdot i_1^* \rangle + \beta_1 \cdot \beta_2^* \cdot \langle i_1 \cdot i_2^* \rangle + |\beta_2|^2 \cdot \langle i_2 \cdot i_2^* \rangle$$

$$= |\beta_1|^2 \cdot S_1 + |\beta_2|^2 \cdot S_2$$
(6.11)

$$S_{\text{igid}} = 2 \cdot \langle i_{\text{gd}} \cdot i_{\text{ds}}^* \rangle = \alpha_1 \cdot \beta_1^* \cdot \langle i_1 \cdot i_1^* \rangle + \alpha_1 \cdot \beta_2^* \cdot \langle i_1 \cdot i_2^* \rangle$$

$$= \alpha_1 \cdot \beta_1^* \cdot S_1. \tag{6.12}$$

Here we used that the noise currents i_1 and i_2 are independent, such that $\langle i_1 \cdot i_2^* \rangle = 0$. We need to choose proper values for the coefficients α_1 , β_1 and β_2 , as well as S_1 and S_2 , such that S_{ig} , S_{id} , and S_{igid} get the correct value.

²Although this appears to be a limitation, it is in fact very helpful to ensure that the resulting noise model is consistent with time-domain simulations.

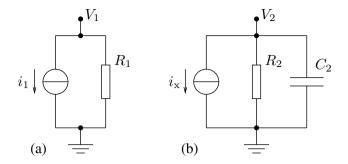


Figure 6.4: The two subcircuits used in PSP's Verilog-A implementation to model the correct frequency dependence of induced gate noise and its correlation with the channel thermal noise.

There is some freedom in choosing the numbers; the values that are used in the verilog-A implementation of PSP are

$$\alpha_1 = T \tag{6.13}$$

$$\beta_1 = m_{\text{igid}} \tag{6.14}$$

$$\beta_2 = 1 \tag{6.15}$$

$$S_1 = N_{\rm T}/m_{\rm ig} \tag{6.16}$$

$$S_2 = \mathbf{N_T} \cdot (1 - C_{\text{igid}}^2) \cdot m_{\text{id}}, \tag{6.17}$$

where

$$C_{\text{igid}} = \frac{m_{\text{igid}}}{\sqrt{m_{\text{ig}} \cdot m_{\text{id}}}},\tag{6.18}$$

and $m_{\rm id}$, $m_{\rm ig}$, and $m_{\rm igid}$ are given by Eqs. (4.259), (4.260), and (4.261), respectively.

To achieve this, we make use of the subcircuits depicted in Fig. 6.4. The first subcircuit (a) contains a parallel connection of a white noise source with current small-signal noise current i_1 and a resistor R_1 . The voltage over the elements is denoted by V_1 . The second subcircuit (b) contains a voltage-controlled current source with current i_x , a resistor R_2 , and a capacitor C_2 . The nodal voltage is denoted by V_2 .

The parameters of these components are given by

$$S_1 = \langle i_1 \cdot i_1^* \rangle = S_{ig}^0 \cdot S_f^2 \tag{6.19}$$

$$R_1 = 1\Omega \tag{6.20}$$

$$i_{\rm x} = -V_1/s_{\rm f} \tag{6.21}$$

$$R_2 = m_{ig} ag{6.22}$$

$$C_2 = C_{\text{Geff}} \tag{6.23}$$

where the values of $C_{\rm Geff}$ is given by Eqs. (4.248) and

$$S_{\rm ig}^0 = \frac{N_{\rm T}}{m_{\rm ig}}.\tag{6.24}$$

Moreover, we introduce a scaling factor $s_{\rm f} = \omega_0 \cdot m_{\rm ig} \cdot C_{\rm Geff}$ with $\omega_0 = 1$ MHz. Note that the value of $s_{\rm f}$ and ω_0 do not affect the final result, but help to give the noise power of V_1 a reasonable value.

Choosing the elements in this way, creates a frequency dependent current i_C through the capacitor C_2 given by

$$i_C = T \cdot i_{\mathbf{x}}. \tag{6.25}$$

The two noise sources connected to the gate in Fig. 6.3 are now realized as two current-controlled current sources with

$$i_{\rm gd} = i_{\rm gs} = \frac{1}{2} \cdot i_C.$$
 (6.26)

The third source in Fig. 6.3 (between source and drain) is realized by putting two elements in parallel:

- A voltage controlled current source with value $(m_{\rm igid}/s_{\rm f}) \cdot V_1$ and
- A white noise source with current power spectral density $S_2 = N_T \cdot (1 C_{\text{igid}}^2) \cdot m_{\text{id}}$.

To complete the model, we remark that from Fig. 6.3 it is clear that source-drain interchange only affects the sign of $i_{\rm ds}$.

In summary, the relevant portion of the verilog-A implementation is given by (mult-scaling and labels are not included for clarity):

```
electrical NOI;
electrical NOI2;
branch (NOI) NOII;
branch (NOI) NOIR;
branch (NOI) NOIC;
// subcircuit (a)
I(NOI2) <+ V(NOI2);</pre>
I(NOI2)
          <+ white_noise(sqig * sqig * sf * sf);</pre>
// subcircuit (b)
I(NOII) <+ -V(NOI2) / sf;
I(NOIR) <+ V(NOIR) / mig;
          <+ ddt(CGeff * V(NOIC));</pre>
T (NOTC)
// noise sources ids, igs, and igd
I(DI,SI) <+ white_noise(sqid * sqid * (1.0 - c_igid * c_igid));</pre>
I(DI,SI) <+ sigVds * migid * V(NOI2) / sf;</pre>
I(GP,SI) <+ ddt(0.5 * CGeff * V(NOIC));
I(GP,DI) <+ ddt(0.5 * CGeff * V(NOIC));</pre>
```

It is straightforward to verify that this implementation of PSP's noise model in Verilog-A naturally yields the desired correlations and frequency dependence. However, it requires two additional internal nodes.

SiMKit C-code

Contrary to the limitation of Verilog-A language, most circuit simulators are able to directly deal with correlated and frequency dependent noise—without the use of additional internal nodes. In order to minimize the simulation time of the model, C-implementations should therefore avoid the use of such internal nodes whenever possible.

In SiMKit, the frequency dependence and correlation of the noise sources indicated in Fig. 6.3 are implemented directly according to Eq. (6.3). The result is therefore equivalent to the verilog-A implementation.

In summary, even though the SiMKit-implementation of the noise model in PSP is different from that in verilog-A (as it does not make use of additional internal nodes) the result of noise noise simulations will be identical.

6.5.4 Clip warnings

From SiMKit 3.7 onwards, it is possible to set the level of clip-warning information through the value of the parameter **PARAMCHK**. This functionality is available for most SiMKit models. It is *not* available in the verilog-A version of PSP.

If the value of **PARAMCHK** is

- < 0 All clip warnings are suppressed.
- ≥ 0 (default) Clip warnings for instance parameters.
- ≥ 1 Clip warnings for model parameters.
- ≥ 2 Clip warnings for internally computed local parameters during model initialization.
- ≥ 3 Clip warnings for internally computed local parameters during model evaluation.

This works in an accumulative manner: if a higher value of **PARAMCHK** is used, the warnings associated with lower levels are still included. Note that the highest level is of interest only for self heating models, where electrical parameters may change dependent on temperature. Also note that the default value (0) results in less clip warnings than in earlier versions of the model.

Section 7

Parameter extraction

The parameter extraction strategy for PSP consists of four main steps:

- 1. Measurements
- 2. Extraction of local parameters at room temperature
- 3. Extraction of temperature scaling parameters
- 4. Extraction of geometry scaling (global) parameters

The above steps will be briefly described in the following sections. Note that the description of the extraction procedure is not 'complete' in the sense that only the most important parameters are discussed and in cases at hand it may be advantageous (or even necessary) to use an adapted procedure.

Throughout this section, bias and current conditions are given for an n-channel transistor only; for a p-channel transistor, all voltages and currents should be multiplied by -1.

As explained in the introduction, the hierarchical setup of PSP (local and global level) allows for the twostep parameter extraction procedure described in this section; this is the recommended method of operation. Nevertheless, it is possible to skip the first steps and start extracting global parameters directly. This procedure is not described here, but the directions below may still be useful.

7.1 Measurements

The parameter extraction routine consists of six different DC-measurements (two of which are optional) and two capacitance measurements. Measurement V and VI are only used for extraction of gate-current, avalanche, and GIDL/GISL parameters.

```
• Measurement I ("idvg"): I_{\rm D} vs. V_{\rm GS}

V_{\rm GS}=0\ldots V_{\rm sup} (with steps of maximum 50 mV).

V_{\rm DS}=25 or 50 mV

V_{\rm BS}=0\ldots -V_{\rm sup} (3 or more values)
```

• Measurement II ("idvgh"): $I_{\rm D}$ vs. $V_{\rm GS}$ $V_{\rm GS}=0\ldots V_{\rm sup}$ (with steps of maximum 50 mV). $V_{\rm DS}=V_{\rm sup}$ $V_{\rm BS}=0\ldots -V_{\rm sup}$ (3 or more values)

 $^{^{1}}$ The bias conditions to be used for the measurements are dependent on the supply voltage of the process. Of course it is advisable to restrict the range of voltages to this supply voltage V_{sup} . Otherwise physical effects atypical for normal transistor operation—and therefore less well described by PSP—may dominate the characteristics.

```
• Measurement III ("idvd"): I_{\rm D} vs. V_{\rm DS} V_{\rm GS}=0\ldots V_{\rm sup} (3 or more values) V_{\rm DS}=0\ldots V_{\rm sup} (with steps of maximum 50 mV). V_{\rm BS}=0 V
```

• Measurement IV ("idvdh", optional): $I_{\rm D}$ vs. $V_{\rm DS}$ $V_{\rm GS}=0\ldots V_{\rm sup}$ (3 or more values) $V_{\rm DS}=0\ldots V_{\rm sup}$ (with steps of maximum 50 mV). $V_{\rm BS}=-V_{\rm sup}$

```
• Measurement V ("igvg"): I_{\rm G} and I_{\rm B} vs. V_{\rm GS} V_{\rm GS} = -V_{\rm sup} \dots V_{\rm sup} (with steps of maximum 50 mV). V_{\rm DS} = 0 \dots V_{\rm sup} (3 or more values) V_{\rm BS} = 0 V
```

• Measurement VI ("igvgh", optional): $I_{\rm G}$ and $I_{\rm B}$ vs. $V_{\rm GS}$ $V_{\rm GS} = -V_{\rm sup} \dots V_{\rm sup}$ (with steps of maximum 50 mV). $V_{\rm DS} = 0 \dots V_{\rm sup}$ (3 or more values) $V_{\rm BS} = -V_{\rm sup}$

```
• Measurement VII ("cggvg"): C_{\rm GG} vs. V_{\rm GS} V_{\rm GS}=-V_{\rm sup}\dots V_{\rm sup} (with steps of maximum 50 mV). V_{\rm DS}=0 V V_{\rm BS}=0 V
```

```
• Measurement VIII ("ccgvg"): C_{\rm CG} vs. V_{\rm GS} V_{\rm GS} = -V_{\rm sup} \dots V_{\rm sup} (with steps of maximum 50 mV). V_{\rm DS} = 0 V V_{\rm BS} = 0 V
```

For the extraction procedure, the transconductance $g_{\rm m}$ (for Measurement I and II) and the output conductance $g_{\rm DS}$ (for Measurement III and IV) are obtained by numerical differentiation of the measured I-V-curves. Furthermore, $I_{\rm min}$ is the smallest current which can reliably measured by the system (noise limit) and $I_{\rm T}$ is defined as 10% of the largest measured value of $|I_{\rm D}|$ in Measurement I. The latter will be used to make a rough distinction between the subthreshold and superthreshold region.

The channel-to-gate capacitance $C_{\rm CG}$ in Measurement VIII is the summation of the drain-to-gate capacitance $C_{\rm DG}$ and the source-to-gate capacitance $C_{\rm SG}$ (i.e., source and drain are short-circuited); it is needed to extract overlap capacitance parameters.

The local parameter extraction measurements I through VI have to be performed at room temperature for every device. In addition, capacitance measurements VII and VIII need to be performed for at least a long/wide and a short/wide (i.e., $L=L_{\rm min}$) transistor (at room temperature). Furthermore, for the extraction of temperature scaling parameters measurements I, III, and V have to be performed at different temperatures (at least two extra, typically $-40\,^{\circ}{\rm C}$ and $125\,^{\circ}{\rm C}$) for at least a long wide and a short wide transistor.

7.2 Extraction of local parameters at room temperature

General remarks

The simultaneous determination of *all* local parameters for a specific device is not advisable, because the value of some parameters can be wrong due to correlation and suboptimization. Therefore it is more practical to

split the parameters into several small groups, where each parameter group can be determined using specific measurements. In this section, such a procedure will be outlined.

The extraction of local parameters is performed for every device. In order to ensure that the temperature scaling relations do not affect the behavior at room temperature, the reference temperature **TR** should be set equal to room temperature.

Before starting the parameter extraction procedure, one should make sure that **SWIGATE**, **SWIMPACT**, **SWGIDL**, **SWJUNCAP**, and **TYPE** are set to the desired value. Moreover, **QMC** should be set to 1, in order to include quantum mechanical corrections in the simulations.

It is not the case that all local parameters are extracted for every device. Several parameters are only extracted for one or a few devices, while they are kept fixed for all other devices. Moreover, a number of parameters can generally be kept fixed at their default values and need only occasionally be used for fine-tuning in the optimization procedure. Details are given later in this section.

As a special case, it is generally not necessary to extract values for \mathbf{AX} . In stead, they can be calculated from Eq. (3.63), using $\mathbf{AXO} \sim 18$ and $\mathbf{AXL} \sim 0.25$. It may be necessary to tune the latter value such that the value of \mathbf{AX} is between 2 and 3 for the shortest channel in the technology under study.

It is recommended to start the extraction procedure with the long(est) wide(st) device, then the shortest device with the same width, followed by all remaining devices of the same width in order of decreasing length. Then the next widest-channel devices are extracted, where the various lengths are handled in the same order. In this way, one works ones way down to the narrowest channel devices.

AC-parameters

Some parameters (such as **TOX** and **NP**) that do affect the DC-behavior of a MOSFET can only be extracted accurately from C-V-measurements.² This should be done before the actual parameter extraction from DC-measurements is started. In Tables 7.1 and 7.2 the extraction procedure for the AC-parameters is given.

Table 7.1: AC-parameter extraction procedure for a long channel MOSFET.

Step	Optimized parameters	Fitted on	Abs./Rel.	Conditions
1	VFB,NEFF, DPHIB, NP, COX	VII: C_{GG}	Relative	_
2	Repeat Step 1			

Table 7.2: AC-parameter extraction procedure for a short channel MOSFET. The values of **VFB** and **NP** are taken from the long-channel case.

Step	Optimized parameters	Fitted on	Abs./Rel.	Conditions
1	NEFF, DPHIB, COX	VII: C_{GG}	Relative	_
2	CGOV, NOV	VIII: $C_{\rm CG}$	Relative	$V_{\rm GS} < 0$
3	Repeat Steps 1 and 2			

Starting from the default parameter set and setting **TOX** to a reasonable value (as known from technology), **VFB**, **NEFF**, **DPHIB**, **COX**, and **NP** can be extracted from C_{GG} in Measurement VII for a long, wide device.

Next, **NOV** and **CGOV** can be extracted from C_{CG} in Measurement VIII for a short, wide device (see also Table 7.1), where **VFB** and **NP** are taken from the long channel case. In general, one can assume **TOXOV** = **TOX**.

The value of **TOX** can be determined from $\mathbf{COX} = \epsilon_{ox} \cdot L \cdot W/\mathbf{TOX}$. If the device is sufficiently long and wide, drawn length and width can be used in this formula. Even better, if Measurement VII is available for a

²Although parameter **NOV** can be determined from overlap gate current, it is nonetheless more accurately determined from Measurement VIII.

few short/wide devices of different lengths, one can extract **TOX** and ΔL from a series of extracted values of **COX** vs. $L_{\rm draw}$.

Some remarks:

- If C-V-measurements are not available, one could revert to values known from the fabrication process. Note that **TOX** and **TOXOV** are *physical* oxide thicknesses; poly-depletion and quantum-mechanical effects are taken care of by the model. If the gate dielectric is not pure SiO₂, one should manually compensate for the deviating dielectric constant.
- In general, **VFB** and **NP** can be assumed independent of channel length and width (so, the long/wide-channel values can be used for all other devices as well). Only if no satisfactory fits are obtained, one could allow for a length dependence (for **NP**) or length *and* width dependence (for **VFB**). Then, one should proceed by extracting **VFB** and/or **NP** from capacitance measurements for various channel geometries, fit Eq. (3.12) / Eq. (3.32) to the result and use interpolated values in the DC parameter extraction procedure.
- The value of parameter **TOX** profoundly influences both the DC- and AC-behavior of the PSP-model and thus the values of many other parameters. It is therefore very important that this parameter is determined (as described above) and *fixed* before the rest of the extraction procedure is started.

If desired (e.g., for RF-characterization), parameters for several parasitic capacitances (gate-bulk overlap, fringe capacitance, etc.) can be extracted as well (**CGBOV** and **CFR**). However, this requires additional capacitance measurements.

The obtained values of VFB, TOX, TOXOV, NP, and NOV can now be used in the DC-parameter extraction procedure. The above values of NEFF and DPHIB can be disregarded; they will be determined more accurately from the DC-measurements.

In devices with strong lateral non-uniform doping, the threshold voltage in AC-measurements may deviate significantly from that in DC-measurements. If that is the case, values for **NEFF** and **DPHIB** obtained from DC-measurements may not be satisfactory to describe AC-measurements. Then, one has the option to set $\mathbf{SWDELVTAC} = 1$, $\mathbf{DELVTAC} = \mathbf{DPHIB}_{ac} - \mathbf{DPHIB}_{dc}$, and $\mathbf{FACNEFFAC} = \mathbf{NEFF}_{ac}/\mathbf{NEFF}_{dc}$ to get a good description of both the DC and the AC measurements.

DC-parameters

Before the optimization is started a reasonably good starting value has to be determined, both for the parameters to be extracted and for the parameters which remain constant. For most parameters to be extracted for a *long* channel device, the default values from local parameters in Section 2.5.2 can be taken as initial values. Exceptions are given in Table 7.3. Starting from these values, the optimization procedure following the scheme below is performed. This method yields a proper set of parameters after the repetition indicated as the final step in the scheme. Experiments with transistors of several processes show that repeating those steps more than once is generally not necessary.

For an accurate extraction of parameter values, the parameter set for a long-channel transistor has to be determined first. In the long-channel case most of the mobility related parameters (i.e. MUE and THEMU) and the gate tunneling parameters (GCO, GC2, and GC3) are determined and subsequently fixed for the shorter-channel devices.

In Table 7.4 the complete DC extraction procedure for long-channel transistors is given. The magnitude of the simulated $I_{\rm D}$ and the overall shape of the simulated $I_{\rm D}$ - $V_{\rm GS}$ -curve is roughly set in Step 1. Next the parameters **NEFF**, **DPHIB**, and **CT**—which are important for the subthreshold behavior—are optimized in Step 2, neglecting short-channel effects such as drain-induced barrier-lowering (DIBL). After that, the mobility parameters are optimized in Step 3, neglecting the influence of series-resistance. In Step 4 a preliminary value of the velocity saturation parameter is obtained, and subsequently the conductance parameters **ALP**, **ALP1**, **ALP2**, and **VP** are determined in Step 5. A more accurate value of **THESAT** can now be obtained using Step 6. The gate current parameters are determined in Steps 7 and 8, where it should be noted that **GCO** should only be extracted if the influence of gate-to-bulk tunneling is visible in the measurements. This is usually the

Table 7.3: Initial values for local parameter extraction for a *long*-channel device. For parameters which are not listed in this table, the default value (as given in Section 2.5.2) can be used as initial value.

Parameter	Initial value
BETN	$0.03 \cdot W/L$
RS	0
THESAT	0.1
AX	12
A1	0

Table 7.4: DC-parameter extraction procedure for a long-channel MOSFET. The parameters **VFB**, **TOX**, **TOXOV**, **NP**, and **NOV** must be taken from *C-V*-measurements. The optimization is either performed on the absolute or relative deviation between model and measurements, as shown in the table.

Step	Optimized parameters	Fitted on	Abs./Rel.	Conditions
1	NEFF, BETN, MUE, THEMU ^a	I: $I_{ m D}$	Absolute	_
2	NEFF, DPHIB, CT, GFACNUD	I: $I_{ m D}$	Relative	$I_{ m min} < I_{ m D} < I_{ m T}$
3	MUE, THEMU ^a , CS, XCOR, BETN	I: $I_{\rm D}, g_{\rm m}$	Absolute	_
4	THESAT	III: $I_{ m D}$	Absolute	
5	ALP , $ALP1$, $ALP2$, VP^a , (AX)	III: g_{DS}	Relative	_
6	THESAT	II: I_{D}	Absolute	
7	$IGINV, GC2^a, GC3^a$	$V:I_{\mathrm{G}}$	Relative	$I_{ m G} > I_{ m min}$
8	$IGOV, (GCO^a)$	$V:I_{\mathrm{G}}$	Relative	$V_{\mathrm{GS}} < 0 \; \mathrm{V}, I_{\mathrm{G}} < -I_{\mathrm{min}}$
9	$A1, A2^a, A3$	$ ext{V:}\ I_{ ext{B}}$	Relative	$V_{\mathrm{GS}} > 0$ V, $I_{\mathrm{B}} < -I_{\mathrm{min}}$
10	A4	$ ext{VI:}\ I_{ ext{B}}$	Relative	$V_{\mathrm{GS}} > 0$ V, $I_{\mathrm{B}} < -I_{\mathrm{min}}$
11	\mathbf{AGIDL} , \mathbf{BGIDL}^a	$V:I_{\mathrm{B}}$	Relative	$V_{\mathrm{GS}} < 0$ V, $I_{\mathrm{B}} < -I_{\mathrm{min}}$
12	\mathbf{CGIDL}^a	$ ext{VI:}\ I_{ ext{B}}$	Relative	$V_{\mathrm{GS}} < 0$ V, $I_{\mathrm{B}} < -I_{\mathrm{min}}$
13	Repeat Steps 2 – 12			

 $[^]a$ Only extracted for the widest long channel device and fixed for all other geometries.

case if $V_{\text{sup}} \gtrsim |\mathbf{VFB}|$. This is followed by the weak-avalanche parameters in Step 9 and (optionally) 10, and finally, the gate-induced leakage current parameters are optimized in Step 11 and (optionally) 12.

After completion of the extraction for the long-channel device, it is recommended to first extract parameters for the shortest-channel device (of the same width). The mobility-reduction parameters (**MUE**, **THEMU**) and the gate tunneling probability factors (**GCO**, **GC2**, **GC3**) found from the corresponding long-channel device should be used. The extraction procedure as given in Table 7.5 should be used.

Once the value for **RS** has been found from the shortest device, it should be copied into the long-channel parameter set and steps 2–3 (Table 7.4) should be repeated, possibly leading to some readjustment of **MUE** and **THEMU**. If necessary, this procedure must be repeated. Similarly—once the value of **THESATG** and **THESATB** have been determined from the shortest widest channel device—steps 4, 5, and 6 of the long-channel extraction procedure (Table 7.4) must be repeated to obtain updated values for **THESAT**, **ALP**, **ALP1**, and **ALP2**.

If consistent parametersets have been found for the longest and shortest channel device, the extraction procedure as given in Table 7.5 can be executed for all intermediate channel lengths. The extracted parameter values of

Table 7.5: DC-parameter extraction procedure for a short-channel MOSFET. Parameters MUE, THEMU, VP, GCO, GC2, GC3, A2, A4, BGIDL, and CGIDL are taken from the corresponding long-channel case. The optimization is either performed on the absolute or relative deviation between model and measurements, as indicated in the table.

Step	Optimized parameters	Fitted on	Abs./Rel.	Conditions
1	NEFF, DPHIB, BETN, RS ^a	I: $I_{ m D}$	Absolute	_
2	NEFF, DPHIB, CT, GFACNUD, VSB-NUD b , DVSBNUD b	I: I_{D}	Relative	$I_{ m min} < I_{ m D} < I_{ m T}$
3	BETN, RS^a , XCOR	I: $I_{\rm D}, g_{\rm m}$	Absolute	_
4	THESAT	III: $I_{ m D}$	Absolute	_
5	ALP, ALP1, ALP2, CF, (AX)	III: g_{DS}	Relative	_
6	\mathbf{CFB}^b	IV: g_{DS}	Relative	_
7	THESAT, THESATG b , THESATB b	II: $I_{\rm D}, g_{\rm m}$	Absolute	_
8	IGINV, IGOV	$V:I_{\mathrm{G}}$	Relative	$ I_{ m G} >I_{ m min}$
9	A1, A3	$ ext{V:}\ I_{ ext{B}}$	Relative	$V_{\mathrm{GS}} > 0$ V, $I_{\mathrm{B}} < -I_{\mathrm{min}}$
10	AGIDL	$ ext{V:}\ I_{ ext{B}}$	Relative	$V_{ m GS} < 0$ V, $I_{ m B} < -I_{ m min}$
11	Repeat Steps 2 – 10			

^aOnly extracted for the *shortest* channel of each width and fixed for all other geometries.

the next-longer device can be used as initial values.

Finally, the parameters **GFACNUD**, **VSBNUD**, and **DVSBNUD** should only be used if the description of the body effect is not satisfactory otherwise. For this, the NUD-model must be invoked by setting SWNUD = 1.

7.3 Extraction of Temperature Scaling Parameters

For a specific device, the temperature scaling parameters can be extracted after determination of the local parameters at room temperature. In order to do so, measurements I, II and IV need to be performed at various temperature values (at least two values different from room temperature, typically $-40\,^{\circ}\text{C}$ and $125\,^{\circ}\text{C}$), at least for a long wide device and a short wide device. If the reference temperature TR has been chosen equal to room temperature (as recommended in Section 7.2), the modeled behavior at room temperature is insensitive to the value of the temperature scaling parameters. As a first-order estimate of the temperature scaling parameter values, the default values as given by local parameters in Section 2.5.2 can be used. Again the parameter extraction scheme is slightly different for the long-channel and for the short-channel case.

For an accurate extraction, the temperature scaling parameters for a long-wide-channel device have to be determined first. In the long-wide-channel case the carrier mobility parameters can be determined, and they are subsequently fixed for all other devices. In Table 7.6 the appropriate extraction procedure is given. In Step 1 the subthreshold temperature dependence is optimized, followed by the optimization of mobility reduction parameters in Step 2. Next the temperature dependence of velocity saturation is optimized in Step 3. In the subsequent steps, parameters for the temperature dependence of the gate current, the impact ionization current and gate-induced drain leakage are determined. The determined values of the mobility reduction temperature scaling parameters (i.e., STMUE, STTHEMU, STCS, and STXCOR) are copied to all other devices and kept fixed during the remainder of the temperature-scaling parameter extraction procedure. Step 1 and 2 could then be performed on one or more long narrow devices as well (for STVFB, STBETN, and STTHESAT only).

Next the extraction procedure as given in Table 7.7 is carried out for several short devices of different widths. Preferably, the extraction is done first for a short narrow device, such that the determined value of **STRS** can be used during the extraction of the wider devices.

^bOnly extracted for the *shortest widest* device and fixed for all other geometries.

Table 7.6: Temperature scaling parameter extraction procedure for a long wide channel MOSFET. This scheme only makes sense if measurements have been performed at one or (preferably) more temperatures which differ from room temperature.

Step	Optimized parameters	Fitted on	Abs./Rel.	Conditions
1	$STVFB^a$	I: $I_{ m D}$	Relative	$I_{ m D} < I_{ m T}$
2	STBETN ^a , STMUE, STTHEMU,	I: I_{D}	Absolute	_
	STCS, STXCOR			
3	STTHESAT ^a	II: I_{D}	Absolute	-
4	STIG	$V:I_{\mathrm{G}}$	Relative	$ I_{ m G} >I_{ m min}$
5	STA2	$V:I_{\mathrm{B}}$	Relative	$V_{ m GS}>0$ V, $I_{ m B}<-I_{ m min}$
6	STBGIDL	$V:I_{\mathrm{B}}$	Relative	$V_{\mathrm{GS}} < 0$ V, $I_{\mathrm{B}} < -I_{\mathrm{min}}$

^aAlso extracted for one or more long *narrow* devices.

Table 7.7: Temperature scaling parameter extraction procedure for short-channel MOSFETs (both wide and narrow). This scheme only makes sense if measurements have been performed at one or (preferably) more temperatures which differ from room temperature.

Step	Optimized parameters	Fitted on	Abs./Rel.	Conditions
1	STVFB	I: I_{D}	Relative	$V_{\rm GS} < V_{ m T}$
2	STBETN, STRS a	I: I_{D}	Absolute	$V_{\rm GS} > V_{\rm T}$
3	STTHESAT	II: $I_{ m D}$	Absolute	_

^aOnly extracted for a short *narrow* device and fixed for all other geometries.

7.4 Extraction of Geometry Scaling Parameters

The aim of the complete extraction procedure is the determination of the geometry scaling parameters (global parameters), i.e., a single set of parameters (see Section 2.5.2) which gives a good description of the MOSFET-behavior over the full geometry range of a CMOS technology.

Determination of ΔL and ΔW

An extremely important part of the geometry scaling extraction scheme is an accurate determination of ΔL and ΔW , see Eqs. (3.6) and (3.7).³ Since it affects the DC-, the AC- as well as the noise model and, moreover, it can heavily influence the quality of the resulting global parameter set, it is very important that this step is carried out with care.

Traditionally, ΔW can be determined from the extrapolated zero-crossing in **BETN** versus mask width W. In a similar way ΔL can be determined from 1/BETN versus mask length L. For modern MOS devices with pocket implants, however, it has been found that the above ΔL extraction method is no longer valid [13, 14]. Another, more accurate method is to measure the gate-to-bulk capacitance C_{GB} in accumulation for different channel lengths [14, 15]. In this case the extrapolated zero-crossing in the C_{GB} versus mask length L curve will give ΔL . Similarly, the extracted values for **COX** (from the procedure in Table 7.1 and 7.2) vs. mask length L may be used for this purpose. Unfortunately for CMOS technologies in which gate current is non-negligible, capacitance measurements may be hampered by gate current [16]. In this case gate current parameter **IGINV**

 $^{^3}$ Note that $\Delta L_{\rm PS}$ and $\Delta W_{\rm OD}$ are expected to be known from the fabrication process. So, in fact, only **LAP** and **WOT** are extracted from the electrical measurements.

plotted as a function of channel length L may be used to extract ΔL [16]. If possible, ΔL extraction from C-V-measurements is the preferred method.

Finally, LOV can be obtained from (a series of) extracted values of CGOV from one or more short devices.

From local to global

First of all, the global parameters **TYPE**, **QMC**, and the 'switch'-parameters should be set to the appropriate value. Next, parameters for which no geometrical scaling rules exist must be taken directly from the local set (this applies to **TR**, **TOXO**, **VNSUBO**, **NSLPO**, **DNSUBO**, **TOXOVO**, **NOVO**, **CFBO**, **STMUEO**, **THE-MUO**, **STTHEMUO**, **STCSO**, **STXCORO**, **FETAO**, **STRSO**, **RSBO**, **RSGO**, **THESATBO**, **THESATGO**, **VPO**, **A2O**, **STA2O**, **GCOO**, **STIGO**, **GC2O**, **GC3O**, **CHIBO**, **BGIDLO**, **STBGIDLO**, **CGIDLO**, and **DTA**). Generally, these parameters have been left at their default values or they have been extracted for one device only and subsequently fixed for all other devices. The parameters **LVARO**, **LVARL**, **LVARW**, **WVARO**, **WVARL**, and **WVARW** should be known from technology.

Once the values of ΔL and ΔW are firmly established (as described above), **LAP** and **WOT** can be set and the actual extraction procedure of the geometry scaling parameters can be started. It consists of several *independent* sub-steps (which can be carried out in random order), one for each geometry dependent local parameter.

To illustrate such a sub-step, the local parameter \mathbf{CT} is taken as an example. The relevant geometry scaling equation from Section 3.2 is Eq. (3.33), from which it can be seen that \mathbf{CTO} , \mathbf{CTL} , \mathbf{CTLEXP} , and \mathbf{CTW} are the global parameters which determine the value of \mathbf{CT} as a function of L and W. First, the extracted \mathbf{CT} of each device in a length-series of measured (preferably wide) devices are considered as a function of L. In this context \mathbf{CTO} , \mathbf{CTL} , and \mathbf{CTLEXP} are optimized such that the fit of Eq. (3.33) to the extracted \mathbf{CT} -values is as good as possible, while keeping \mathbf{CTW} fixed at 0. Then \mathbf{CTW} is determined by considering the extracted \mathbf{CT} -values from a length-series of measured narrow devices. Finally, the four global parameters may be fine-tuned by optimizing all four parameters to all extracted \mathbf{CT} -values simultaneously. The default values given in Section 2.5.2 are good initial values for the optimization procedure.

All other parameters can be extracted in a similar manner. The local parameters **BETN** and **NEFF** have quite complicated scaling rules, particularly due to the non-uniform doping profiles employed in modern CMOS technologies. Therefore, a few additional guidelines are in place.

- The optimization procedure for **BETN** is facilitated if not **BETN**, but **BETN**_{sq} $\stackrel{\text{def}}{=}$ **BETN** · $L_{\text{E}}/W_{\text{E}}$ is considered.
- Starting from the default values, first **UO**, **FBET1**, **LP1**, **FBET2**, and **LP2** should be determined from a length-series of wide devices. Then **BETW1**, **BETW2**, and **WBET** should be determined from a width-series of long devices. Finally, **FBET1W** and **LP1W** can be found by considering some short narrow devices.
- Starting from the default values, first extract FOL1, FOL2, NSUBO, NPCK, and LPCK from a length-series of wide devices. Here, NSUBO determines the long-channel value of NEFF. Moreover, NPCK and LPCK determine the increase of NEFF for shorter channels (reverse short channel effect), while FOL1 and FOL2 are used to describe the decrease of NEFF for very short channels (short channel effect).
- Then **NSUBW** and **WSEG** can be determined form a width-series of long devices. Finally, **NPCKW**, **LPCKW** and **WEGP** are determined from a width-series of short devices.
- Especially for **BETN** and **NEFF** it is advisable—after completing the procedure described above—to fine tune the global parameters found by considering all extracted values of **BETN** (or **NEFF**) simultaneously.

Note that in many cases it may not be necessary to use the full flexibility of PSP's parameter scaling, e.g., for many technologies **NP** and **VFB** may be considered as independent of geometry. If such a geometry-independence is anticipated, the corresponding local parameter should be fixed during local parameter extraction. Only if the resulting global parameter set is not satisfactory, the parameter should be allowed to vary during a subsequent optimization round.

Fine tuning

Once the complete set of global parameters is found, the global model should give an accurate description of the measured I-V-curves and capacitance measurements. Either for fine tuning or to facilitate the extraction of global parameters for which the geometry scaling of the corresponding extracted local parameters is not well-behaved, there are two more things that can be done.

- Local parameters for which the fitting of global parameters was completed satisfactorily could be replaced by the values calculated from the geometrical scaling rules and fixed. Then one could redo (parts of) the local parameter extraction procedure for the remaining local parameters, making them less sensitive for cross-correlations.
- Small groups of global parameters may be fitted directly to the measurements of a well-chosen series of devices, using the global model.

7.5 Summary – Geometrical scaling

Summarizing, for the determination of a full parameter set, the following procedure is recommended.

- 1. Determine local parameter sets (VFB, NEFF, ...) for all measured devices, as explained in Section 7.2 and 7.3.
- 2. Find ΔL and ΔW .
- 3. Determine the global parameters by fitting the appropriate geometry scaling rules to the extracted local parameters.
- 4. Finally, the resulting global can be fine-tuned, by fitting the result of the scaling rules and current equations to the measured currents of all devices simultaneously.

7.6 Extraction of Binning Parameters

In this section, expressions will be given for the parameters in the binning scaling rules, **POYYY**, **PLYYY**, **PWYYY**, and **PLWYYY**, as given in Section 3.3. These coefficients will be expressed in terms of parameter values at the corners of bin (see Fig. 7.1). These expressions can be easily found by substituting the parameter values at the bin corners into the binning scaling rules and inverting the resulting four equations. Note once

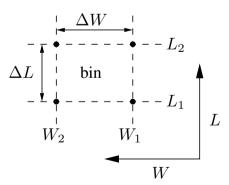


Figure 7.1: Schematic view of a bin, showing the coordinates of the four corners. Note that L_1 , L_2 , W_1 , and W_2 denote the *effective* length and width (L_E and W_E) at the bin corners.

more that this results in a separate parameter set for each bin.

In the expression below, the value of parameter **YYY** at bin corner (L_i, W_j) is denoted by Y_{ij} (i = 1, 2, j = 1, 2). Moreover, $\Delta L = L_2 - L_1$, $\Delta W = W_2 - W_1$, $A = 1/(\Delta L \cdot \Delta W)$.

1. Coefficients for type I scaling

$$\mathbf{POYYY} = A \cdot (L_1 \cdot W_1 \cdot Y_{11} - L_1 \cdot W_2 \cdot Y_{12} - L_2 \cdot W_1 \cdot Y_{21} + L_2 \cdot W_2 \cdot Y_{22})$$
(7.1)

$$\mathbf{PLYYY} = A \cdot \frac{L_1 \cdot L_2}{L_{\text{EN}}} \cdot \left(-W_1 \cdot Y_{11} + W_2 \cdot Y_{12} + W_1 \cdot Y_{21} - W_2 \cdot Y_{22} \right) \tag{7.2}$$

$$\mathbf{PWYYY} = A \cdot \frac{W_1 \cdot W_2}{W_{\text{EN}}} \cdot \left(-L_1 \cdot Y_{11} + L_1 \cdot Y_{12} + L_2 \cdot Y_{21} - L_2 \cdot Y_{22} \right) \tag{7.3}$$

$$\mathbf{PLWYYY} = A \cdot \frac{L_1 \cdot L_2 \cdot W_1 \cdot W_2}{L_{\text{EN}} \cdot W_{\text{EN}}} \cdot (Y_{11} - Y_{12} - Y_{21} + Y_{22})$$
 (7.4)

2. Coefficients for type II scaling

$$\mathbf{POYYY} = A \cdot (L_2 \cdot W_2 \cdot Y_{11} - L_2 \cdot W_1 \cdot Y_{12} - L_1 \cdot W_2 \cdot Y_{21} + L_1 \cdot W_1 \cdot Y_{22})$$
(7.5)

$$\mathbf{PLYYY} = A \cdot L_{\text{EN}} \cdot (-W_2 \cdot Y_{11} + W_1 \cdot Y_{12} + W_2 \cdot Y_{21} - W_1 \cdot Y_{22})$$
(7.6)

$$\mathbf{PWYYY} = A \cdot W_{\text{EN}} \cdot (-L_2 \cdot Y_{11} + L_2 \cdot Y_{12} + L_1 \cdot Y_{21} - L_1 \cdot Y_{22})$$
(7.7)

$$PLWYYY = A \cdot L_{EN} \cdot W_{EN} \cdot (Y_{11} - Y_{12} - Y_{21} + Y_{22})$$
(7.8)

3. Coefficients for type III scaling

$$\mathbf{POYYY} = A \cdot (-L_1 \cdot W_2 \cdot Y_{11} + L_1 \cdot W_1 \cdot Y_{12} + L_2 \cdot W_2 \cdot Y_{21} - L_2 \cdot W_1 \cdot Y_{22}) \tag{7.9}$$

$$\mathbf{PLYYY} = A \cdot \frac{L_1 \cdot L_2}{L_{\text{EN}}} \cdot (W_2 \cdot Y_{11} - W_1 \cdot Y_{12} - W_2 \cdot Y_{21} + W_1 \cdot Y_{22})$$
 (7.10)

$$\mathbf{PWYYY} = A \cdot W_{\text{EN}} \cdot (L_1 \cdot Y_{11} - L_1 \cdot Y_{12} - L_2 \cdot Y_{21} + L_2 \cdot Y_{22})$$
(7.11)

$$\mathbf{PLWYYY} = A \cdot \frac{L_1 \cdot L_2 \cdot W_{\text{EN}}}{L_{\text{EN}}} \cdot (-Y_{11} + Y_{12} + Y_{21} - Y_{22})$$
 (7.12)

Note: For L_1 , L_2 , W_1 , and W_2 in the formulas above one must take the *effective* length and width ($L_{\rm E}$ and $W_{\rm E}$) as defined in Section 3.2.

7.6.1 Binning of BETN

From PSP 103.0 onwards, the binning rule of **BETN** is changed to better match its typical scaling behavior.

• Extract the parameters **POBETN**, **PLBETN**, **PWBETN**, and **PLWBETN** for type I binning by applying Eq. (7.1)-(7.4) to (L_E/W_E) • **BETN** (i.e., not to **BETN** itself).

Section 8

DC Operating Point Output

The DC operating point output facility gives information on the state of a device at its operation point. Beside terminal currents and voltages, the magnitudes of linearized internal elements are given. In some cases meaningful quantities can be derived which are then also given (e.g., $f_{\rm T}$). The objective of the DC operating point facility is twofold:

- Calculate small-signal equivalent circuit element values
- Open a window on the internal bias conditions of the device and its basic capabilities.

All accessible quantities are described in the table below. The symbols in the 'value' column are defined in Section 4. Besides, the following notation is used: $P_D = 1 + k_p \cdot G/4$, where k_p is defined in Eq. (4.23).

Important note: For *all* operating point output the signs are such as if the device is an NMOS. Moreover, whenever there is a reference to the 'drain', this is always the terminal which is acting as drain for the actual bias conditions. This is even true for variables such as **vds** (which is therefore always nonnegative) and the junction-related variables. The output variable **sdint** shows whether or not this 'drain' is the same as the terminal which was named 'drain' in the simulator.

No.	Name	Unit	Value	Description	
0	ctype		1 for NMOS, −1 for PMOS	Flag for channel-type	
1	sdint	_	1 if $V'_{\rm DS} \ge 0$, -1 otherwise	Flag for source-drain interchange	
			Current components		
2	ise	A	$I_{ m S}-I_{ m JS}$	Total source current	
3	ige	A	$I_{ m G}$	Total gate current	
4	ide	A	$I_{ m D}-I_{ m JD}$	Total drain current	
5	ibe	A	$I_{ m B}+I_{ m JS}+I_{ m JD}$	Total bulk current	
6	ids	A	$I_{ m DS}$	Drain current, excl. avalanche and tunnel currents	
7	idb	A	$I_{ m avl} + I_{ m gidl} - I_{ m JD}$	Drain-to-bulk current	
8	isb	A	$I_{ m gisl} - I_{ m JS}$	Source-to-bulk current	
9	igs	A	$I_{ m GCS} + I_{ m GSov}$	Gate-source tunneling current	
10	igd	A	$I_{ m GCD} + I_{ m GDov}$	Gate-drain tunneling current	
11	igb	A	$I_{ m GB}$	Gate-bulk tunneling current	
12	igcs	A	$I_{ m GCS}$	Gate-channel tunneling current (source component)	

	c		
 . continued	trom	previous	page

No.	Name	Unit	Value	Description
13	igcd	A	$I_{ m GCD}$	Gate-channel tunneling current (drain component)
14	iavl	A	$I_{ m avl}$	Substrate current due to weak-avalanche
15	igisl	A	$I_{ m gisl}$	Gate-induced source leakage current
16	igidl	A	$I_{ m gidl}$	Gate-induced drain leakage current
			Junction currents	
17	ijs	A	$I_{ m JS}$	Total source junction current
18	ijsbot	A	$I_{ m JS, bot}$	Source junction current, bottom component
19	ijsgat	A	$I_{ m JS,gat}$	Source junction current, gate-edge component
20	ijssti	A	$I_{ m JS,sti}$	Source junction current, STI-edge component
21	ijd	A	$I_{ m JD}$	Total drain junction current
22	ijdbot	A	$I_{ m JD,bot}$	Drain junction current, bottom component
23	ijdgat	A	$I_{ m JD,gat}$	Drain junction current, gate-edge component
24	ijdsti	A	$I_{ m JD,sti}$	Drain junction current, STI-edge component
			Voltages	
25	vds	V	$V_{ m DS}$	Drain-source voltage
26	vgs	V	$V_{ m GS}$	Gate-source voltage
27	vsb	V	$V_{ m SB}$	Source-bulk voltage
28	vto	V	$\frac{\mathbf{VFB} + P_{\mathrm{D}} \cdot (\boldsymbol{\phi}_{\mathbf{B}} + 2 \cdot \boldsymbol{\phi}_{\mathbf{T}}^{*}) + G \cdot }{\sqrt{\boldsymbol{\phi}_{\mathbf{T}}^{*} \cdot (\boldsymbol{\phi}_{\mathbf{B}} + 2 \cdot \boldsymbol{\phi}_{\mathbf{T}}^{*})}}$	Zero-bias threshold voltage
			$\sqrt{oldsymbol{\phi}_{\mathbf{T}}^* \cdot (oldsymbol{\phi}_{\mathbf{B}} + 2 \cdot oldsymbol{\phi}_{\mathbf{T}}^*)}$	
29	vts	V	$ \begin{aligned} \mathbf{VFB} + P_{\mathrm{D}} \cdot (V_{\mathrm{SB}}^{\mathrm{nud}} + \boldsymbol{\phi}_{\mathbf{B}} + 2 \cdot \boldsymbol{\phi}_{\mathbf{T}}^{*}) - V_{\mathrm{SB}}^{\mathrm{nud}} + \\ G \cdot \sqrt{\boldsymbol{\phi}_{\mathbf{T}}^{*} \cdot (V_{\mathrm{SB}}^{\mathrm{nud}} + \boldsymbol{\phi}_{\mathbf{B}} + 2 \cdot \boldsymbol{\phi}_{\mathbf{T}}^{*})} \end{aligned} $	Threshold voltage including backbias effects
30	vth	V	$ ext{vts} - \Delta V_{ ext{G}}$	Threshold voltage including back- bias and drain-bias effects
31	vgt	V	vgs - vth	Effective gate drive voltage including drain- and back-bias effects
32	vdss	V	$V_{ m dsat}$	Drain saturation voltage at actual bias
33	vsat	V	$V_{ m DS}-V_{ m dsat}$	Saturation limit
			(Trans-)conductances	
34	gm	A/V	$\partial {f ide}/\partial V_{ m GS}$	Transconductance
35	gmb	A/V	$-\partial {f ide}/\partial V_{ m SB}$	Substrate-transconductance
36	gds	A/V	$\partial {f ide}/\partial V_{ m DS}$	Output conductance
			$-\partial {f ijs}/\partial V_{ m SB}$	

	c		
continued	from	previous	page

No.	Name	Unit	Value	Description
38	gjd	A/V	$-(\partial \mathbf{ijd}/\partial V_{\mathrm{DS}} + \partial \mathbf{ijd}/\partial V_{\mathrm{SB}})$	Drain junction conductance
			Capacitances	
39	cdd	F	$\partial Q_{ m D}^{(i)}/\partial V_{ m DS}$	Drain capacitance
40	cdg	F	$-\partial Q_{ m D}^{(i)}/\partial V_{ m GS}$	Drain-gate capacitance
41	cds	F	cdd - cdg - cdb	Drain-source capacitance
42	cdb	F	$\partial Q_{ m D}^{(i)}/\partial V_{ m SB}$	Drain-bulk capacitance
43	cgd	F	$-\partial Q_{ m G}^{(i)}/\partial V_{ m DS}$	Gate-drain capacitance
44	cgg	F	$\partial Q_{ m G}^{(i)}/\partial V_{ m GS}$	Gate capacitance
45	cgs	F	cgg - cgd - cgb	Gate-source capacitance
46	cgb	F	$\partial Q_{ m G}^{(i)}/\partial V_{ m SB}$	Gate-bulk capacitance
47	csd	F	$-\partial Q_{ m S}^{(i)}/\partial V_{ m DS}$	Source-drain capacitance
48	csg	F	$-\partial Q_{ m S}^{(i)}/\partial V_{ m GS}$	Source-gate capacitance
49	css	F	csg + csd + csb	Source capacitance
50	csb	F	$\partial Q_{ m S}^{(i)}/\partial V_{ m SB}$	Source-bulk capacitance
51	cbd	F	$-\partial Q_{ m B}^{(i)}/\partial V_{ m DS}$	Bulk-drain capacitance
52	cbg	F	$-\partial Q_{ m R}^{(i)}/\partial V_{ m GS}$	Bulk-gate capacitance
53	cbs	F	cbb - cbd - cbg	Bulk-source capacitance
54	cbb	F	$-\partial Q_{ m B}^{(i)}/\partial V_{ m SB}$	Bulk capacitance
55	cgsol	F	$\partial (Q_{ m sov} + Q_{ m ofs})/\partial V_{ m GS}$	Total gate-source overlap capacitance
56	cgdol	F	$\partial (Q_{ m dov} + Q_{ m ofd})/\partial V_{ m DS}$	Total gate-drain overlap capacitance
			Junction capacitance	s
57	cjs	F	$C_{ m JS}$	Total source junction capacitance
58	cjsbot	F	$C_{ m JS, bot}$	Source junction capacitance, bot tom component
59	cjsgat	F	$C_{ m JS,gat}$	Source junction capacitance, gate edge component
60	cjssti	F	$C_{ m JS,sti}$	Source junction capacitance, STI- edge component
61	cjd	F	$C_{ m JD}$	Total drain junction capacitance
62	cjdbot	F	$C_{ m JD,bot}$	Drain junction capacitance, bottom component
63	cjdgat	F	$C_{ m JD,gat}$	Drain junction capacitance, gate edge component
64	cjdsti	F	$C_{ m JD,sti}$	Drain junction capacitance, STI edge component
			Miscellaneous	
65	weff	m	$W_{ m E}$	Effective channel width for geomet rical models
66	leff	m	$L_{ m E}$	Effective channel length for geo metrical models

... continued from previous page

No.	Name	Unit	Value	Description
68	rout	Ω	1/ gds	Small-signal output resistance
69	vearly	V	ide /gds	Equivalent Early voltage
70	beff	A/V^2	$2 \cdot {f ide} /{f vgt}^2$	Gain factor
71	fug	Hz	$\mathbf{gm}/[2\cdot\pi\cdot(\mathbf{cgg}+\mathbf{cgsol}+\mathbf{cgdol})]$	Unity gain frequency at actual bias
72	rg	Ω	RG	Gate resistance
			Noise	
73	sfl	A^2/Hz	$S_{ m fl}(1~{ m Hz})$	Flicker noise current spectral density at 1 Hz
74	sqrtsff	V/√Hz	$\sqrt{S_{ m fl}(1~{ m kHz})}/{ m gm}$	Input-referred RMS white noise voltage spectral density at 1 kHz
75	sqrtsfw	V/√Hz	$\sqrt{S_{ m id}}/{ m f gm}$	Input-referred RMS white noise voltage spectral density
76	sid	${ m A}^2/{ m Hz}$	$S_{ m id}$	Channel thermal noise current spectral density
77	sig	${ m A}^2/{ m Hz}$	$S_{ m ig}(1~{ m kHz})$	Induced gate noise current spectral density at 1 kHz
78	cigid	_	$rac{m_{ m igid}}{\sqrt{m_{ m ig}\cdot m_{ m id}}}$	Imaginary part of correlation coefficient between S_{ig} and S_{id}
79	fknee	Hz	$1 \mathrm{Hz} \cdot S_{\mathrm{fl}}(1 \mathrm{Hz}) / S_{\mathrm{id}}$	Cross-over frequency above which white noise is dominant
80	sigs	${ m A}^2/{ m Hz}$	$S_{ m igs}$	Gate-source current noise spectral density
81	sigd	${ m A}^2/{ m Hz}$	$S_{ m igd}$	Gate-drain current noise spectral density
82	siavl	A^2/Hz	$S_{ m avl}$	Impact ionization current noise spectral density
83	ssi	${ m A}^2/{ m Hz}$	$S_{ m S,I}$	Total source junction current noise spectral density
84	sdi	A^2/Hz	$S_{ m D,I}$	Total drain junction current noise spectral density
			Self heating	
85	tk	K	$T_{ m KD}$	Device temperature
86	pdiss	W	$P_{ m diss}$	Power dissipation
87	dtsh	K	$T_{ m KD}-T_{ m KA}$	Temperature rise due to self heating

From PSP 103.0 onwards, the values of local parameters are provided in the operating point output. They are listed in the table below.

No.	Name	Unit	Description	
	Process Parameters			
0	lp_vfb	V	Local parameter VFB after T-scaling and clipping	
1	lp_stvfb	V/K	Local parameter STVFB after clipping	
2	lp_tox	m	Local parameter TOX after clipping	
3	lp_epsrox	_	Local parameter EPSROX after clipping	
4	lp_neff	m^{-3}	Local parameter NEFF after clipping	
5	lp_facneffac	_	Local parameter FACNEFFAC after clipping	
6	lp_gfacnud	_	Local parameter GFACNUD after clipping	
7	lp_vsbnud	V	Local parameter VSBNUD after clipping	
8	lp_dvsbnud	V	Local parameter DVSBNUD after clipping	
9	lp_vnsub	V	Local parameter VNSUB after clipping	
10	lp_nslp	V	Local parameter NSLP after clipping	
11	lp_dnsub	V^{-1}	Local parameter DNSUB after clipping	
12	lp_dphib	V	Local parameter DPHIB after clipping	
13	lp_delvtac	V	Local parameter DELVTAC after clipping	
14	lp_np	m^{-3}	Local parameter NP after clipping	
15	lp_ct	_	Local parameter CT after clipping	
16	lp_toxov	m	Local parameter TOXOV after clipping	
17	lp_toxovd	m	Local parameter TOXOVD after clipping	
18	lp_nov	m^{-3}	Local parameter NOV after clipping	
19	lp_novd	m^{-3}	Local parameter NOVD after clipping	
			DIBL Parameters	
20	lp_cf	_	Local parameter CF after clipping	
21	lp_cfb	V^{-1}	Local parameter CFB after clipping	
			Mobility Parameters	
22	lp_betn	$m^2/V/s$	Local parameter BETN after T-scaling and clipping	
23	lp_stbet	_	Local parameter STBET after clipping	
24	lp_mue	m/V	Local parameter MUE after T-scaling and clipping	
25	lp_stmue	_	Local parameter STMUE after clipping	
26	lp_themu	_	Local parameter THEMU after T-scaling and clipping	
27	lp_stthemu	_	Local parameter STTHEMU after clipping	
28	lp_cs	-	Local parameter CS after T-scaling and clipping	
29	lp_stcs	-	Local parameter STCS after clipping	
30	lp_xcor	V^{-1}	Local parameter XCOR after T-scaling and clipping	
31	lp_stxcor	-	Local parameter STXCOR after clipping	
32	lp_feta	_	Local parameter FETA after clipping	
		Seri	es Resistance Parameters	
33	lp_rs	Ω	Local parameter RS after T-scaling and clipping	
34	lp_strs	_	Local parameter STRS after clipping	
			continued on next page	

. •	1.0		
 . continue	ed from	previous	page

No.	Name	Unit	Description
35	lp_rsb	V^{-1}	Local parameter RSB after clipping
36	lp_rsg	V^{-1}	Local parameter RSG after clipping
		Velo	city Saturation Parameters
37	lp_thesat	V^{-1}	Local parameter THESAT after T-scaling and clipping
38	lp_stthesat	_	Local parameter STTHESAT after clipping
39	lp_thesatb	V^{-1}	Local parameter THESATB after clipping
40	lp_thesatg	V^{-1}	Local parameter THESATG after clipping
		Satu	ration Voltage Parameters
41	lp_ax	-	Local parameter AX after clipping
		Channel Len	gth Modulation (CLM) Parameters
42	lp_alp	_	Local parameter ALP after clipping
43	lp_alp1	V	Local parameter ALP1 after clipping
44	lp_alp2	V^{-1}	Local parameter ALP2 after clipping
45	lp_vp	V	Local parameter VP after clipping
		Impa	ct Ionization (II) Parameters
46	lp_a1	_	Local parameter A1 after clipping
47	lp_a2	V	Local parameter A2 after T-scaling and clipping
48	lp_sta2	_	Local parameter STA2 after clipping
49	lp_a3	_	Local parameter A3 after clipping
50	lp_a4	$1/\sqrt{V}$	Local parameter A4 after clipping
		G	ate Current Parameters
51	lp_gco	-	Local parameter GCO after clipping
52	lp_iginv	A	Local parameter IGINV after T-scaling and clipping
53	lp_igov	A	Local parameter IGOV after T-scaling and clipping
54	lp_igovd	A	Local parameter IGOVD after T-scaling and clipping
55	lp_stig	_	Local parameter STIG after clipping
56	lp_gc2	_	Local parameter GC2 after clipping
57	lp_gc3	-	Local parameter GC3 after clipping
58	lp_chib	V	Local parameter CHIB after clipping
		Gate-Ind	uced Drain Leakage Parameters
59	lp_agidl	A/V^3	Local parameter AGIDL after clipping
60	lp_agidld	A/V^3	Local parameter AGIDLD after clipping
61	lp_bgidl	V	Local parameter BGIDL after T-scaling and clipping
62	lp_bgidld	V	Local parameter BGIDLD after T-scaling and clipping
63	lp_stbgidl	V/K	Local parameter STBGIDL after clipping
64	lp_stbgidld	V/K	Local parameter STBGIDLD after clipping
1	lp_cgidl	-	Local parameter CGIDL after clipping
65			Local parameter CGIDLD after clipping

... continued from previous page

No.	Name	Unit	Description
		Ch	narge Model Parameters
67	lp_cox	F	Local parameter COX after clipping
68	lp_cgov	F	Local parameter CGOV after clipping
69	lp_cgovd	F	Local parameter CGOVD after clipping
70	lp_cgbov	F	Local parameter CGBOV after clipping
71	lp_cfr	F	Local parameter CFR after clipping
72	lp_cfrd	F	Local parameter CFRD after clipping
		N	oise Model Parameters
73	lp_fnt	_	Local parameter FNT after clipping
74	lp_fntexc	_	Local parameter FNTEXC after clipping
75	lp_nfa	$1/V/m^4$	Local parameter NFA after clipping
76	lp_nfb	$1/V/m^2$	Local parameter NFB after clipping
77	lp_nfc	V^{-1}	Local parameter NFC after clipping
78	lp_ef	_	Local parameter EF after clipping
		Paras	sitic Resistance Parameters
79	lp_rg	Ω	Local parameter RG after clipping
80	lp_rse	Ω	Local parameter RSE after clipping
81	lp_rde	Ω	Local parameter RDE after clipping
82	lp_rbulk	Ω	Local parameter RBULK after clipping
83	lp_rwell	Ω	Local parameter RWELL after clipping
84	lp_rjuns	Ω	Local parameter RJUNS after clipping
85	lp_rjund	Ω	Local parameter RJUND after clipping
		S	elf Heating Parameters
86	lp_rth	K/W	Local parameter RTH after T-scaling and clipping
87	lp_cth	J/K	Local parameter CTH after clipping
88	lp_strth	_	Local parameter STRTH after clipping
			Junction Parameters
89	cjosbot	F	Bottom component of total zero-bias source junction capacitance at device temperature
90	cjossti	F	STI-edge component of total zero-bias source junction capacitance at device temperature
91	cjosgat	F	Gate-edge component of total zero-bias source junction capacitance at device temperature
92	vbisbot	V	Built-in voltage of source-side bottom junction at device temperature
93	vbissti	V	Built-in voltage of source-side STI-edge junction at device temperature
94	vbisgat	V	Built-in voltage of source-side gate-edge junction at device temperature
95	idsatsbot	A	Total source-side bottom junction saturation current
96	idsatssti	A	Total source-side STI-edge junction saturation current

... continued from previous page

No.	Name	Unit	Description
97	idsatsgat	A	Total source-side gate-edge junction saturation current
98	cjosbotd	F	Bottom component of total zero-bias drain junction ca- pacitance at device temperature
99	cjosstid	F	STI-edge component of total zero-bias drain junction ca- pacitance at device temperature
100	cjosgatd	F	Gate-edge component of total zero-bias drain junction capacitance at device temperature
101	vbisbotd	V	Built-in voltage of drain-side bottom junction at device temperature
102	V Built-in voltage of drain-side STI-edge junction a temperature		Built-in voltage of drain-side STI-edge junction at device temperature
103	8 vbisgatd V Built-in voltage of drain-side gate-edge junction at temperature		Built-in voltage of drain-side gate-edge junction at device temperature
104	idsatsbotd A Total drain-side bottom junction saturation current		Total drain-side bottom junction saturation current
105	idsatsstid	A	Total drain-side STI-edge junction saturation current
106	idsatsgatd	A	Total drain-side gate-edge junction saturation current
			NQS Parameters
107	lp_munqs	_	Local parameter MUNQS after clipping

References

- [1] L. Lemaitre, C. C. McAndrew, and S. Hamm, "ADMS Automatic Device Model Synthesize", *Proc. IEEE CICC*, 2002. See also http://sourceforge.net/projects/mot-adms
- [2] G. Gildenblat *et al.*, "From BSIM3/4 to PSP: Translation of Flicker Noise and Junction Parameters", available for download at http://www.nxp.com/models/simkit/mos-models/model-psp. html
- [3] X. Xi et al., BSIM4.4.0 MOSFET Model, User's Manual, 2004, available for download at http://www-device.eecs.berkeley.edu/bsim/?page=BSIM4_Arc
- [4] T.B. Hook *et al.*, "Lateral Ion Implant Straggle and Mask Proximity Effect," *IEEE Trans. on Electron Devices*, Vol. 50, No. 9, pp. 1946-1951, 2003.
- [5] X. Xi et al., BSIM4.5.0 MOSFET Model, User's Manual, 2005, available for download at http://www-device.eecs.berkeley.edu/bsim/?page=BSIM4_Arc
- [6] M. Basel, J. Watts *et al.*, *Guidelines for Extracting Well Proximity Instance Parameters*, December 2006, available for download at http://www.si2.org/cmc_index.php
- [7] R. Landauer, "Solid-state shot noise", Phys. Rev. B, vol. 47, no. 24, pp. 16427–16432, 1993.
- [8] G.D.J. Smit *et al.*, "Experimental Demonstration and Modeling of Excess RF Noise in Sub-100-nm CMOS Technologies", Electron Dev. Lett., vol. 31, no. 8, pp. 884–886, 2010.
- [9] H. Wang, T.-L. Chen, and G. Gildenblat, "Quasi-static and Nonquasi-static Compact MOSFET Models Based on Symmetric Linearization of the Bulk and Inversion Charges," *IEEE trans. Electron Dev.* **50**(11), pp. 2262-2272, 2003.
- [10] H. Wang et al., "Unified Non-Quasi-Static MOSFET Model for Large-Signal and Small-Signal Simulations," CICC 2005.
- [11] W. H. Press *et al.*, "Numerical recipes in C", 2nd edition, Cambridge University Press (1993), available for download at http://apps.nrbook.com/c/index.html
- [12] A.J. Scholten *et al.*, "JUNCAP2, version 200.3", available for download at http://psp.ewi.tudelft.nl/
- [13] M. Minondo, G. Gouget, and A. Juge, "New Length Scaling of Current Gain Factor and Characterization Method for Pocket Implanted MOSFET's," *Proc. ICMTS* 2001, pp. 263-267, 2001.
- [14] A.J. Scholten, R. Duffy, R. van Langevelde, and D.B.M. Klaassen, "Compact Modelling of Pocket-Implanted MOSFETs," *Proc. ESSDERC* 2001, pp. 311-314, 2001.
- [15] T.S. Hsieh, Y.W. Chang, W.J. Tsai, and T.C. Lu, "A New Leff Extraction Approach for Devices with Pocket Implants," *Proc. ICMTS* 2001, pp. 15-18, 2001.
- [16] R. van Langevelde *et al.*, "Gate Current: modelling, ΔL Extraction and Impact on RF Performance," *IEDM 2001 Tech. Digest*, pp. 289-292, 2001.

Appendix A

Auxiliary Equations

In this Appendix, some auxiliary functions which are used in the model equations are defined.

The MINA-smoothing function:

MINA
$$(x, y, a) = \frac{1}{2} \cdot \left[x + y - \sqrt{(x - y)^2 + a} \right]$$
 (A.1)

The MAXA-smoothing function:

MAXA
$$(x, y, a) = \frac{1}{2} \cdot \left[x + y + \sqrt{(x - y)^2 + a} \right]$$
 (A.2)

The MNE- and MXE-smoothing functions:

MNE
$$(x, y, \varepsilon) = \frac{2}{A} \left[x + y - \sqrt{(x+y)^2 - A \cdot xy} \right]$$
 (A.3)

$$MXE(x, y, \varepsilon) = \frac{2}{A} \left[x + y + \sqrt{(x+y)^2 - A \cdot xy} \right]$$
(A.4)

$$A = 4 - \varepsilon; \qquad \varepsilon \in (0, 1)$$
 (A.5)

The functions $\chi(y)$, its derivatives, σ_1 , and σ_2 , which are used in the explicit approximation of surface potential:

$$\chi(y) = \frac{y^2}{2 + y^2} \tag{A.6}$$

$$\chi'(y) = \frac{4y}{(2+y^2)^2} \tag{A.7}$$

$$\chi''(y) = \frac{8 - 12y^2}{(2 + y^2)^3} \tag{A.8}$$

$$\nu = a + c \tag{A.9}$$

$$\mu_1 = \frac{v^2}{\tau} + \frac{c^2}{2} - a \tag{A.10}$$

$$\sigma_1(a, c, \tau, \eta) = \frac{a \cdot \nu}{\mu_1 + (c^2/3 - a) \cdot c \cdot \nu/\mu_1} + \eta$$
(A.11)

$$\mu_2 = \frac{v^2}{\tau} + \frac{c^2}{2} - a \cdot b \tag{A.12}$$

$$\sigma_2(a, b, c, \tau, \eta) = \frac{a \cdot \nu}{\mu_2 + (c^2/3 - a \cdot b) \cdot c \cdot \nu/\mu_2} + \eta$$
(A.13)

Appendix B

Layout parameter calculation

In post-layout simulations, various PSP instance parameters should be supplied either manually or by a layout extraction tool. In this appendix, it is shown how these parameters should be calculated.

Note: These equations are *not* part of the PSP model.

B.1 Stress parameters

B.1.1 Layout effects for irregular shapes

For irregular shapes the following effective values for **SA** and **SB** are to be used (see Fig B.1).

$$\frac{1}{\mathbf{S}\mathbf{A}_{\text{eff}} + 0.5 \cdot L} = \sum_{i=1}^{n} \frac{\mathbf{S}\mathbf{W}_{i}}{W} \cdot \frac{1}{\mathbf{S}\mathbf{A}_{i} + 0.5 \cdot L}$$
(B.1)

$$\frac{1}{\mathbf{SB}_{\text{eff}} + 0.5 \cdot L} = \sum_{i=1}^{n} \frac{\mathbf{SW}_i}{W} \cdot \frac{1}{\mathbf{SB}_i + 0.5 \cdot L}$$
(B.2)

B.2 Well proximity effect parameters

The values of the instance parameters SCA, SCB and SCC can be calculated from layout parameters using the equations below.

$$f_{\mathcal{A}}(u) = \frac{\mathbf{SCREF}^2}{u^2} \tag{B.3}$$

$$f_{\rm B}(u) = \frac{u}{\text{SCREF}} \cdot \exp\left(-10 \cdot \frac{u}{\text{SCREF}}\right)$$
 (B.4)

$$f_{\rm C}(u) = \frac{u}{\text{SCREF}} \cdot \exp\left(-20 \cdot \frac{u}{\text{SCREF}}\right)$$
 (B.5)

$$A_{\text{corner}} = \sum_{i=m+1}^{m+k} \left(\frac{L}{2} \cdot \int_{\text{SCX}_i + \text{SCY}_i}^{\text{SCX}_i + \text{SCY}_i + W} f_{\mathbf{A}}(u) \, \mathrm{d}u \right)$$

$$+ \sum_{i=n+1}^{n+k} \left(\frac{W}{2} \cdot \int_{\text{SCX}_i + \text{SCY}_i}^{\text{SCX}_i + \text{SCY}_i + L} f_{\text{A}}(u) \, du \right) \quad (B.6)$$

$$B_{\text{corner}} = \sum_{i=m+1}^{m+k} \left(\frac{L}{2} \cdot \int_{\text{SCX}_i + \text{SCY}_i}^{\text{SCX}_i + \text{SCY}_i + W} f_{\text{B}}(u) \, du \right) + \sum_{i=n+1}^{n+k} \left(\frac{W}{2} \cdot \int_{\text{SCX}_i + \text{SCY}_i}^{\text{SCX}_i + \text{SCY}_i + L} f_{\text{B}}(u) \, du \right)$$
(B.7)

$$C_{\text{corner}} = \sum_{i=m+1}^{m+k} \left(\frac{L}{2} \cdot \int_{\text{SCX}_i + \text{SCY}_i}^{\text{SCX}_i + \text{SCY}_i + W} f_{\mathcal{C}}(u) \, du \right) + \sum_{i=n+1}^{n+k} \left(\frac{W}{2} \cdot \int_{\text{SCX}_i + \text{SCY}_i + L}^{\text{SCX}_i + \text{SCY}_i + L} f_{\mathcal{C}}(u) \, du \right)$$
(B.8)

$$\mathbf{SCA} = \frac{1}{W \cdot L} \cdot \left[\sum_{i=1}^{n} \left(W_i \cdot \int_{\mathrm{SC}_i}^{\mathrm{SC}_i + L} f_{\mathrm{A}}(u) \, \mathrm{d}u \right) + \sum_{i=n+1}^{n+m} \left(L_i \cdot \int_{\mathrm{SC}_i}^{\mathrm{SC}_i + W} f_{\mathrm{A}}(u) \, \mathrm{d}u \right) + A_{\mathrm{corner}} \right]$$
(B.9)

$$\mathbf{SCB} = \frac{1}{W \cdot L} \cdot \left[\sum_{i=1}^{n} \left(W_i \cdot \int_{\mathrm{SC}_i}^{\mathrm{SC}_i + L} f_{\mathrm{B}}(u) \, \mathrm{d}u \right) + \sum_{i=n+1}^{n+m} \left(L_i \cdot \int_{\mathrm{SC}_i}^{\mathrm{SC}_i + W} f_{\mathrm{B}}(u) \, \mathrm{d}u \right) + B_{\mathrm{corner}} \right]$$
(B.10)

$$\mathbf{SCC} = \frac{1}{W \cdot L} \cdot \left[\sum_{i=1}^{n} \left(W_i \cdot \int_{\mathrm{SC}_i}^{\mathrm{SC}_i + L} f_{\mathrm{C}}(u) \, \mathrm{d}u \right) + \sum_{i=n+1}^{n+m} \left(L_i \cdot \int_{\mathrm{SC}_i}^{\mathrm{SC}_i + W} f_{\mathrm{C}}(u) \, \mathrm{d}u \right) + C_{\mathrm{corner}} \right]$$
(B.11)

Here, m and n are the number of projections of the well edge along the length and width of the devices, respectively. Moreover, k is the number of corners selected to account for the 'corner' effects.

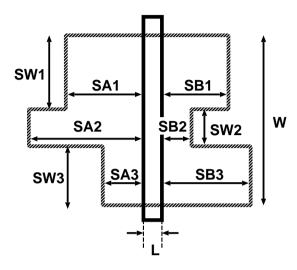


Figure B.1: A typical layout of MOS devices with more instance parameters $(SW_i, SA_i \text{ and } SB_i)$ in addition to the traditional L and W.

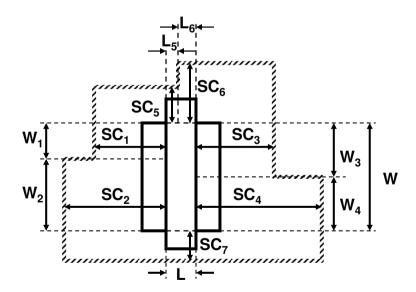


Figure B.2: A typical layout of MOS devices with WPE instance parameters

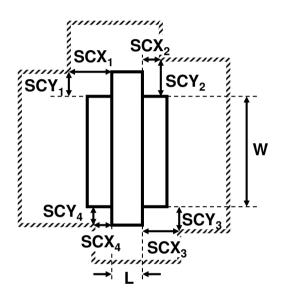


Figure B.3: A layout of MOS devices for corner terms calculation