
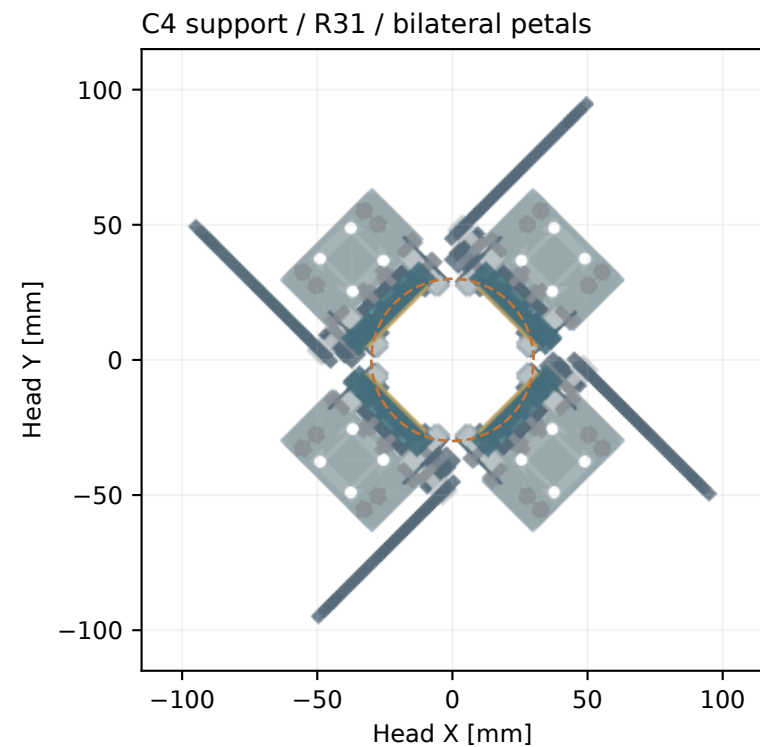



R5 / one radial carrier + split hinge + fixed guide

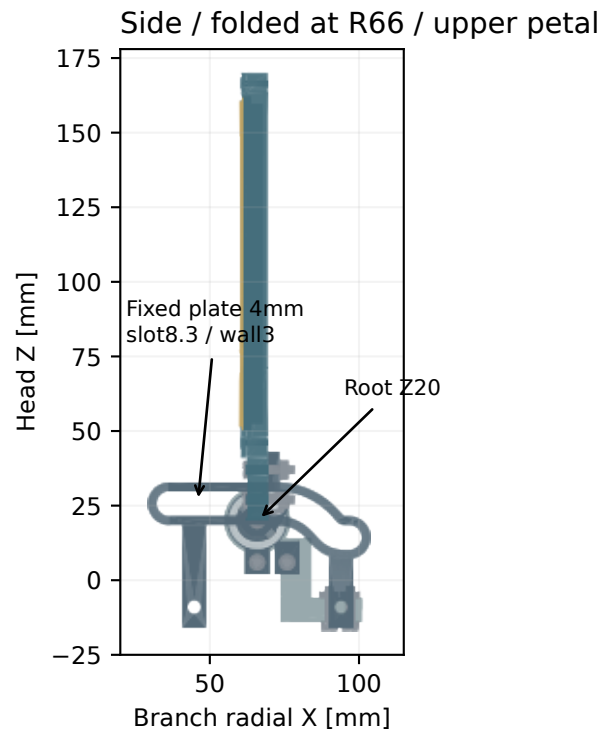

Frozen stage inputs: rootZ20; R31..91; q0..90; a8 / phase-45deg. Fixed slotY30..34.
607/8-2Z: 8x19x6, centersY+/-16; CFS4: D8 x5 rolling width atY29.5..34.5.
Guide attachment bores: D4.5, head(X,Z)=(45,-9),(94,-9); no palm attachment model.

The C4 steel guides are exposed in this prototype. No enclosure proves a mirror-symmetric exterior.
No radial rail, motor, differential, return spring, hard stops or working cameras are included.
The D60 x8 disc is a clearance gauge only. Neither 1-second motion nor a 2kg grasp is qualified.

Axial stack / service access / load path

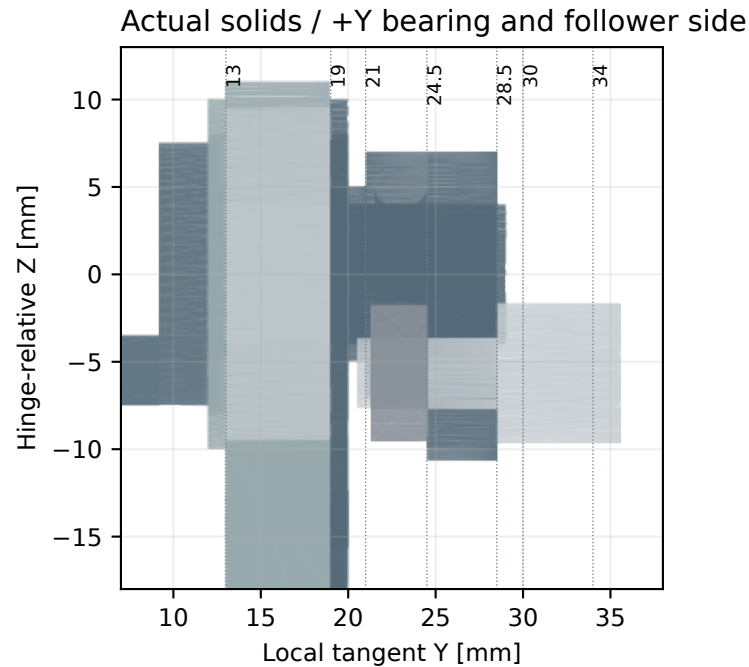

Cam seat:4mm
D4H6 candidate / backingD10
AF7 nut:3.2mm
Thread tail:0.8mm nominal
Seat -> guide gap:1.5mm
Track rolling-edge allowance:0.5mm

Rear service relief:D10.4
Main seat hole ligament:2mm
D3 pin:custom, unretained
Inner spacer:D10/D8 x2

- 1 Attach petal to U cradle with four M3 screws, washers and rear nuts.
- 2 Slide separate bearing pedestals onto short journals; fit caps and foot bolts.
- 3 Assemble CFS on the detached crank: hold the head, turn the supplied nut.
- 4 Fit spacer and crank to shaft, then crosspin. Install the fixed guide last.
- 5 Connect to a separately qualified rail/backbone; no complete palm is supplied.

Load: face -> FORM02 frame -> M3 interface -> steel cradle/short shaft -> crank/pin -> CFS -> fixed guide.
Bearing reaction also flows through two pedestals into the radial foot. Catalog ratings do not qualify this custom load path. Fits, pin retention, fastener preload, fatigue and impact stops remain open.