


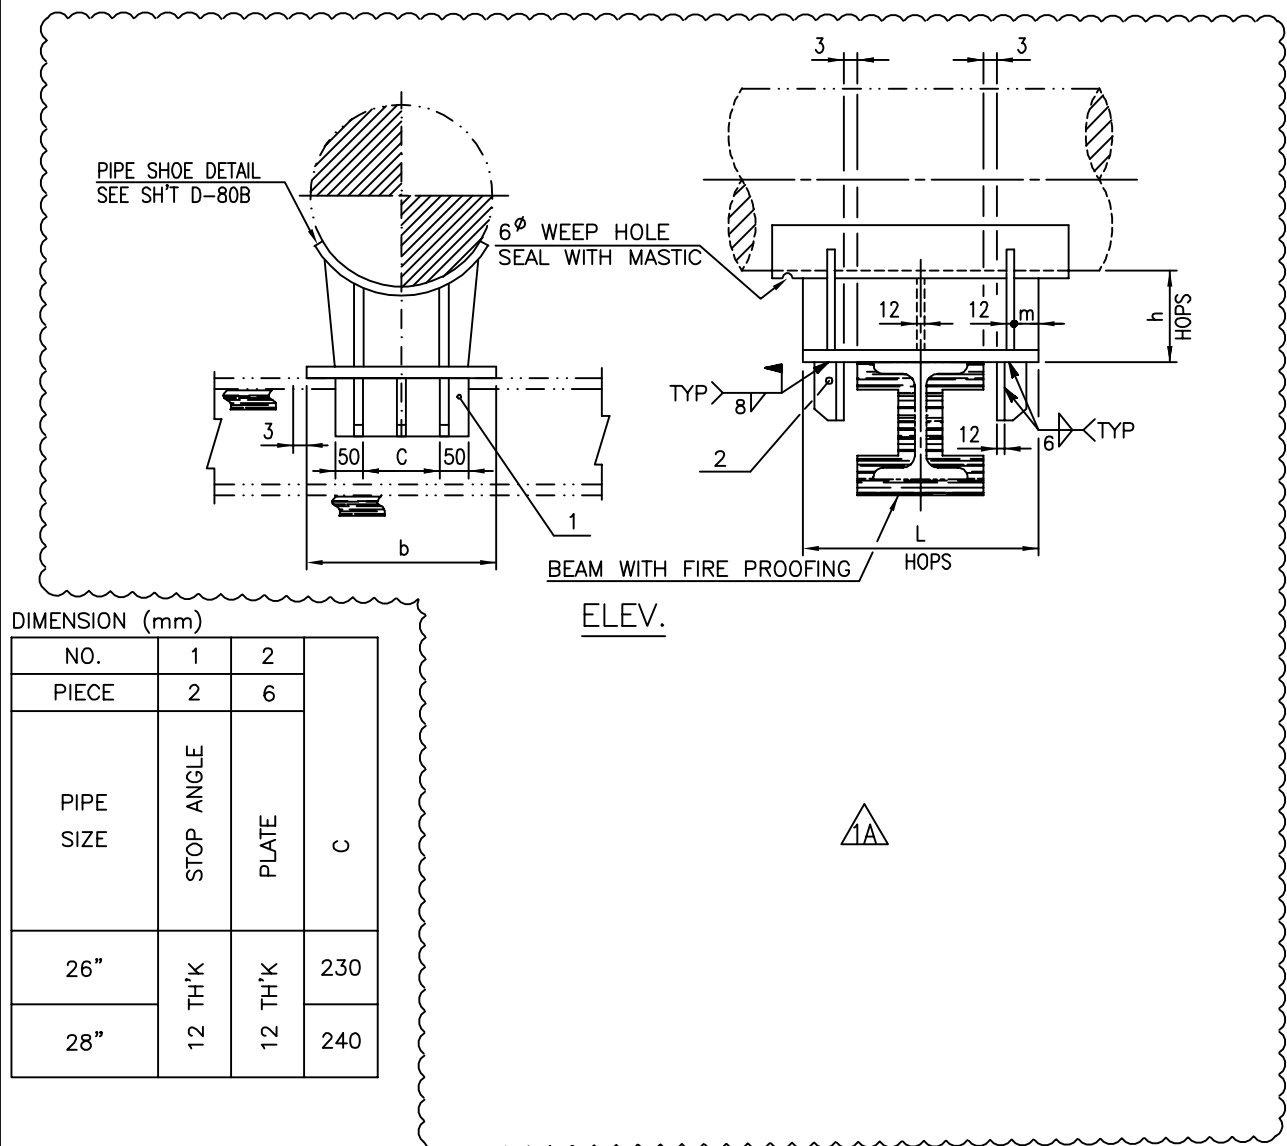

1. DESIGNATION NUMBER DENOTE AS FOLLOWS :

80-30B-A(R)-130-500

DENOTE TYPE NO.

DENOTE LINE SIZE

SEE NOTE 4

MODIFY LOPS=500 (IN mm) IF ANY

MODIFY HOPS=130 (IN mm) IF ANY

SEE SH'T D-80A TABLE "B"

2. LENGTH OF PIPE SHOE (SAY LOPS) TO SUIT BEAM WIDTH IN FIELD.
3. HOPS=HEIGHT OF PIPE SHOE, LOPS=LENGTH OF PIPE SHOE.
4. TYPE-A FOR INSULATION THICKNESS ≤ 100
TYPE-B FOR INSULATION THICKNESS $> 100 \leq 150$
5. LOADING CONDITION : CARBON STEEL SADDLE WITH MAX. PIPE TEMPERATURE 370°C & PRESSURE 300 PSI.
6. IF THE WIDTH OF RESTING BEAM MORE THAN H-300X300 FOR EXAMPLE H-400X400, THEN THE LENGTH OF PIPE SHOE(L) NEED TO ADD 100MM ACCORDINGLY.
7. "P" IS THE WIDTH OF RESTING BEAM, "F" IS THE FIRE PROOFING THICKNESS OF RESTING BEAM.
"b" IS THE WIDTH OF PIPE SHOE. "F.P.": FIRE PROOFING.