
B1	89S36-095-550	1	4260	T2	89S36-095-550	1	4331	R3	89S36-095-500	1	398	W4	89S36-095-550	1	109
W5	89S36-095-550	1	776	W6	89S36-095-550	1	263	W7	89S36-095-550	1	594	W8	89S36-095-550	1	374
W9	89S36-095-550	1	1195	W10	89S36-095-550	1	596	W11	89S36-095-550	1	1262	W12	89S36-095-550	1	815
FRAMECAD M6 Screw		40		Working Sheet: 89 - TRUSSES				Assembly Weight			19.9kg				

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

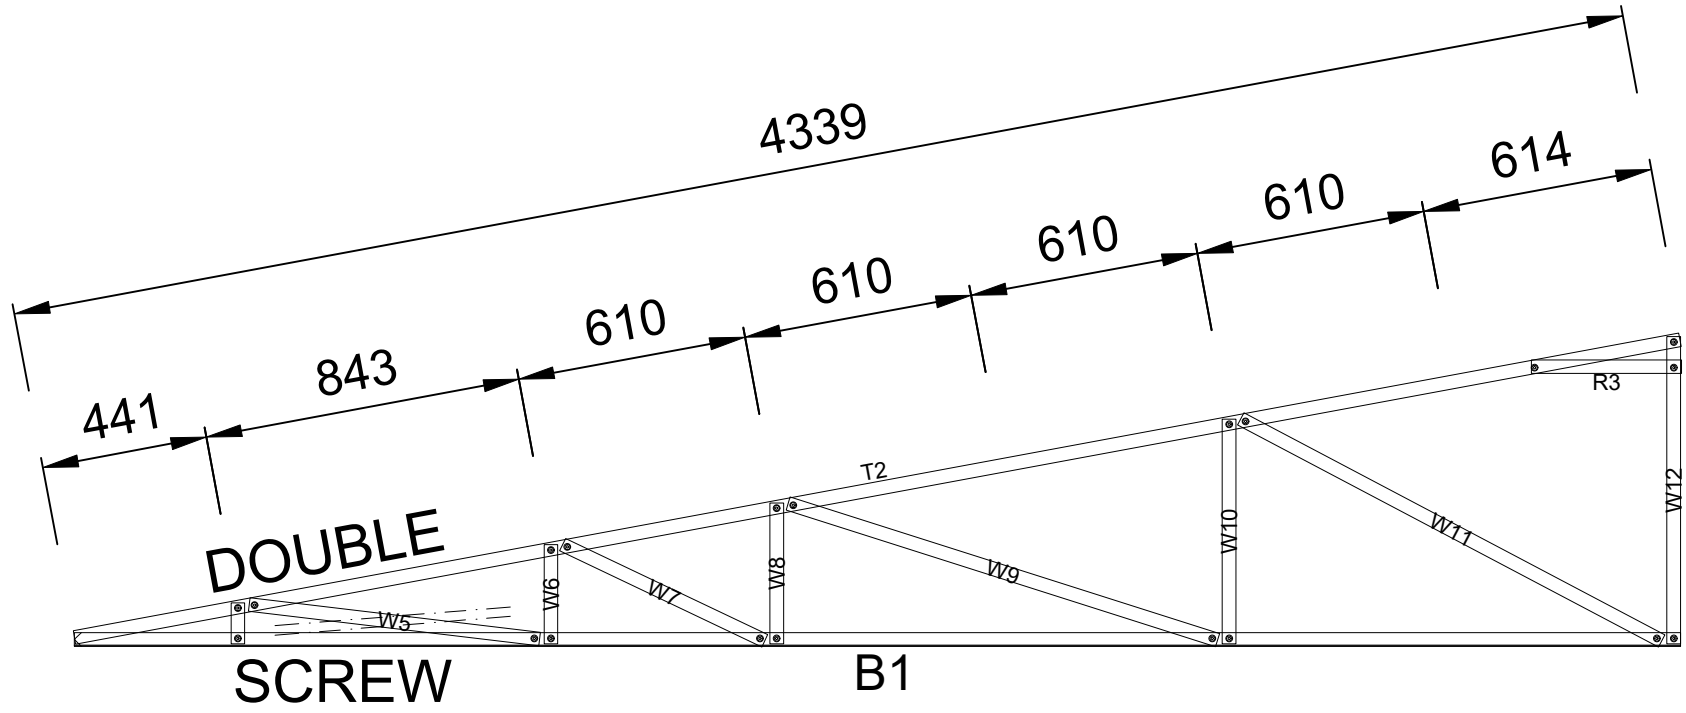


Quantity Required = 1 Mark as P2-G100 Engineering Status = Non Structural

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.500	Truss Spacing:	1200	Envelope:	833h x 4266w

B1	89S36-095-550	1	4204	T2	89S36-095-550	1	4267	W3	89S36-095-550	1	108	W4	89S36-095-550	1	118	W5	89S36-095-550	1	129
W6	89S36-095-550	1	344	W7	89S36-095-550	1	202	W8	89S36-095-550	1	805	W9	89S36-095-550	1	361	W10	89S36-095-550	1	1009
W11	89S36-095-550	1	550	W12	89S36-095-550	1	1249	W13	89S36-095-550	1	772	W14	89S36-095-550	1	922	W15	89S36-095-550	1	880
FRAMECAD M6 Screw		52		Working Sheet: 89 - TRUSSES				Assembly Weight			21.1kg								

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

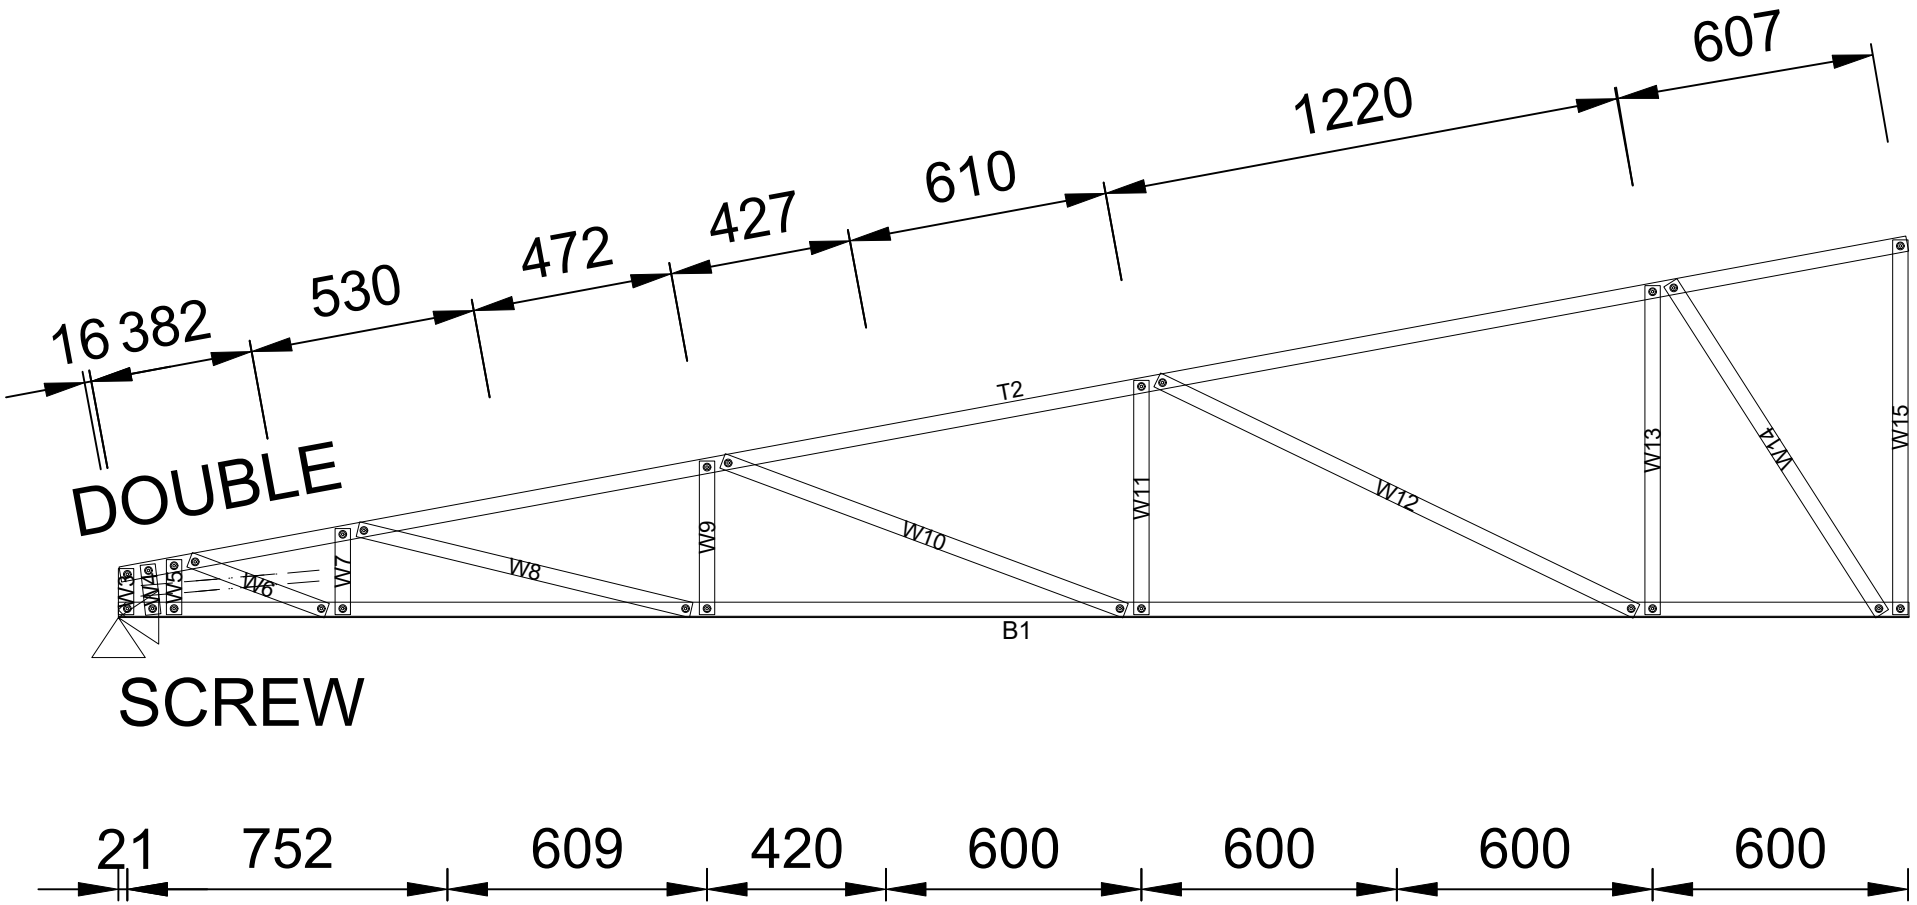


Quantity Required = 1 Mark as P2-G101 Engineering Status = Non Structural

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.500	Truss Spacing:	1200	Envelope:	898h x 4204w

B1	89S36-095-550	1	4204	T2	89S36-095-550	1	4267	W3	89S36-095-550	1	108	W4	89S36-095-550	1	119	W5	89S36-095-550	1	129
W6	89S36-095-550	1	355	W7	89S36-095-550	1	202	W8	89S36-095-550	1	387	W9	89S36-095-550	1	276	W10	89S36-095-550	1	479
W11	89S36-095-550	1	361	W12	89S36-095-550	1	504	W13	89S36-095-550	1	439	W14	89S36-095-550	1	689	W15	89S36-095-550	1	550
W16	89S36-095-550	1	1260	W17	89S36-095-550	1	772	W18	89S36-095-550	1	928	W19	89S36-095-550	1	880	FRAMECAD M6 Screw		68	
Working Sheet: 89 - TRUSSES				Assembly Weight			22.4kg												

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

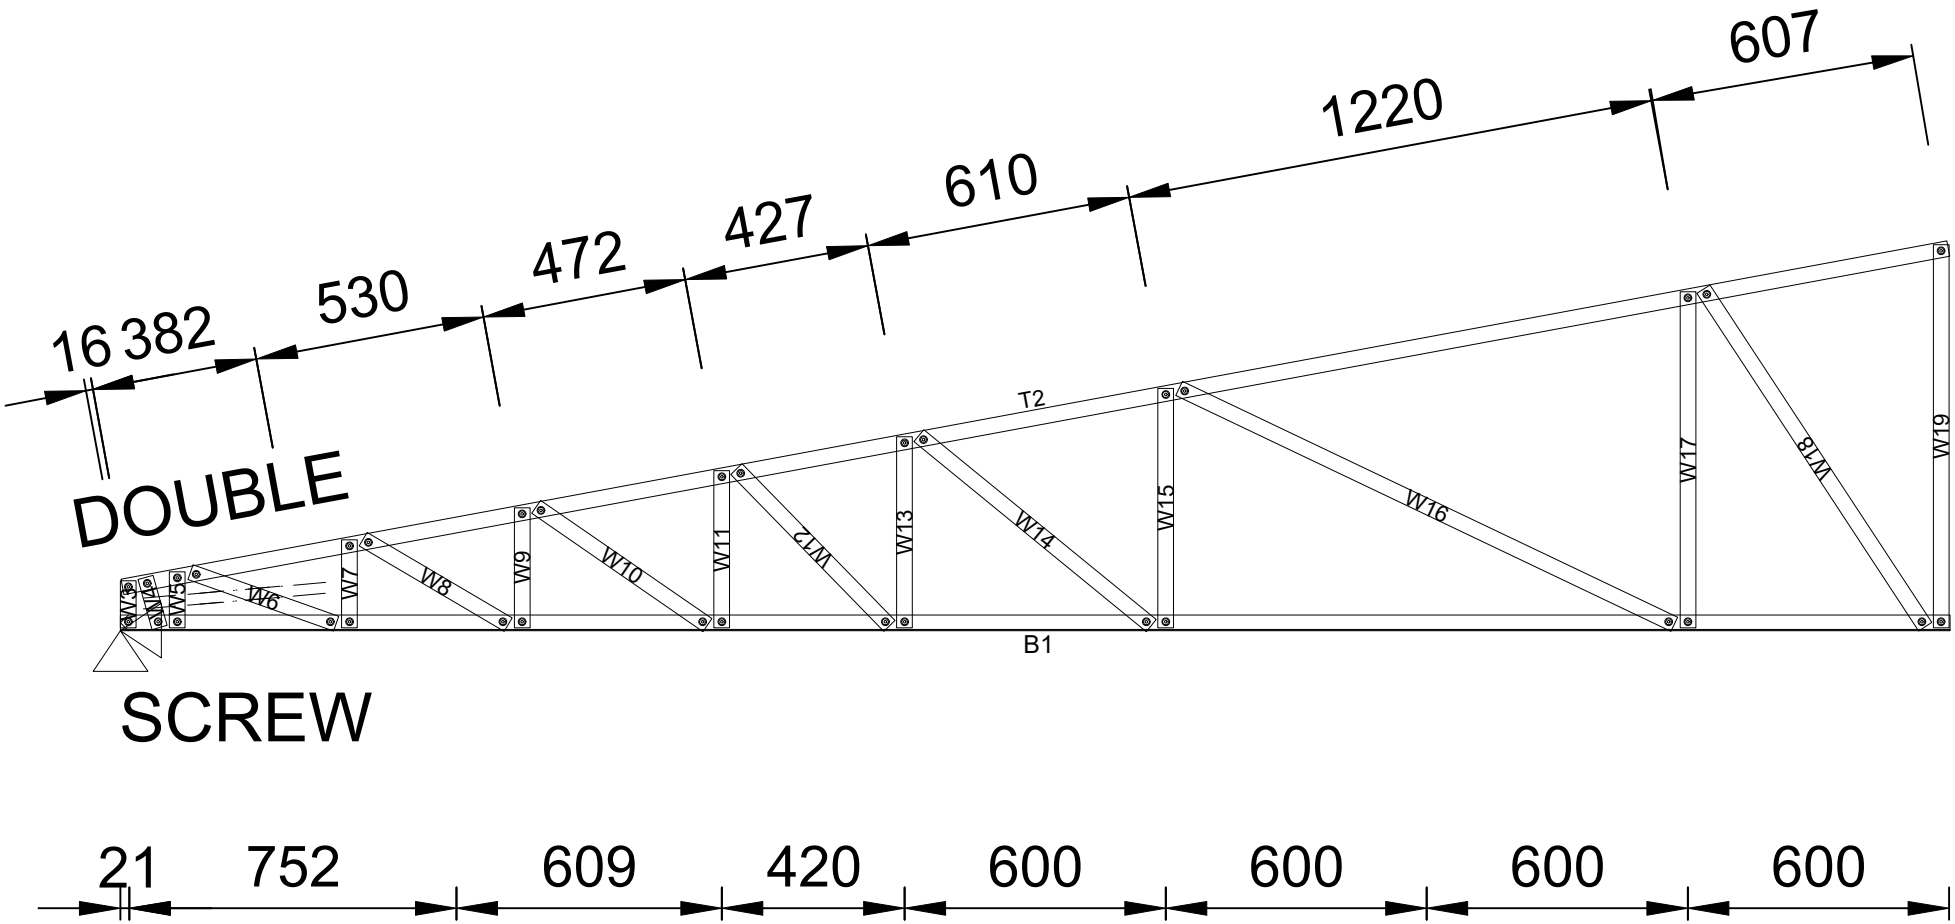


Quantity Required = 1 Mark as P2-G102 Engineering Status = Non Structural

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.500	Truss Spacing:	1200	Envelope:	898h x 4204w

B1	89S36-095-550	1	4267	T2	89S36-095-550	1	4337	R3	89S36-095-500	1	398	W4	89S36-095-550	1	815	W5	89S36-095-550	1	1262
W6	89S36-095-550	1	596	W7	89S36-095-550	1	1195	W8	89S36-095-550	1	374	W9	89S36-095-550	1	594	W10	89S36-095-550	1	263
W11	89S36-095-550	1	825	W12	89S36-095-550	1	100	FRAMECAD M6 Screw		42		Working Sheet: 89 - TRUSSES				Assembly Weight			20.0kg

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

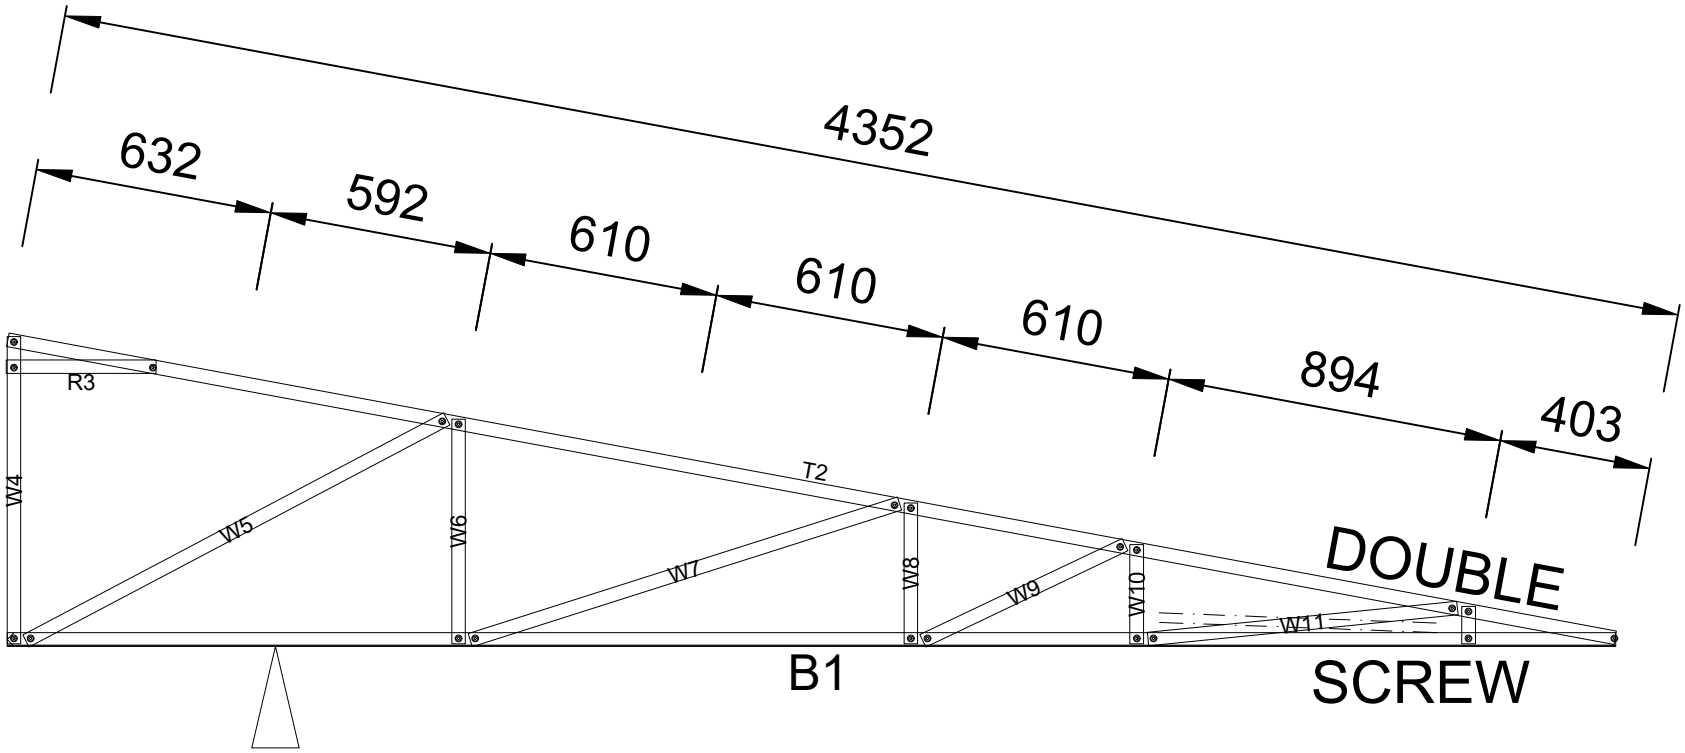


Quantity Required = 1 Mark as P2-G103 Engineering Status = Non Structural

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.500	Truss Spacing:	1200	Envelope:	833h x 4272w

B1	89S36-095-550	1	222	B2	89S36-095-550	1	5217	T3	89S36-095-550	1	617	T4	89S36-095-550	1	4893	R5	89S36-095-500	1	577
W6	89S36-095-550	1	282	W7	89S36-095-550	1	306	W8	89S36-095-550	1	921	W9	89S36-095-550	1	980	W10	89S36-095-550	1	994
W11	89S36-095-550	1	1370	W12	89S36-095-550	1	772	W13	89S36-095-550	1	1260	W14	89S36-095-550	1	549	W15	89S36-095-550	1	1020
W16	89S36-095-550	1	360	W17	89S36-095-550	1	817	W18	89S36-095-550	1	202	W19	89S36-095-550	1	355	W20	89S36-095-550	1	128
W21	89S36-095-550	1	119	W22	89S36-095-550	1	108	FRAMECAD M6 Screw		72		Working Sheet: 89 - TRUSSES				Assembly Weight			29.3kg

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

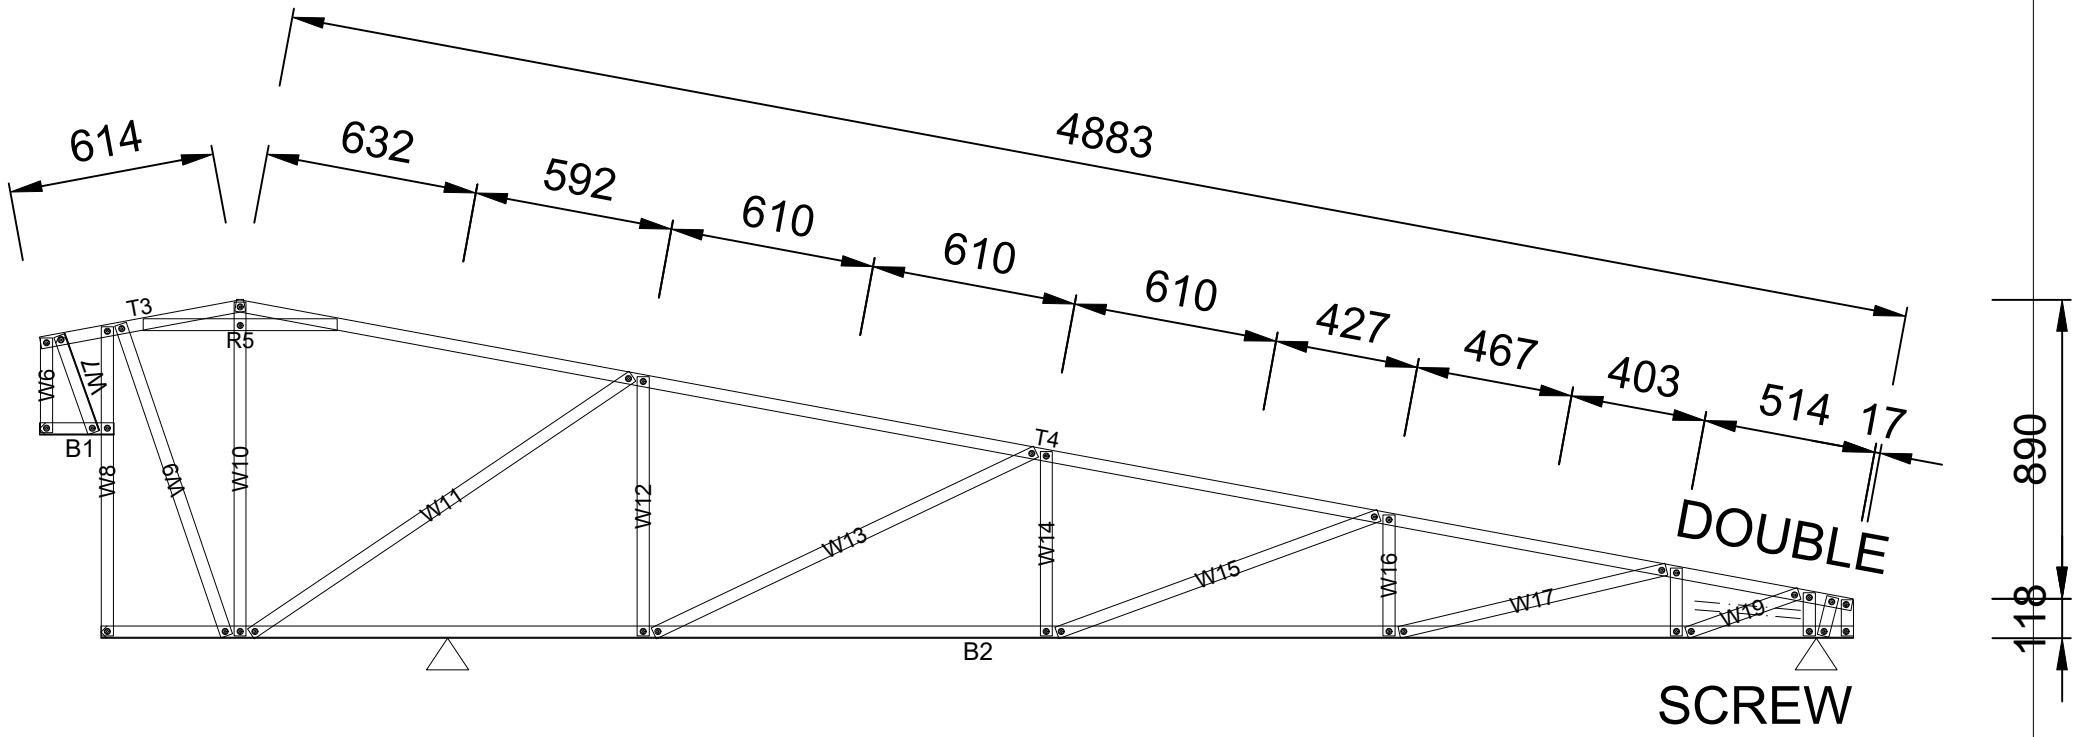


Quantity Required = 1 Mark as P2-G104 Engineering Status = Non Structural

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.500	Truss Spacing:	1200	Envelope:	1012h x 5400w

B1	89S36-095-550	1	222	B2	89S36-095-550	1	5216	T3	89S36-095-550	1	617	T4	89S36-095-550	1	4893	R5	89S36-095-500	1	635
W6	89S36-095-550	1	488	W7	89S36-095-550	1	506	W8	89S36-095-550	1	921	W9	89S36-095-550	1	980	W10	89S36-095-550	1	994
W11	89S36-095-550	1	1370	W12	89S36-095-550	1	772	W13	89S36-095-550	1	1260	W14	89S36-095-550	1	549	W15	89S36-095-550	1	689
W16	89S36-095-550	1	438	W17	89S36-095-550	1	504	W18	89S36-095-550	1	360	W19	89S36-095-550	1	479	W20	89S36-095-550	1	275
W21	89S36-095-550	1	386	W22	89S36-095-550	1	202	W23	89S36-095-550	1	355	W24	89S36-095-550	1	128	W25	89S36-095-550	1	119
W26	89S36-095-550	1	108	FRAMECAD M6 Screw		88		Working Sheet: 89 - TRUSSES				Assembly Weight			31.1kg				

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

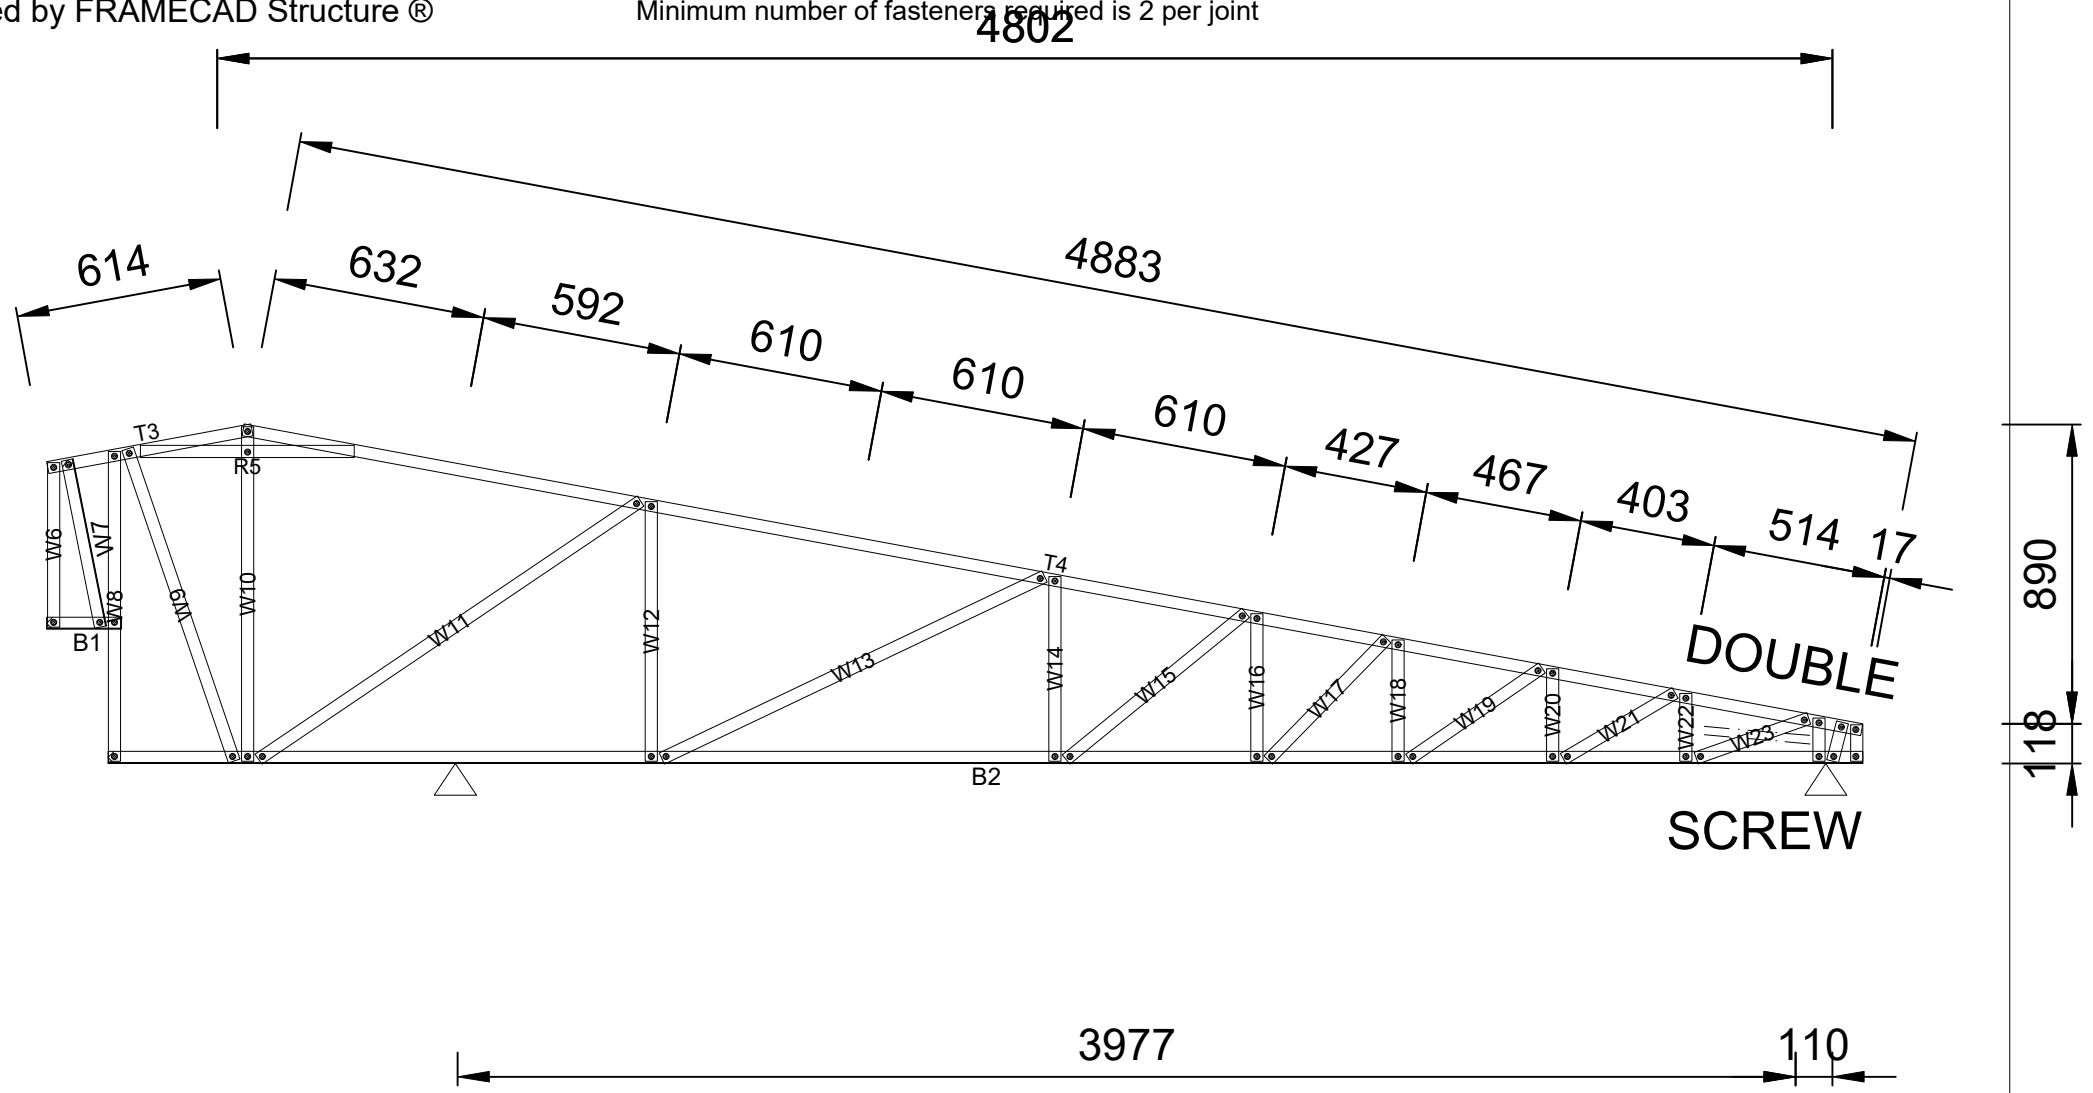


Quantity Required = 1 Mark as P2-G105 Engineering Status = Non Structural

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.500	Truss Spacing:	1200	Envelope:	1012h x 5398w

B1	89S36-095-550	1	1931	T2	89S36-095-550	1	1944	W3	89S36-095-550	1	108	W4	89S36-095-550	1	228	W5	89S36-095-550	1	516
W6	89S36-095-550	1	143	W7	89S36-095-550	1	546	W8	89S36-095-550	1	214	W9	89S36-095-550	1	584	W10	89S36-095-550	1	285
W11	89S36-095-550	1	356	FRAMECAD M6 Screw		36		Working Sheet: 89 - TRUSSES				Assembly Weight			9.6kg				

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

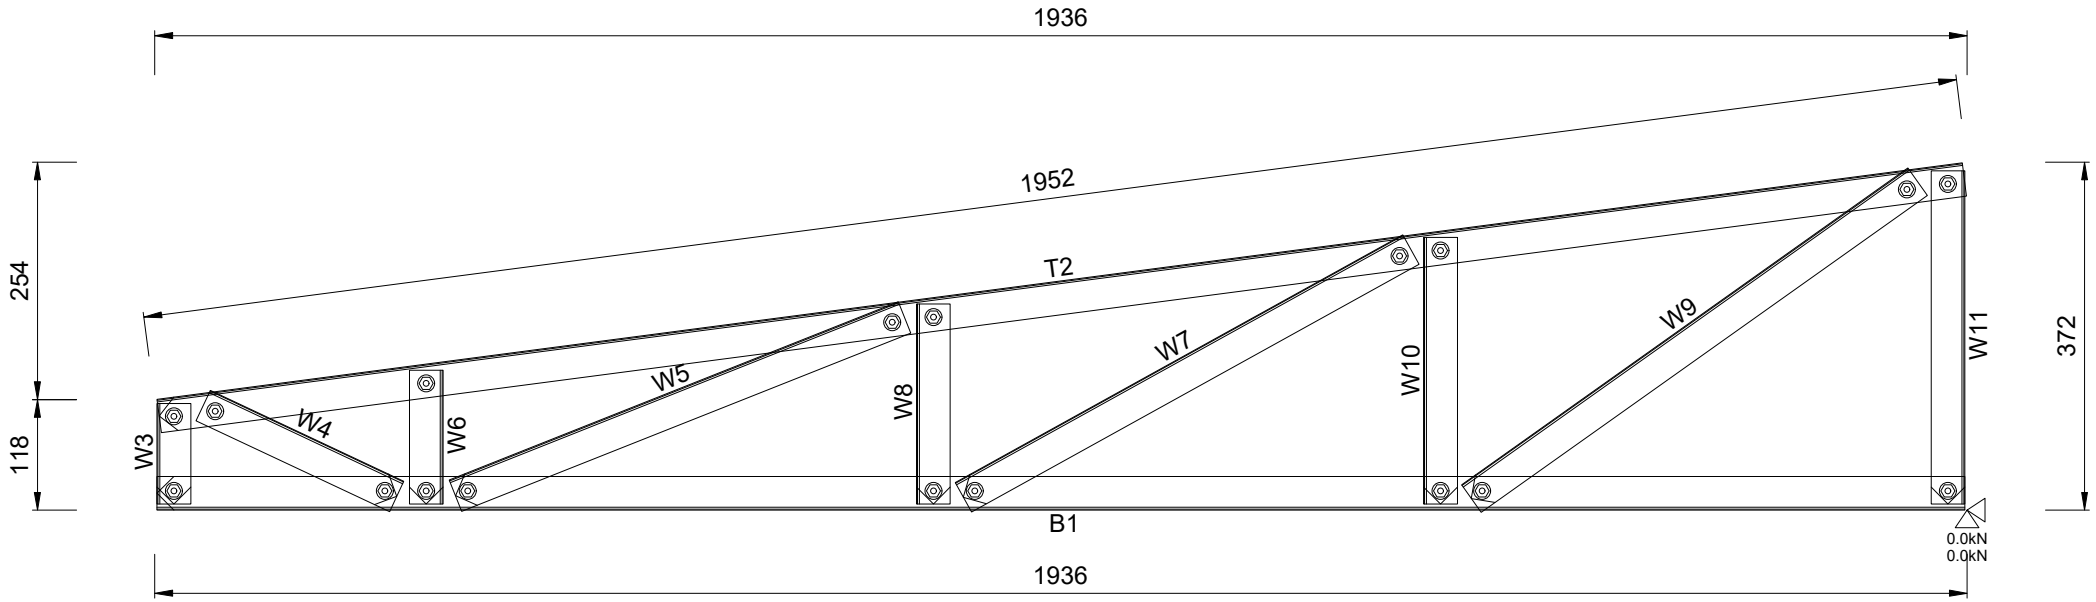


Quantity Required = 1 Mark as P2-S100 Engineering Status = Support Missing

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	7.466	Truss Spacing:	1200	Envelope:	373h x 1933w

B1 89S36-095-550	1 554	T2 89S36-095-550	1 556	W3 89S36-095-550	1 108	W4 89S36-095-550	1 130	W5 89S36-095-550	1 348
W6 89S36-095-550	1 204	FRAMECAD M6 Screw	16	Working Sheet: 89 - TRUSSES		Assembly Weight	2.7kg		

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

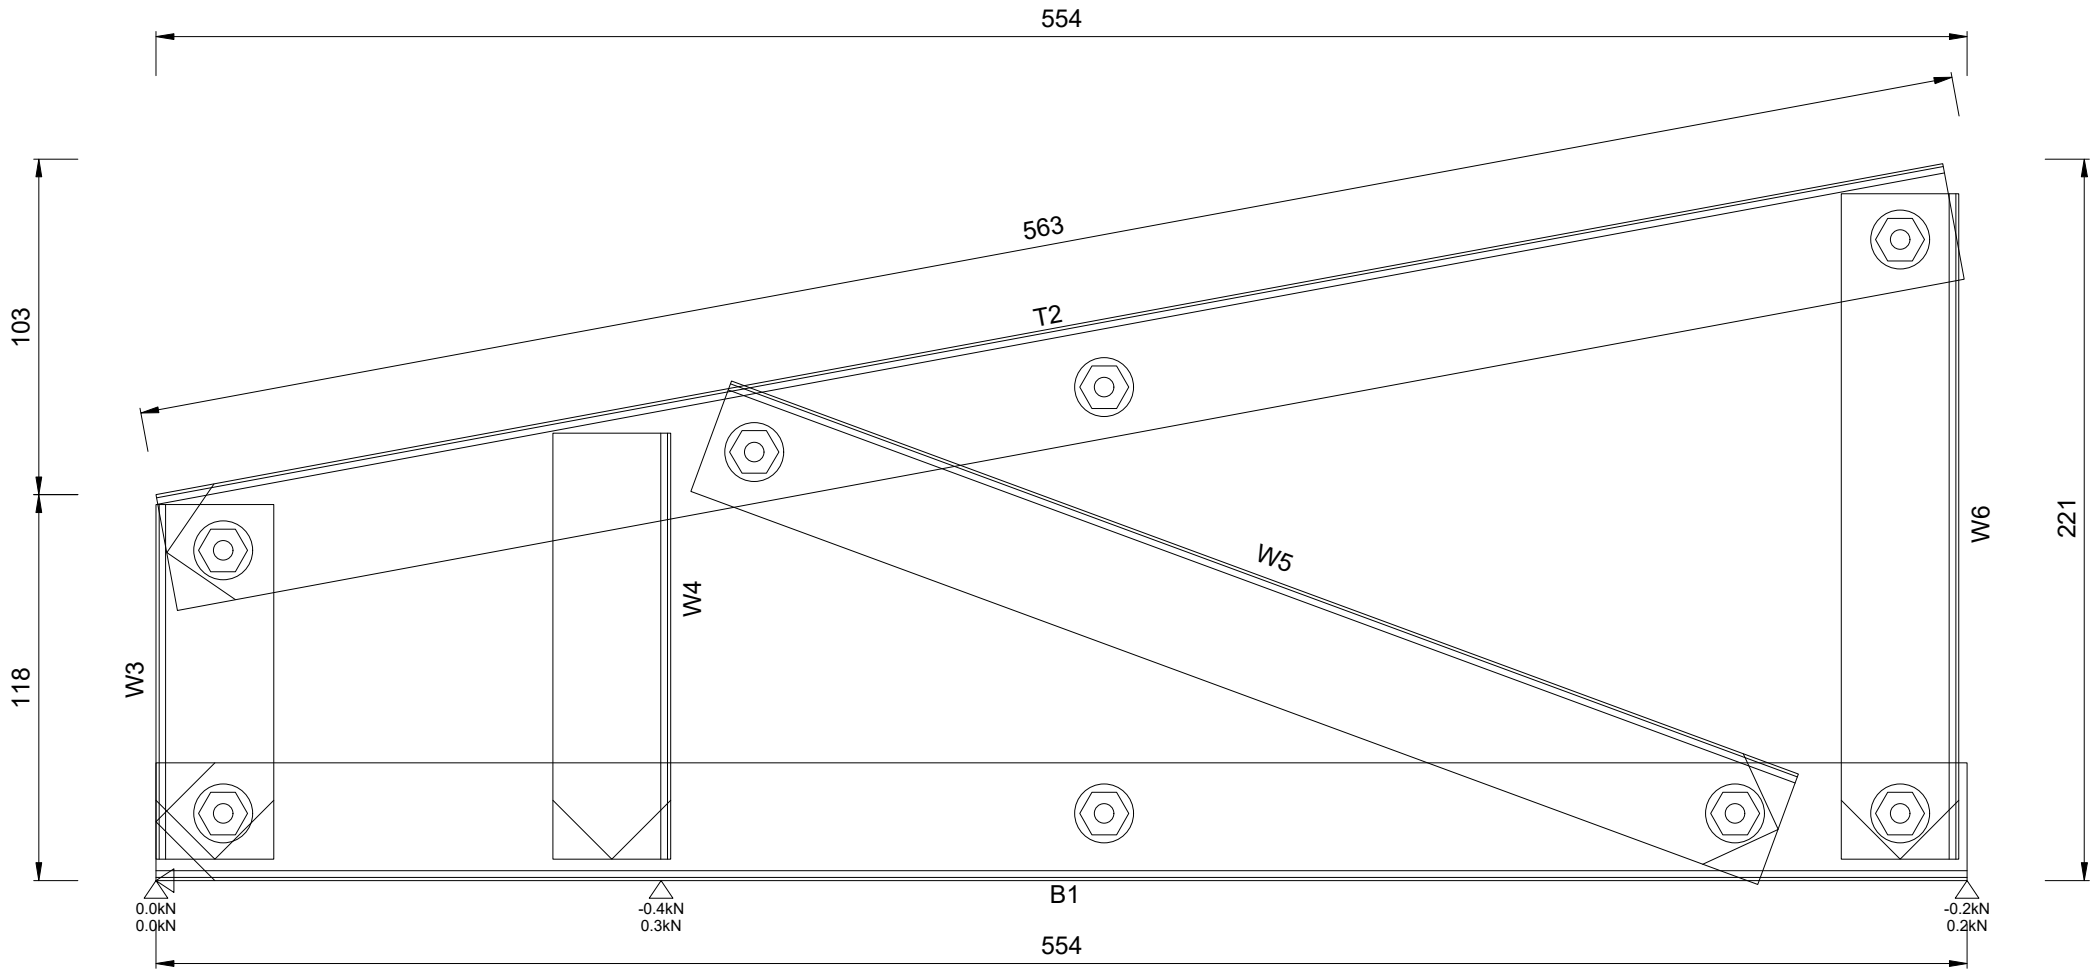


Quantity Required = 1 Mark as P2-S101 Engineering Status = Unknown

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.5	Truss Spacing:	1200	Design Code:	AS/NZS 4600:2018
Loading Code:	NASH AS 2010	Material Grade Reduction:	Not Applied	Top Chord Live Load (kPa):	0.25	Top Chord Dead Load (kPa):	0.12
Bottom Chord Dead Load (kPa):	0.14	Envelope:	221h x 554w				

B1 89S36-095-550	1	554	T2 89S36-095-550	1	556	W3 89S36-095-550	1	108	W4 89S36-095-550	1	135	W5 89S36-095-550	1	327
W6 89S36-095-550	1	204	FRAMECAD M6 Screw	16		Working Sheet: 89 - TRUSSES			Assembly Weight		2.6kg			

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

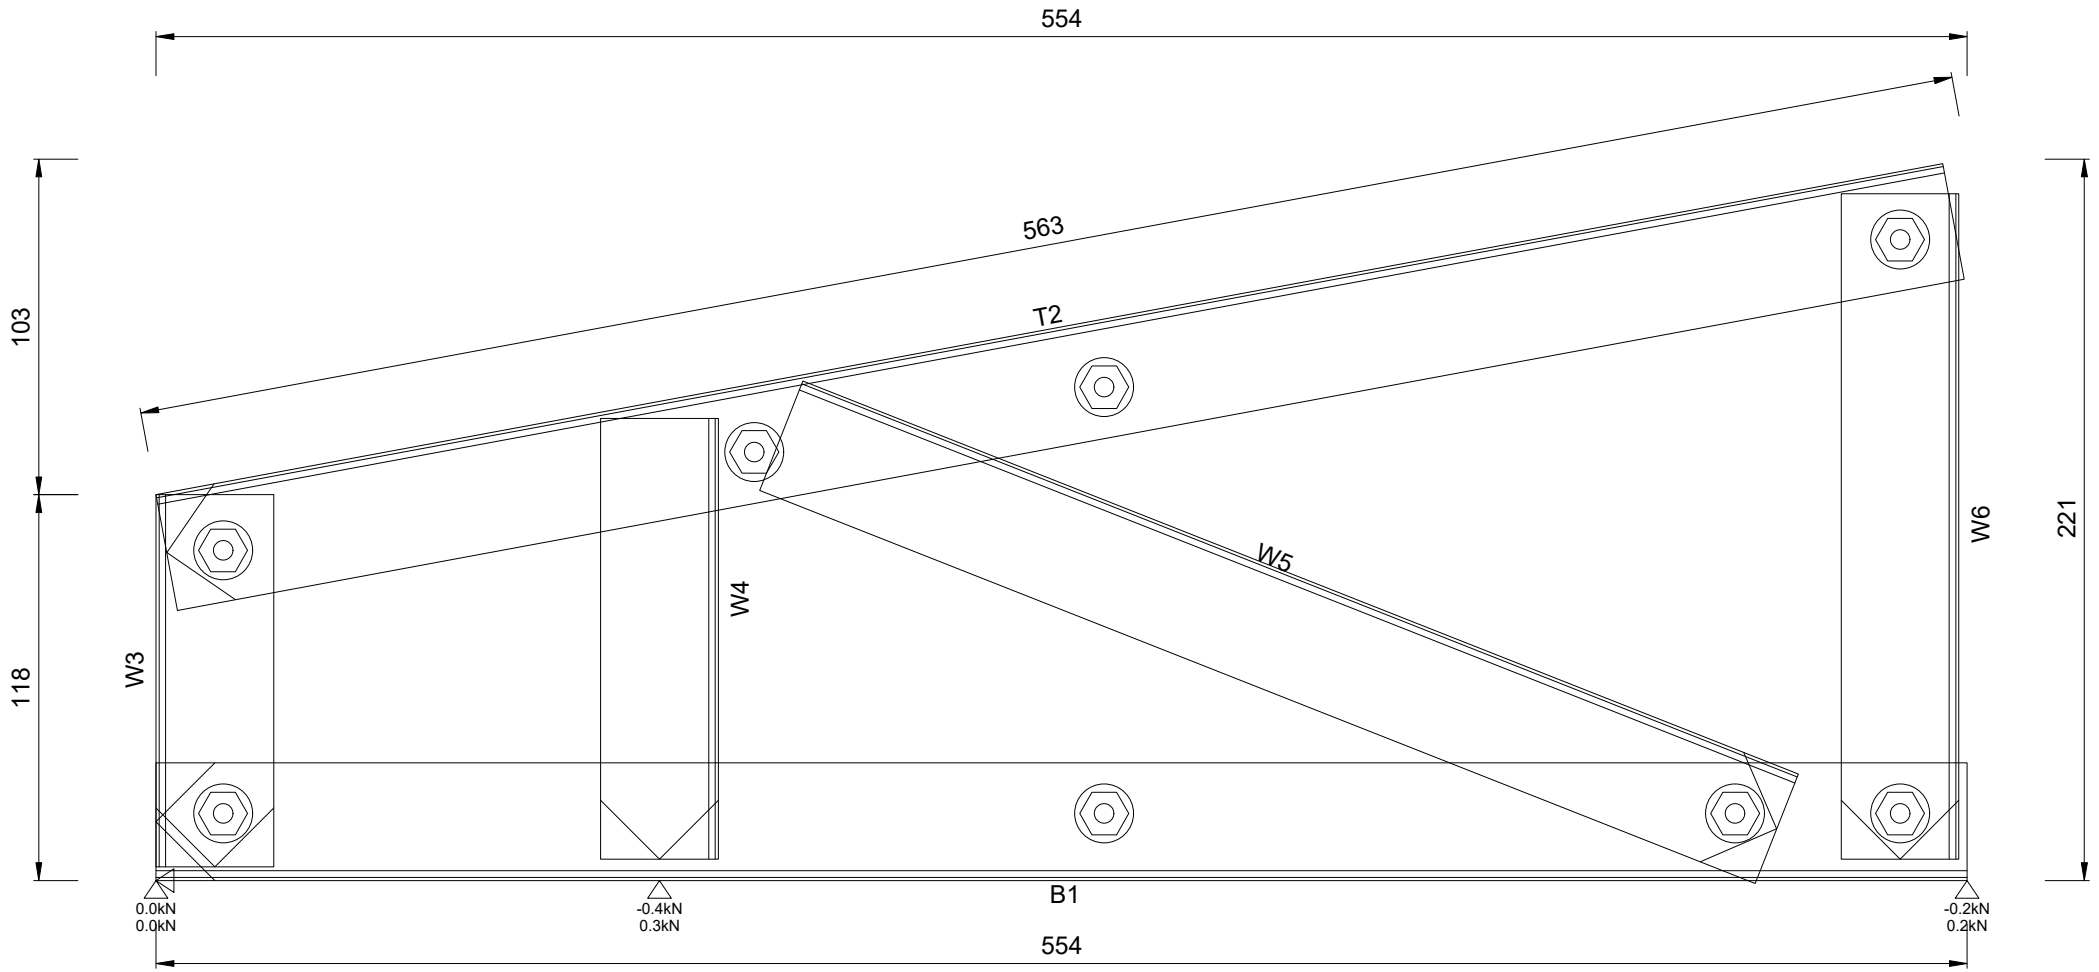


Quantity Required = 1 Mark as P2-S102 Engineering Status = Unknown

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.5	Truss Spacing:	1200	Design Code:	AS/NZS 4600:2018
Loading Code:	NASH AS 2010	Material Grade Reduction:	Not Applied	Top Chord Live Load (kPa):	0.25	Top Chord Dead Load (kPa):	0.12
Bottom Chord Dead Load (kPa):	0.14	Envelope:	220h x 554w				

B1	89S36-095-550	3	1427	T2	89S36-095-550	3	1444	W3	89S36-095-550	3	108
W4	89S36-095-550	3	668	W5	89S36-095-550	3	132	W6	89S36-095-550	3	591
W7	89S36-095-550	3	262	W8	89S36-095-550	3	365	FRAMECAD M6 Screw		72	
Working Sheet: 89 - TRUSSES				Assembly Weight			7.0kg				

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

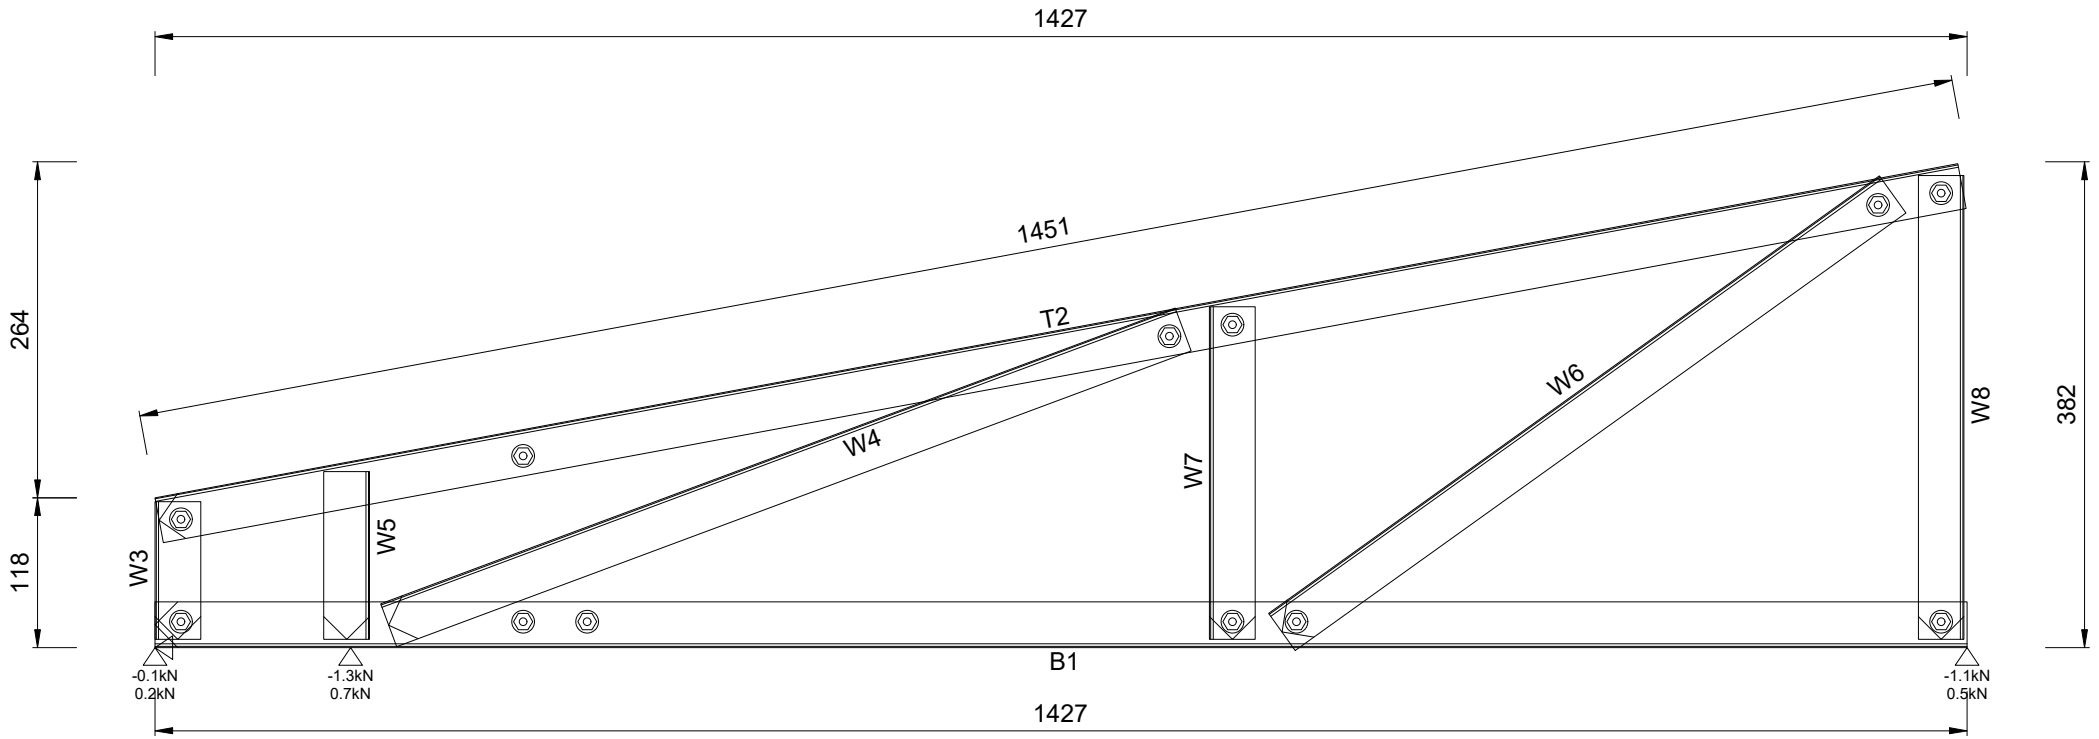


Quantity Required = 3 Mark as P2-S103 Engineering Status = Unknown

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.5	Truss Spacing:	1200	Design Code:	AS/NZS 4600:2018
Loading Code:	NASH AS 2010	Material Grade Reduction:	Not Applied	Top Chord Live Load (kPa):	0.25	Top Chord Dead Load (kPa):	0.12
Bottom Chord Dead Load (kPa):	0.14	Envelope:	383h x 1427w				

B1	89S36-095-550	4	1422	T2	89S36-095-550	4	1441	W3	89S36-095-550	4	108
W4	89S36-095-550	4	676	W5	89S36-095-550	4	133	W6	89S36-095-550	4	602
W7	89S36-095-550	4	262	W8	89S36-095-550	4	365	FRAMECAD M6 Screw		96	
Working Sheet: 89 - TRUSSES				Assembly Weight			7.0kg				

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

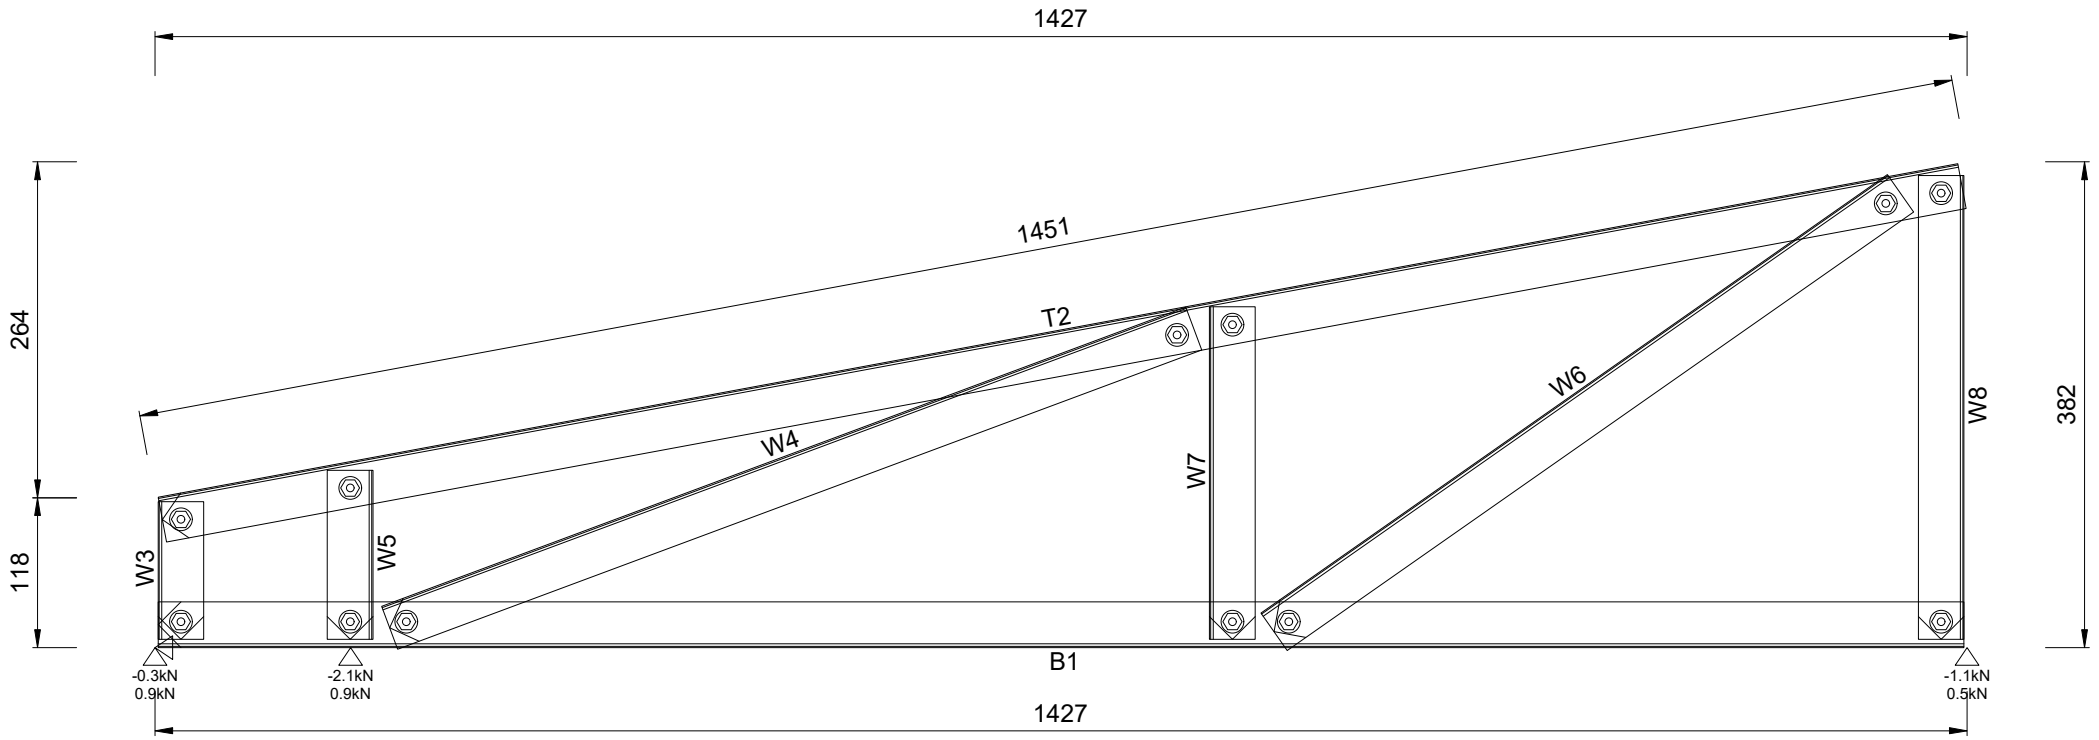


Quantity Required = 4 Mark as P2-S104 Engineering Status = 54%

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.5	Truss Spacing:	1200	Design Code:	AS/NZS 4600:2018
Loading Code:	NASH AS 2010	Material Grade Reduction:	Not Applied	Top Chord Live Load (kPa):	0.25	Top Chord Dead Load (kPa):	0.12
Bottom Chord Dead Load (kPa):	0.14	Envelope:	383h x 1424w				

B1	89S36-095-550	1	1931	T2	89S36-095-550	1	1944	W3	89S36-095-550	1	108	W4	89S36-095-550	1	228	W5	89S36-095-550	1	516
W6	89S36-095-550	1	143	W7	89S36-095-550	1	546	W8	89S36-095-550	1	214	W9	89S36-095-550	1	584	W10	89S36-095-550	1	285
W11	89S36-095-550	1	356	FRAMECAD M6 Screw		36		Working Sheet: 89 - TRUSSES				Assembly Weight			9.6kg				

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

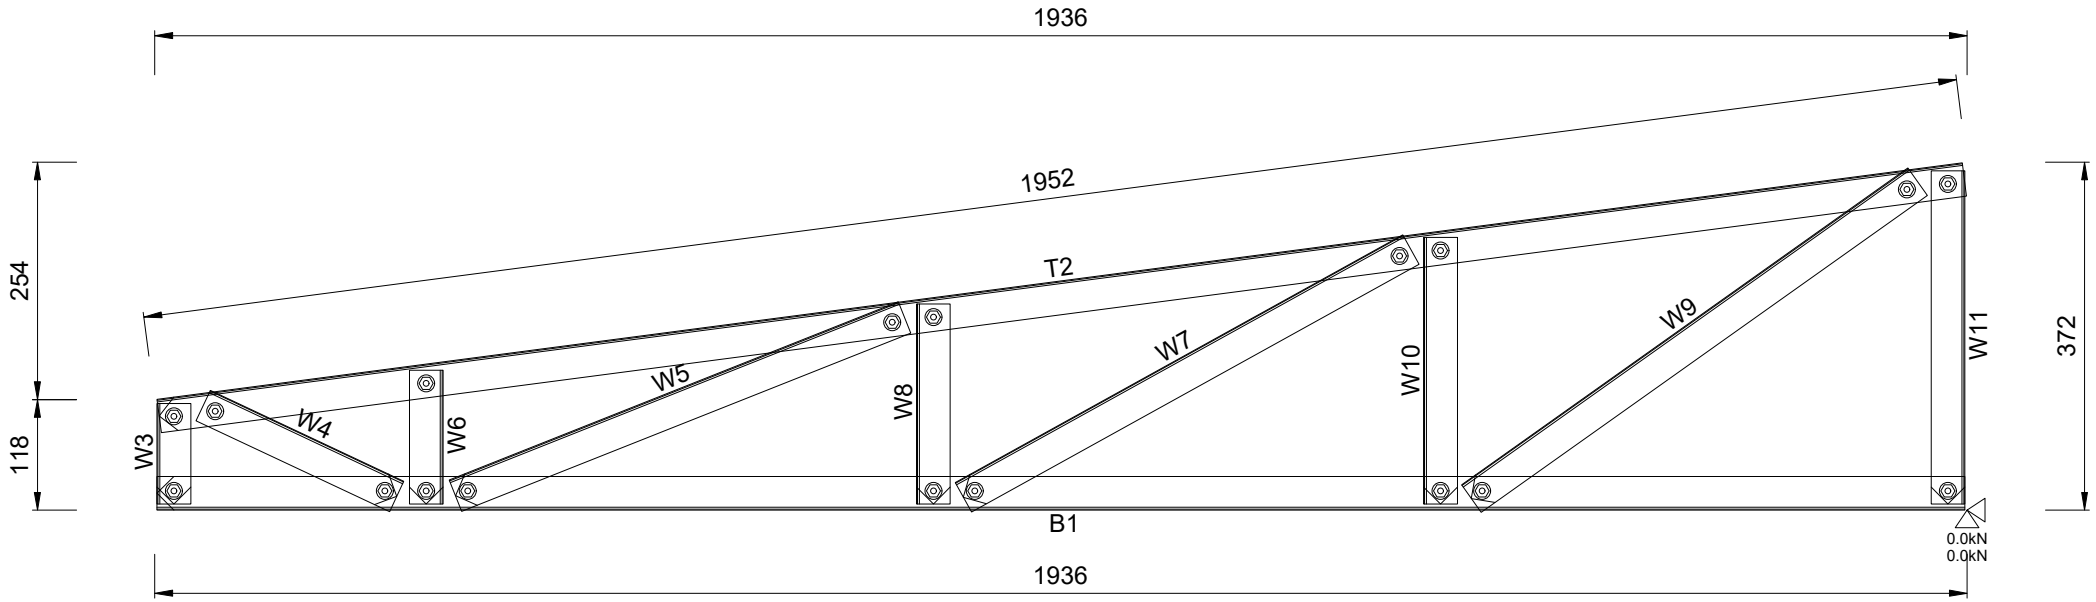


Quantity Required = 1 Mark as P2-S105 Engineering Status = Support Missing

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	7.466	Truss Spacing:	1200	Envelope:	373h x 1933w

B1 89S36-095-550	1 549	T2 89S36-095-550	1 553	W3 89S36-095-550	1 108	W4 89S36-095-550	1 131	W5 89S36-095-550	1 352
W6 89S36-095-550	1 204	FRAMECAD M6 Screw	16	Working Sheet: 89 - TRUSSES		Assembly Weight	2.7kg		

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

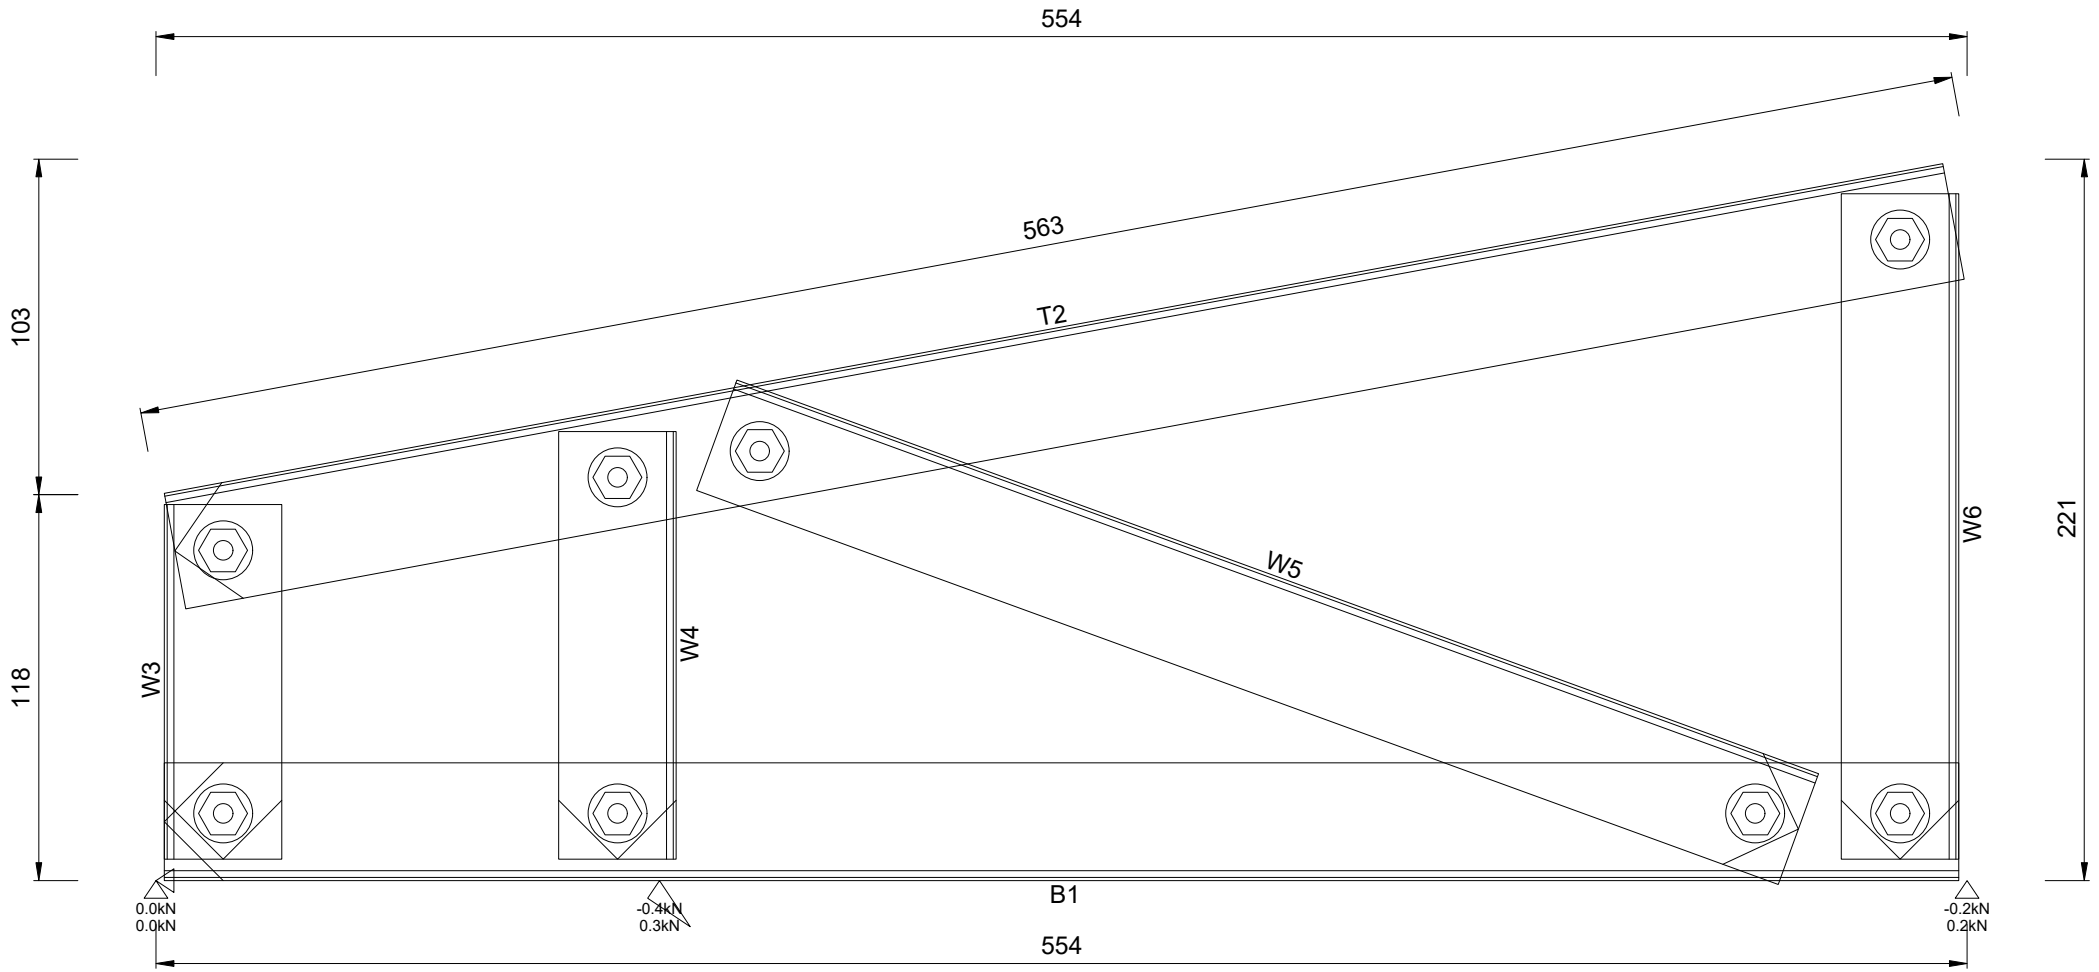


Quantity Required = 1 Mark as P2-S106 Engineering Status = 3%

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.5	Truss Spacing:	1200	Design Code:	AS/NZS 4600:2018
Loading Code:	NASH AS 2010	Material Grade Reduction:	Not Applied	Top Chord Live Load (kPa):	0.25	Top Chord Dead Load (kPa):	0.12
Bottom Chord Dead Load (kPa):	0.14	Envelope:	220h x 550w				

B1 89S36-095-550	1 549	T2 89S36-095-550	1 553	W3 89S36-095-550	1 108	W4 89S36-095-550	1 130	W5 89S36-095-550	1 354
W6 89S36-095-550	1 204	FRAMECAD M6 Screw	16	Working Sheet: 89 - TRUSSES		Assembly Weight	2.7kg		

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

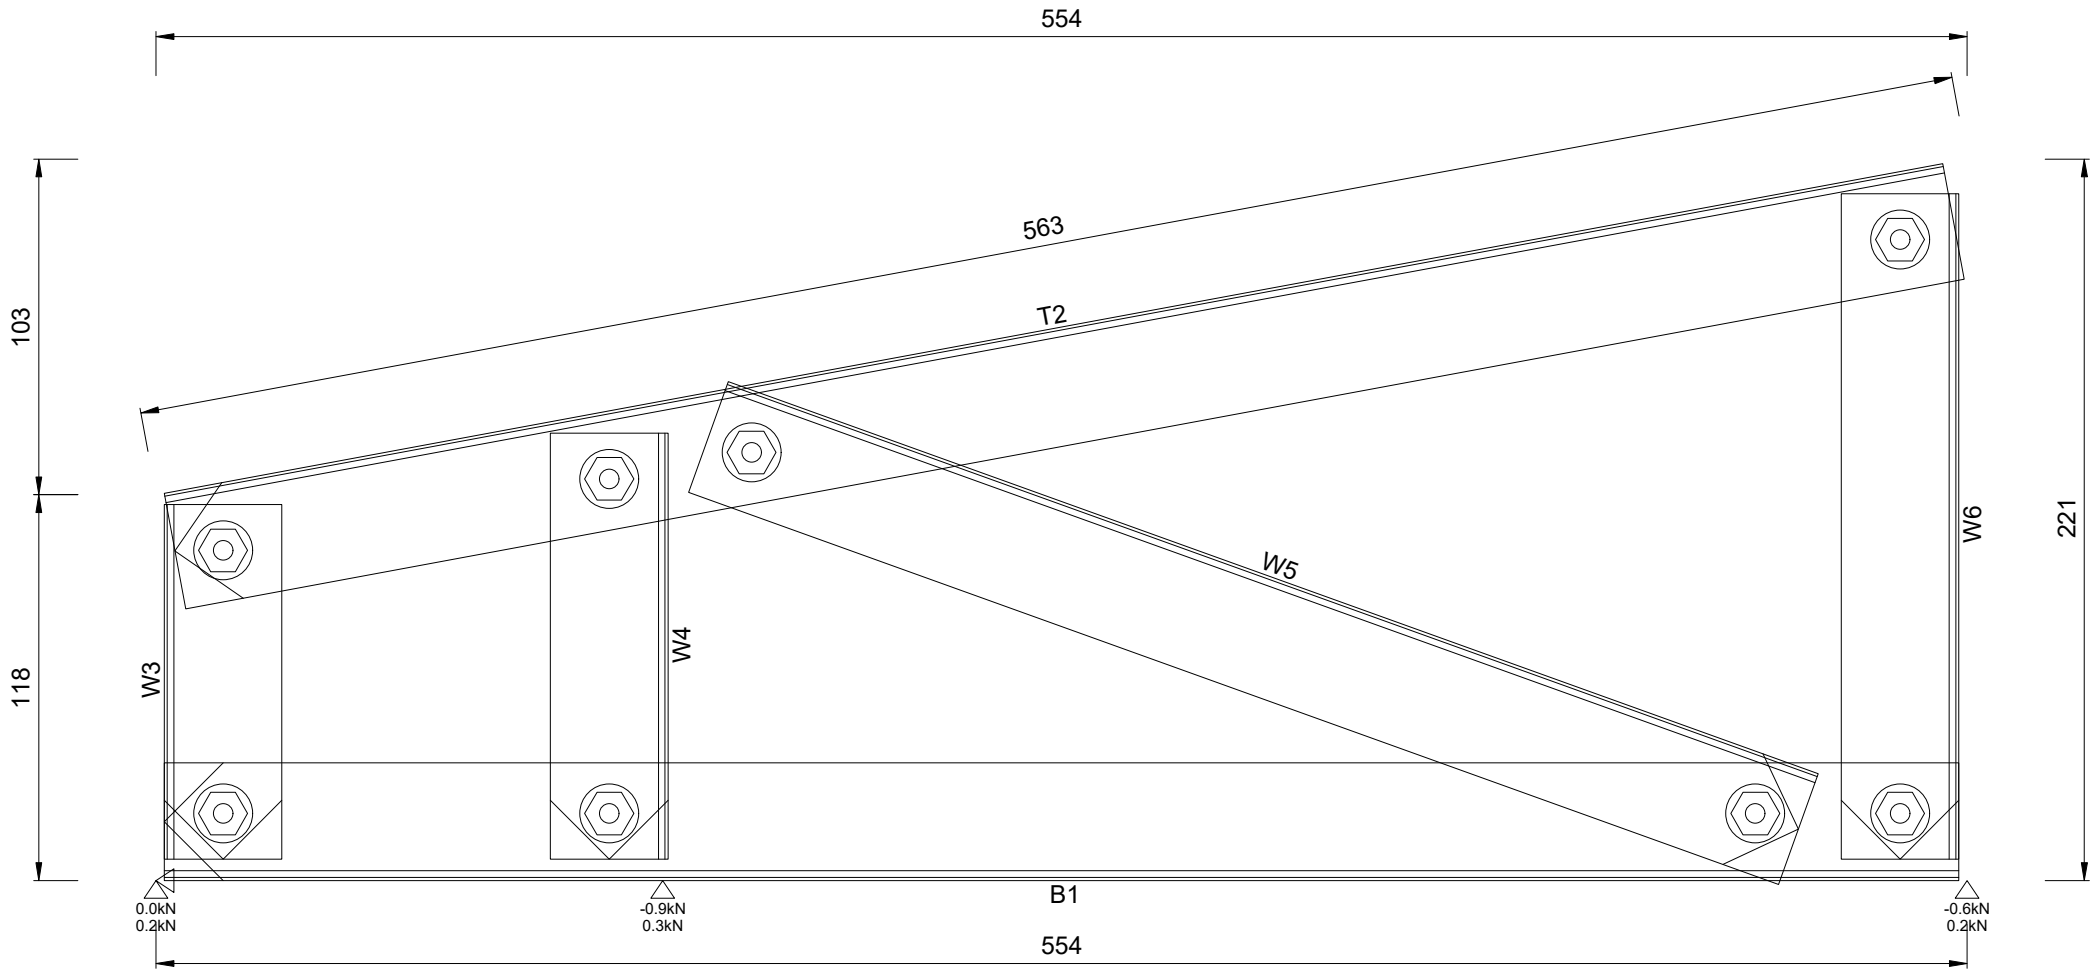


Quantity Required = 1 Mark as P2-S107 Engineering Status = 25%

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.5	Truss Spacing:	1200	Design Code:	AS/NZS 4600:2018
Loading Code:	NASH AS 2010	Material Grade Reduction:	Not Applied	Top Chord Live Load (kPa):	0.25	Top Chord Dead Load (kPa):	0.12
Bottom Chord Dead Load (kPa):	0.14	Envelope:	220h x 550w				

B1	89S36-095-550	2	3705	T2	89S36-095-550	2	3763	W3	89S36-095-550	2	108	W4	89S36-095-550	2	132	W5	89S36-095-550	2	472
W6	89S36-095-550	2	135	W7	89S36-095-550	2	541	W8	89S36-095-550	2	695	W9	89S36-095-550	2	255	W10	89S36-095-550	2	698
W11	89S36-095-550	2	377	W12	89S36-095-550	2	726	W13	89S36-095-550	2	486	W14	89S36-095-550	2	808	W15	89S36-095-550	2	583
W16	89S36-095-550	2	898	W17	89S36-095-550	2	905	W18	89S36-095-550	2	680	W19	89S36-095-550	2	788	FRAMECAD M6 Screw		136	
Working Sheet: 89 - TRUSSES				Assembly Weight			23.5kg												

Powered by FRAMECAD Structure ®

Minimum number of fasteners required is 2 per joint

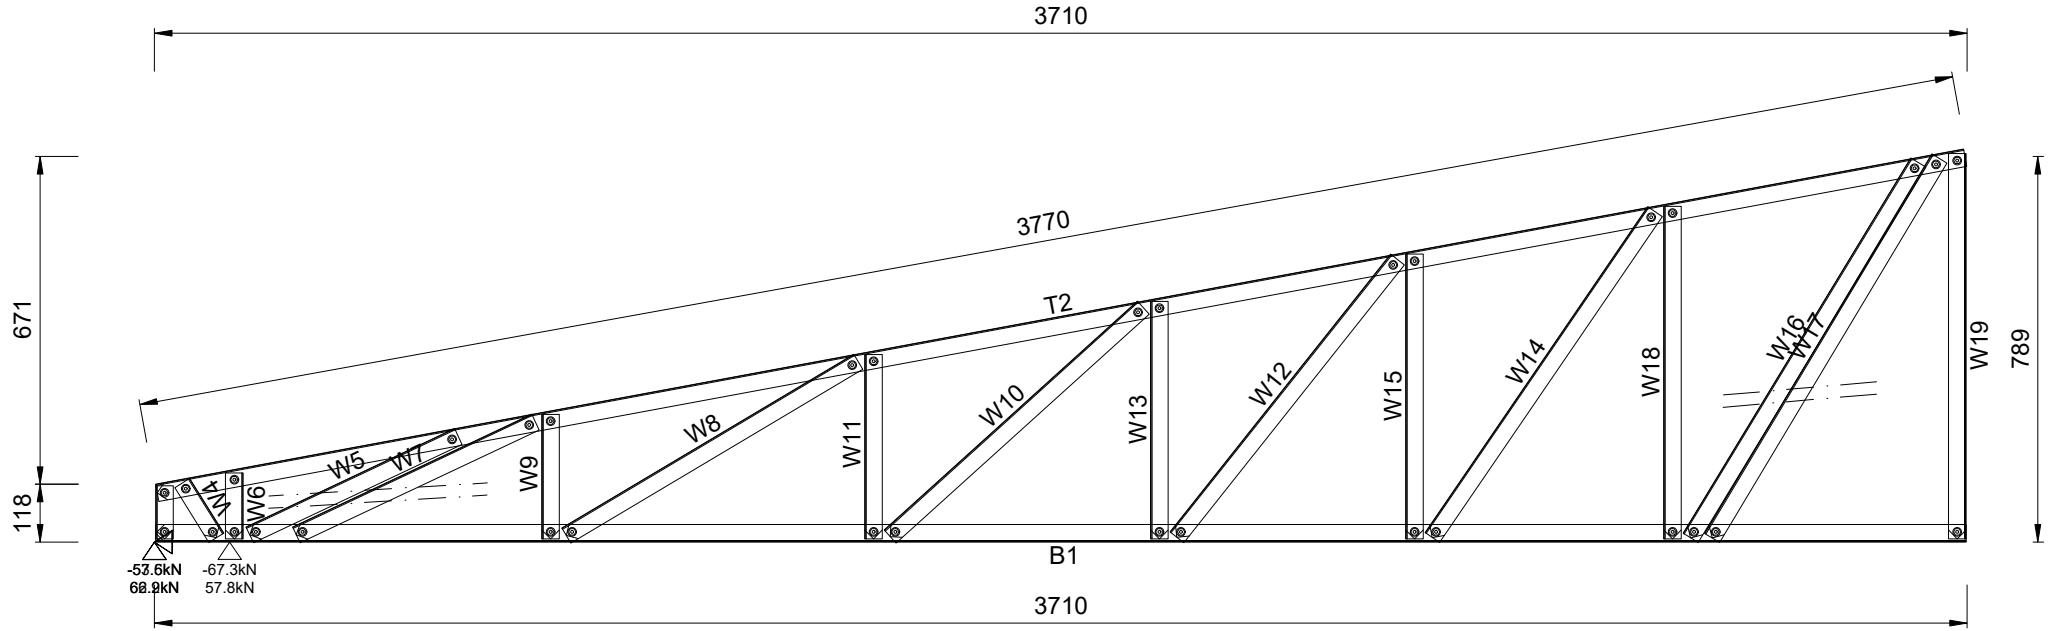

Quantity Required = 2 Mark as P2-S108 Engineering Status = 500%

System Name:	FC_AusTruss	Roof Type:	SHEET	Truss Model:	M20 89S41 Wide System	Wind Speed:	N2
Truss Type:	In-plane Truss	Truss Pitch:	10.5	Truss Spacing:	1200	Design Code:	AS/NZS 4600:2018
Loading Code:	NASH AS 2010	Material Grade Reduction:	Not Applied	Top Chord Live Load (kPa):	0.25	Top Chord Dead Load (kPa):	0.12
Bottom Chord Dead Load (kPa):	0.14	Envelope:	806h x 3707w				