Notes: Running Bypass as bypass
In order to fully purge, Bypass electric ball valve is engaged, K pumps, which are located in final three manifold positions have to each run to the energized bypass solenoid which empties directly to the return line.

Question: How do we purge water from the delivery array after bypass has run?

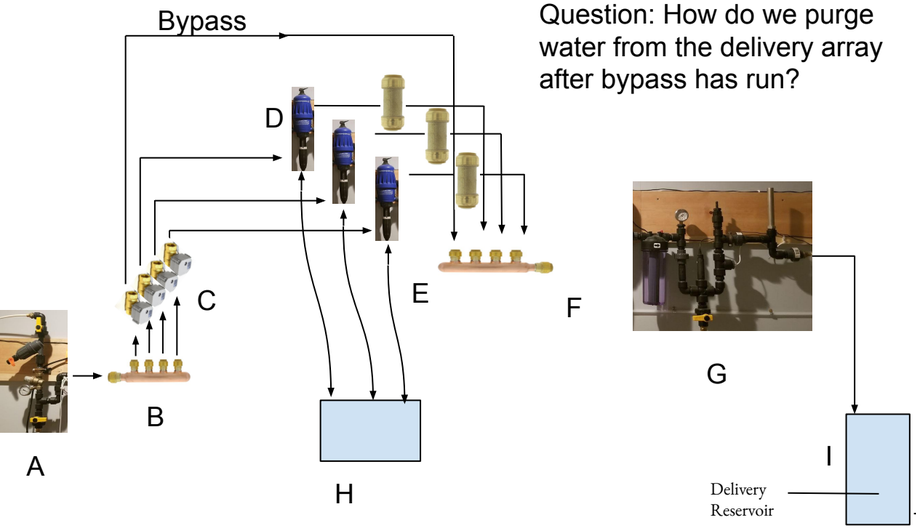

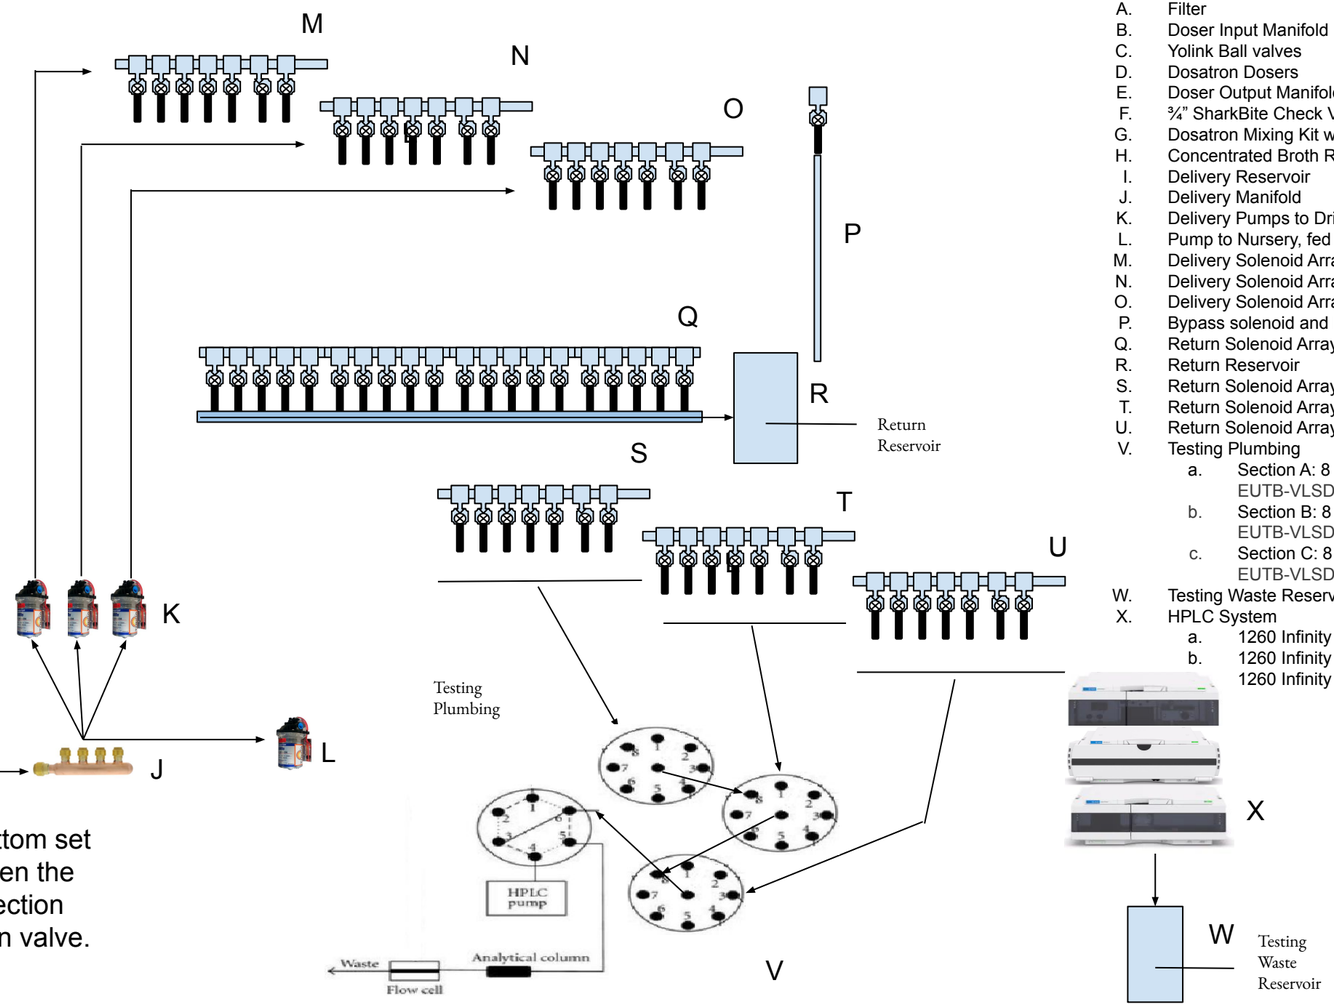

A. Filter
B. Doser Input Manifold
C. Yolink Ball valves
D. Dosatron Dosers
E. Doser Output Manifold
F. ¾" SharkBite Check Valve
G. Dosatron Mixing Kit with Water Hammer protection
H. Concentrated Broth Reservoir
I. Delivery Reservoir
J. Delivery Manifold
K. Delivery Pumps to Drip Hydro Sections A, B, and C
L. Pump to Nursery, fed by bypass
M. Delivery Solenoid Array to Section A
N. Delivery Solenoid Array to Section B
O. Delivery Solenoid Array to Section C
P. Bypass solenoid and line direct to return
Q. Return Solenoid Array
R. Return Reservoir
S. Return Solenoid Array to Section A
T. Return Solenoid Array to Section B
U. Return Solenoid Array to Section C
V. Testing Plumbing
   a. Section A: 8 position Stream selection valve Valco EUTB-VLSD8MWE2
   b. Section B: 8 position Stream selection valve Valco EUTB-VLSD8MWE2
   c. Section C: 8 position Stream selection valve Valco EUTB-VLSD8MWE2
W. Testing Waste Reservoir
X. HPLC System
   a. 1260 Infinity Quaternary Pump
   b. 1260 Infinity MultiColumn Thermostat
   1260 Infinity Variable Wavelength Detector

Notes: For testing each vertical needs its own collection reservoir, with a bottom set union, with a line to the appropriate valve port, and a peristaltic pump between the output of the last daisy-chained 8 port valve and the injection port on the injection valve. There should be a filter between the peristaltic pump and the injection valve.