YOSEMITECH

Conductivity Probe

MODBUS RTU Programmer Manuel

Table of Contents

1	MOI	DBUS RTU Overview	3
	1.1	Scope	3
	1.2		
	1.3	MODBUS RTU for YOSEMITECH's Conductivity Sensor	5
	1.4	MODBUS RTU Function Code for YOSEMITECH's Conductivity Sensor	5
	1.5	Data formats in Conductivity sensor	7
2	MODB	US RTU Commands for Conductivity Sensor	8
	2.1	Overview	10
	2.2	Command Description	10
3	Proc	edure to get Conductivity value	15

1 MODBUS RTU Overview

1.1 Scope

This document is about MODBUS of Conductivity probes with hardware Rev1.0 and software Rev1.0 or later. This document is intended for software programmers with detailed information about MODBUS RTU protocols.

1.2 MODBUS Command Structure

Data format in this document:

- ----Binary number shown with suffix B. For example: 10001B
- ----Decimal number without nay suffix. For example: 256
- ----Hexadecimal number—shown with prefix 0x. For example: 0x2A
- ---- ASCII character or string shown with quotation marks. For example:" YL0914010022"

1.2.1 Command Structure

MODBUS defines a simple protocol data unit (PDU), which is transparent to communication layer.




Figure 1: MODBUS Protocol Data Unit

The mapping of MODBUS protocol on a specific bus or network introduces some additional fields on the Protocol Data Unit. The client that initiates a MODBUS transaction builds the MODBUS PDU, and then adds fields in order to build the appropriate communication PDU.




Figure 2: MODBUS Structure for Serial Communication

On a MODBUS serial bus, address field only includes addresses for slave devices.

Note:

- Slave address range for Conductivity sensor is: 1...247
- Master device sends a "request frame" with a targeted slave address. When slave device responses, it has to put its own address in the "response frame", so that master device knows where the response comes from.
- Function code indicates type of operations
- CRC is the result of redundancy check.

1.2.2 MODBUS RTU Transmission Mode

When devices communicate on a MODBUS using RTU (remote terminal unit) mode, each 8-bit message contains two 4-bit hexadecimal characters. The main advantage of the RTU mode is that it has higher character density, which enables better throughput compare to ASCII mode at same baud rate. Each RTU message must be transmitted in a continuous string of characters.

RTU mode format for each byte (11 bits):

Encoding system 8 bit binary

Each 8-bit packet contains 4-bit hexadecimal characters (0-9, A-F)

Bit per byte: 1 start bit

8 data bits, least significant bit first

No parity check 1 stop bits

Baud rate: 9600bps

Serial transmission of characters:

Every character or byte is sent under this sequence (left to right):

Least Significant Bit (LSB).....Most Significant Bit(MSB)

Start	1	2	3	4	5	6	7	8	Stop
Start			3	4)	U	/	0	Stop

Figure 3: RTU Mode Bit Sequence

CRC Field Structure:

Redundancy check (CRC16)

Frame Structure:


Slave address	Function Code	Data	CRC		
1 buto	4 hota	0 252 bytes	2 bytes		
1 byte	1 byte	0252 bytes	CRC Low	CRC High	

Figure 4: RTU Message Frame Structure

Maximum size of MODBUS frame is 256 bytes.

1.2.3 MODBUS RTU Message Frame

In RTU mode, message frames need to be separated by an idle interval of at least 3.5 character lengths. In rest of this document, this idle interval is called t3.5.






Figure 5: RTU Message Frame

Entire message frame must be sent as continuous stream of characters.

If idle time between two characters is longer than 1.5 characters, the message frame will be

considered incomplete, and will be discarded by receiving side.




Figure 6: Frame transmission

1.2.4 MODBUS RTU CRC Check

In RTU mode, the error checking field is based on a cyclical redundant checking (CRC) method. The CRC field checks entire content of MODBUS message, regardless of the existence of parity check bit. CRC16 checking method is utilized. CRC result is a 16-bit value with two 8-bit bytes, low order 8-bit byte first followed by high order 8-bit byte.

1.3 MODBUS RTU for YOSEMITECH's Conductivity Sensor

Based on standard MODBUS definition, message frame starts with t3.5 idle interval, and similarly, ends with t3.5 idle interval. Device address and Function code are both 8-bit byte. Data character string has n*8 bits, it contains information about register start/end address and number of registers for read/write operation. CRC field is 16 bit in length.

	Start	Device	Function code	Data	CF	RC	End
		address					
Value	Idle for 3.5	1-247	Comply with	Comply with	CRC	CRC	Idle for 3.5
	character length		MODBUS	MODBUS	Low	High	character
			function code	data format			length
			format				
Length	3.5	1	1	n	1	1	3.5
(byte)							

Figure 7: Message frame structure for Yosemitech's MODBUS

1.4 MODBUS RTU Function Code for YOSEMITECH's

Conductivity Sensor

YOSEMITECH's Conductivity sensor has two MODBUS function codes:

0x03: Read registers 0x10: Write registers

1.4.1 MODBUS Function Code 0x03: Read Registers

This function code is to read a block of continuous registers from a remote device. Request PDU defines start address and number of registers for the read operation. Register addressing starts from 0. Therefore, addresses for register 1-16 are 0-15. Data for each register in Response message have two bytes. For each register data, first byte is for high bits, and second byte for low bits.

Request Frame:

Function code	1 Byte	0x03	
Start address	2 Bytes	0x00000xfffff	
Number of registers	2 Bytes	1125	

Figure 8: Request frame for read registers

Response Frame:

Function code	1 byte	0x03
Number of byte	1 byte	N×2
Register data	N×2 bytes	

N = number of registers

Figure 9: Response frame for read registers

Below is an example of Request and Response frames (Read register 108-110. Register 108 is read only with 2-byte value of 0X022B. Registers 109-110 have values of 0X0000 and 0X0064).

Request Frame		Response Frame		
Pata format Hexadecimal		Data Format	Hexadecimal	
Function code	0x03	Function code	0x03	
Start address(high bits)	0x00	Number of bytes	0x06	
Start address (low bits)	0x6B	Register value (high bits, 108)	0x02	
Number of registers (high bits)	0x00	Register value (low bits, 108)	0x2B	
Number of registers (low bits)	Number of registers (low bits) 0x03		0x00	
		Register value (low bits, 109)	0x00	
		Register value (high bits, 110)	0x00	
		Register value (low bits, 110)	0x64	

Figure 10: Example of request frame and response frame for read operation

1.4.2 MODBUS Function Code 0x10: Write Registers

This function code is to write a block of continuous registers at a remote device. Request frame contains register data. Each register data have two character bytes. Response frame contains function code, start address, and number of registers that completed write operation.

Request Frame:

Function code	1 byte	0x10
Start address	2 bytes	0x00000xffff
Number of registers	2 bytes	0x00010x0078
Number of bytes	1 byte	N×2
Register data	N×2 bytes	value

N = number of registers

Figure 11: Request frame for write operation

Response Frame:

Function Code	1 byte	0x10
Start address	2 bytes	0x00000xffff
Number of registers	2 bytes	1123(0x7B)

Figure 12: Response frame for write operation

Below is an example of Request frame and Response frame (write 0x000A and 0x0102 to two registers starting from address 2):

Request Frame		Response Frame		
Data Format	Hexadecimal	Data Format	Hexadecimal	
Function code	0x10	Function code	0x10	
Start address (high bits)	0x00	Start address (high bits)	0x00	
Start address (low bits)	0x01	Start address (low bits)	0x01	
Number of registers (high bits)	0x00	Number of registers (high bits)	0x00	
Number of registers (low bits)	0x02	Number of registers (low bits)	0x02	
Number of bytes	0x04			
Register value (high bits)	0x00			
Register value (low bits)	0x0A			
Register value (high bits)	0x01			
Register value (low bits) 0x02				

Figure 13: Example of Request frame and response frame for write operation

1.5 Data formats in Conductivity sensor

1.5.1 Floating-point number

Definition: floating point number, comply with IEEE754 (single precision)

Note	Sign	Exponent	Fraction	Total
bit	31	3023	220	32
Exponent deviation			127	

Figure 14: Single floating point number definition (4 bytes, 2 MODBUS registers)

Example: Convert decimal number 17.625 to binary number

Step 1: Convert decimal number 17.625 to a floating point number with binary format

First, convert integer to binary

$$17_{\text{decimal}} = 16 + 1 = 1 \times 2^4 + 0 \times 2^3 + 0 \times 2^2 + 0 \times 2^1 + 1 \times 2^0$$

Thus, integer 17 in binary format is 10001B

Then convert decimal part to binary

$$0.625_{decimal} = 0.5 + 0.125 = 1 \times 2^{-1} + 0 \times 2^{-2} + 1 \times 2^{-3}$$

Thus, 0.625 in binary format is 0.101B

Combine above together, 17.625 in binary format is 10001.010B

Step 2: Calculate exponent

Left shift the binary number 10001.010B until only bit left before the decimal point --- $10001.101B = 1.0001101 B \times 2^4$, so exponent value is 4. By adding 127, we have 131, which is 10000011B in binary format

Step 3: Get fraction

Fraction is simply the number after decimal point. Thus from 1.0001101B, fraction number is 0001101B. IMPORTANT NOTE about the 23 bit fraction number: the first bit which on the left side of decimal point is hidden bit and does not need to be compiled.

Step 4: Sign definition

Sign bit is 0 if the number is positive. Sign is 1 if the number is negative. For 17.625, sign bit is 0.

```
Step 5: Convert to floating point number
```

Sample code:

1. If your compiler has similar library functions, it can be called directly. For example if C language is used, we can directly call memcpy() function in C library to convert floating point number. Sample code:

```
float floatdata;//floating point data to be converted void* outdata;
memcpy(outdata,&floatdata,4);
```

```
If floatdata=17.625,
```

In little-endian storage mode after the function is called:

Value at address of outdata is 0x00

Value at address of (outdata+1) is 0x00

Value at address of (outdata+2) is 0x8D

Value at address of (outdata+3) is 0x41

In big-endian storage mode after the function is called:

Value at address of outdata is 0x41

Value at address of (outdata+1) is 0x8D

Value at address of (outdata+2) is 0x00

Value at address of (outdata+3) is 0x00

2. If your complier doesn't have the conversion function, then the following function can be used:

```
void memcpy(void *dest,void *src,int n)
{
    char *pd = (char *)dest;
    char *ps = (char *)src;
    for(int i=0;i<n;i++) *pd++ = *ps++;
}</pre>
```

Then you can get same result by calling this function memcpy(outdata,&floatdata,4);

=128+0+0+0+0+4+0+0=132

```
Fraction(M): 11110110110011001100110B =8087142
Step 2: Calculate decimal value
        D = (-1)^{S} \times (1.0 + M/2^{23}) \times 2^{E-127}
          = (-1)^0 \times (1.0 + 8087142/2^{23}) \times 2^{132-127}
          = 1×1.964062452316284×32
          = 62.85
Reference code:
float floatTOdecimal(long int byte0, long int byte1, long int byte2, long int byte3)
{
         long int realbyte0,realbyte1,realbyte2,realbyte3;
         char S;
         long int
                      E,M;
         float D;
         realbyte0 = byte3;
         realbyte1 = byte2;
         realbyte2 = byte1;
         realbyte3 = byte0;
         if((realbyte0\&0x80)==0)
             S = 0; //Positive
          }
          else
         {
             S = 1; //Negative
         }
         E = ((realbyte0 << 1) | (realbyte1 &0 x 80) >> 7) - 127;
         M = ((realbyte1\&0x7f) << 16) | (realbyte2 << 8)| realbyte3;
         D = pow(-1,S)*(1.0 + M/pow(2,23))*pow(2,E);
         return D;
}
Note:
```

- Function parameters byte0, byte1, byte2 and byte3 represent the 4 sections of a binary floating number.
- Return value is value of decimal number after conversion

For example when a command is sent to a sensor to get temperature value, response frame from the sensor will have measured temperature. If the values are 4 byte floating point number 0x00,0x00,0x8d,0x41, then the following function can be used to get temperature in decimal value:

```
float temperature = floatTOdecimal( 0x00, 0x00, 0x8d, 0x41); and temperature = 17.625.
```

1.5.2 Characters

Definition: Character is shown by ASCII code.

Example: String "YL" could be shown by corresponding ASCII codes (refer to ASCII character chart)

"Y" is 0x59
"L" is 0x4C

2 MODBUS RTU Commands for Conductivity Sensor

2.1 Overview

In order to communicate with Conductivity probe via MODBUS RTU, master terminal software will be needed. MODBUS RTU is an open standard. There are free commercial software tools available. For applications described in this document, MODBUS register address starts from 1. However, slave address in MODBUS protocol starts from 0, and usually master software compiles addresses. For example, register address 2090 will be compiled by master software as address 2089.

2.2 Command Description

2.2.1 Set Slave Device ID

Purpose: Set MODBUS slave address to a sensor probe. Range of address is 1~247.

Sensor probe slave address can be set via MODBUS register 0x3000:

Start address	Number of registers	Register 1	MODBUS Function code
0x3000	0x01	New Slave address	0x10

Figure 15: Register definition for Set Slave ID Command

Below is an example of request and response frames for setting slave device ID command. Old slave address is 0x01, new address is 0x14.

Definition	Address	Function	Start a	Start address		ber of	Number	Register		CI	RC
		code		registe		sters	of byte valu		lue		
Byte	0	1	2	3	4	5	6	7	8	9	10
Value	0x01	0x10	0x30	0x00	0x00	0x01	0x02	0x14	0x00	0x99	0x53

Figure 16: Request frame to Set Slave ID Command

*Note: byte 8 is reserved

Definition	Address	Function code	Start a	Start address		per of re	gisters	CRC
Byte	0	1	2	2 3		5	6	7
Value	0x01	0x10	0x30	0x00	0x00	0x01	0x0E	0xC9

Figure 17: response frame for Set Slave ID Command

2.2.2 Get SN

Purpose: Get sensor probe's serial number (SN). Each sensor probe has a unique SN.

Serial Number can be read from 7 continuous MODBUS registers starting from address 0x0900.

Start Address	Number of registers	Register 1-7	MODBUS Function code		
0x0900	0x07	SN	0x03		

Figure 18: Register definition for Get SN Command

Below is an example of request and response frames to get SN "YL0914010022" from a slave device (address 0x01).

Definition	Address	Function	Starting	Starting address Number of CR		Number of)X
		code			registers			
Byte	0	1	2	3	4	5	6	7
Value	0x01	0x03	0x09	0x00	0x00	0x07	0x07	0x94

Figure 19: Request frame to Get SN Command

Definition	Address	Function	Number		Register value		CRC	
		code	of byte					
Byte	0	1	2	3	4-15	16	17	18
Value	0x01	0x03	0x0E	0x00	"YL0914010022"	0x00	0x98	0x8c

Figure 20: Response frame for Get SN Command

Note: SN value is in ASCII code as below:

Byte	4	5	6	7	8	9	10	11	12	13	14	15
Value	0x59	0x4C	0x30	0x39	0x31	0x34	0x30	0x31	0x30	0x30	0x32	0x32

Figure 21: Sensor probe's SN

2.2.3 Start Measurement

Purpose: Set probe start measuring Conductivity.

MODBUS register 0x1C00 is used.

Starting address	Number of registers	MODBUS Function code
0x1C00	0x00	0x10

Figure 22: Register definition of Start Measurement Command

Below is an example of request and response frames for sending a Start Measurement command to a device with slave address 0x01.

Definition	Device	Function	Start a	ddress	Numl	per of	umber of Number		RC		
	address	code			registers		registers		of bytes		
Byte	0	1	2	3	4	5	6	7	8		
Value	0x01	0x10	0x1C	0x00	0x00	0x00	0x00	0xd8	0x92		

Figure 23: Request frame to Start Measurement Command

	•								
Definitio	Device	Function	Start address		Numl	ber of	CRC		
n	address	code			registers				
Byte	0	1	2 3		4	5	6	7	
Value	0x01	0x10	0x1C	0x00	0x00	0x00	0xc7	0x99	

Figure 24: Response frame for Start Measurement Command

2.2.4 Get Temperature and Conductivity values

Purpose: Get temperature and Conductivity measurement results. Temperature unit is Celsius degree (°C), Conductivity unit is millisiemens (mS/cm). User calibration process is automatically applied to Conductivity value.

Temperature and Conductivity data can be read from 5 continuous MODBUS registers starting from address 0x2600 .(It also includes an error flag for indicating whether range switching is correct: 0—correct;0XFF—error)

Start address	Number of	Register 1-2	Register 3-4	Register 5	MODBUS
	registers				function code
0x2600	0x05	Temperature	Conductivity value	Error flag	0x03

Figure 25: Register definition for Get Temperature and Conductivity Command Below is an example of request and response frames for getting temperature and Conductivity command, assuming slave device address is 0x01, returned temperature is $17.625^{\circ}C$, Conductivity value is $17.625 \, \text{mS/cm}$ and the error flag is 0.

Definition	Device	Function	Start a	Start address		Start address Number of		CI	RC
	address	code			registers				
Byte	0	1	2	3	4	5	6	7	
Value	0x01	0x03	0x26	0x00	0x00	0x05	0x8E	0x81	

Figure 26: Request frame to Get Temperature and Conductivity Command

Definition	Device	Function	Number		Register	value		С	RC	
	address	code	of bytes				of bytes			
Byte	0	1	2	3-6	7-10	11	12	13	14	
Value	0x01	0x03	0x0A	17.625	17.625	0x00	0x00	0Xc7	0x33	

Figure 27: Response frame for Get Temperature and Conductivity Command

Note: Temperature and Conductivity values are floating point number in little-endian storage mode. See sample below:

	Temperature(3-6)			Conductivity(7-10)				Error flag(11)	Reserved (12)	
0x00	0x00	0x8D	0x41	0x00	0x00	0x8D	0x41	0x00	0x00	

Figure 28: Registers definition for temperature and Conductivity values.

2.2.5 Get Software and Hardware Rev

Purpose: Get current hardware and software Release Version.

Hardware and software release version numbers of a sensor probe can be read from 2 continuous registers starting from address 0x0700.

Start address	Number	Register 1	Register 2	MODBUS function
	registers			code
0x0700	0x02	HW Rev	SW Rev	0x03

Figure 29: Register definitions of Get Software and Hardware Rev Command

Below is an example of request and response frames for getting hardware and software release version, assuming device slave address is 0x01, returned value for hardware Rev is 1.0 and software Rev is 1.0.

Definition	Device address	Function code	Start address		Number o	f registers	CRC	
Byte	0	1	2	3	4	5	6	7
Value	0x01	0x03	0x07	0x00	0x00	0x02	0xc5	0x7f

Figure 30: Request frame to Get Hardware and Software Rev Command

Definition	Device	Function	Number of		Register			C	RC
	address	code	bytes	es					
Byte	0	1	2	3-	-4	5	-6	7	8
Value	0x01	0x03	0x04	0x01	0x00	0x01	0x00	0xfa	0x5f

Figure 31: Response frame for Get Hardware and Software Rev Command

2.2.6 Get User Calibration Coefficients

Purpose: Get two calibration coefficients K and B. (This is to eliminate measurement errors caused by aging or other reasons. User calibration equation is: Cond_{final}=K*Cond +B; default values are: K=1; B=0)

User calibration coefficients (K and B) can be read from 4 continuous MODBUS registers starting from address 0x1100.

Start address	Number of	Register 1-2	Register 3-4	MODBUS function
	registers			code
0x1100	0x04	К	В	0x03

Figure 32: Register definition of Get User Calibration Coefficients Command
Below is an example of request and response frames for getting customer calibration coefficients
from a device with slave address 0x01, assuming returned values are: K=1.0; B=0.0.

Definition	Device address	Function code	Start a	Start address		Number of registers		С
Byte	0	1	2	3	4	5	6	7
Value	0x01	0x03	0x11	0x00	0x00	0x04	0x41	0x35

Figure 33: Request frame to Get Customer Calibration Coefficient Command

Definition	Device	Function	Number	Number Registe		С	RC
	address	code	of bytes	of bytes			
Byte	0	1	2	3-6	7-10	11	12
Value	0x01	0x03	0x08	1.0	0.0	0x9E	0x12

Figure 34: Response frame for Get Customer Calibration Coefficient Command

Note: K and B are floating point numbers in little-endian storage mode

	K(3	-6)			B(7	-10)	
0x00	0x00 0x00 0x80 0x3F				0x00	0x00	0x00

Figure 35: Registers for two coefficients K and B.

2.2.7 Set Customer Calibration Coefficients

Purpose: Set two calibration coefficients K and B.

Customer coefficients (K and B) can be set at 4 continuous MODBUS registers starting from address 0x1100.

Start address	Number of	Register 1-2	Register 3-4	MODBUS function
	registers			code
0x1100	0x04	К	В	0x10

Figure 36: Register definition for Set Customer Calibration Command

Below is an example of request and response frames for setting customer calibration coefficients, assuming slave address is 0x01, coefficients are K=1.0 and B=0.0.

Definition	Device	Function	Sta	Start		ber of	Number	Registe	er value	CRC	
	address	code	add	ress	regi	sters	of bytes				
Byte	0	1	2	3	4	5	6	7-10	11-14	15	16
Value	0x01	0x10	0x11	0x00	0x00	0x04	0x08	1.0	0.0	0x81	0xAE

Figure 37: Request frame to Set Customer Calibration Coefficient Command

Note: Coefficients K and B, floating point numbers in little-endian storage mode

	K(7	7-10)		B(11-14)				
0x00	0x00	0x80	0x3F	0x00	0x00	0x00	0x00	

Figure 38: Registers for two coefficients K and B.

Definition	Device	Function	Start a	Start address		ber of	С	RC
	address	code			registers			
Byte	0	1	2	3	4	5	6	7
Value	0x01	0x10	0x11	0x00	0x00	0x04	0Xc4	0xf6

Figure 39: Response frame for Set Customer Calibration Coefficient Command

3 Procedure to get Conductivity value

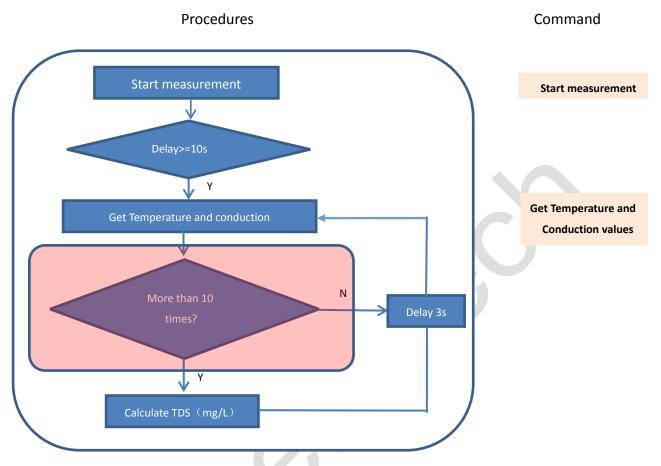


Figure 40: Flow chart to get Conductivity measurement

- Start Measurement sensor probe start measurement, and perform Conductivity measurement with automatic calibration.
- Get Temperature and Conductivity values Get measurement results including temperature (°C) and Conductivity (mS/cm) after 10 seconds of measurements.
 - Note: Please pay attention to highlighted portion (red) in the flow chart above. It's highly recommended that customers get an average Conductivity results after 10 consecutive measurements, then convert the average Conductivity value in mS/cm unit(Cond) to a TDS value in mg/L unit.
- Calculate TDS (mg/L), converting the average Conductivity value in mS/cm unit to a TDS value in mg/L unit:
 - According to the formula: TDS(mg/L)=Cond(uS/cm)*0.64; Cond(uS/cm)= Cond(mS/cm)*1000.
- Then get Temperature and Conductivity values every 3 seconds.