

# BUILDING AN IOT DEVICE FOR OUTDOOR USAGE: A STEP-BY-STEP TUTORIAL



PROF. CONG DUC PHAM  
[HTTP://WWW.UNIV-PAU.FR/~CPHAM](http://www.univ-pau.fr/~cpham)  
UNIVERSITÉ DE PAU, FRANCE



# CONTENTS

---


- ❑ This could be seen as a second part of « Low-cost LoRa IoT device: a step-by-step tutorial »
- ❑ We will show here how fit the IoT device for outdoor usage, again, at a very low cost
- ❑ It is assumed that your sensor device is flashed with the Arduino\_LoRa\_Simple\_temp example for instance
- ❑ Let's get started...



---

# ASSEMBLING WITH A CASE




# GET A CASE FOR OUT-DOOR USAGE

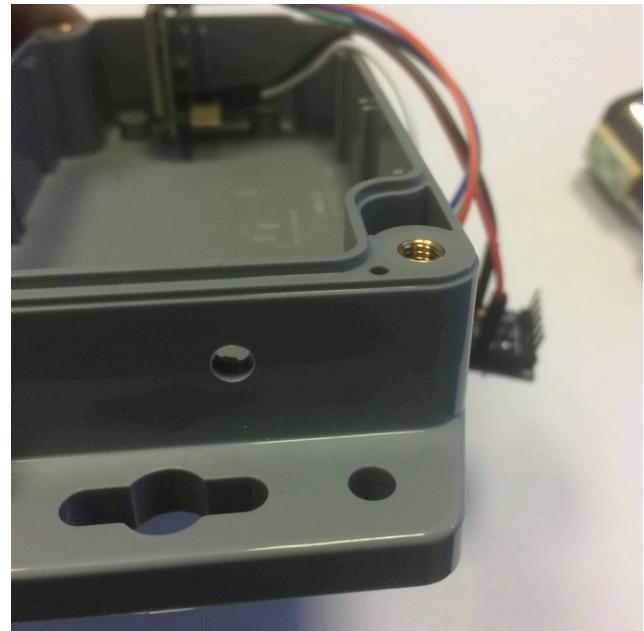

I got mine from Lextronic (<http://www.lextronic.fr/P22453-boitier-etanche-115-x-65-x-40mm.html>). It is an IP65 box which dimension is 115 x 65 x 40mm.

First thing is to drill a 8mm hole for the radio module and the antenna. At the other end, drill a smaller hole (4mm or 5mm) for the sensor wire. Drill as many holes as needed.


# PUTTING THE ANTENNA

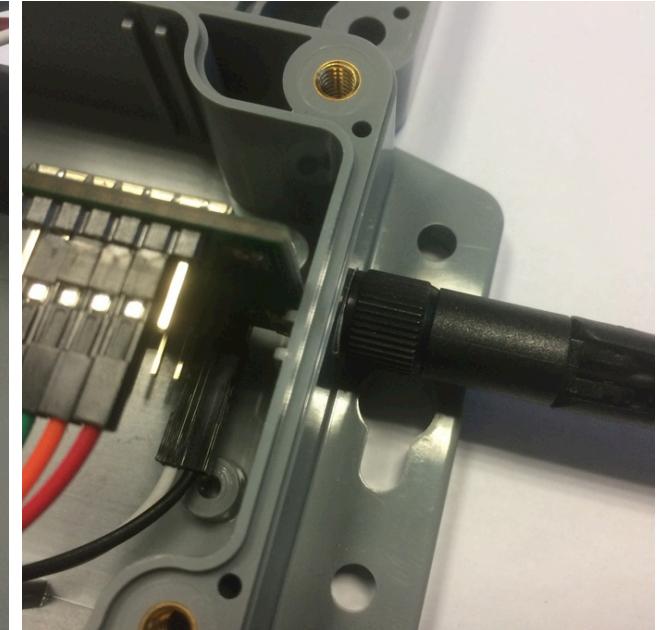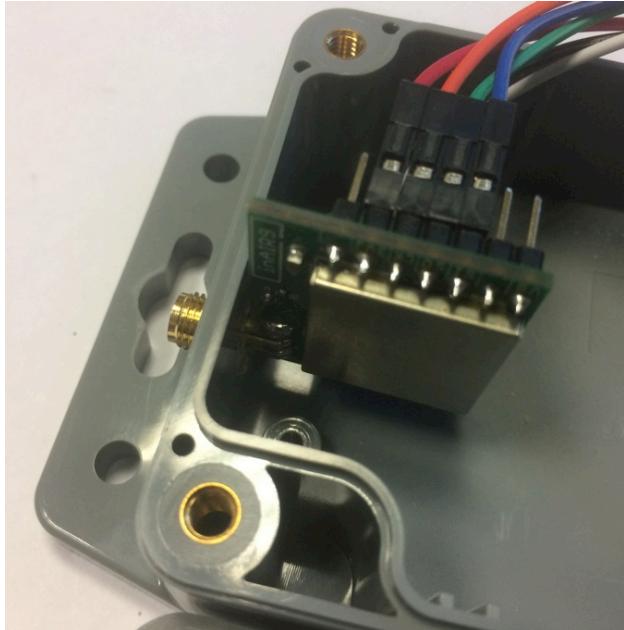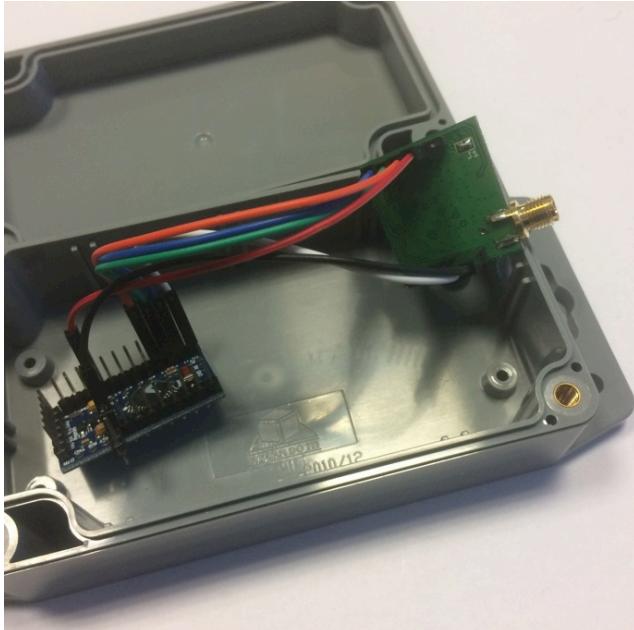

Take the IoT device that has been built previously with the « Low-cost LoRa IoT device: a step-by-step tutorial ».



Put the antenna plug through the 8mm hole. Screw the antenna, but not too firmly, the radio module should be a bit loose here before closing the box.

# ADD THE POWER SUPPLY

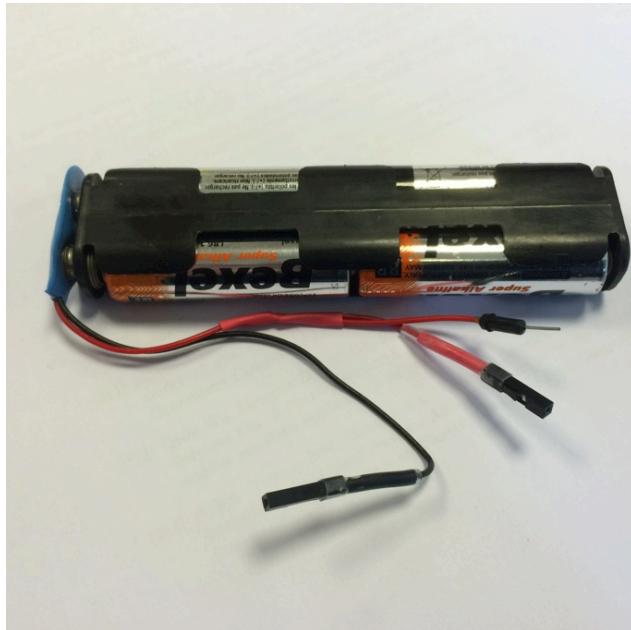


Instead of the long 4-AA battery coupler used in the previous tutorial, use a more compact version and solder 2 wires for the + (Vcc) and the - (GND) or use a connector. The voltage with 4-AA batteries is about 6v. The - wire should have a female connector at the other end to be plugged on the Pro Mini board directly. For the + wire, use whatever you want but it is advise to not connect the + to the board directly but rather use an other wire to easily switching ON/OFF.

# FIXING THE COMPONENTS

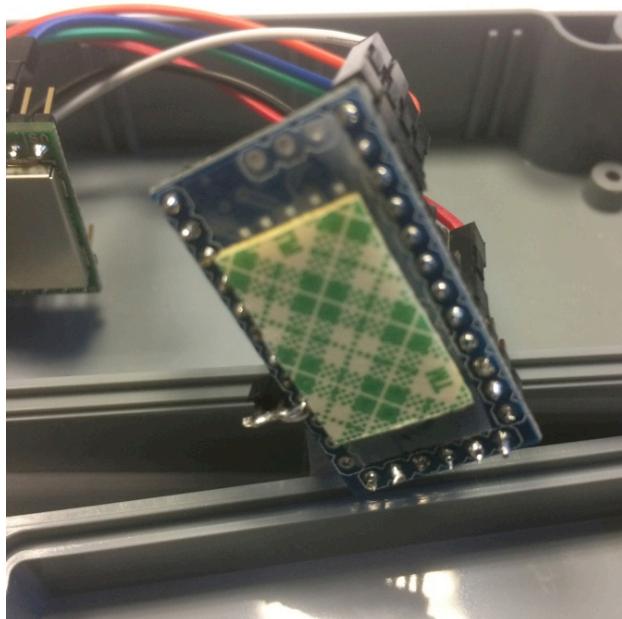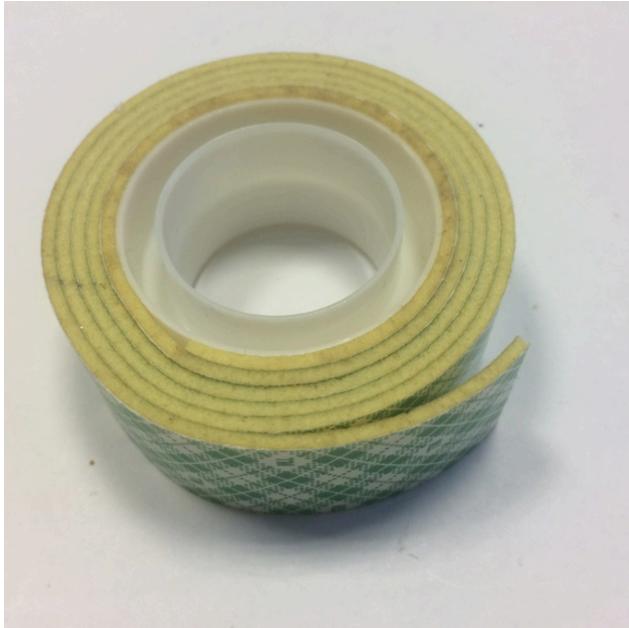

To firmly fix the board and the power supply in the box, I use double-side tape, the one used to fix mirror on the wall. For the board, it is better to use regular tape first between the board and the double-side tape because such tape can be very sticky and hard to remove.

# PUTTING EVERYTHING IN THE CASE

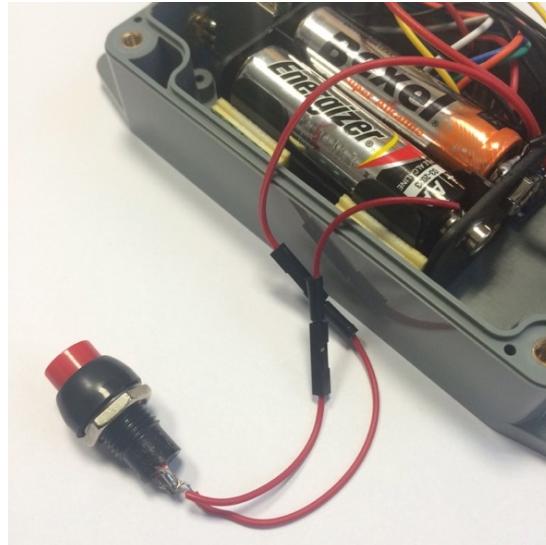


Now, put the board and the power supply in the box.

See how the Vcc is connected using an intermediate wire to ease manipulation.

Or use an ON/OFF push button if you want.

You can also install an external switch with a waterproof cap.



# PREPARING FOR THE TEMPERATURE SENSOR

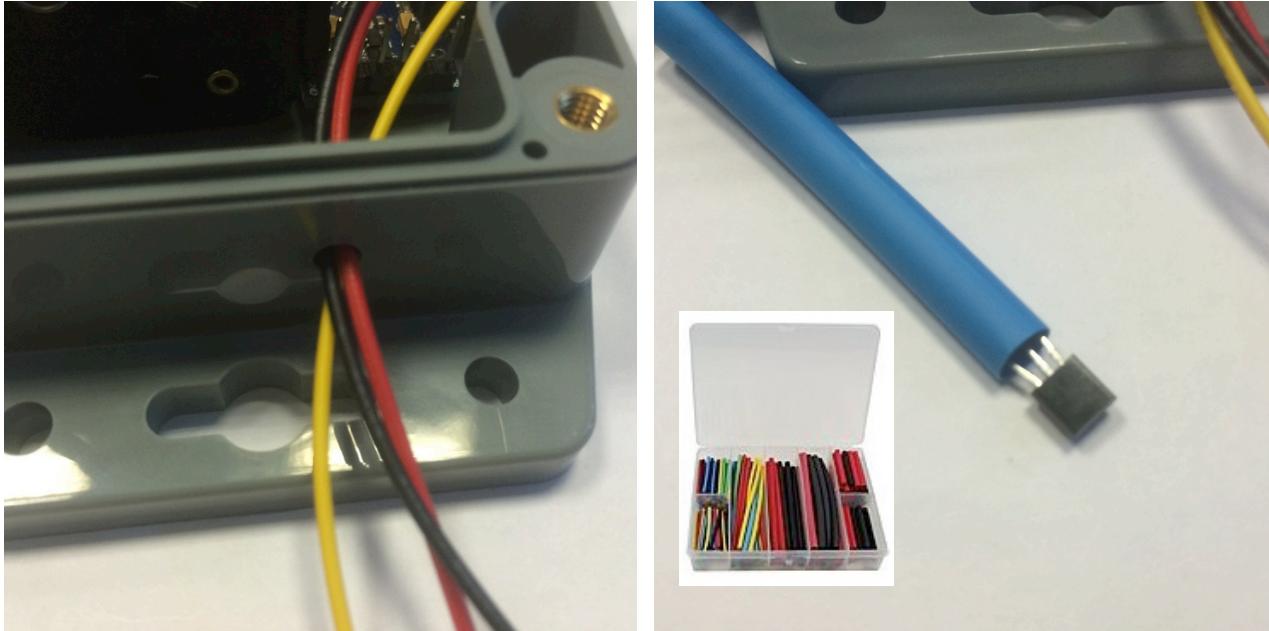

We will use the same temperature sensor than in the previous tutorial. We need 3 wires and we also need to make the design a bit more water and dust proof. First, use 3 wires with a female connector at one end that will be plugged into the board. Pass the wires through the smaller hole, leaving the female-connector side in the box.

To protect the sensor, use heat-shrink sleeve. Use a diameter that is large enough for the plastic part of the sensor to go through.



# PREPARING FOR THE TEMPERATURE SENSOR (2)

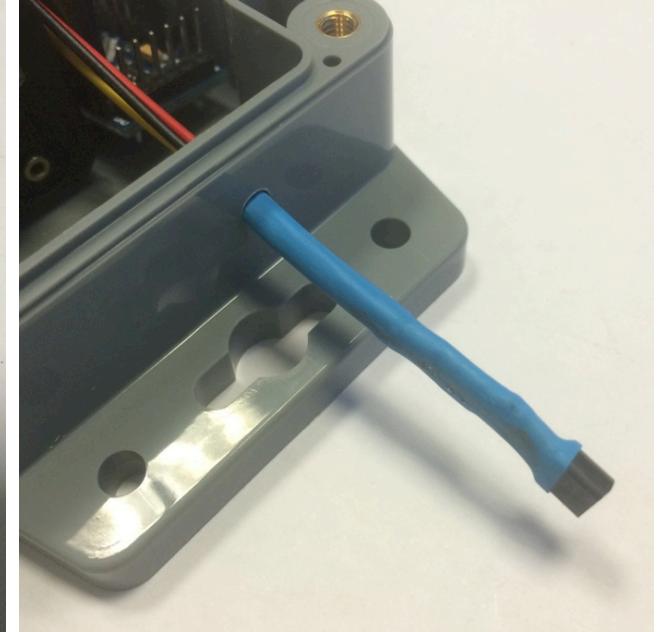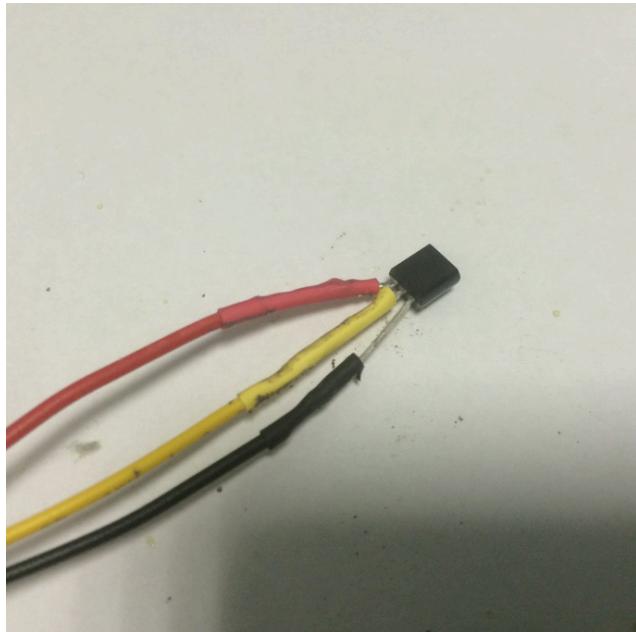


At the other end of the wire, you can just solder. Once again heat-shrink sleeves is great to isolate the wires.

Once all wires have been soldered, place the larger heat-shrink sleeve and protect all wires. BE CAREFULL, you have to place the sleeves before soldering, then slice them in place before heating.

# CONNECTING THE SENSOR

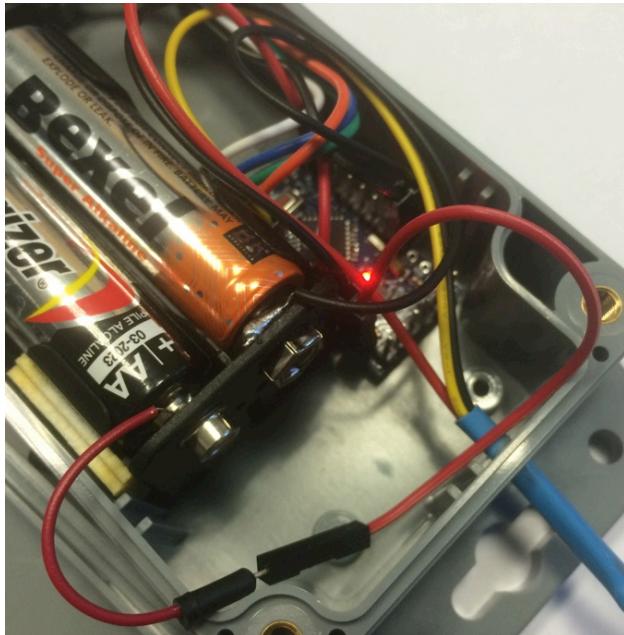
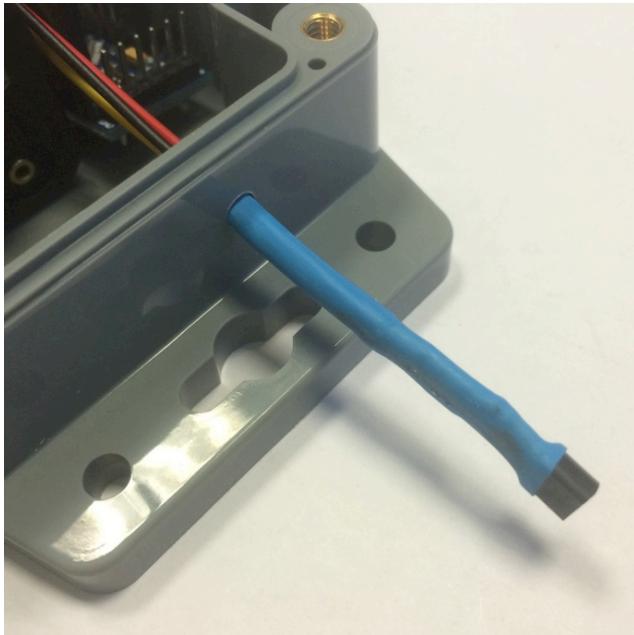


Connect the sensor's wires as described in the previous tutorial.

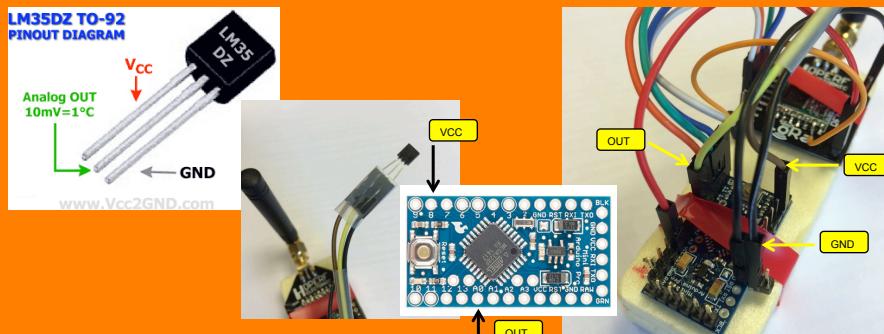

The GND should be connected to one of the board's GND, the VCC should be connected to the analog A8 pin and the OUT pin should be connected to the analog A0 pin.


# USE LONGER CABLE FOR YOUR SENSOR

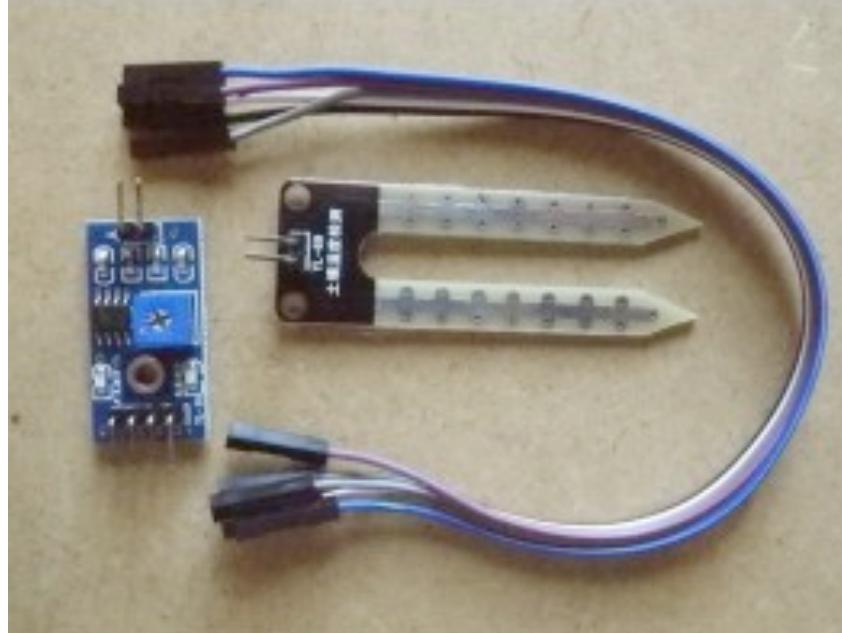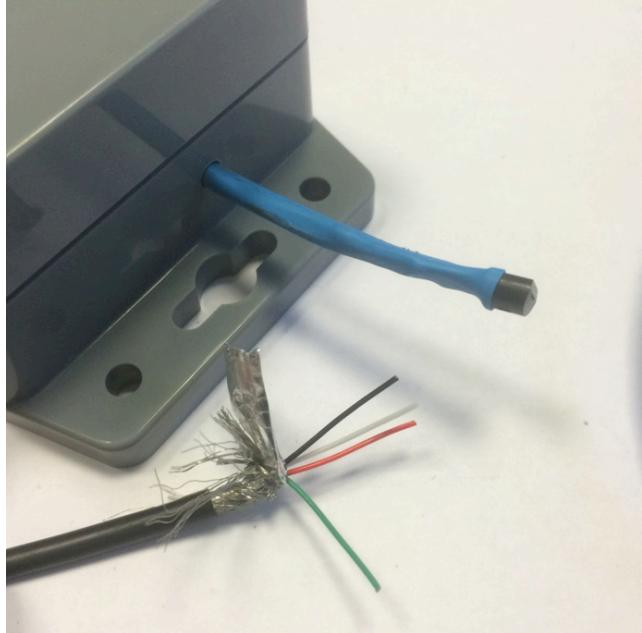


If you need longer cable for your sensor (like more than a meter, for instance for soil humidity sensor) it is of course not convenient to use heat-shrink sleeve to protect the wire.

A very low-cost solution is to use an old USB cable (there are plenty of them unused!) that already has the necessary plastic coating and that contains 4 wires for your own usage.



# INSTALLING YOUR OWN CABLE GLAND

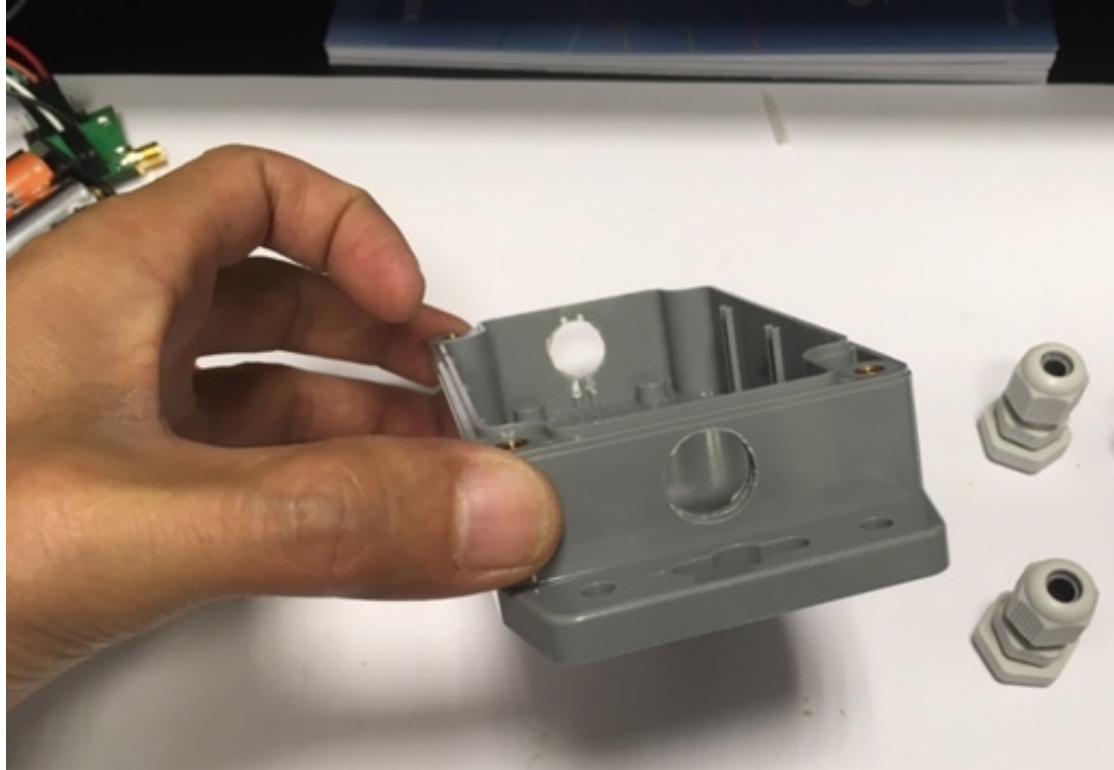

Drill a hole depending on the gland diameter (here PG7, 12mm, so hole of 13mm)

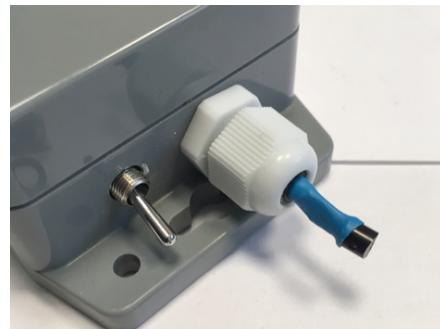




# ANOTHER BOX EXAMPLE

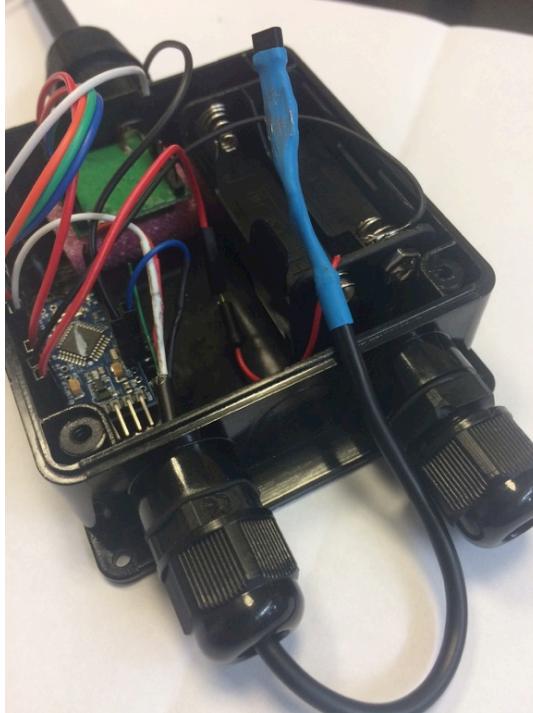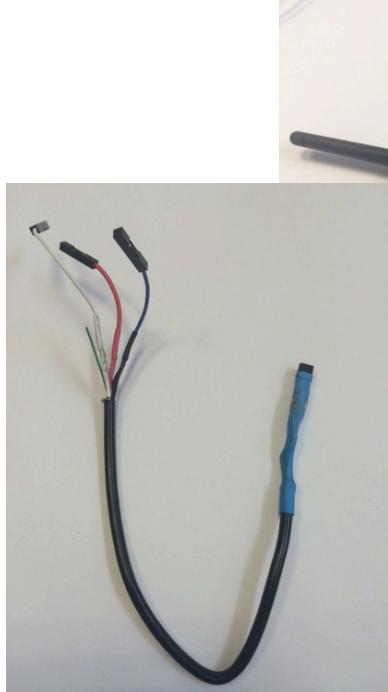

This box comes with 3 cable glands that are very convenient for the antenna and the sensor cables. Got it from here: <http://www.lextronic.fr/P34821-boitier-etanche-avec-3-presses-etoupes.html>

An old USB cable (with some soldering work) is used to connect the temperature sensor: 3 wires from the 4 available are used.



# LAST STEP TO DEPLOY YOUR IOT DEVICE

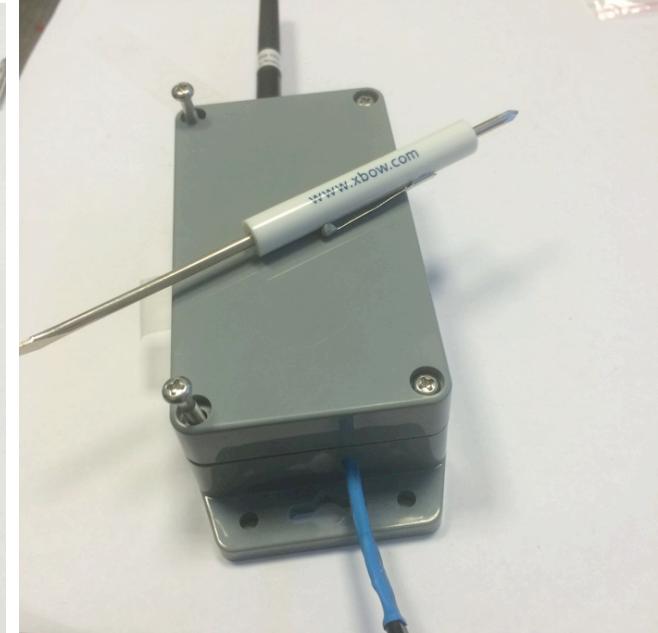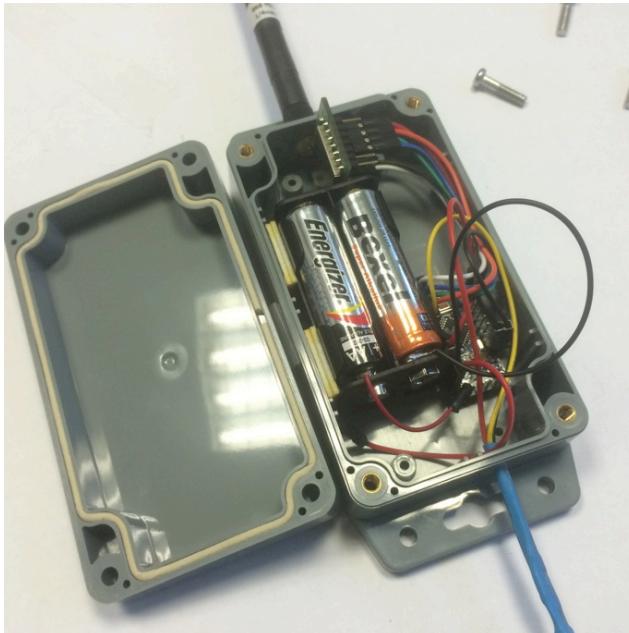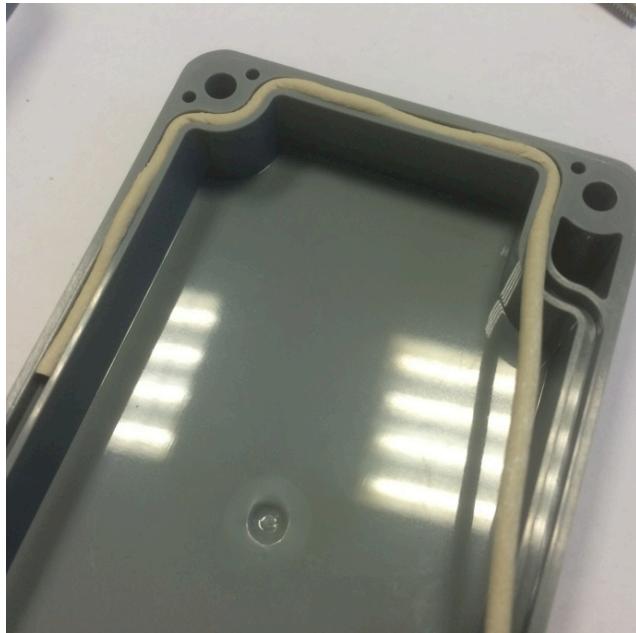

Program your board to have duty-cycle for low-power operation mode. Connect the Vcc wire, check that you receive the data on the gateway and then close the box. You can now screw a bit more firmly the antenna.



With 1 sample every hour, your device should be capable of running for several months.

# FIRST OUTDOOR TESTS

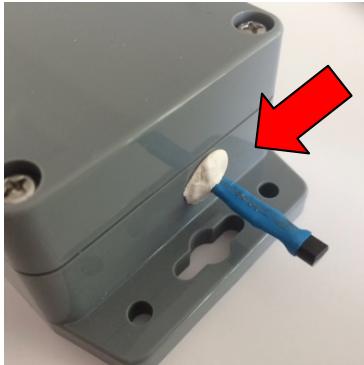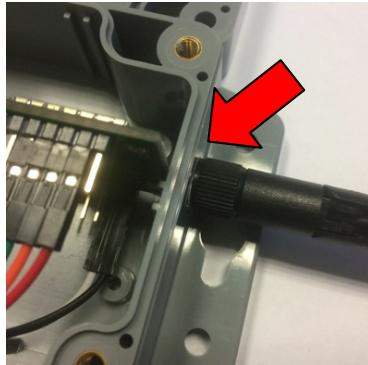

Put some silicone/putty at the antenna and sensor wire junction to avoid humidity in the box. After closing the box, tight the antenna now if needed.

Outdoor test from May 6th to May 8th, 2016

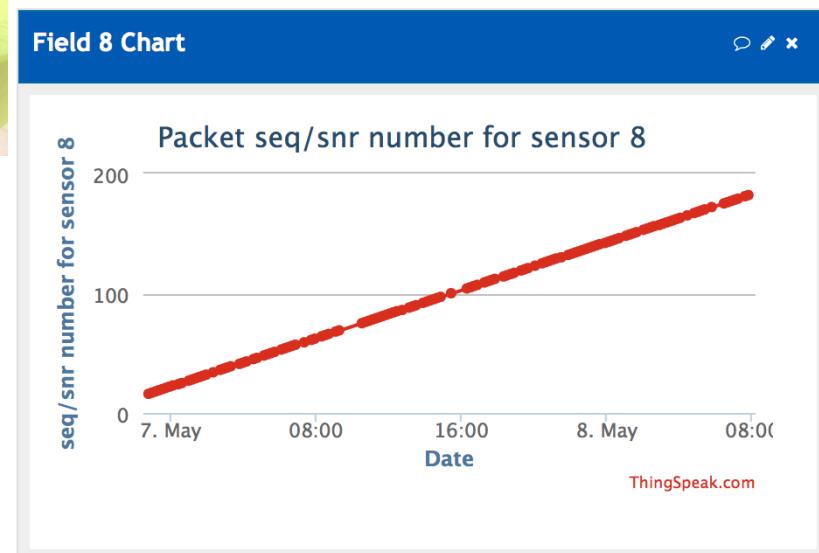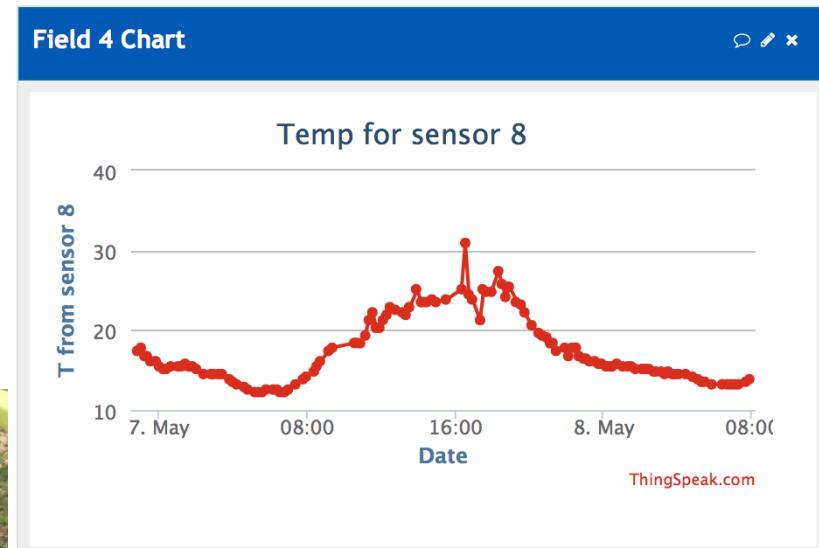



---

# DEPLOYING FOR REAL-WORLD APPLICATION

# PROTECTING FROM DIRECT SUN



Any plastic cover would do ! But avoid transparent plastic. Here a CD cover with white paper. Do not completely cover with a plastic box neither.



# CONNECTING AN ANTENNA TO THE SENSING DEVICE

- Taking the Modtronix inAir9 (868MHz), the antenna that you can buy with the module is usually a simple ¼ wave whip/monopole antenna (SMA-male)
- The antenna can be connected directly to the radio module of the end-device



But, as can be seen here, when the device is close to the ground, the antenna may be not in optimal position.



# IMPROVE ANTENNA PLACEMENT

---

- Using an extension coaxial cable between the antenna and the radio module greatly ease the deployment of device **but**:
  - Take a good quality cable (e.g. RG58 minimum) to limit attenuation
  - The antenna cable should not be too long to avoid high attenuation: 2m-3m
  - A  $\frac{1}{4}$  wave monopole antenna will not provide good performance



Look at the antenna tutorial for instructions on how to build your own cable (with adequate connectors) at the correct length.

# ANTENNA FOR DEVICE WITH A COAXIAL CABLE


- At the end of a coaxial cable, it is possible to connect a ground plane antenna (usually  $\frac{1}{4}$  wave) or a  $\frac{1}{2}$  wave dipole antenna



Ground plane



Sleeve dipole

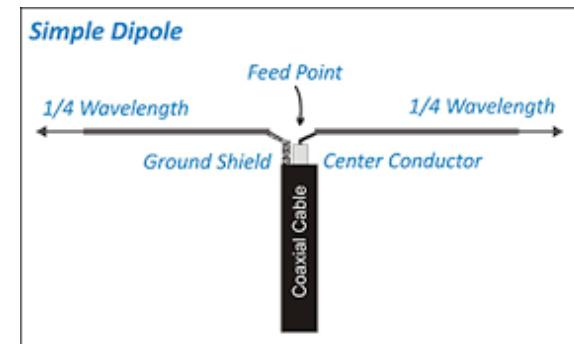

Simple dipole




More complex:  
collinear,  
array,...

- Some of them are easy to build (ground plane and simple dipole) and there are many tutorials

# SIMPLE $\frac{1}{2}$ WAVE DIPOLE ANTENNA


- The very simple dipole can be made with 2 pieces of  $\frac{1}{4}$  wave wires.  $\frac{1}{4}$  wave in 868MHz is about 8.2cm.

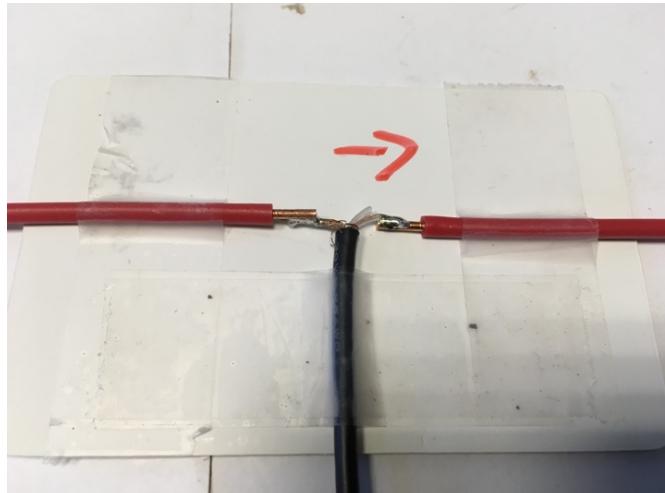


- There is no balun here but it is still better than the  $\frac{1}{4}$  wave monopole if a coaxial cable is used
- You can buy a 3m RG58 cable (SMA-m to SMA-f for instance), keep the male side, cut the female side and solder the core conductor and the braid as shown.

# SIMPLE $\frac{1}{4}$ WAVE GROUND PLANE ANTENNA

- The ground plane antenna can be made with 5 pieces of  $\frac{1}{4}$  wave wires.  $\frac{1}{4}$  wave in 433MHz is about 16.4cm.

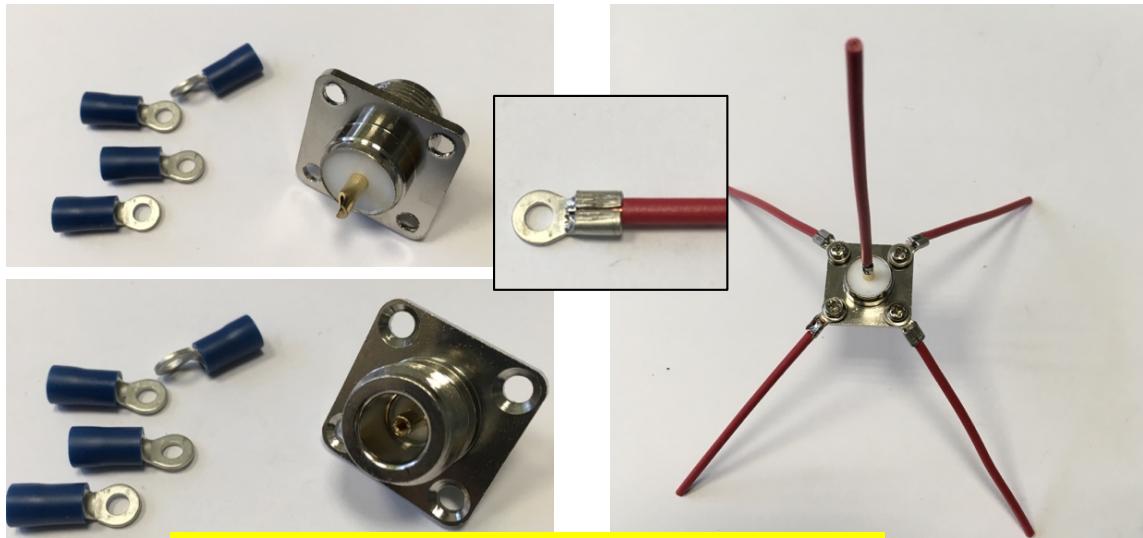



N Female Panel Mount Chassis

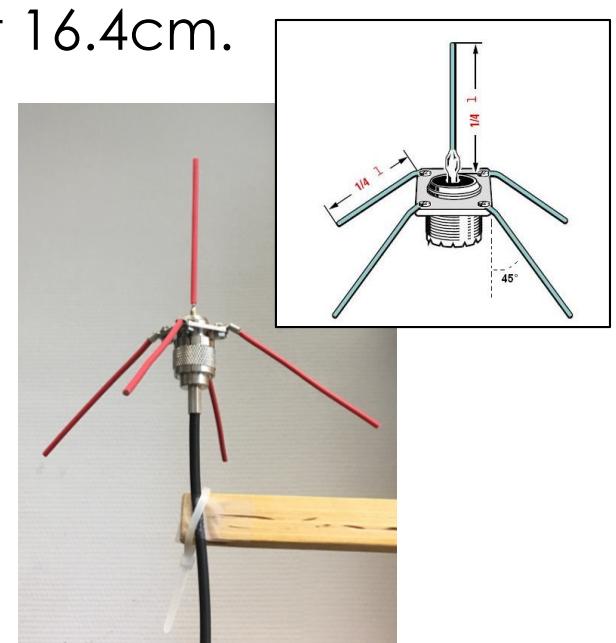

- You can buy a 3m RG58 cable with an SMA-male at one end and a male N-connector at the other end. Or build your own cable.

# EVEN SIMPLER $\frac{1}{4}$ WAVE GROUND PLANE ANTENNA

- With an existing SMA-m/SMA-f cable, you can also build a ground plane antenna by adding 4 radiant wires to the  $\frac{1}{4}$  wave monopole.

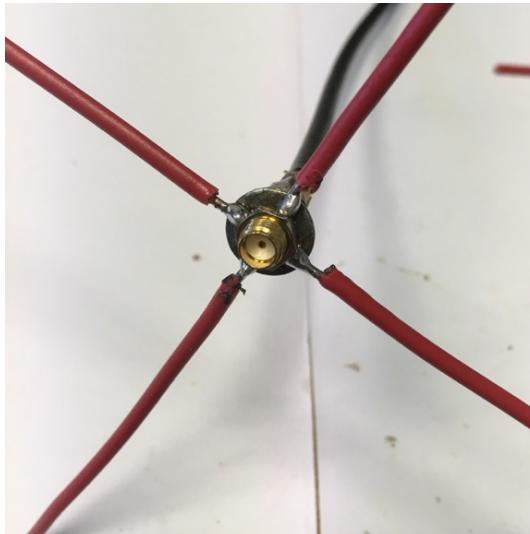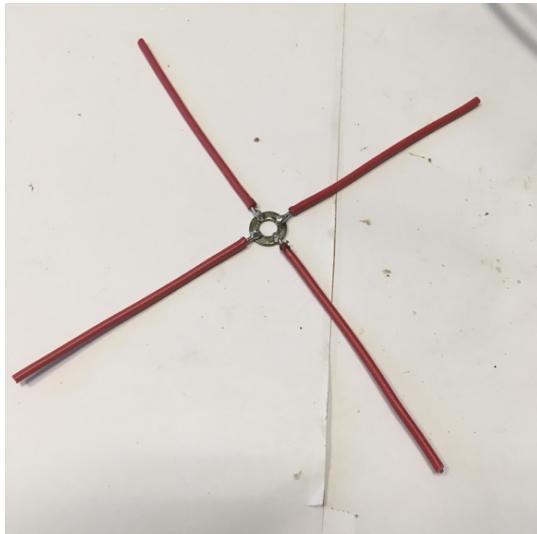

- This is a cheaper solution for sensing devices



# CABLE GLAND FOR ANTENNA CABLE



If a cable gland is used for the antenna cable, take at least PG9 so that the antenna connector can go through.

# SUMMARY OF ANTENNAS FOR SENSING DEVICE

---

- The easiest solution would be to buy a sleeve dipole for the frequency range you are operating.
- If you want to try the DIY approach, try first the simple dipole and then see if the range is acceptable.
- A ground plane antenna can be purchased or also made. You can test both solutions.
- Remember that RF transmissions depend a lot on the antenna location, the environment and many other factors!