


13.1、电源、ECM(483+CVT 2*)

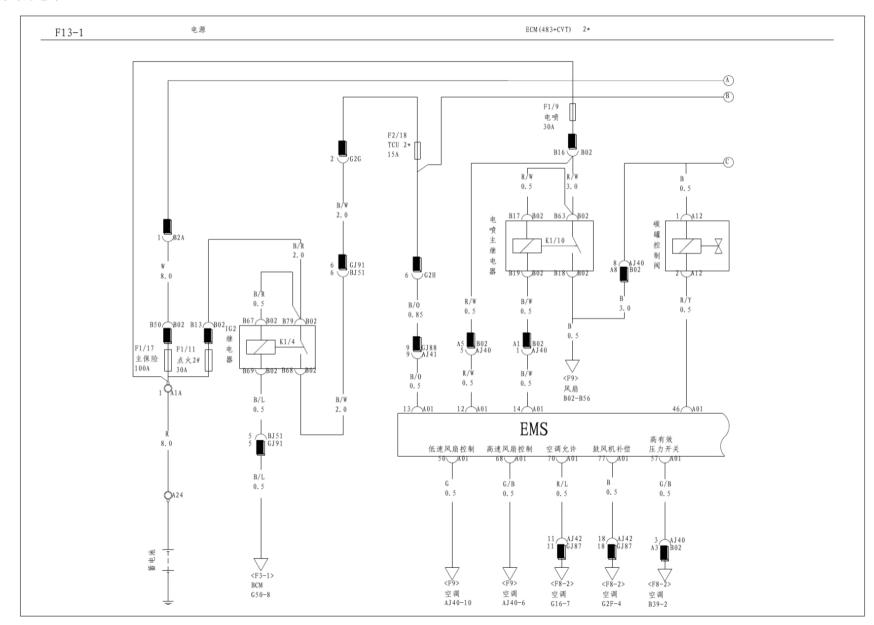


13.2、电源、ECM (483+CVT 2*)

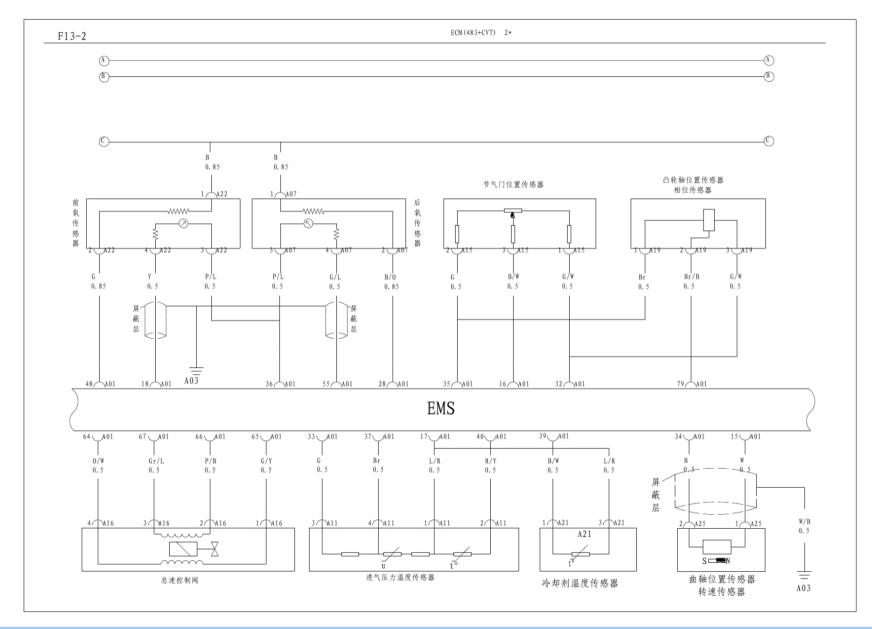


13.3、电源、ECM (483+CVT 2*)

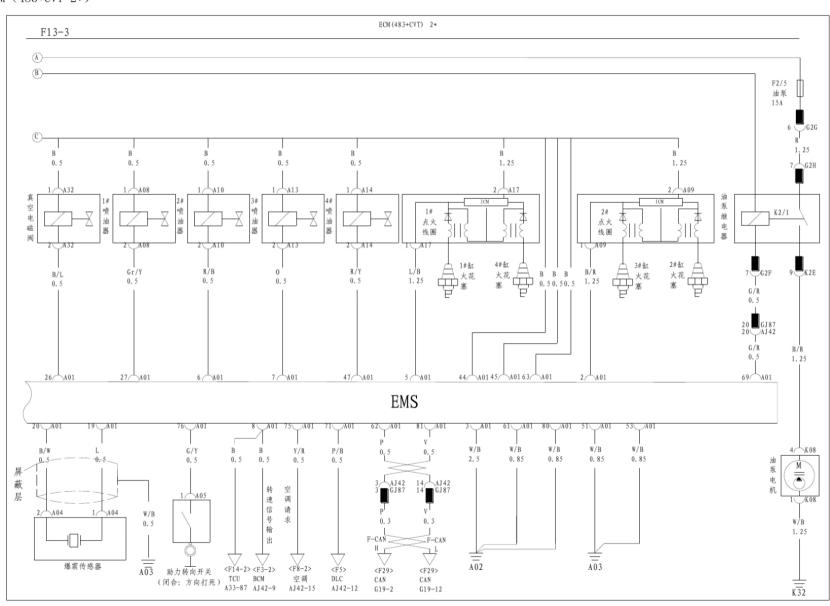


13.4.1、电源、ECM (473QE 德尔福)

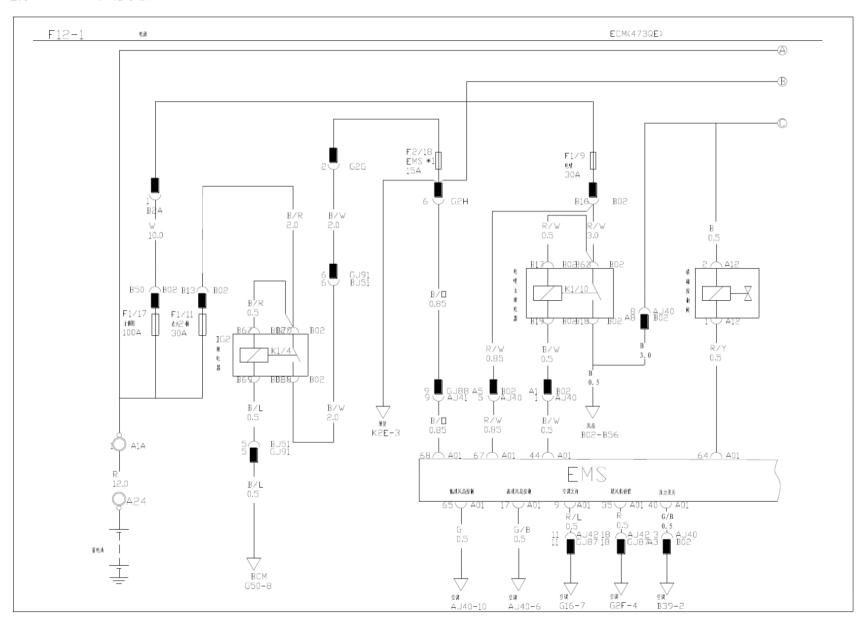


13.4.2、电源、ECM(473QE 德尔福)

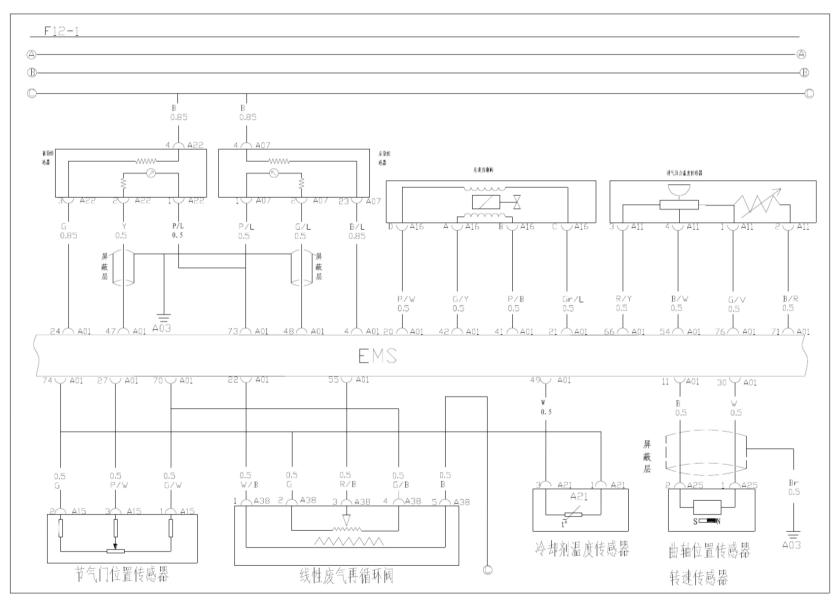


13.4.3、电源、ECM (473QE 德尔福)

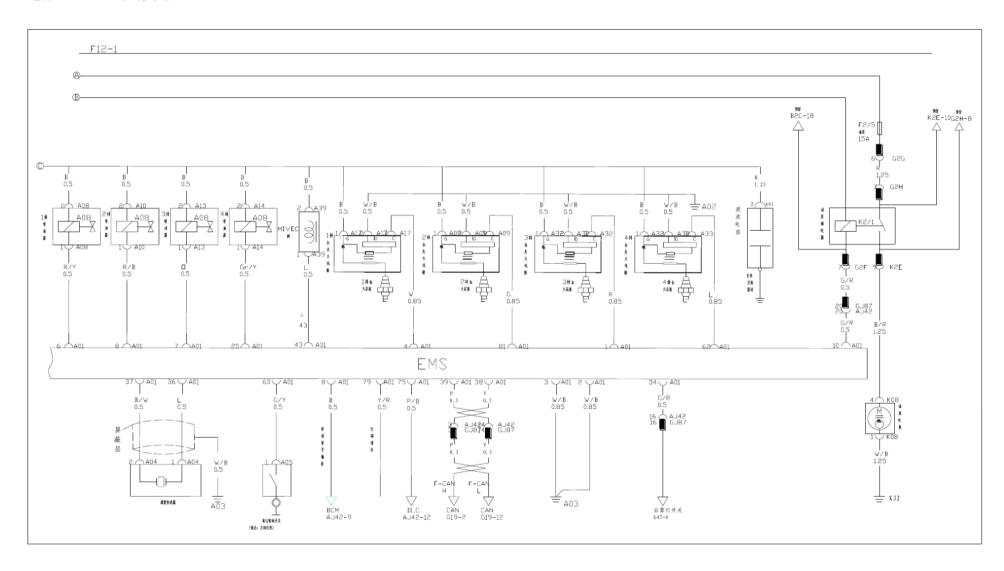


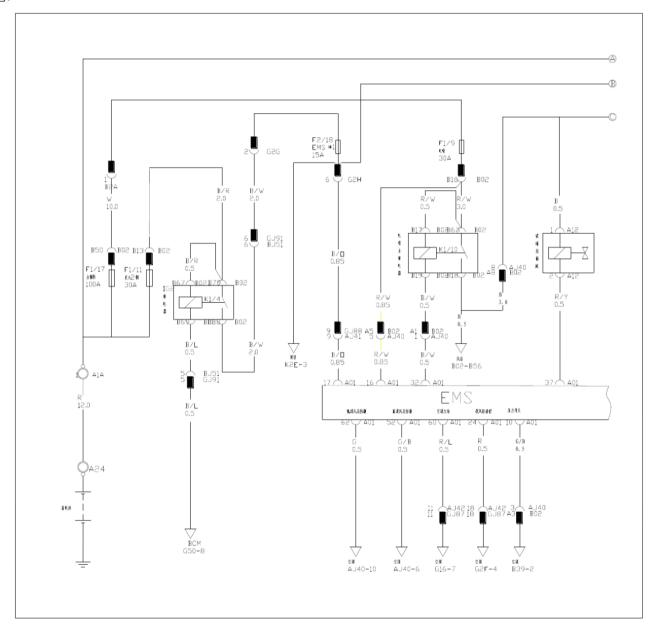


13.5.2、电源、ECM (473QE 联电)

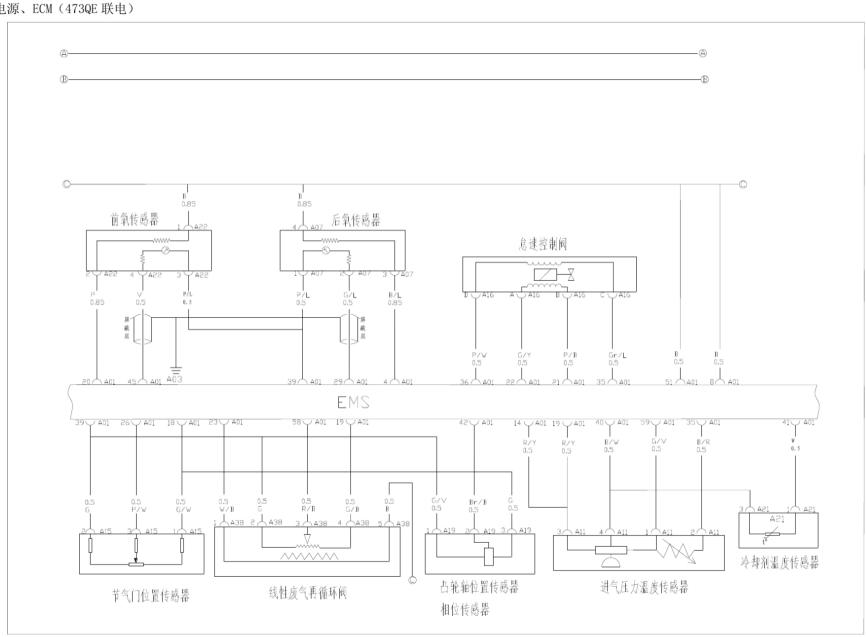


13.5.3、电源、ECM (473QE 联电)

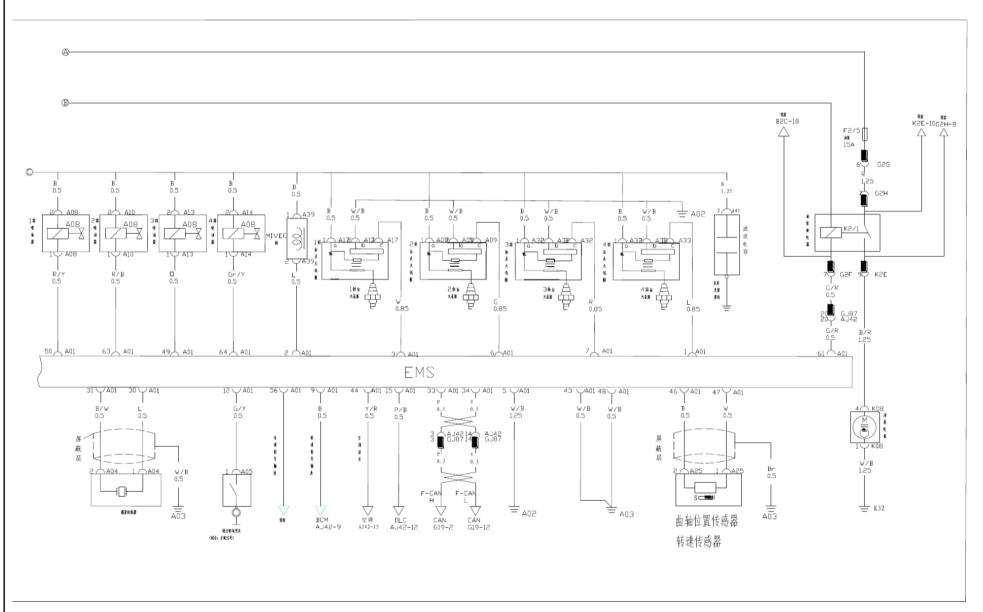


13.6.1、电源、ECM(473QE DCT)

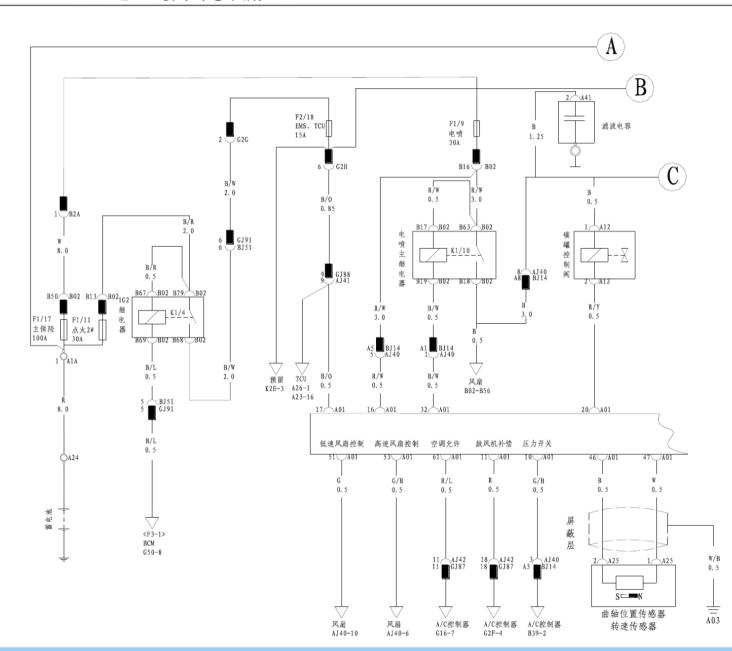

13.6.2、电源、ECM (473QE DCT)

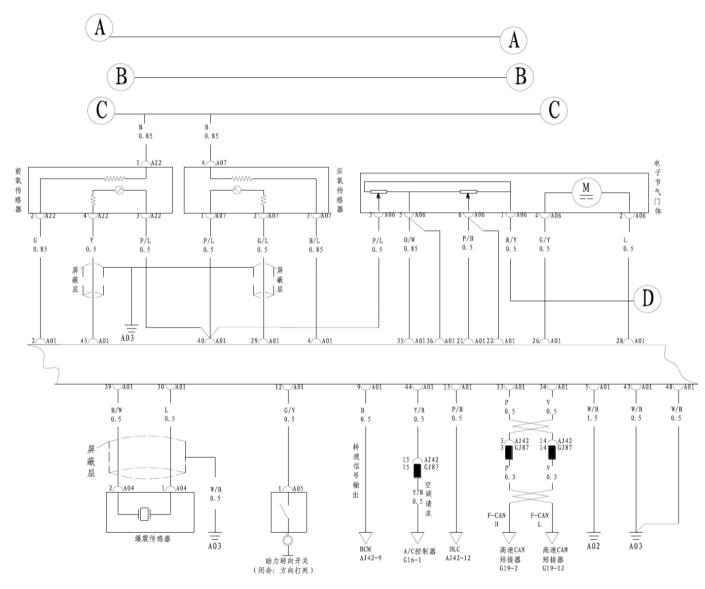

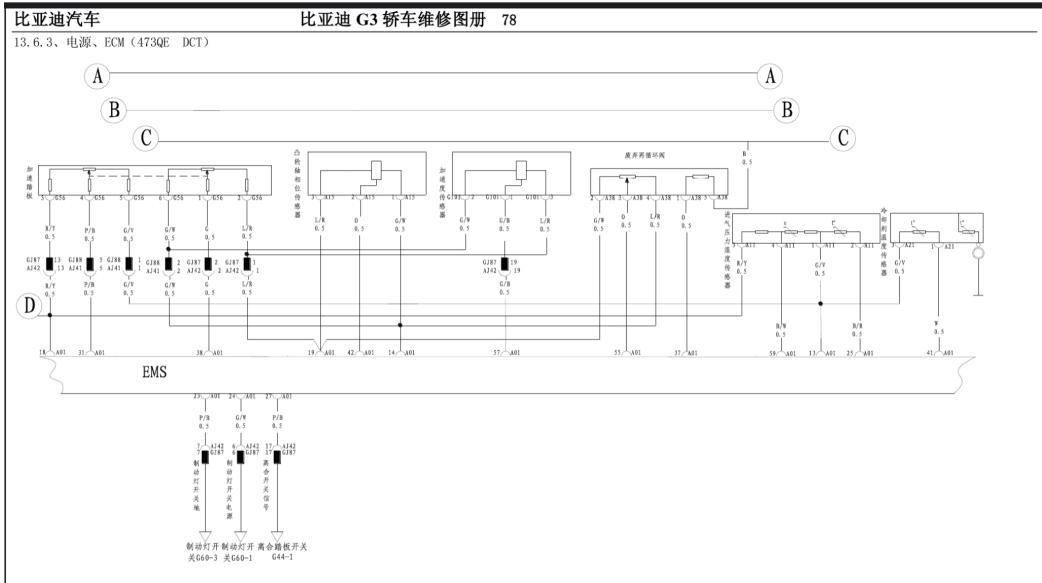

比亚迪汽车 比亚迪 G3 轿车维修图册 79 13.6.4、电源、ECM(473QE DCT) (\mathbf{A}) B 预留 B2C-18 预留 预留 K2B-10 G2H-8 F2/5 油泵 15A B 1. 25 B W/B 1.25 1.25 B W/B 1. 25 1. 25 B 1. 25 W/B 1.25 油泵继电器 K2/1 2# 紅点火线圈 3# 缸点火线圈 1#紅 大花 塞 Gr/Y 0.5 B 0. 5 2#紅 大花 塞 3#紅 火花 塞 B 1. 25 火花 多 L 1. 25 G/R 0. 5 G/R 0. 5 A02 B/R 1.25 50/A01 8 A01 51 A01