


1.1 、电源、启动、发电(1)

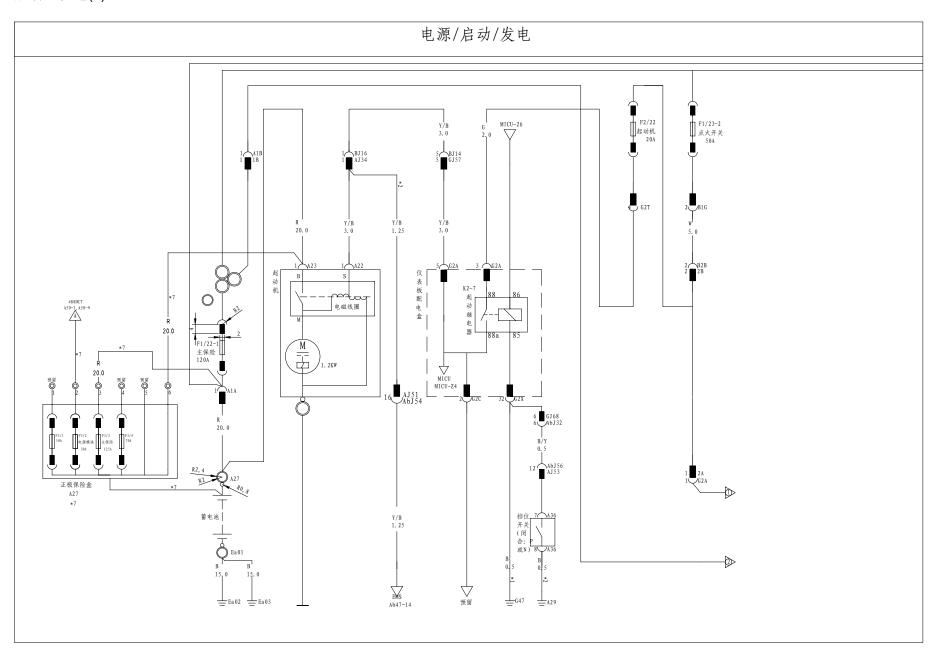


1.2、电源、启动、发电(2)

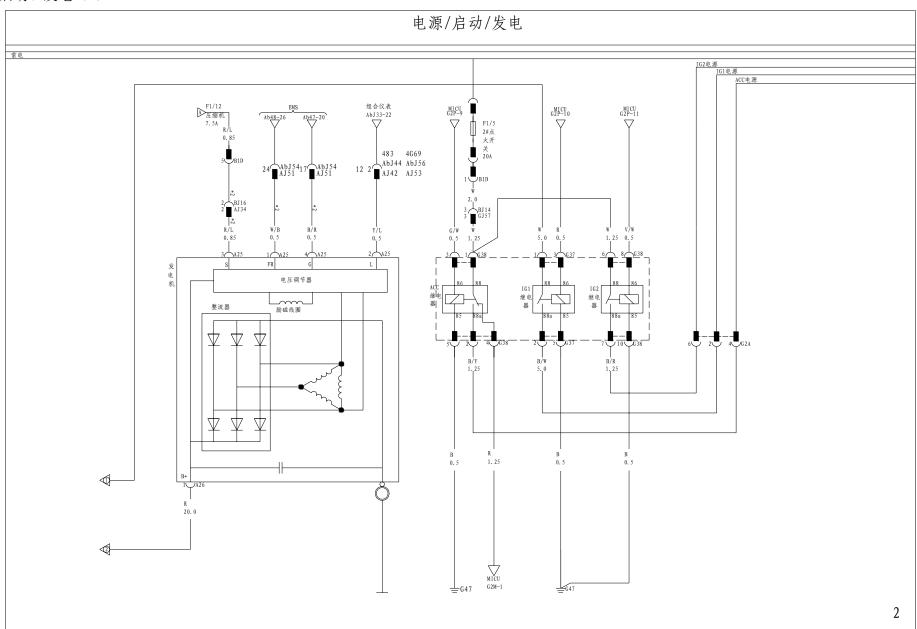


2.1, 483QB-UAES EMS*1 (1)

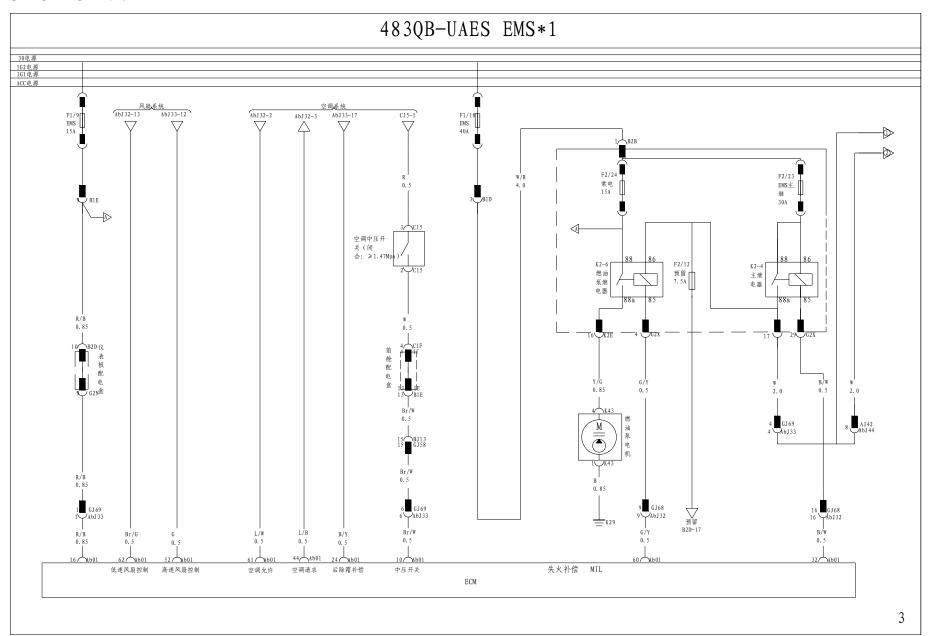


2.2、483QB-UAES EMS*1 (2)

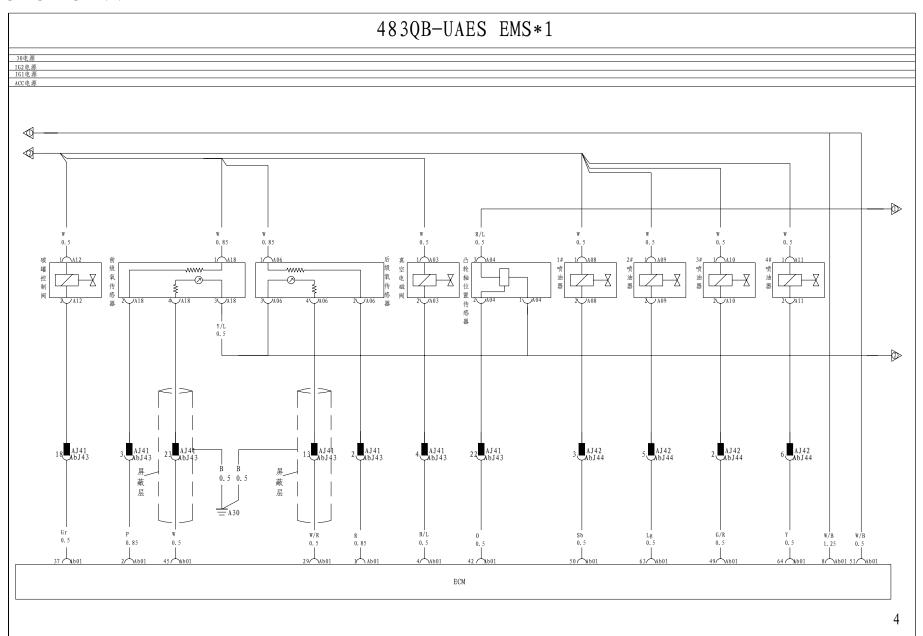


2.3、483QB-UAES EMS*1 (3)

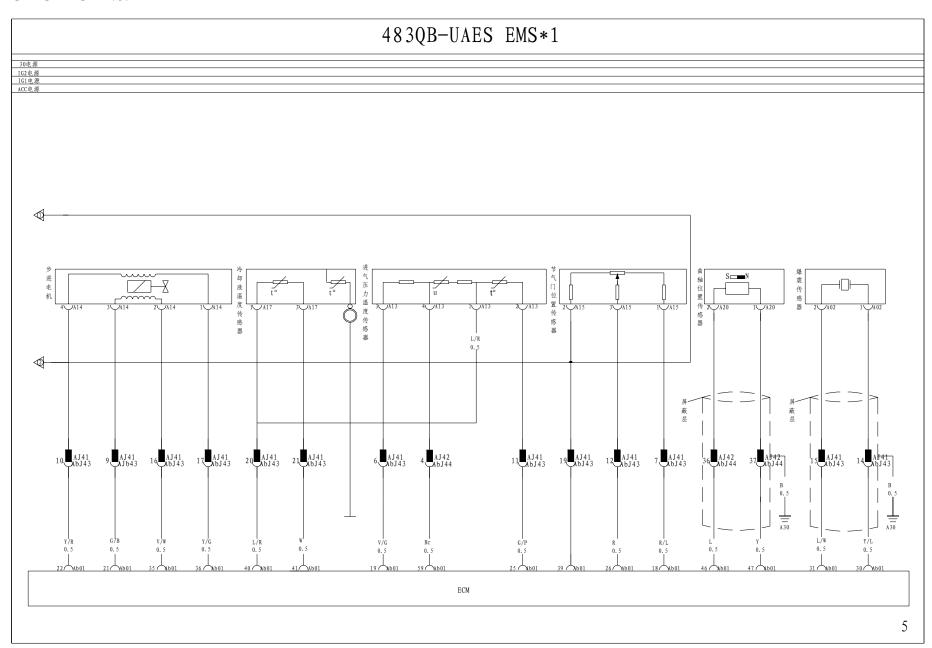


2.4、483QB-UAES EMS*1 (4)

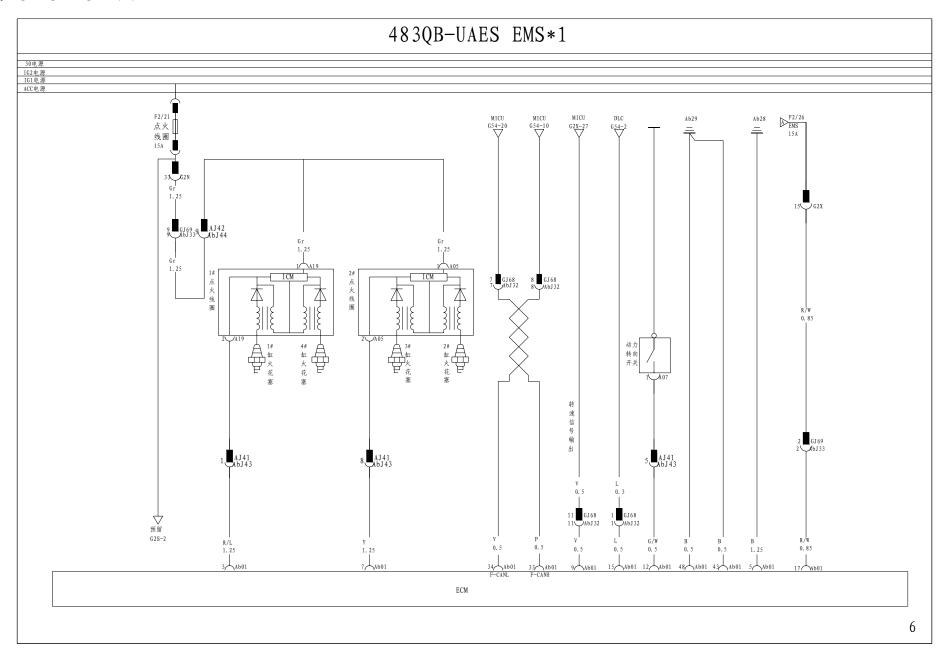


3.1、4G69-EMS*2(1)

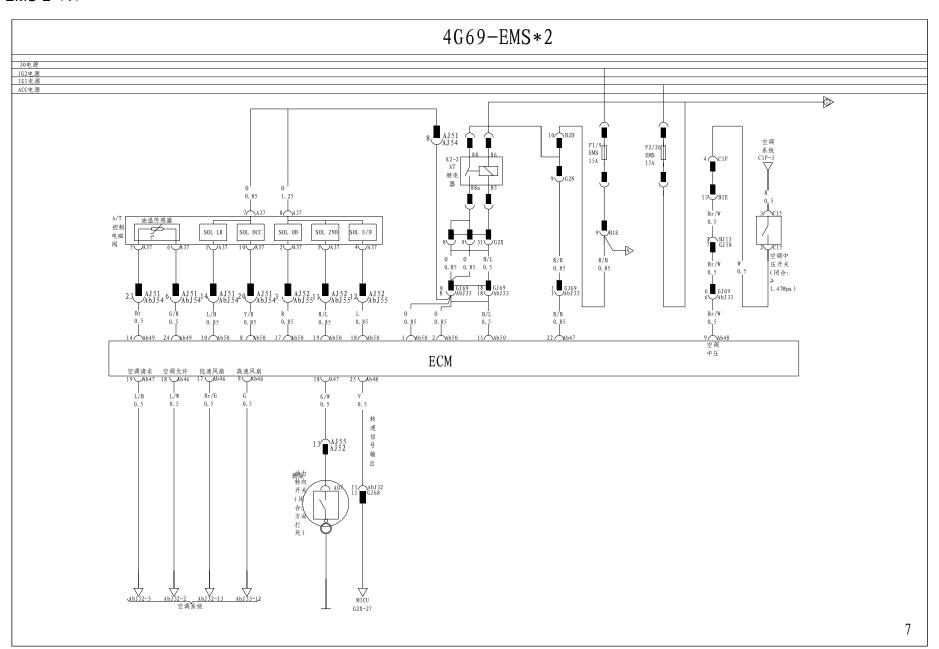


3.2、4G69-EMS*2(2)

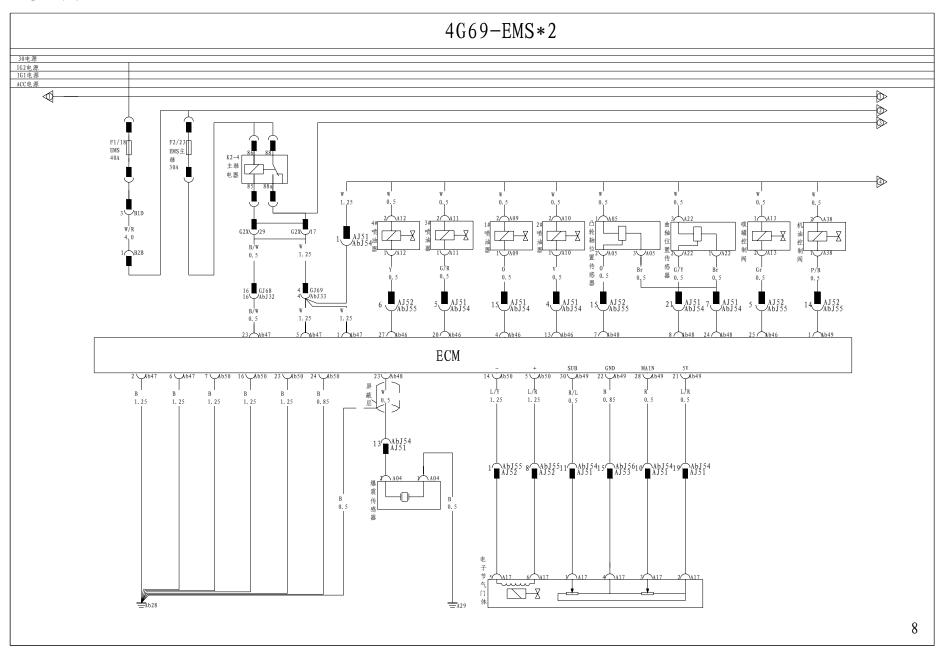


3.3、4G69-EMS*2(3)

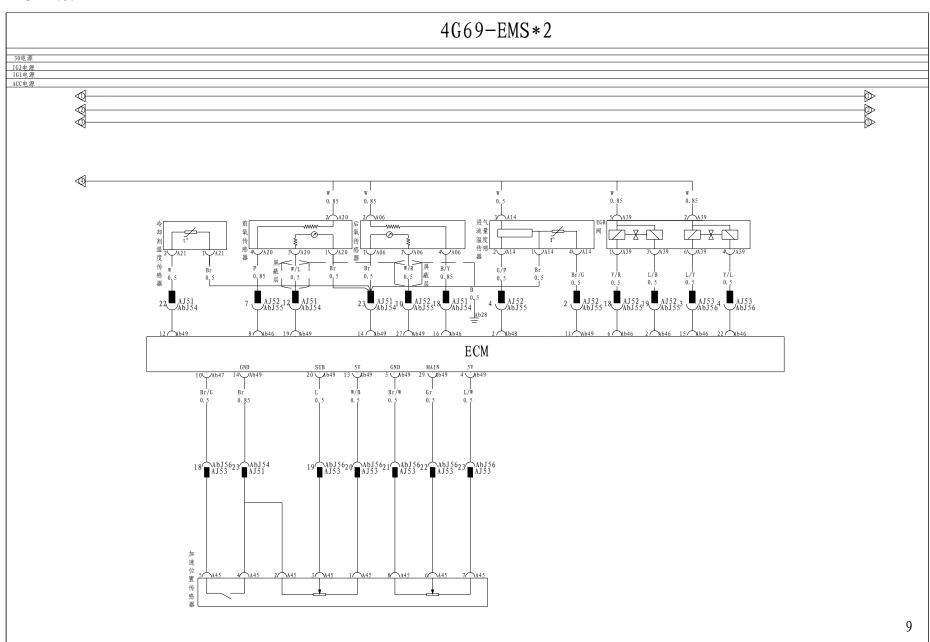


3.4、4G69-EMS*2(4)

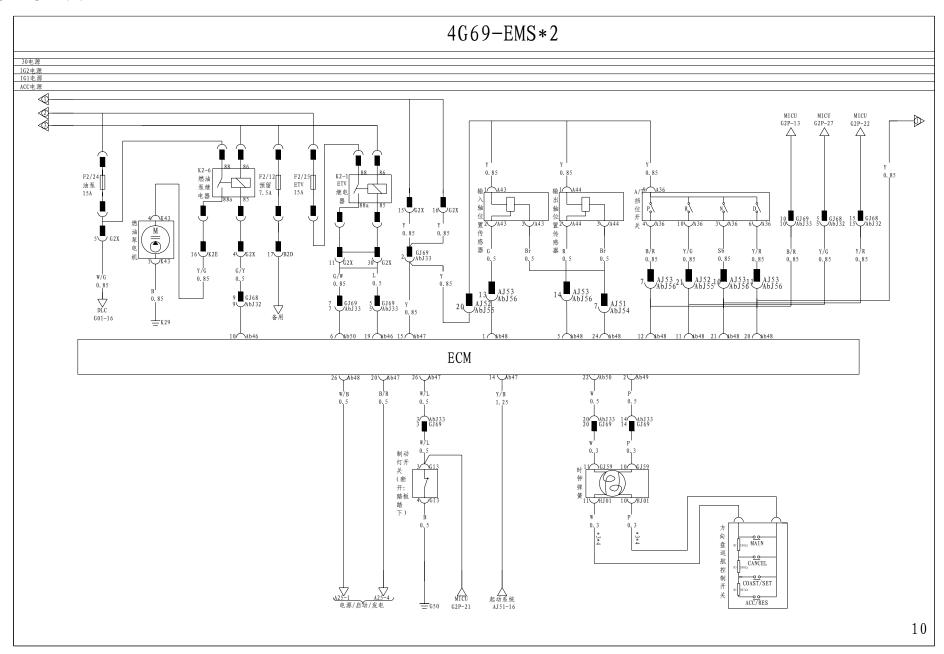


3.5、4G69-EMS*2(5)

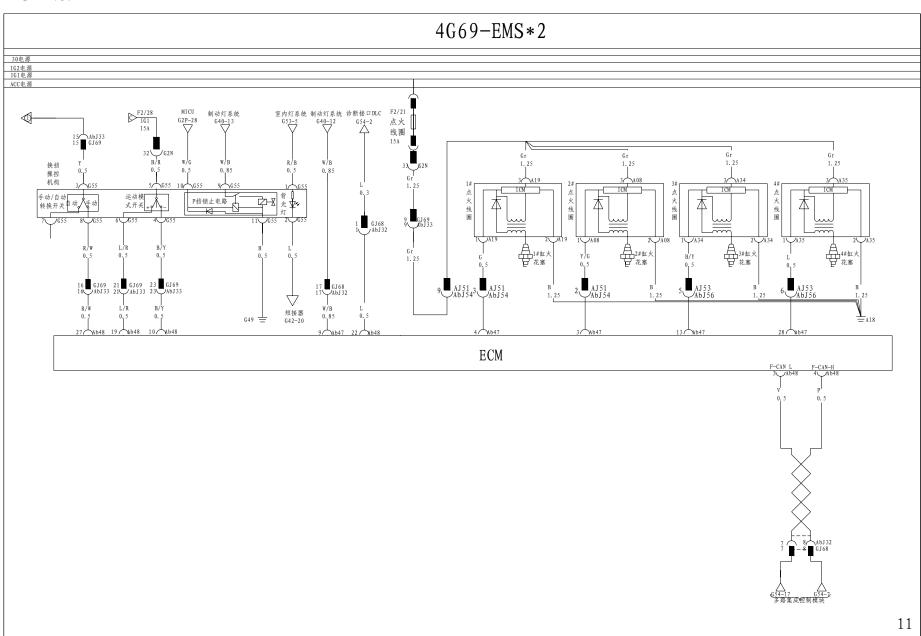


4.1、多路集成控制模块(1)

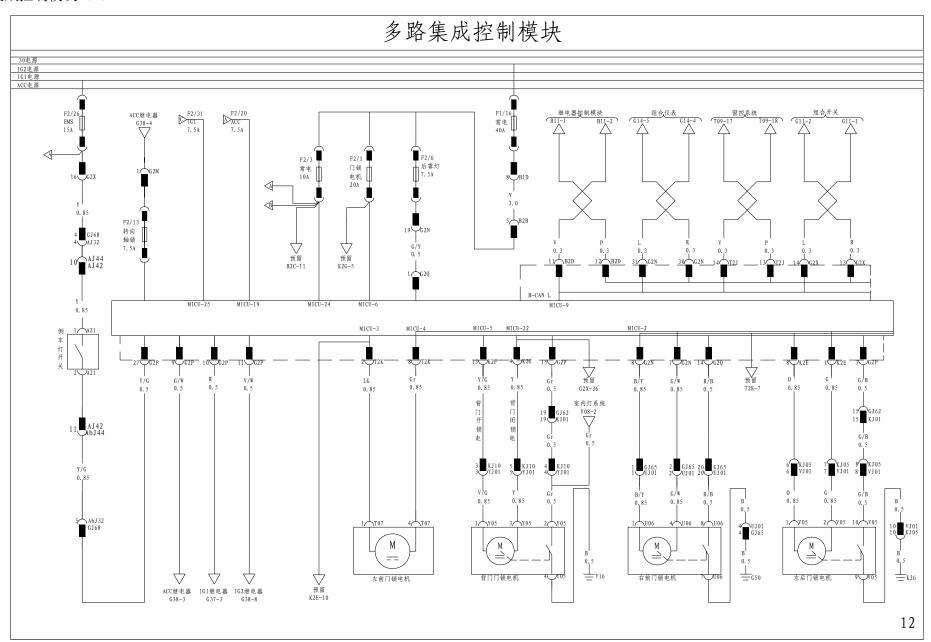


4.2、多路集成控制模块(2)

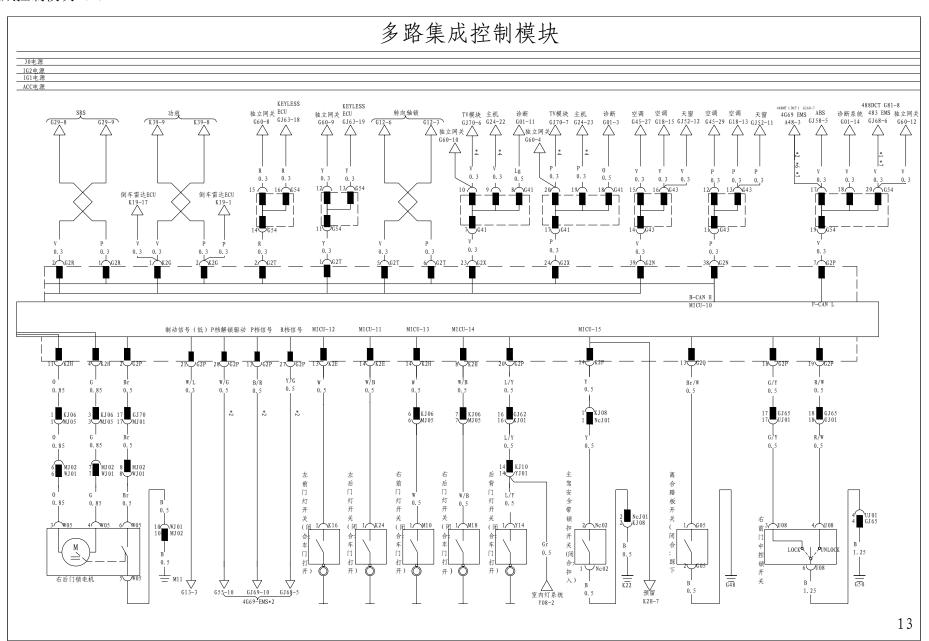


4.3、多路集成控制模块(3)

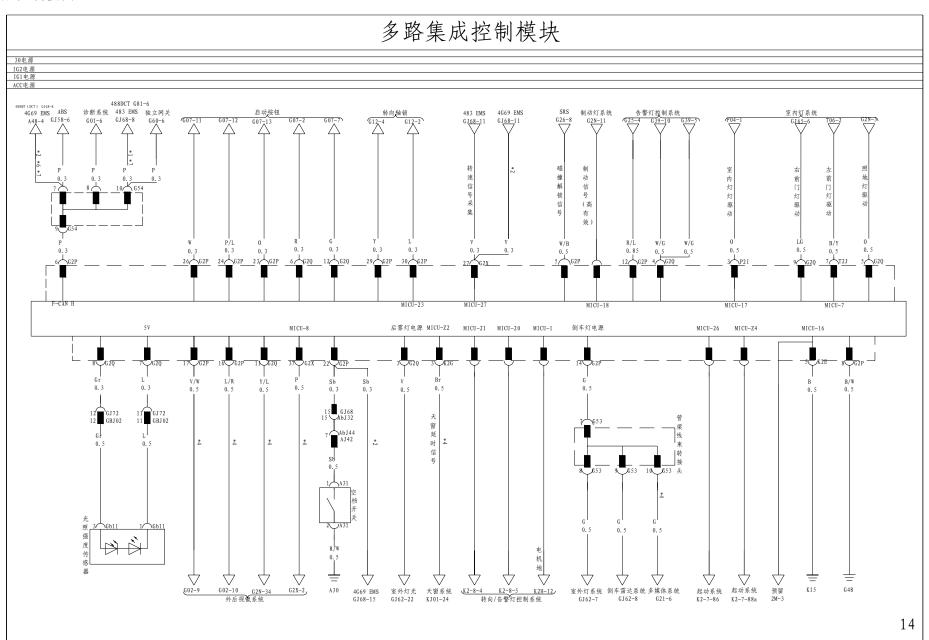


5.1、组合仪表(1)

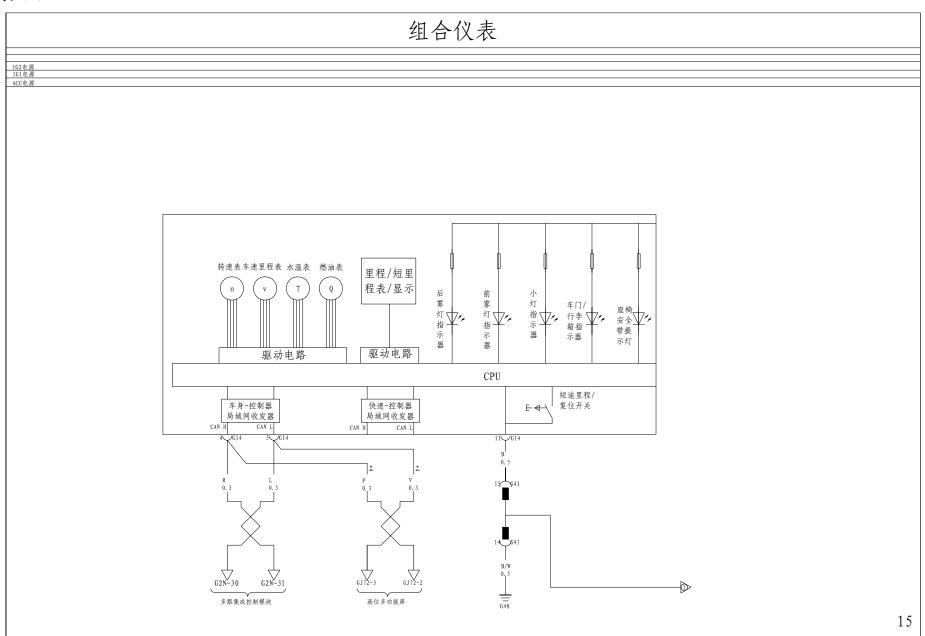


5.2、组合仪表(2)

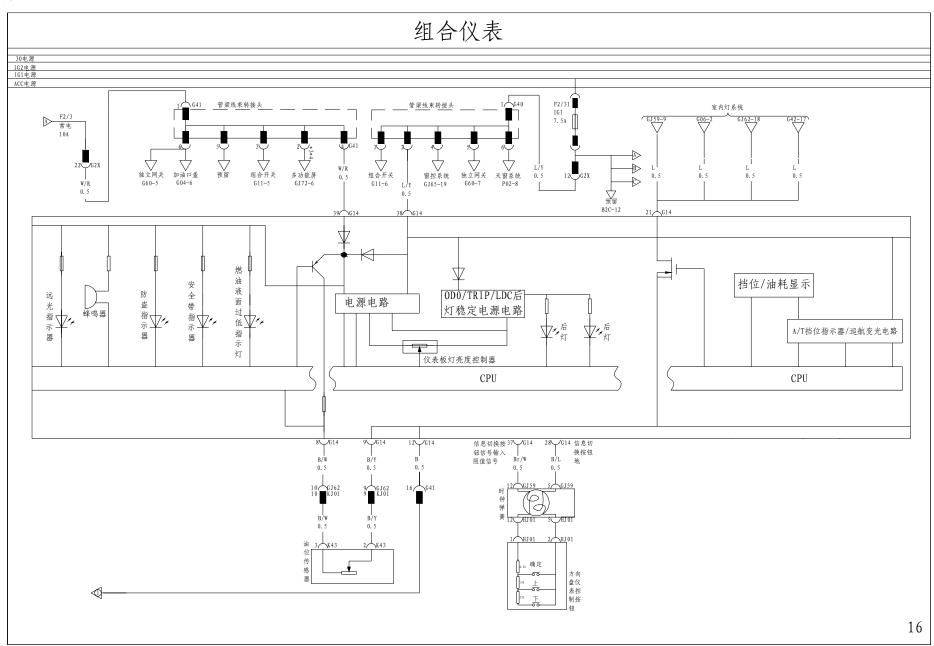


5.3、组合仪表(3)

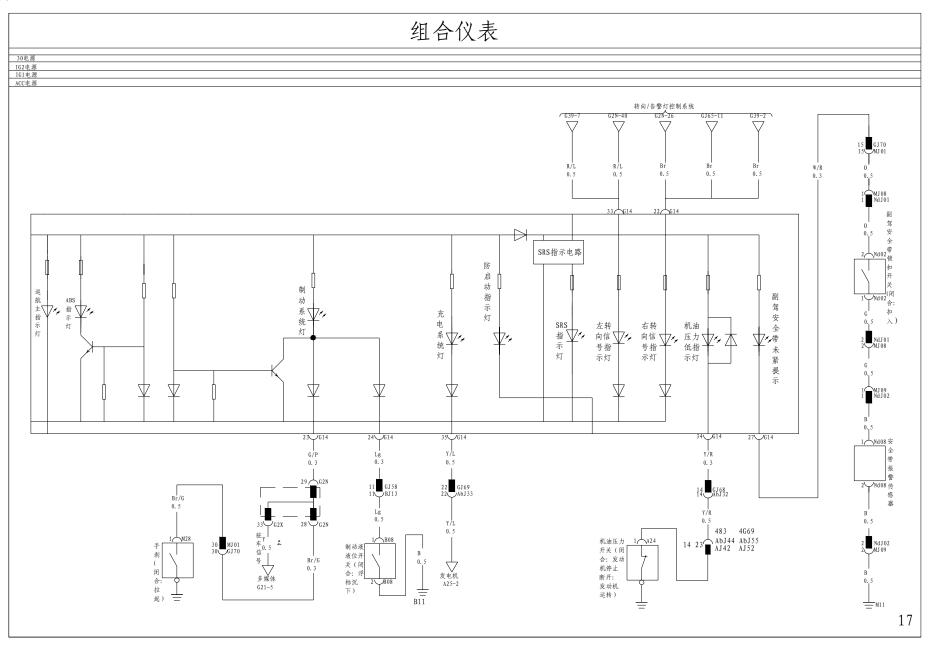


6、诊断系统 7、ABS 系统

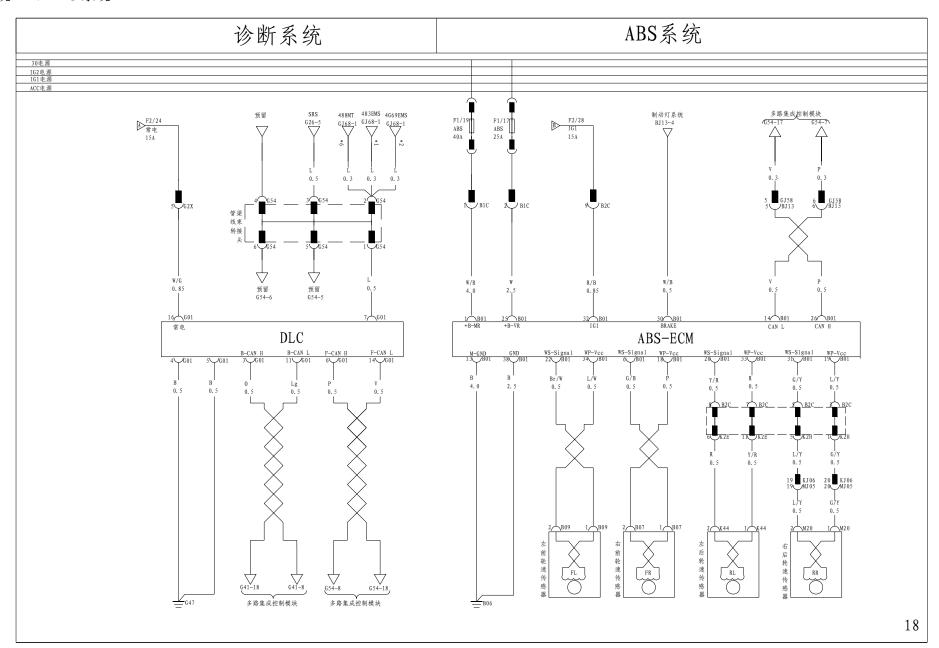


8、SRS 系统

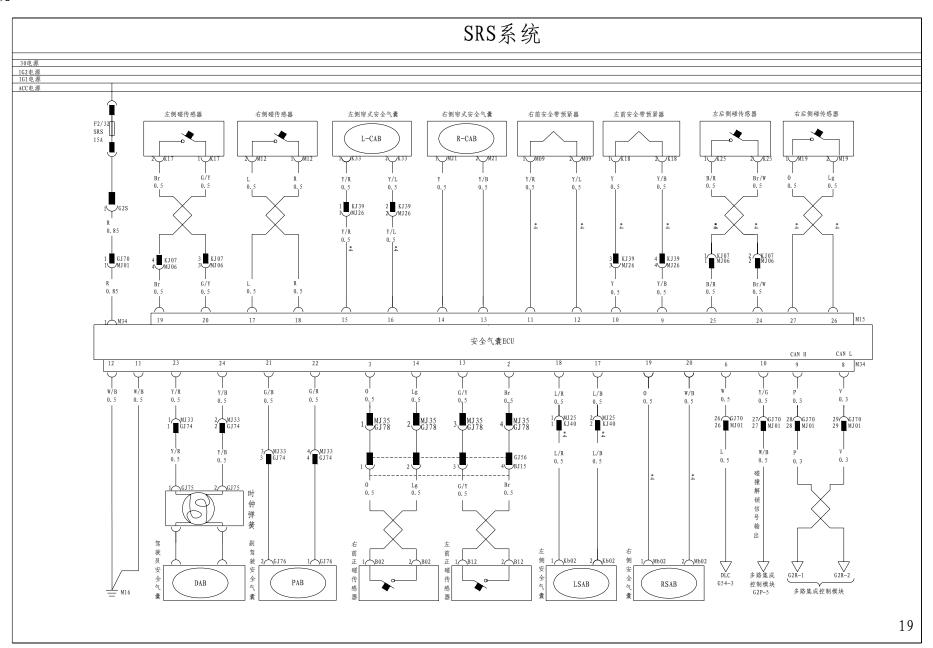


9、风扇系统

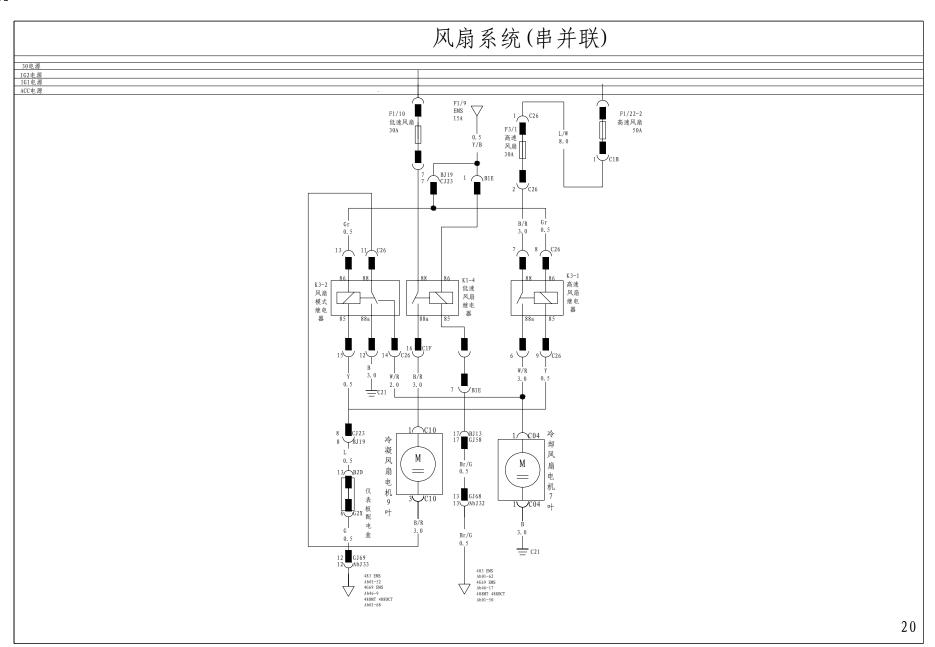


10、制动灯系统

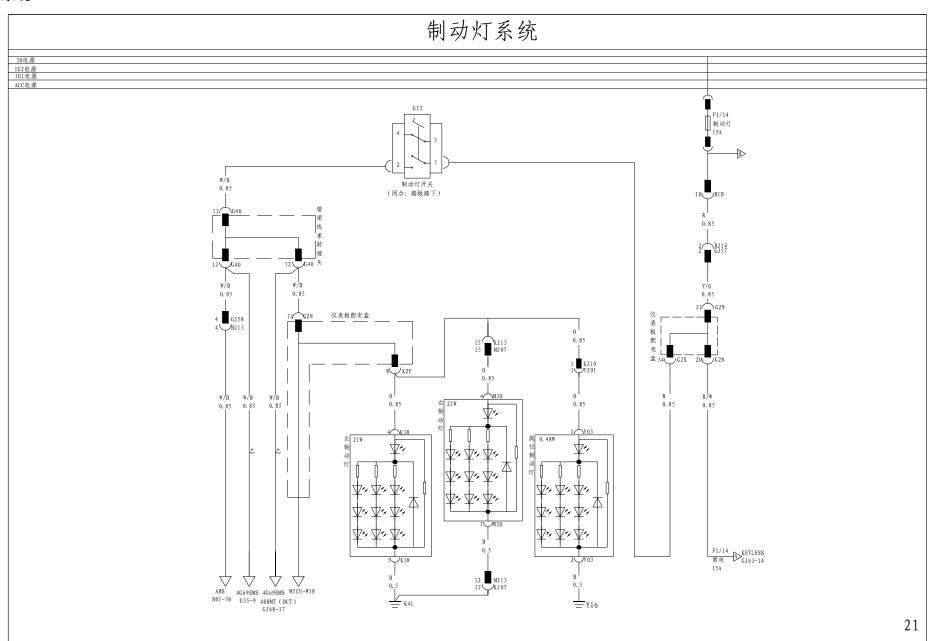


11.1、继电器控制模块及室外灯系统(1)

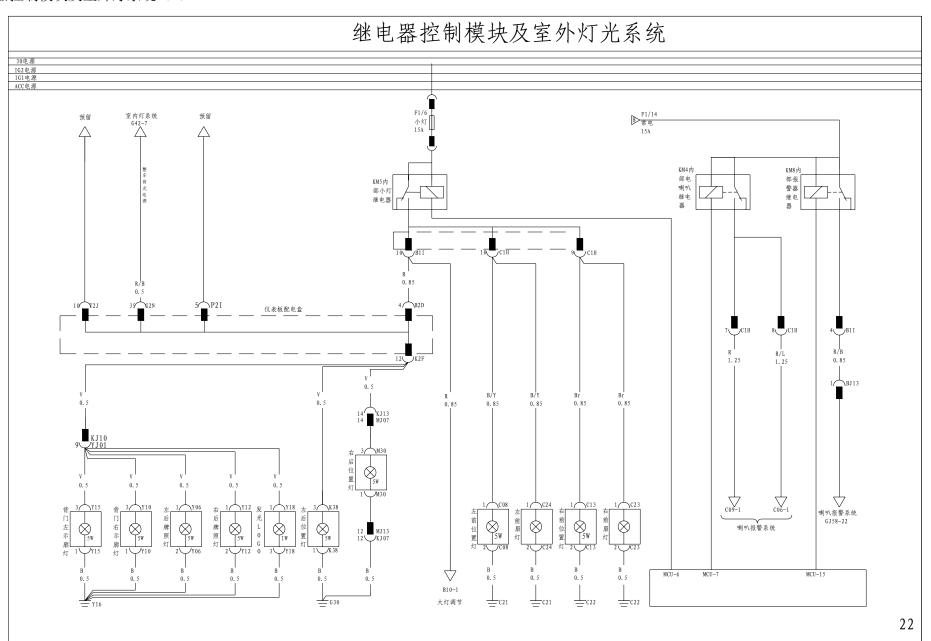


11.2、继电器控制模块及室外灯系统(2)

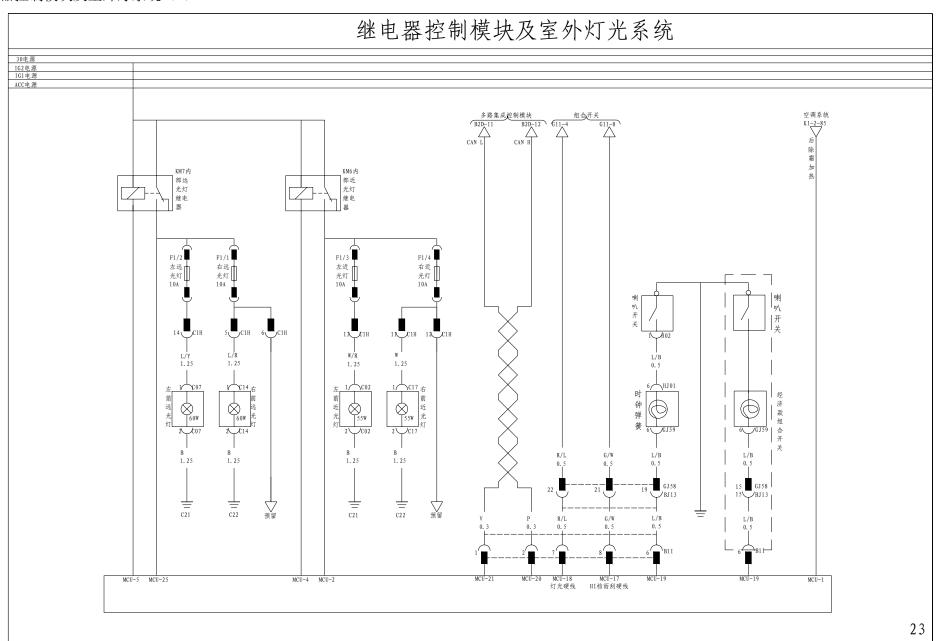


11.3、继电器控制模块及室外灯系统(3)

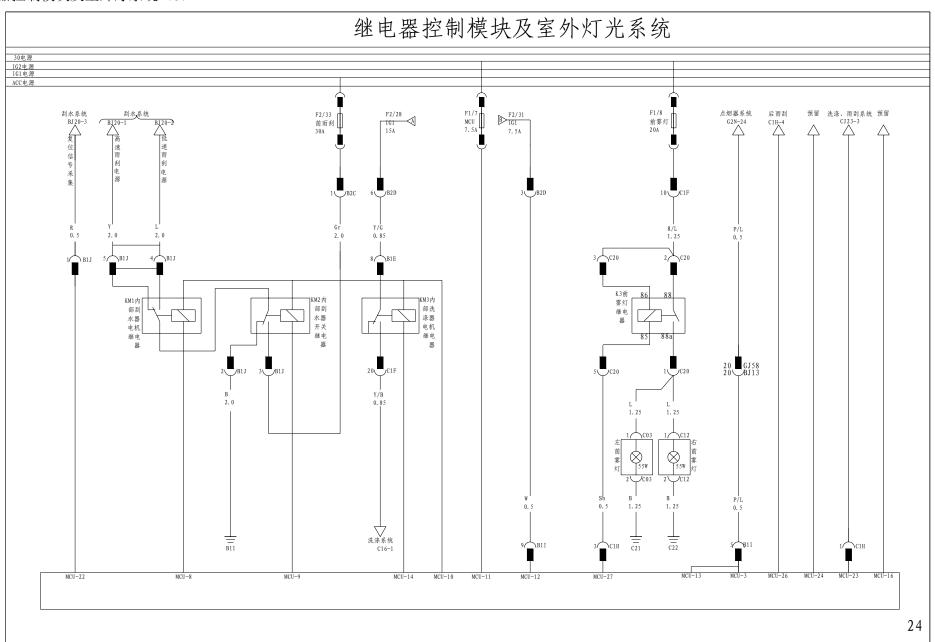


11.4、继电器控制模块及室外灯系统(4)

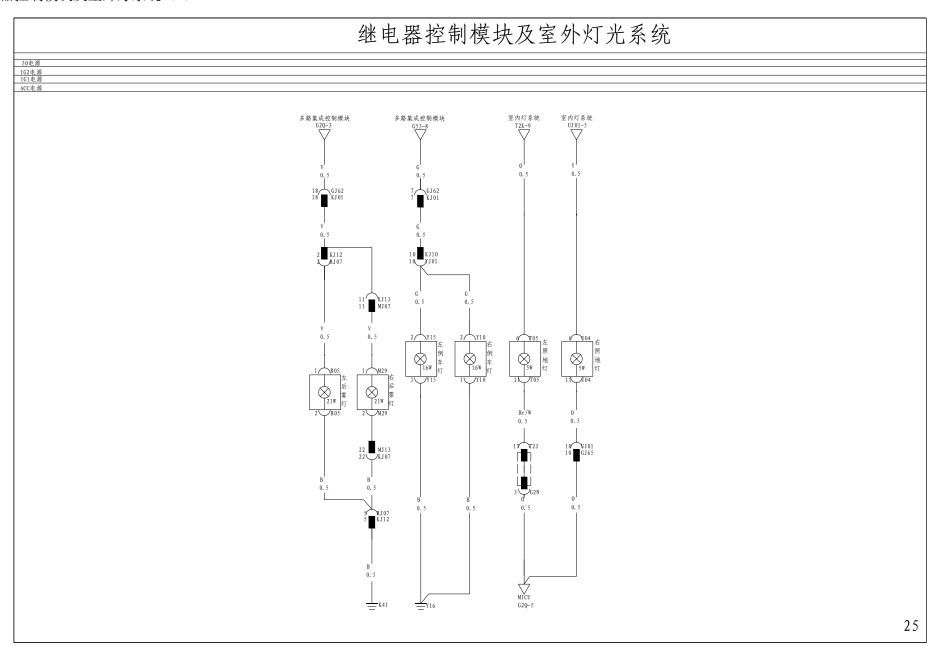


12、转向/告警灯控制系统

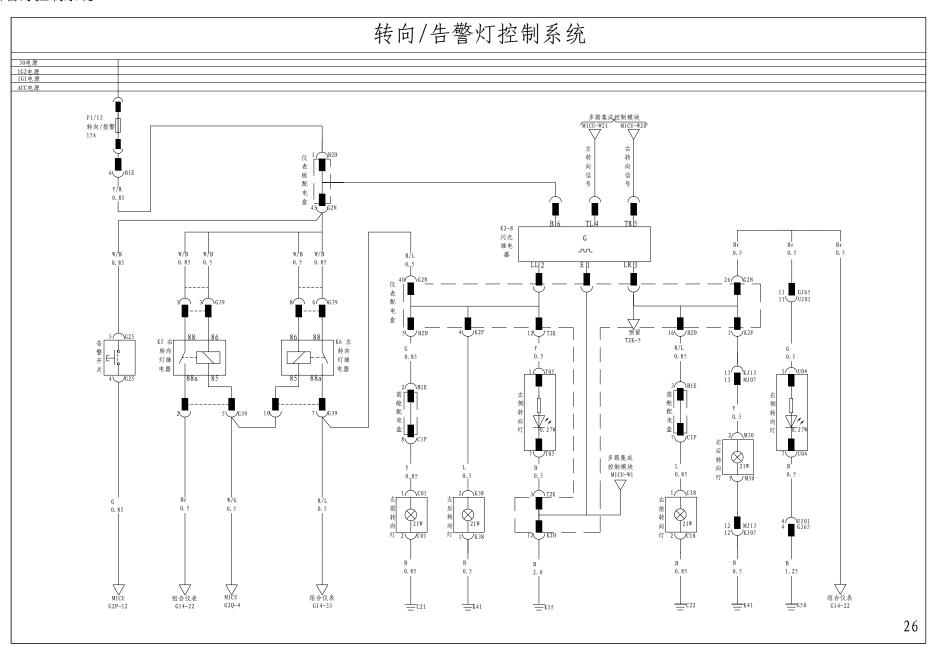


13.1、室内灯光系统(1)

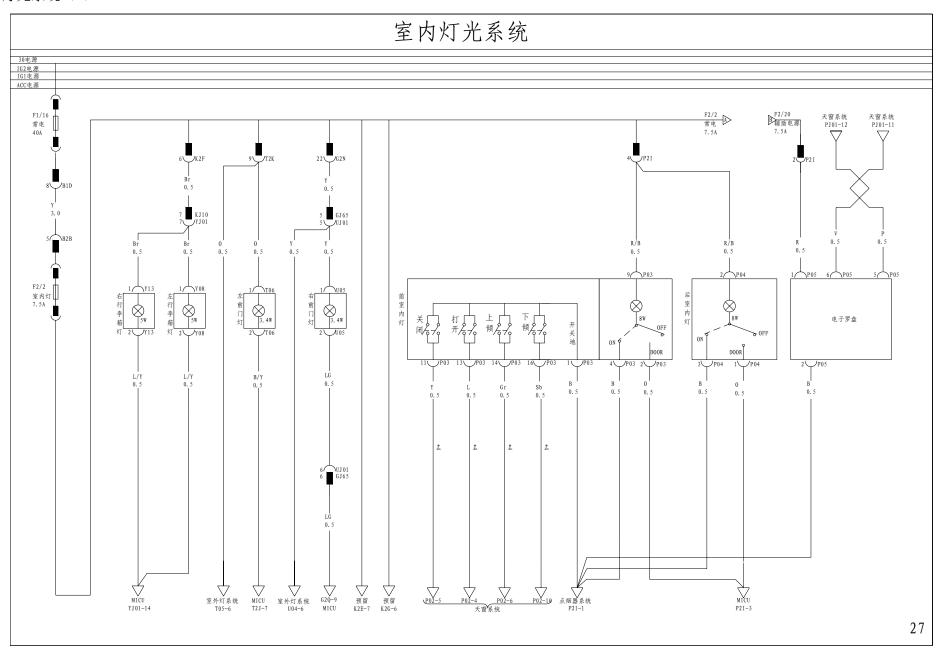


13.2、室内灯光系统(2)

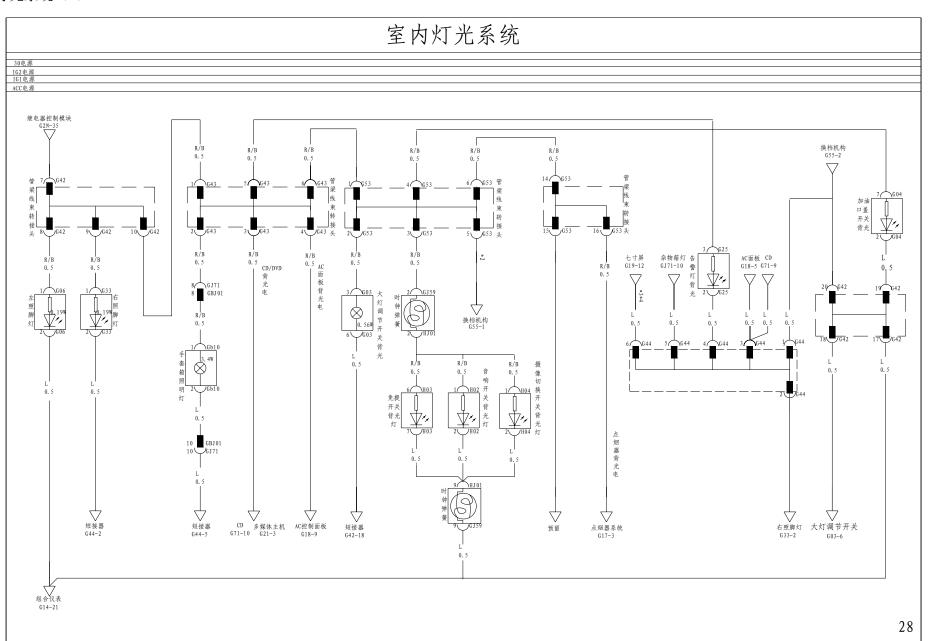


14.1、空调系统(1)

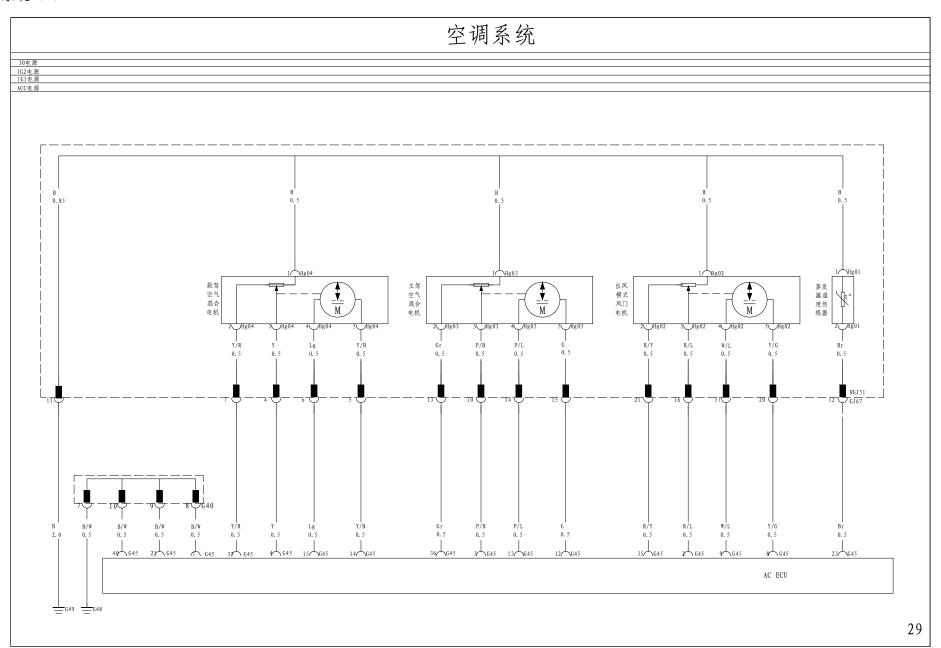


14.2、空调系统(2)

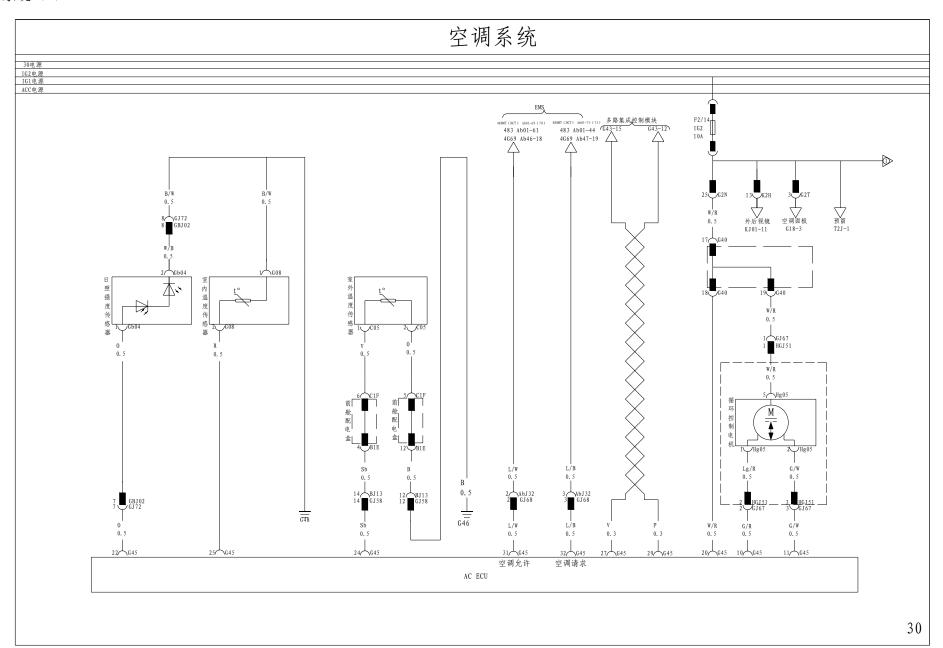


14.3、空调系统(3)

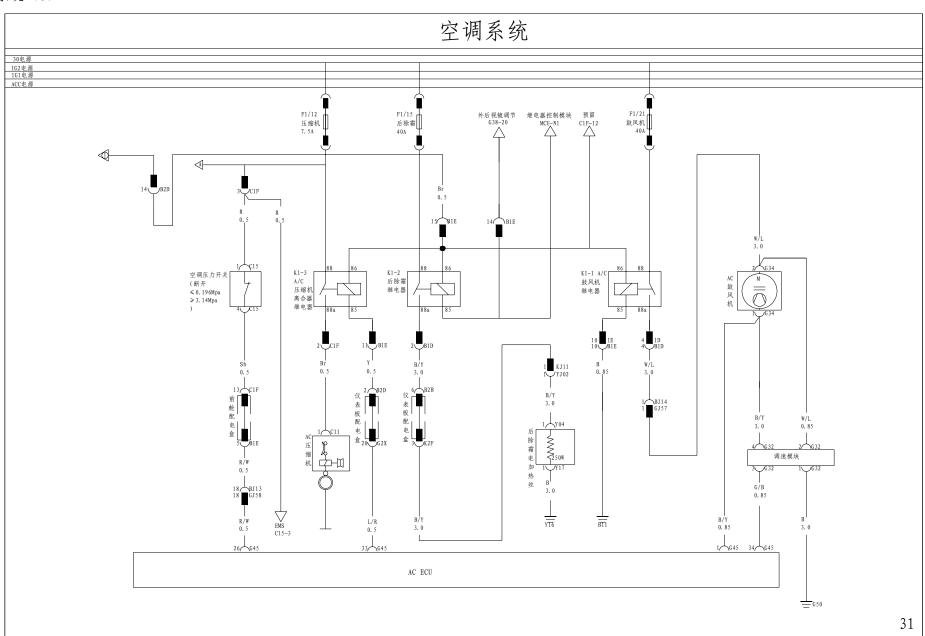


14.4、空调系统(4)

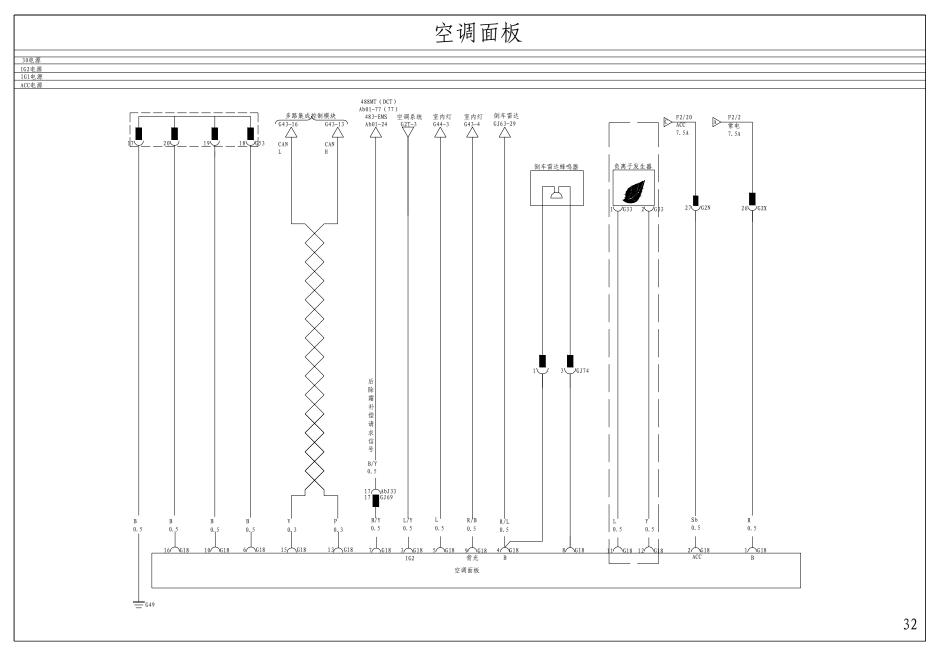


15.1、KEYLESS (1)

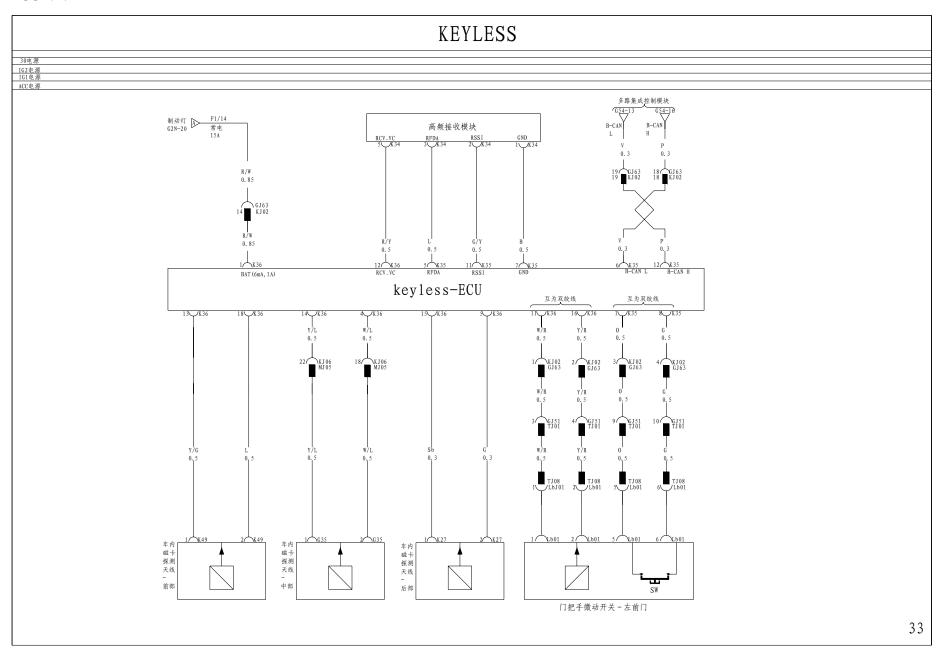


15.2、KEYLESS (2)

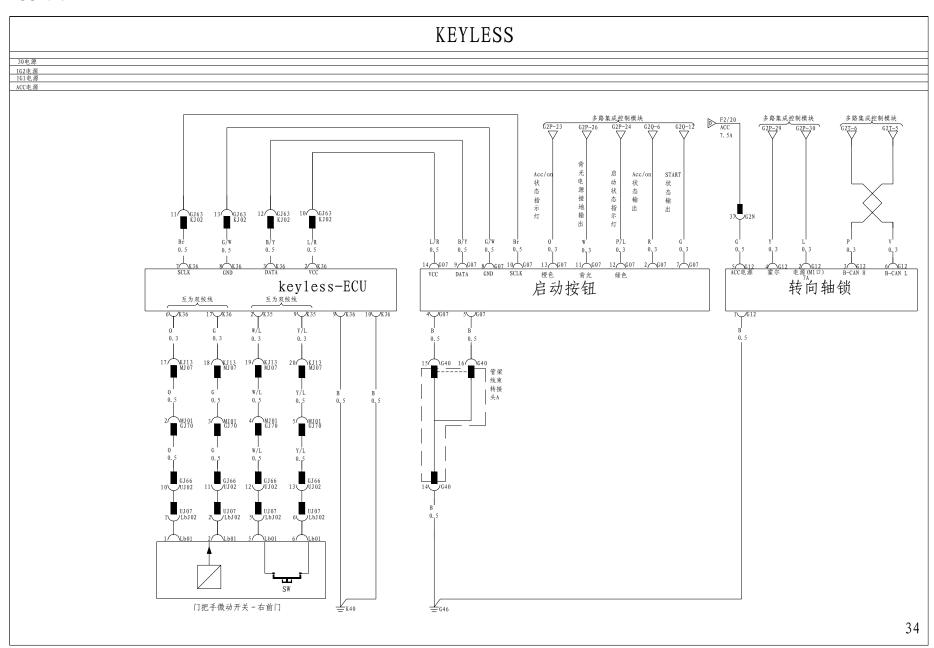


16、倒车雷达系统

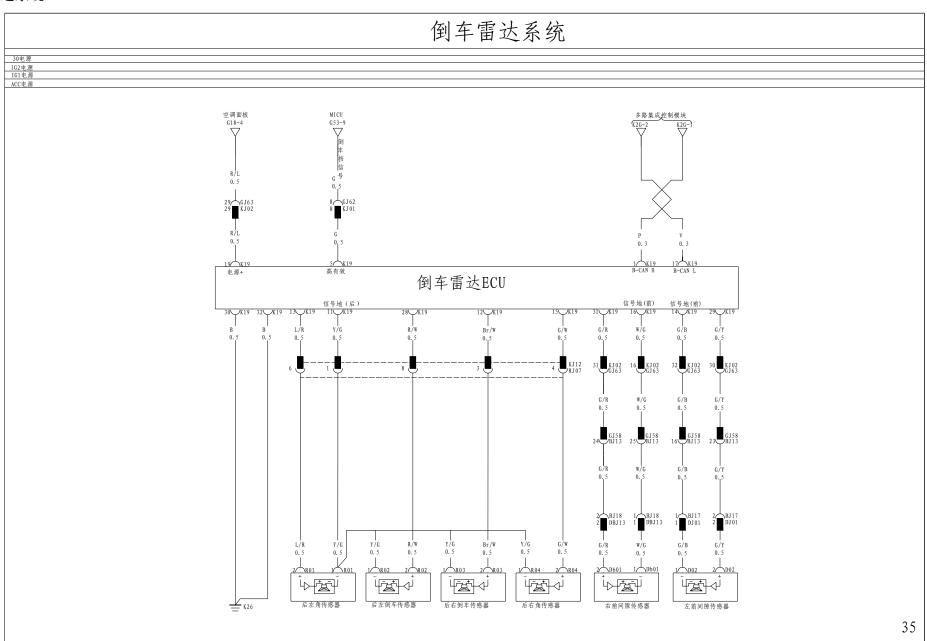


17、电动外后视镜调节系统

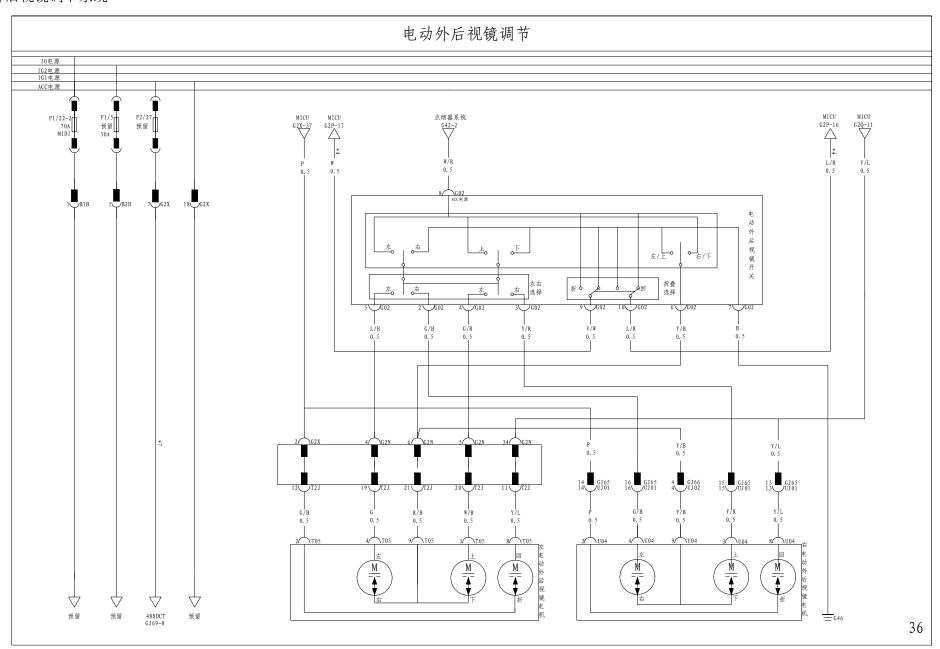


18、电动外后视镜加热系统 19、独立网关 20.1、窗控系统(1)

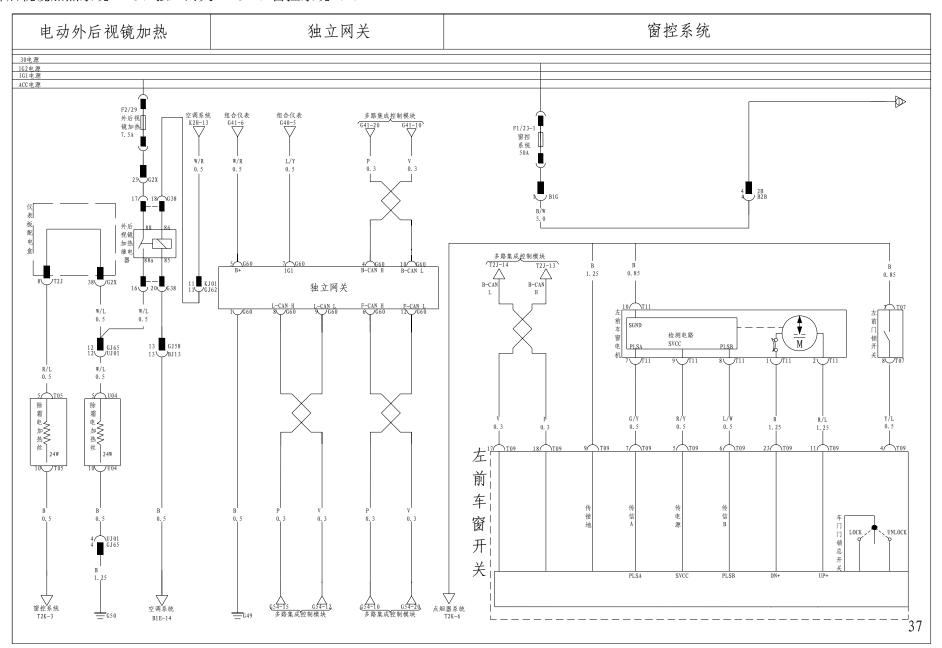


20.2、窗控系统(2)

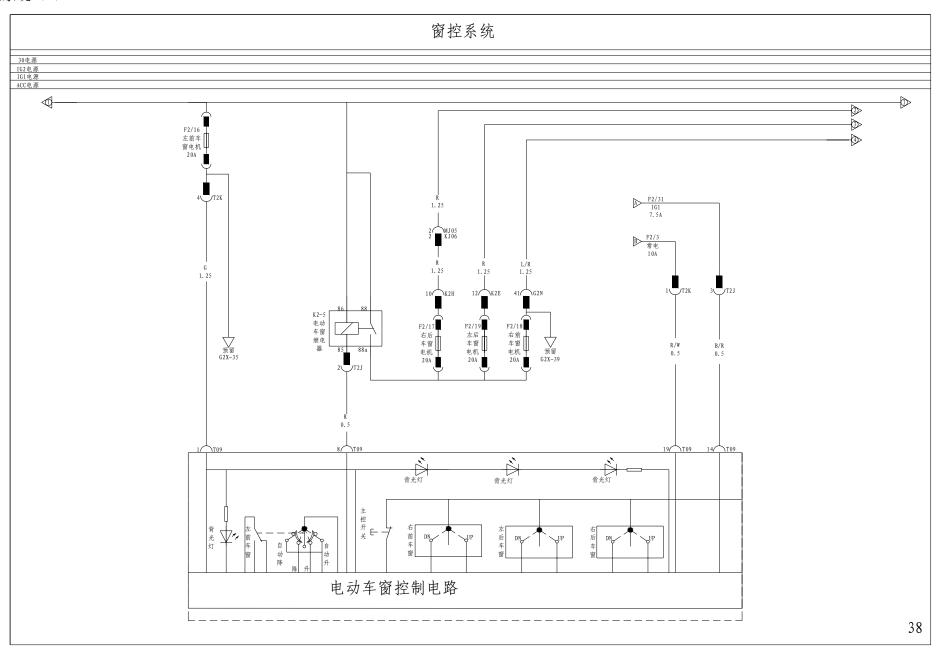


20.3、窗控系统(3)

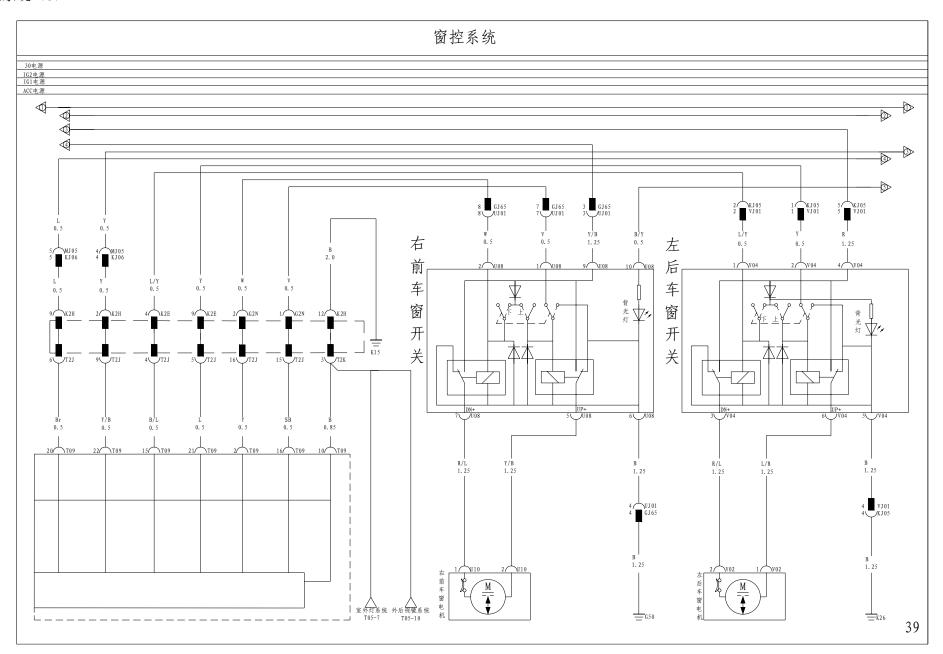


20.4、窗控系统(4) 21、天窗

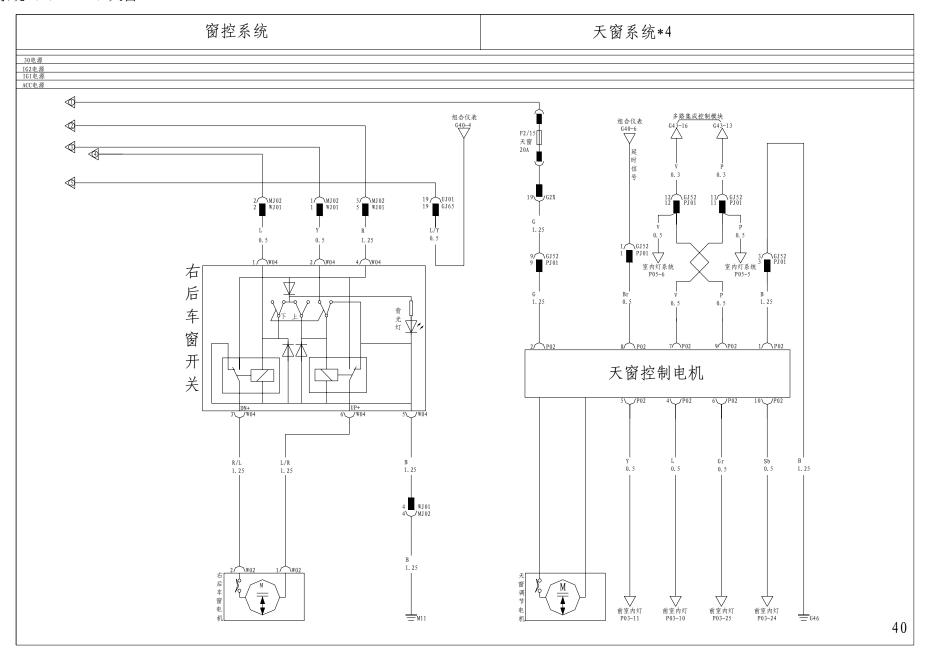


22、座椅加热调节系统

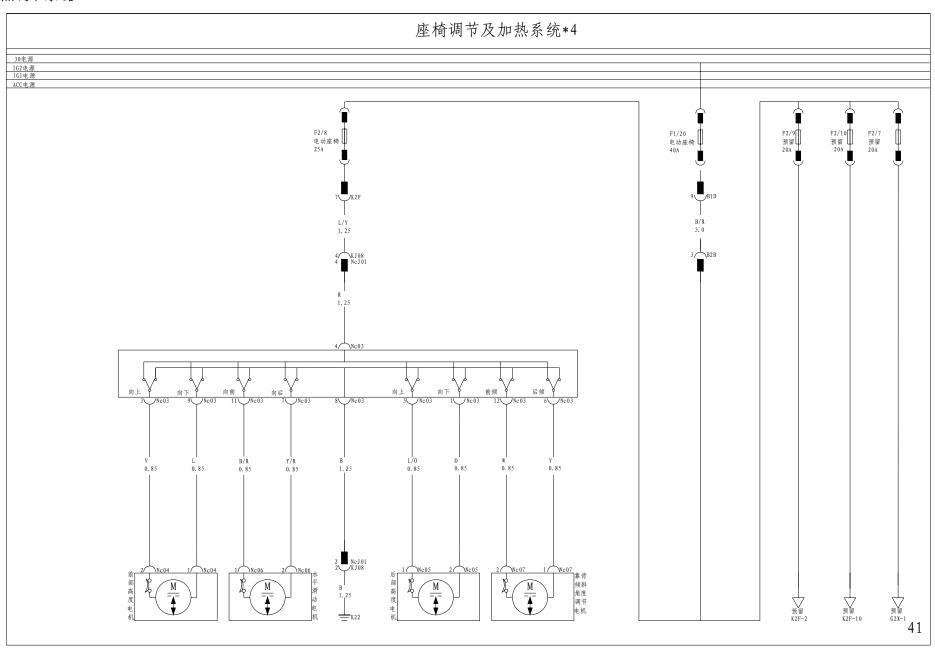


23、洗涤、雨刮系统

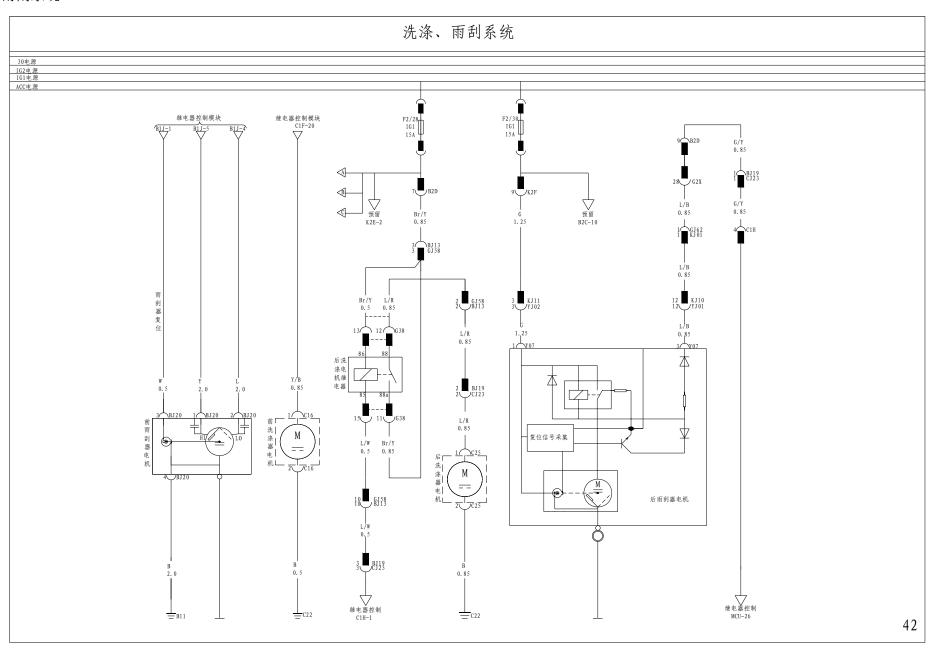


24、组合仪表

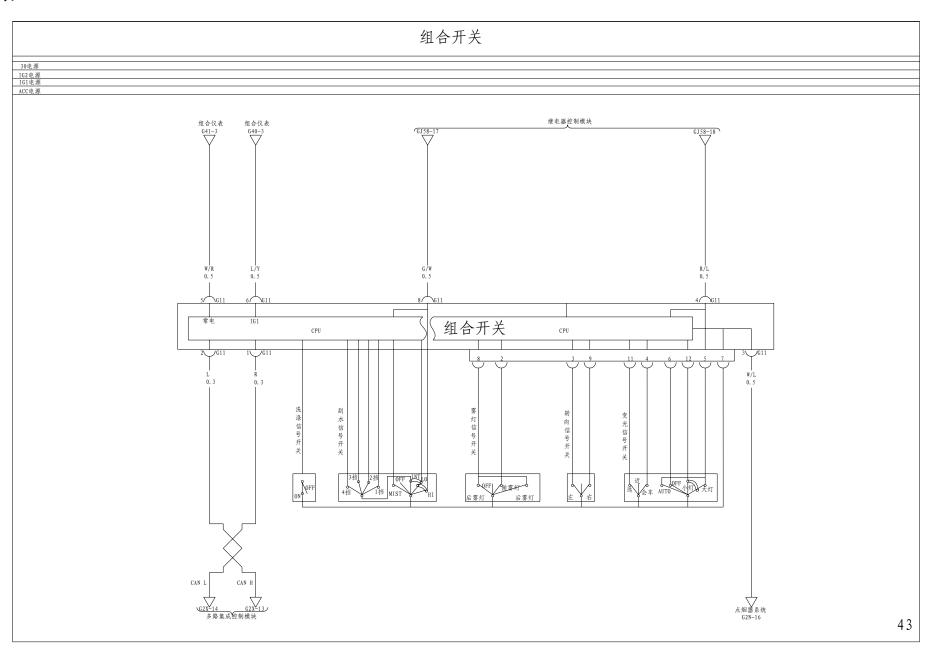


25、CD

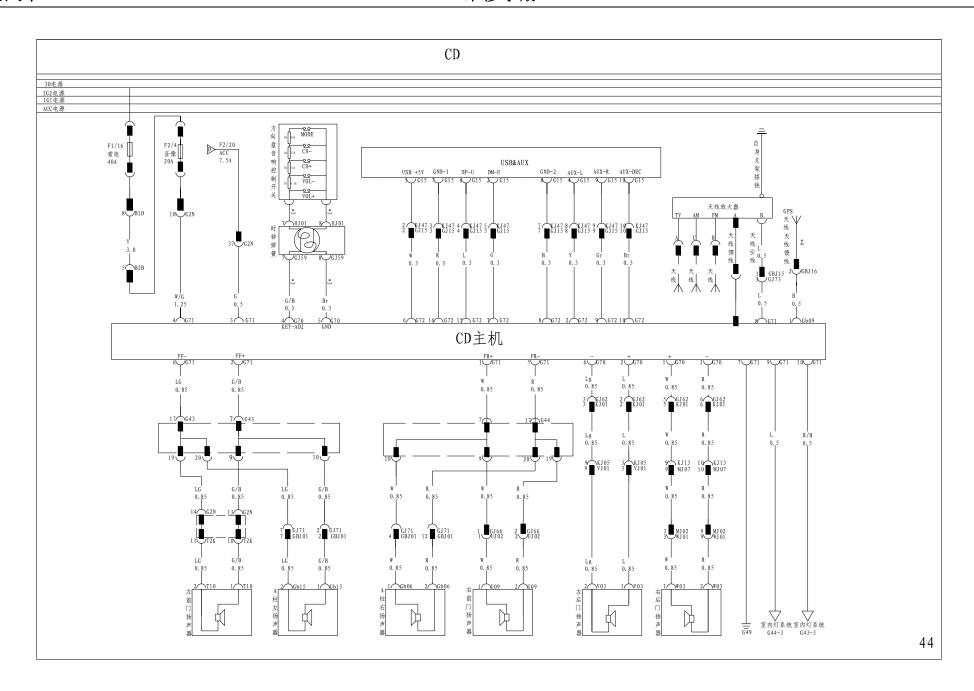


26.1、外置功放(1)

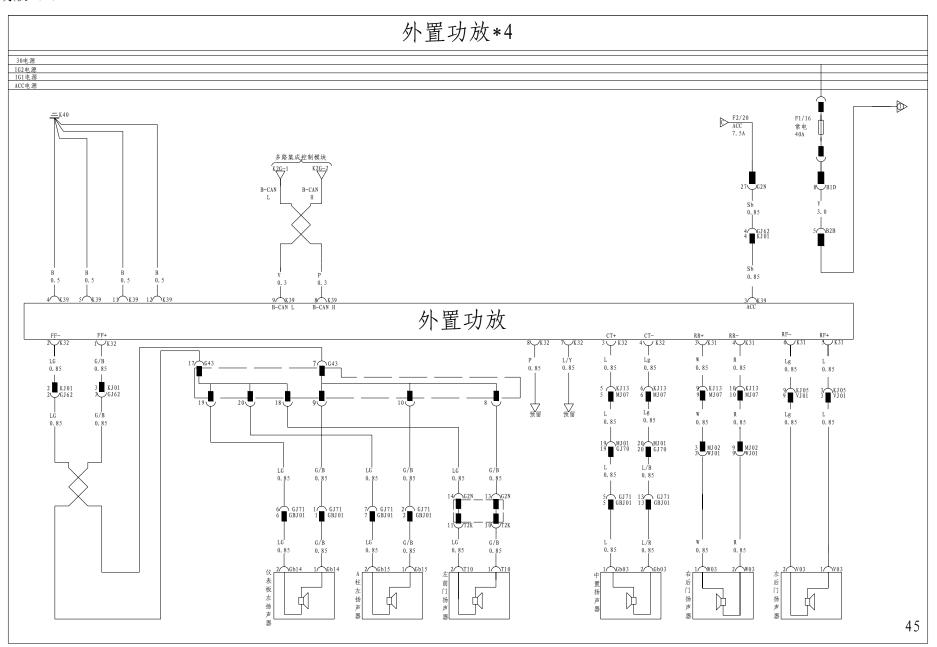


26.2、外置功放(2) 27.1、多媒体系统(1)

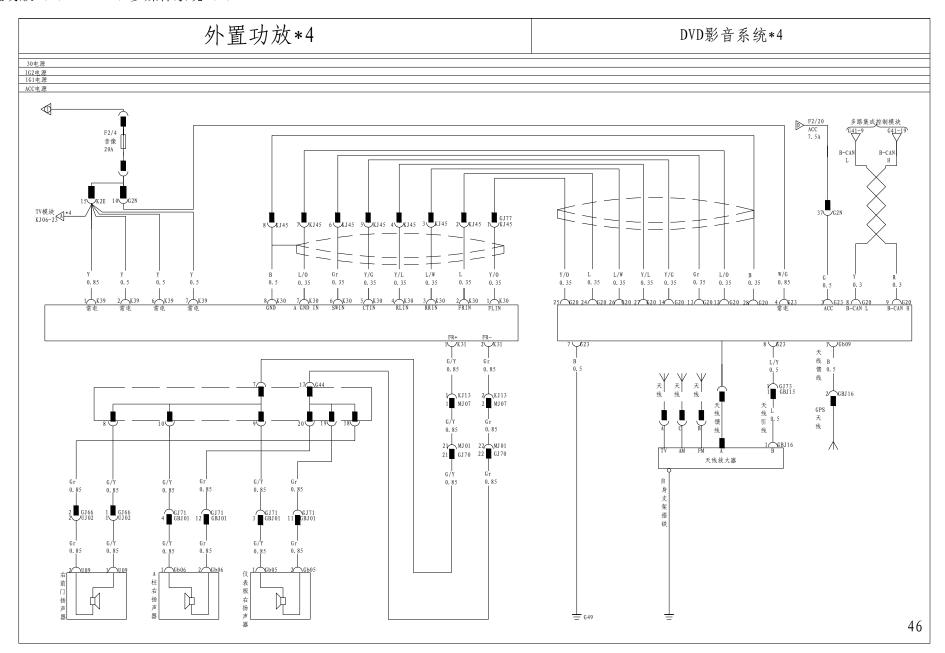


27.2、多媒体系统(2)

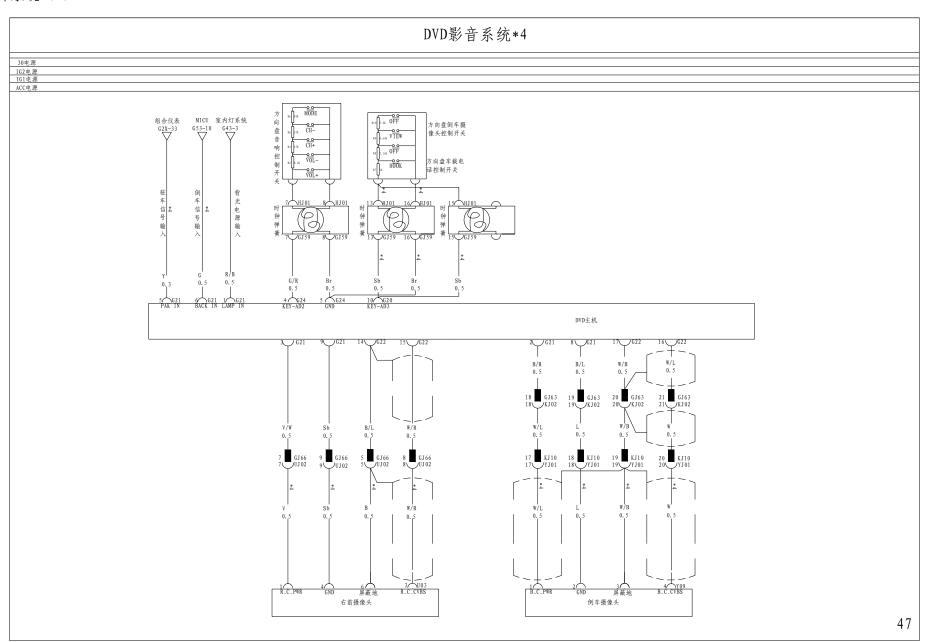


27.3、多媒体系统(3)

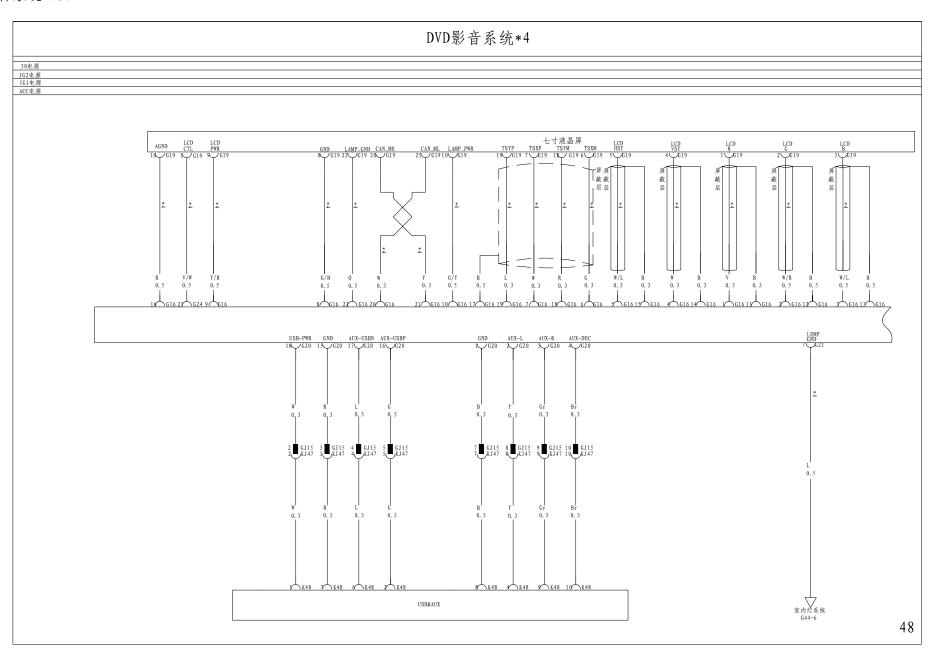


28、TV 模块

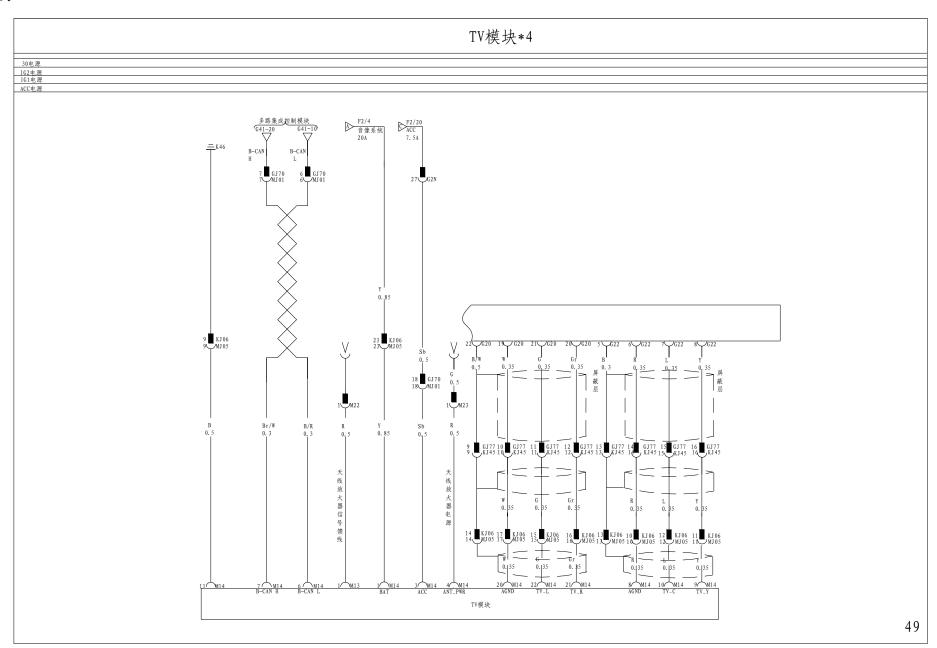


29、多功能显示屏 30、喇叭报警系统

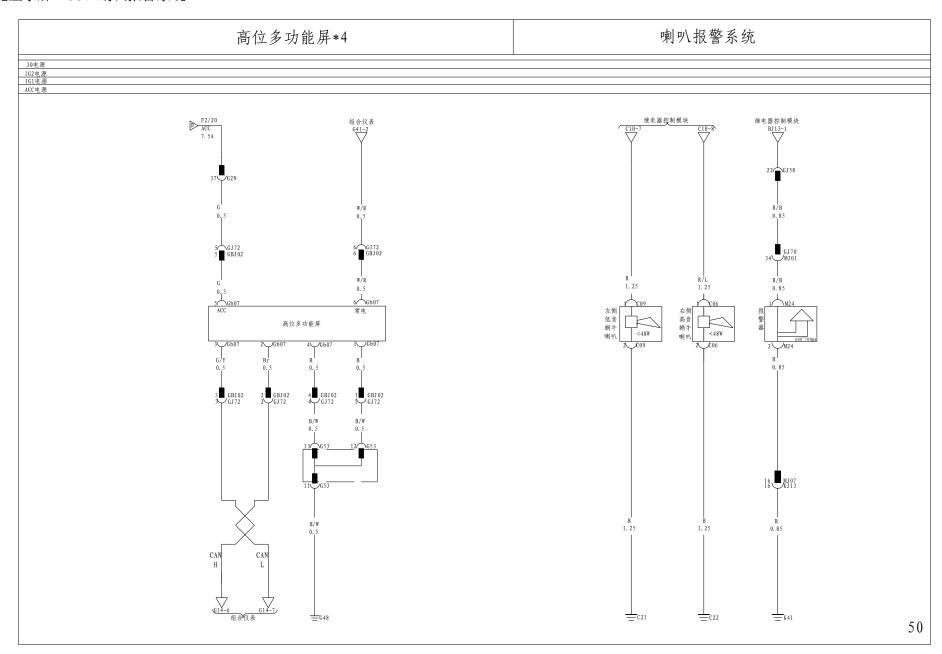


31、点烟器系统 32、大灯调节系统 33、加油口盖电机

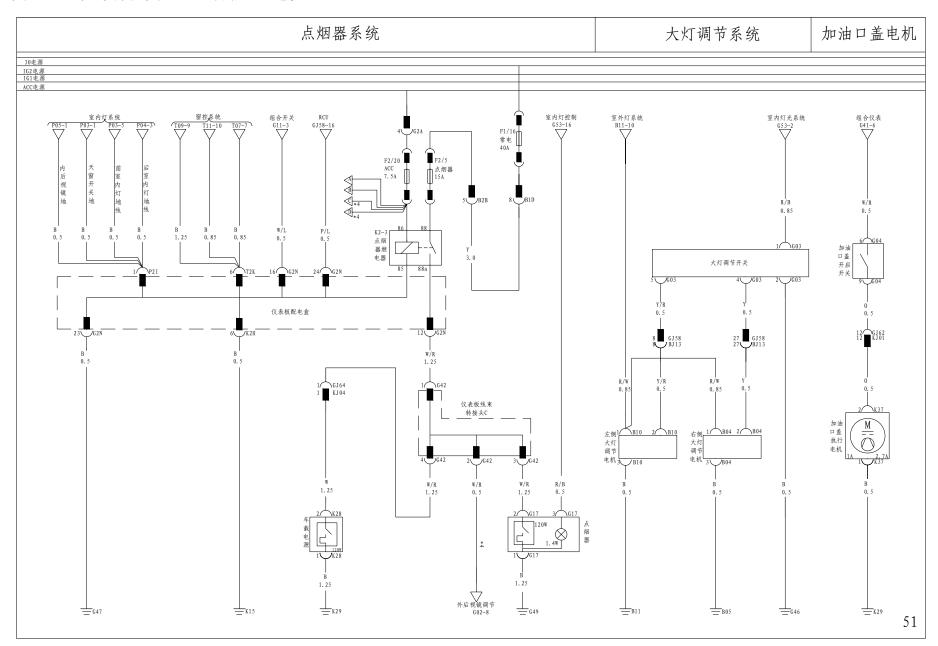


34.1、488MT(1)

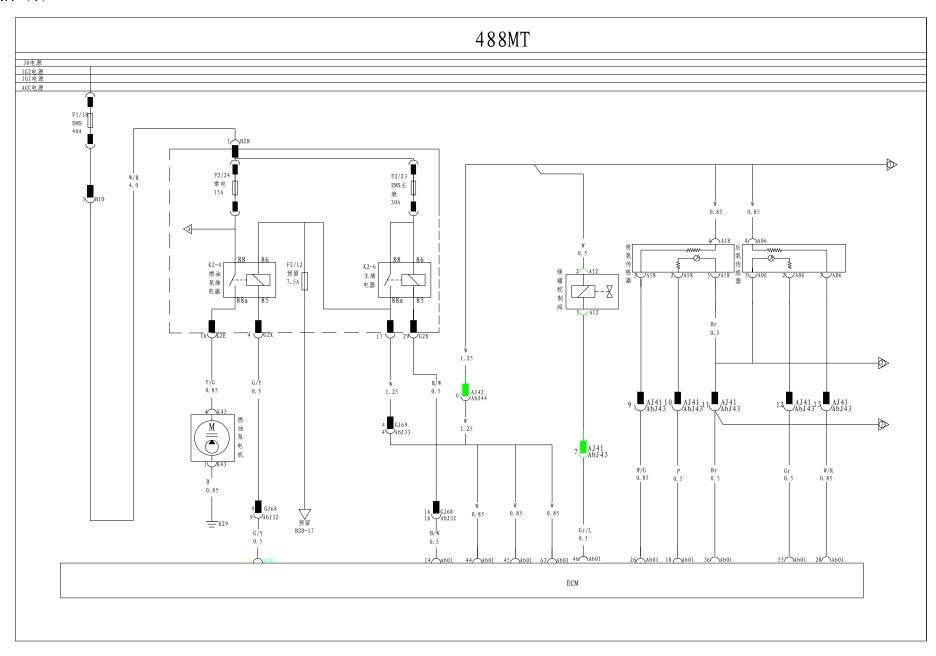


34.2、488MT (2)

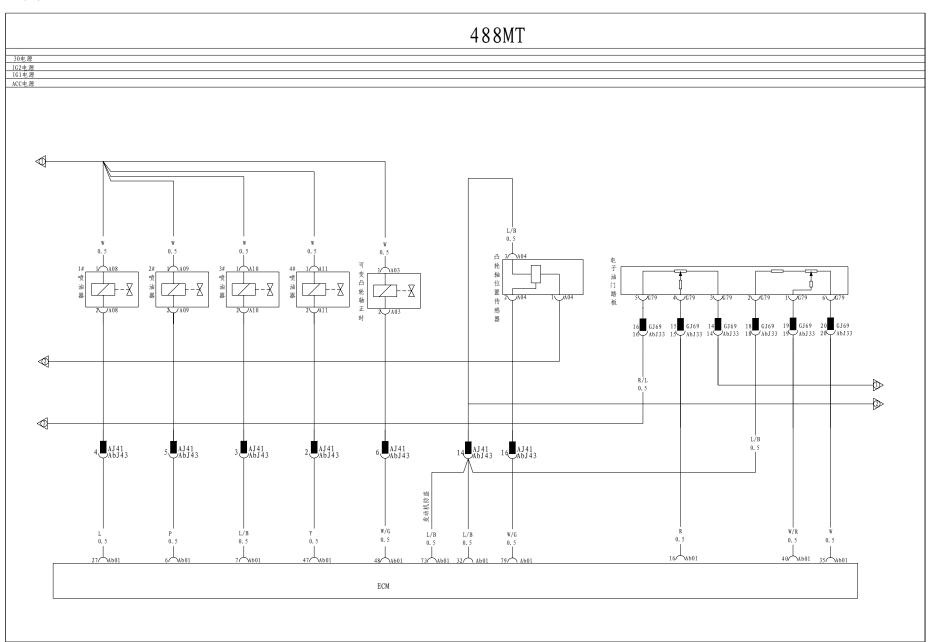


34.3、488MT(3)

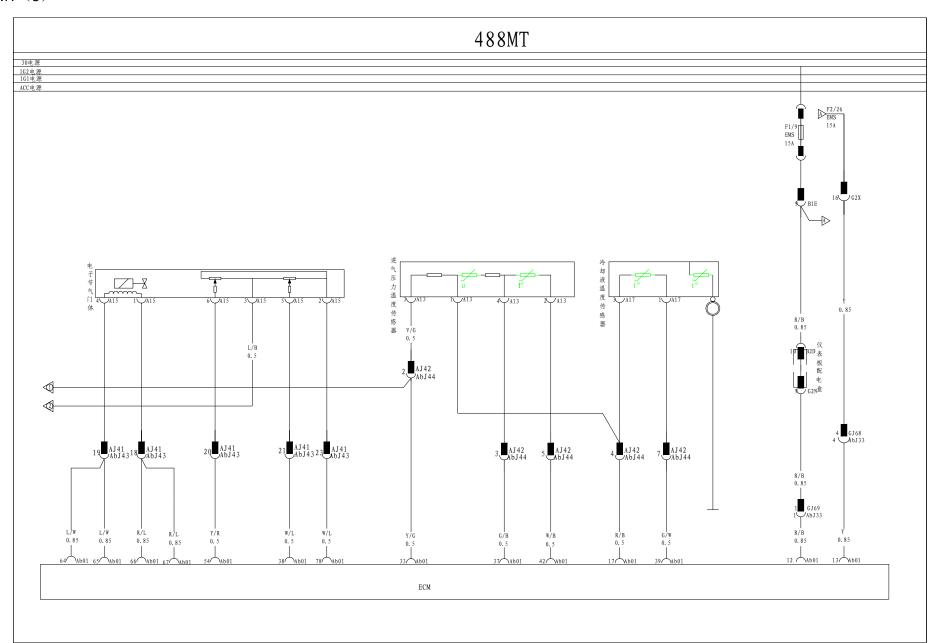


34.4、488MT(4)

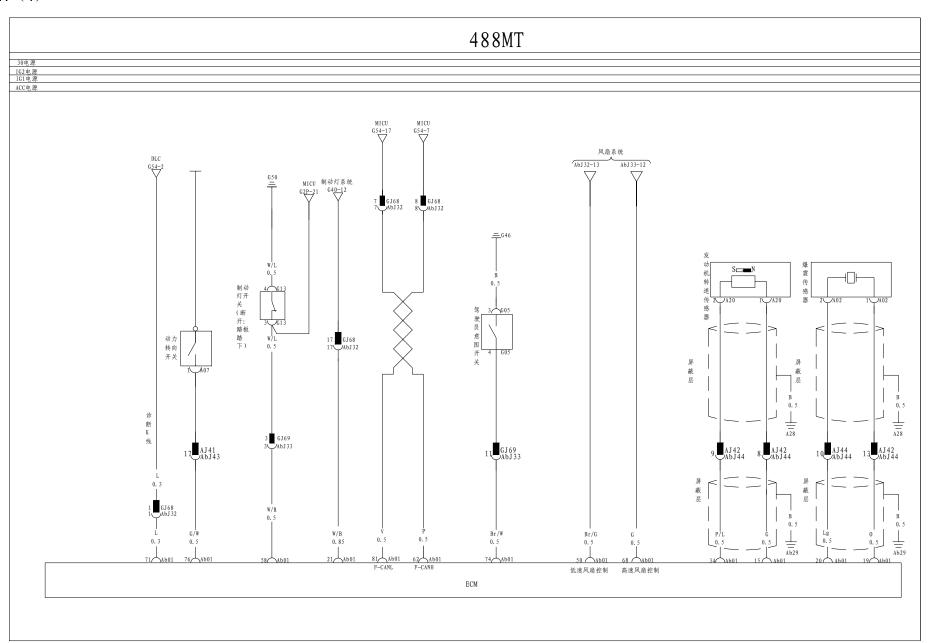


34.5、488MT (5)

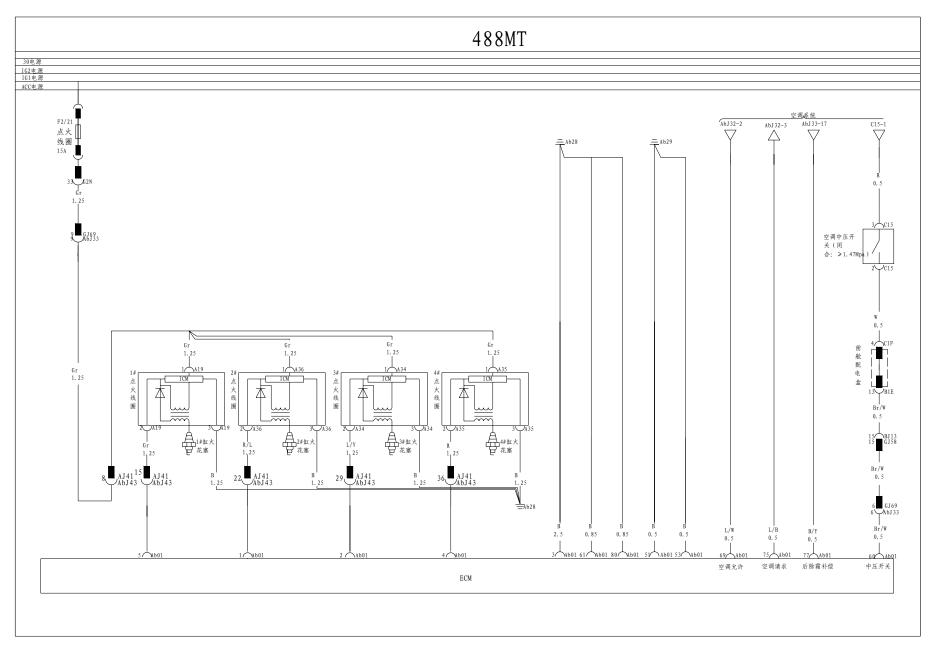


35.1、488DCT (1)

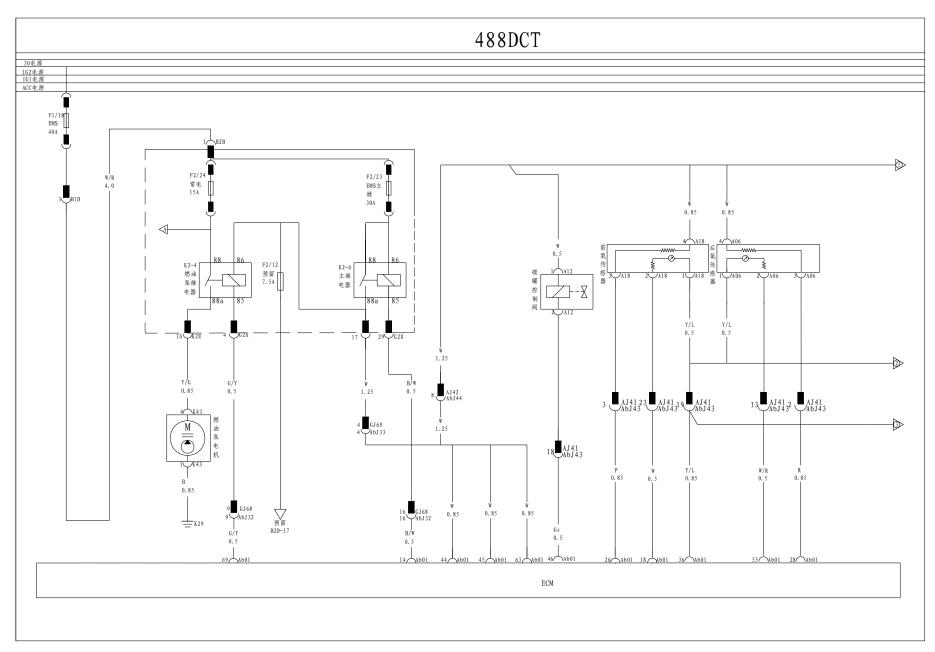


35.2、488DCT (2)

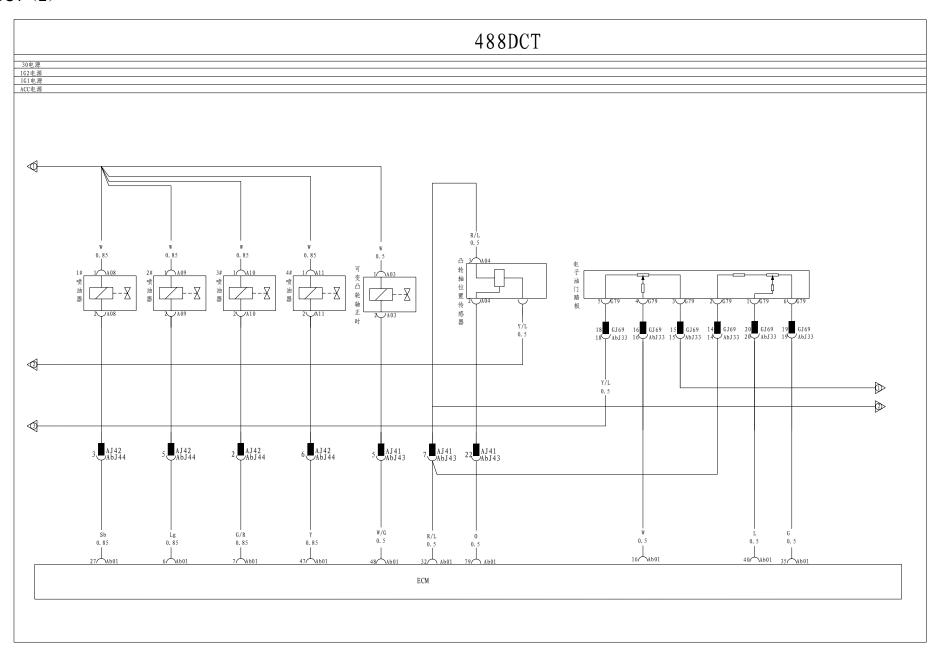


35.3、488DCT (3)

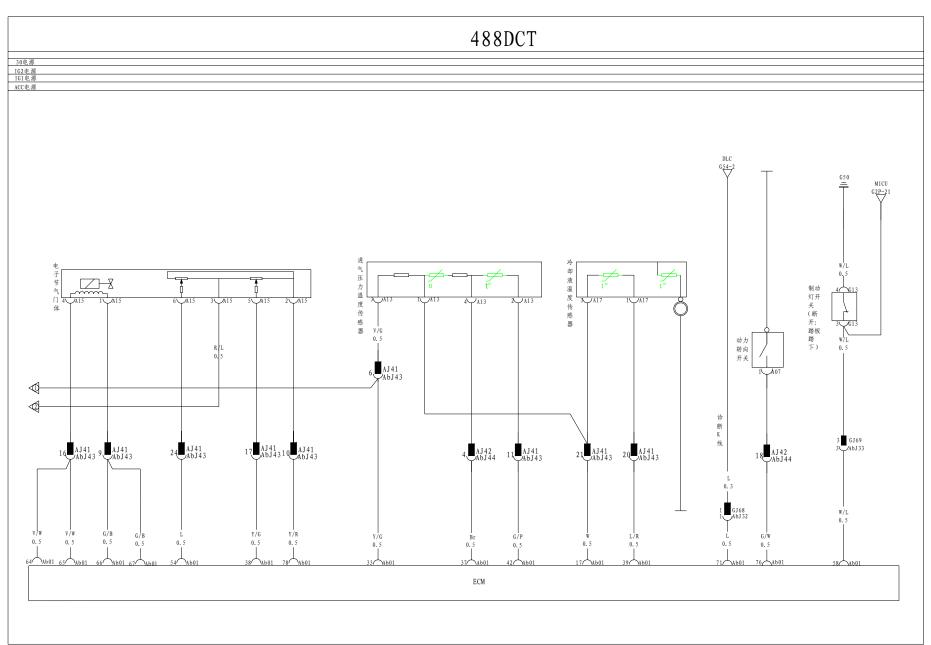


35.4、488DCT (4)

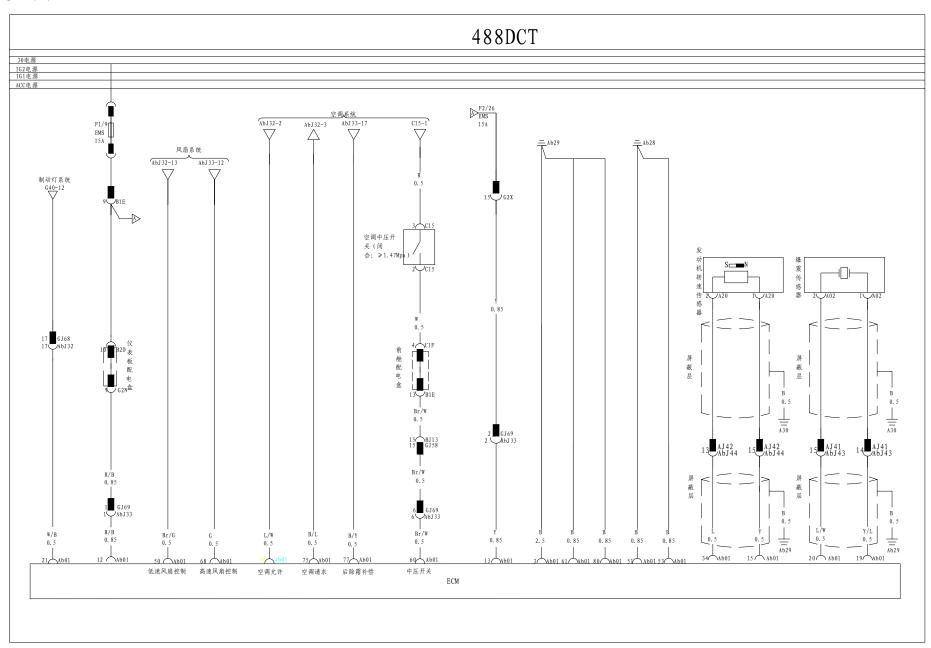


35.5、488DCT (5)

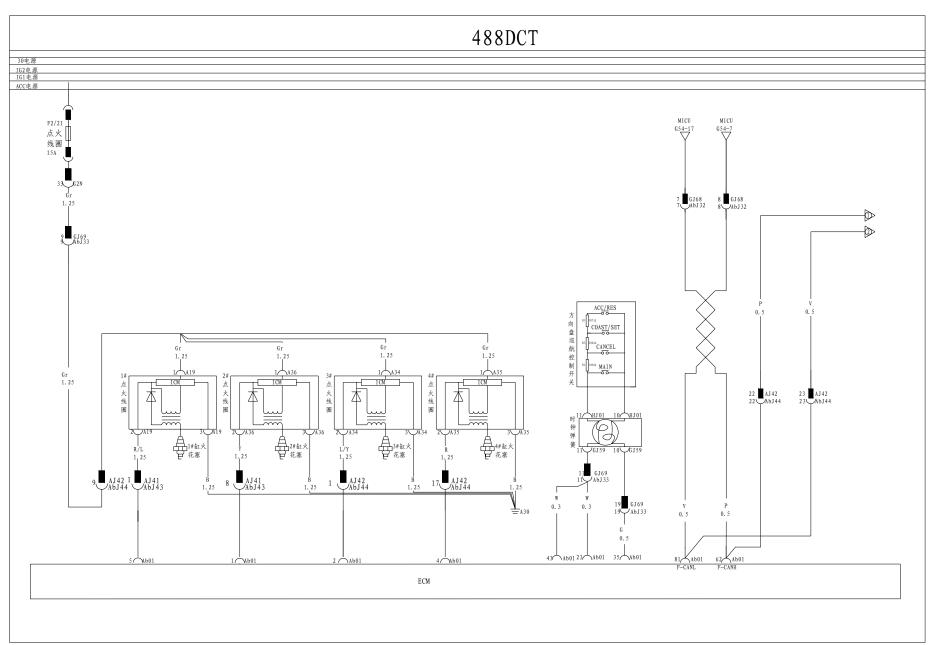


35.6、488DCT (6)

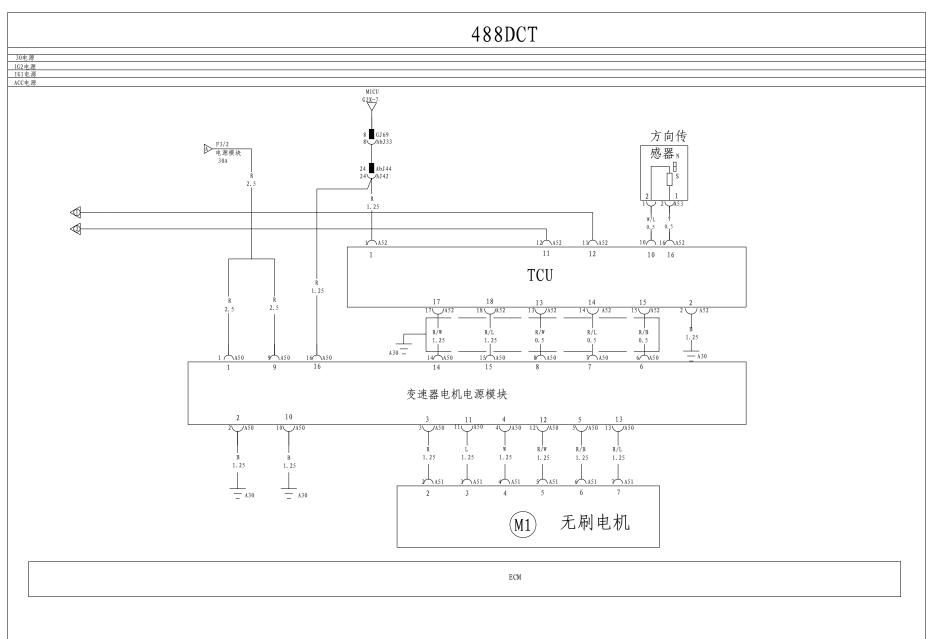


35.7、488DCT (7)

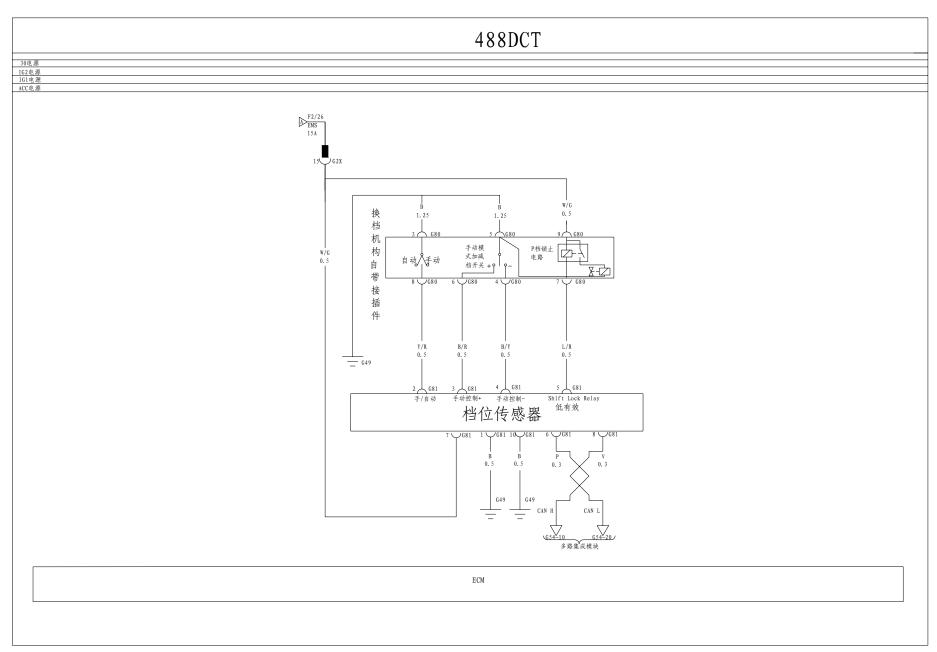


36.1、483QB+DCT (1)

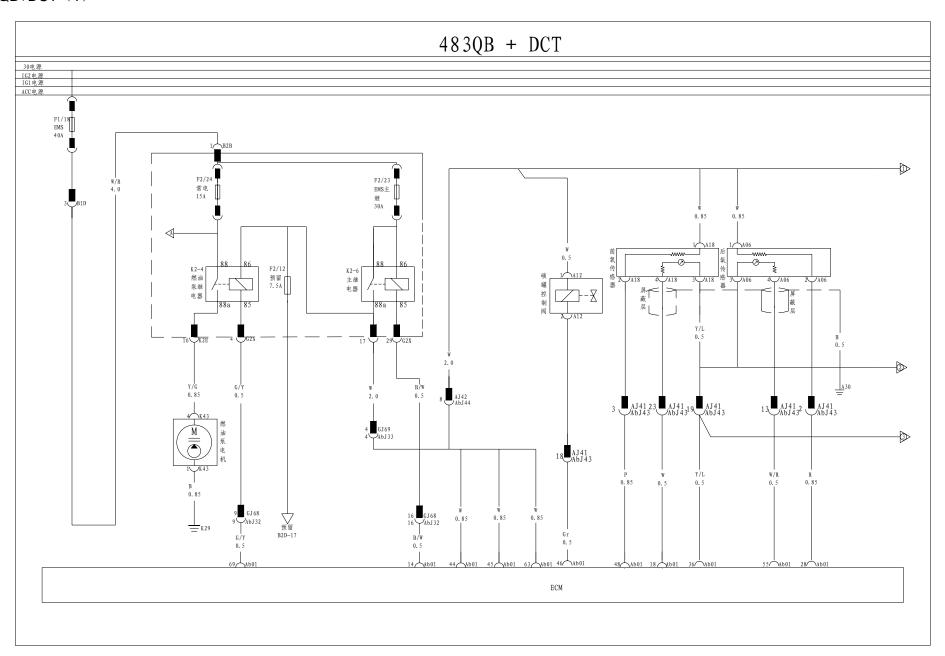


36.2、483QB+DCT (2)

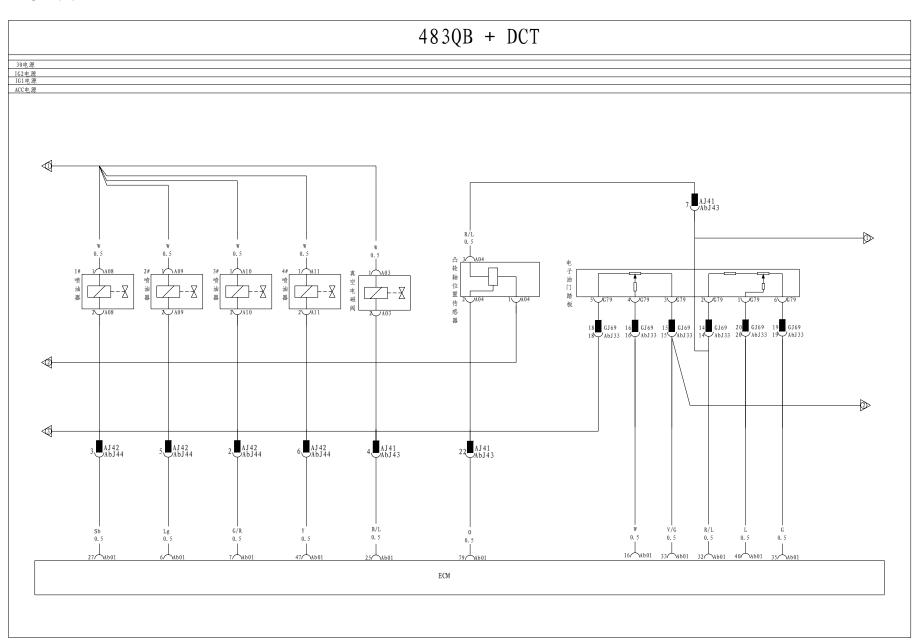


36.3、483QB+DCT (3)

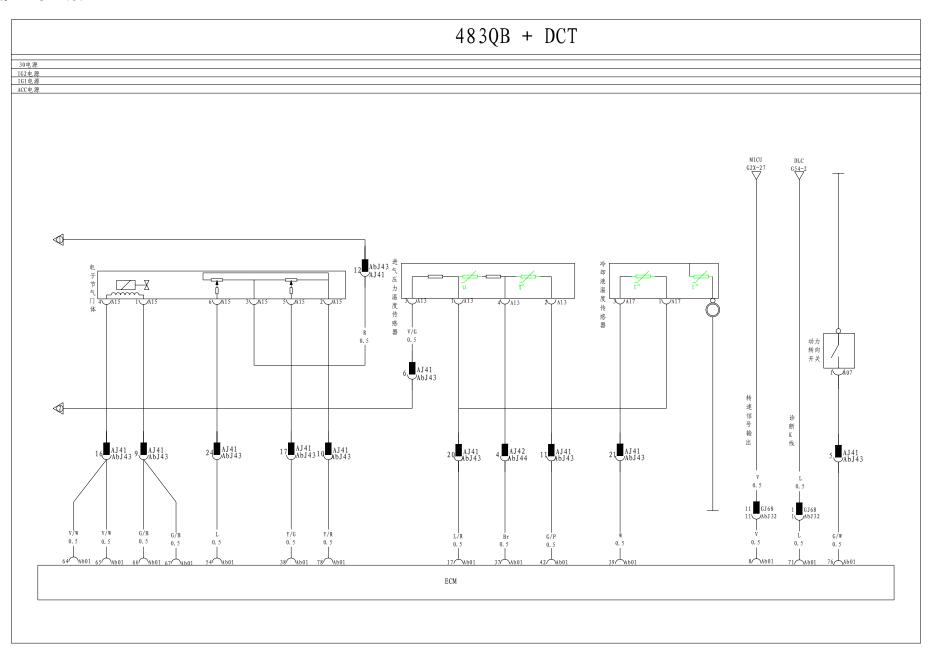


36.4、483QB+DCT (4)

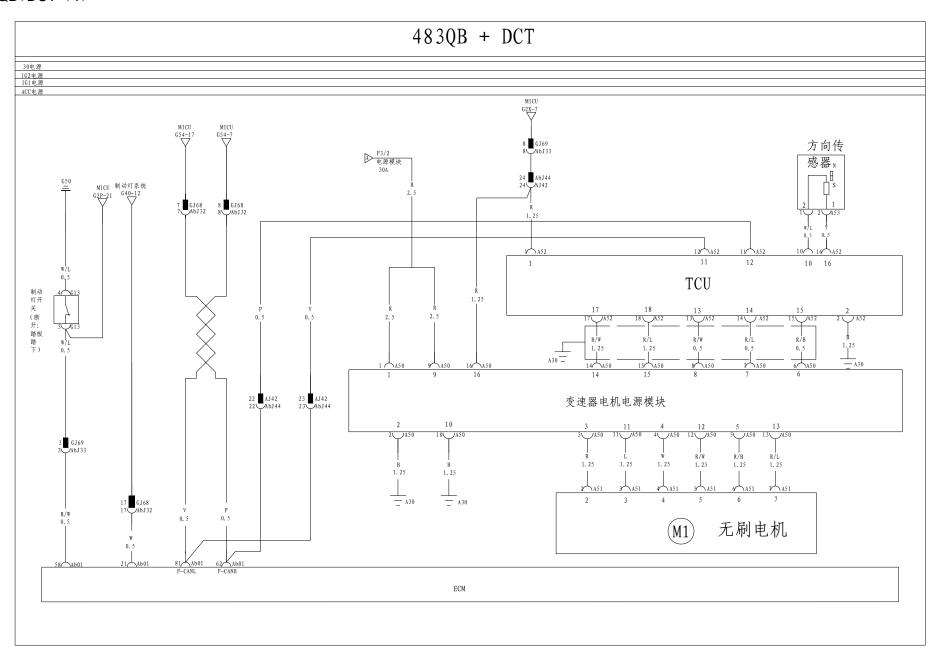

36.5、483QB+DCT (5)

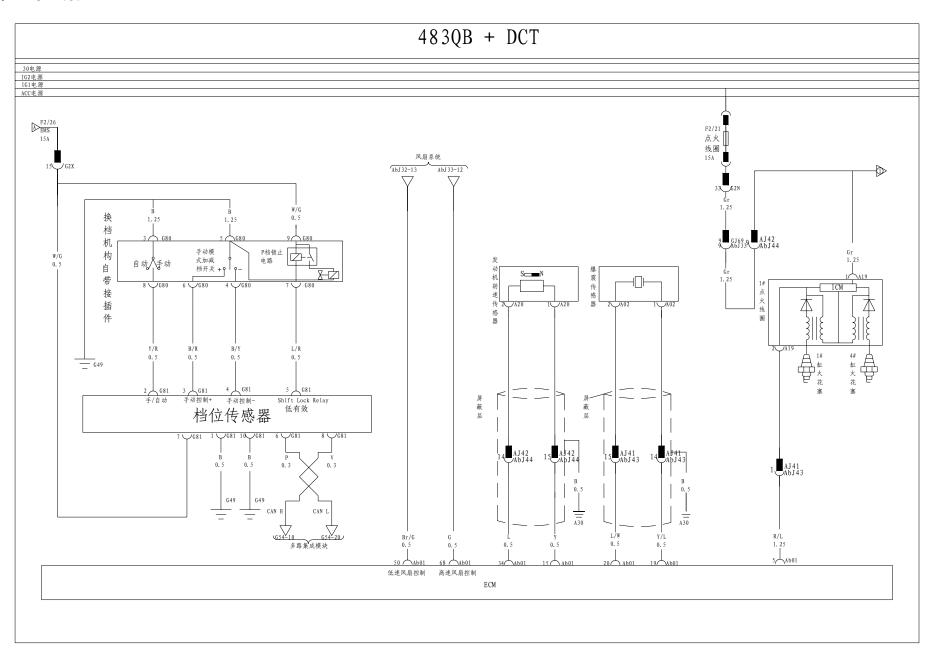

36.6、483QB+DCT (6)

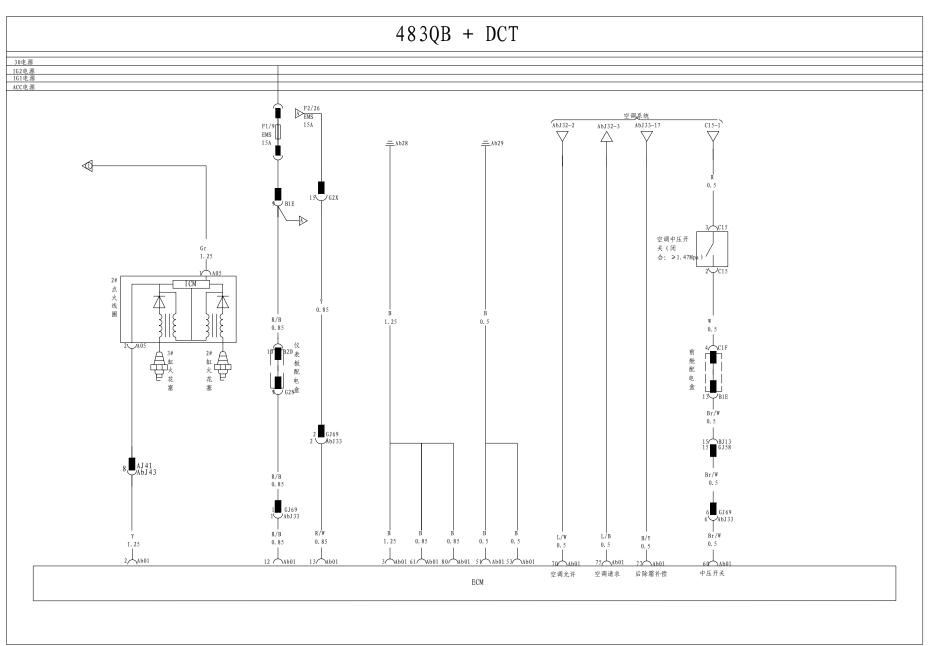

配置表

配置	483 (=	非DCT)	4G69电	. 喷系	克 耳	尊贵型			旗舰型			483DCT		488MT		488DCT		
代号	1*		2*		3+	3*		4*			5*		6*		7*			
线色标	准																	
代码	В	L	Br	G	Gr	Lg		0	P		R	V	W	,	Y			
颜色	黑蓝		棕	绿	灰	嫩绿		登黄	粉红		红 紫		白 j		븇			
继电器	E-																	
编号	K1-1 K1-		2 K1	-3	K1-4		K1-		-5									
规格	30A 30A		21)A	20A		20A											
说明 前鼓风机 后除霜压缩机高速散热风扇 高速冷凝风扇																		
编号	K2-1	1 K2-2 K2		3 K2-4		K2-5		K2-6		K2	K2-7 K2-							
规格	30A	30A	20A	3 ()A	20A		2 0 A		21	2 0 A							
说明	明 ETV电机 AT 点烟器主继电器电动车窗 燃油泵 起动机 闪光																	
编号	KC-1 KC-2		K	KG-5		KG-4 K		C-4 KC-		3	KG-6		KG-7 KG-1		KG-2	KG-3		
规格	20A 20A		- :	20A	20A		20A		20A		20A		30A		20A	50A	20A	
说明	说明 前雾灯低速风			右转向灯 左		转向灯 🗈		[留 后洗涤		器	器 座椅加热		后鼓风机		ACC	IG1	IG3	
熔断器																		
编号	F1/1	F1/1 F1/		F1/3		F1/4		1/5	F1/6	/6 F1		F1/8	F1/9	F1/10		F1/11		
規格	10A			10A		10A		30A	15A	_		7.5A 20A		15A 30				
说明	右远光灯 左远光灯 左近光			5灯 オ	古近光》	1 1	預留 小灯			MCU 前雾火		EMS	低速风扇		高速风崩			
编号	F1/12	F1/13	F1/1	4 F1/	15	F1/16	F	1/17	F1/1	8 F	1/19	F1/	20	F	1/21	F1/	22-1	
规格	7.5A	15A 15A		40/			25A		40A		40A	40A		40A		12	120A	
说明 压缩机转向灯制动灯后除霜					霜 F2.	/1 ^{F2} /	6	ABS	EMS		ABS F2/7		F2/11 前並		支风机	1机 主保险		
编号	F1/22-	-2 F	1/23-1	. F1	/23-2	2	Т			Т								
规格	7 0 A		50A		50A		T			Τ				İ				
说明	预留	F2/	5 F2,	19 点	火开乡	ŧ												

 編号
 F2/1
 F2/2
 F2/3
 F2/4
 F2/5
 F2/6
 F2/7
 F2/8
 F2/9
 F2/10
 F2/11

 規格
 20A
 7.5A
 10A
 15A
 15A
 7.5A
 20A
 25A
 30A
 20A
 20A

 说明
 门锁电机 室内灯
 MICU
 音响
 点烟器 尼雾灯
 座椅加热
 左前座椅
 預留
 預留
 左前腰掌

 編号
 F2/12
 F2/13
 F2/14
 F2/15
 F2/16
 F2/17
 F2/18
 F2/19
 F2/20
 F2/21

 規格
 7.5A
 7.5A
 10A
 20A
 20A
 20A
 20A
 20A
 7.5A
 15A

 说明
 预留
 转向轴锁
 1G2
 天窗
 左前窗电机
 右后电动窗右后电动窗左后电动窗
 ACC
 点火线圈

SRS 前雨刮

编号 F3/1 F3/2 F3/3 F3/4 规格 50A 30A 125A 70A 说明 预留 电源模块主保险 预留