



FLOOR READY SPECS **BOTTOMS**

Size	Presentation		Garment Styles
	Type	Specification	
Mens, Womens, Womens Plus, Kids, Infants and Toddlers	Hanging	Open/Forward	Pants and Shorts

Ticket Placement



Target Owned Brand hangtag attachment type, color, and length may vary, consult the Print Brand Specifications document (PBS) for direction. For assembly of multiple hangtags, please reference the packaging file released by the separator. You may also reference the order codes on TOBP.

Attach ticket through the seam on wearer's left side at waistband using a 1"-3" clear swift-attachment.


Additional trims when required:

- **Pocket flasher** - Insert and attach in wearer's right back pocket.
- **Matchbook**
 - **Womens, Womens Plus Denim** – Attach over waistband above wearer's left front pocket
 - **Mens Denim, Womens and Womens Plus Non-Denim** - Attach over waistband above wearer's right back pocket
 - **Kids, Infants and Toddlers** – Attach over waistband above wearer's left front pocket. Waistband with adjustable buttonhole elastic; add tack below waistband seam and avoid tacking the elastic.


NOTE: If feature sticker is required, consult merchant for placement. If it does not adhere to finish or print, consult merchant for direction.

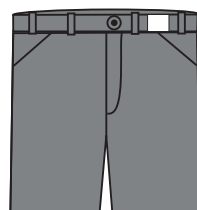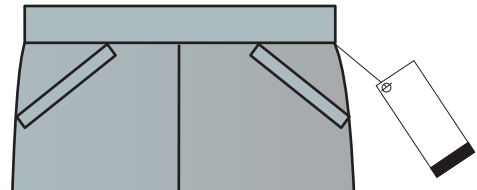

WOMENS, WOMENS PLUS DENIM - Front

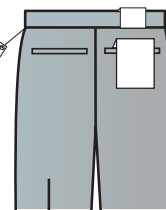


MENS DENIM, WOMENS, WOMENS PLUS NON-DENIM - BACK

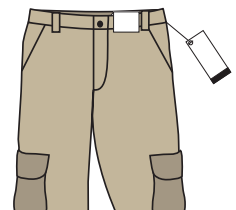

KIDS, INFANTS AND TODDLERS - FRONT

Hanger and Presentation Requirements

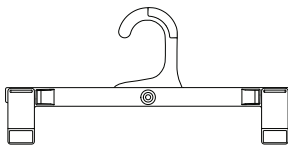

B14C, B12C, B10MC, B8MC

Style

B14C

Used for:

Mens Big & Tall and Womens Plus pants and shorts

B12C

Mens and Womens pants and shorts

B10MC


Kids pants and shorts

B8MC


Infants and Toddlers pants and shorts

TCG5000

Size cap

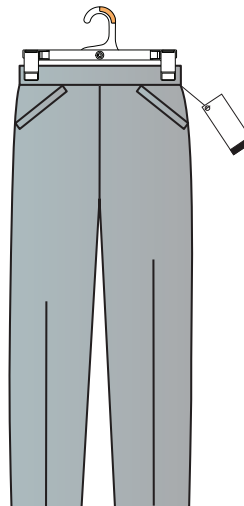

Mens Denim, Womens and Womens Plus Non Denim - FRONT

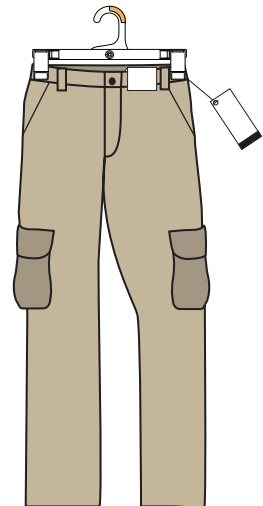

Womens, Womens Plus Denim KIDS - FRONT

- Center garment on hanger and clip to waistband.
- Hanger hook must open to the left.
- Buttons, zippers and snaps should be closed.
- Drawcords, belts and/or bows should be tied as specified by the merchant.

FOR PACKING DIRECTION SEE **PACKING AND POLYBAG REQUIREMENTS AND GUIDELINES**



FLOOR READY SPECS **BOTTOMS**

Size	Presentation		Garment Styles
	Type	Specification	
Mens, Womens, Womens Plus	Hanging	Open/Reverse	Pants and Shorts

Ticket Placement


Target Owned Brand hangtag attachment type, color, and length may vary, consult the Print Brand Specifications document (PBS) for direction. For assembly of multiple hangtags, please reference the packaging file released by the separator. You may also reference the order codes on TOBP.

Attach ticket through the seam on wearer's right side at waist-band using a 1"-3" clear swift-attachment.


Additional trims when required:

- **Pocket flasher** - Insert and attach in wearer's right back pocket.
- **Matchbook** - Consult merchant for placement direction.

NOTE: On most styles, the matchbook is applied at the waist above wearer's right back pocket.

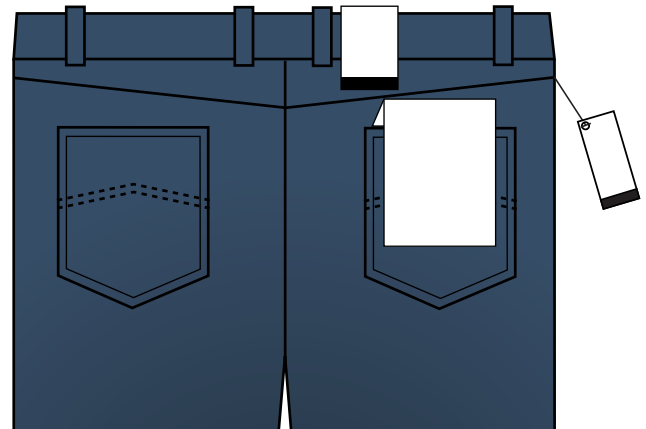

Hanger and Presentation Requirements

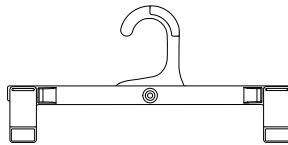

B14C, B12C

Style

B14C

Used for:


Mens Big & Tall and Womens Plus pants and shorts

B12C

Mens and Womens pants and shorts

TCG5000

Size cap

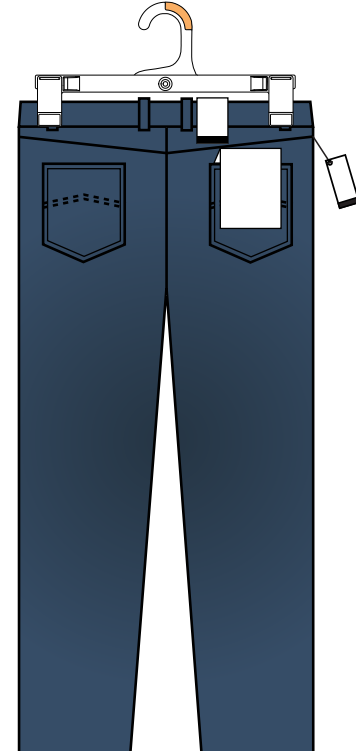

SIZE STRIP PLACEMENT:

Primary size strip placement: Wearer's left side at the fold

Secondary size strip placement: Wearer's right side at the fold

Tertiary placement: Horizontal placement above the graphic or embellishment

To maintain consistency, size strips should be placed in the same location for all items within the same shipment.

Please contact your buyer with any questions.

- Center garment on hanger and clip to waistband.
- Hanger hook must open to the left.
- Buttons, zippers and snaps should be closed.
- Drawcords, belts and/or bows should be tied as specified by the merchant.

FOR PACKING DIRECTION SEE [PACKING AND POLYBAG REQUIREMENTS AND GUIDELINES](#)



Size	Presentation		Garment Styles
	Type	Specification	
Mens, Womens, Womens Plus, Maternity, Kids, Infants and Toddlers	Hanging	Closed/Side – Right Facing	Pants and Shorts NOTE: Required hanging spec for all Maternity Pants and Shorts




Ticket Placement

Target Owned Brand hangtag attachment type, color, and length may vary, consult the Print Brand Specifications document (PBS) for direction. For assembly of multiple hangtags, please reference the packaging file released by the separator. You may also reference the order codes on TOBP.

Attach ticket through the seam on wearer's right side at waistband using a 1"-3" clear swift-attachment.

Additional trims when required:

- **Pocket flasher** - Attach in wearer's right back pocket.
- **Matchbook**
 - **Mens, Womens, Womens Plus, Kids, Infants and Toddlers** - Attach over waistband above wearer's right front pocket. Waistband with adjustable buttonhole elastic; add tack below waistband seam and avoid tacking the elastic.
 - **Maternity 3-N-1 Flex Panel** - Attach matchbook in center of wearer's right back pocket.
 - **Maternity Full, Belly and No Panel** - Attach over waistband above wearer's right front pocket.

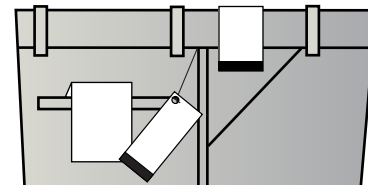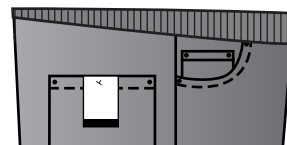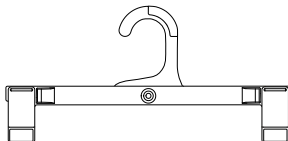Mens, Womens, Womens Plus, Kids, Infants and Toddlers**Maternity****3-N-1 FLEX PANEL****FULL, BELLY AND NO PANEL****Hanger and Presentation Requirements****B14C, B12C, B10MC, B8MC****Style #****B14C****Used for:**

Mens Big & Tall and Womens Plus pants and shorts

B12C

Mens and Womens and Maternity pants and shorts

B10MC

Kids pants and shorts

B8MC


Infants and Toddlers pants and shorts

TCG5000


Size cap

Mens, Womens, Womens Plus, Kids, Infants and Toddlers



- Fold pant to side, hang with wearer's right leg in front.
- Fly should be folded to the inside.
- Tuck back seam inside on Mens Big & Tall and Womens Plus.
- Center garment on hanger and clip to waistband.
- Hanger hook must open to the left.
- Buttons, zippers and snaps should be closed.
- Drawcords, belts and/or bows should be tied as specified by the merchant.

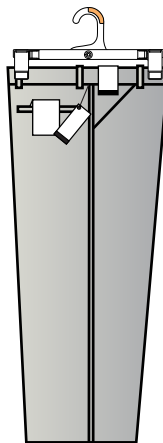**Maternity**

- Fold pant to side, hang with wearer's right leg in front.
- Fly should be folded to the inside. Do not tuck in back of pant, back seam must remain straight.
- Center garment on hanger and clip to waistband.
- Hanger hook must open to the left.
- Buttons, zippers and snaps should be closed.
- Drawcords, belts and/or bows should be tied as specified by the merchant.

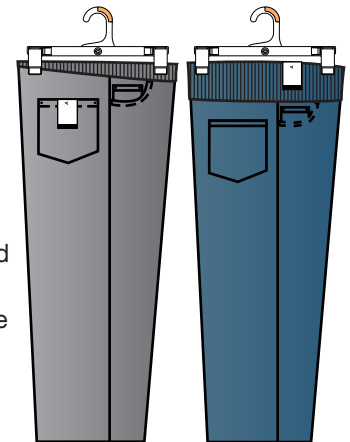**NOTE: 3-N-1 Flex Panel**

- Fold panel to back. Top edge of fold should be parallel with floor.

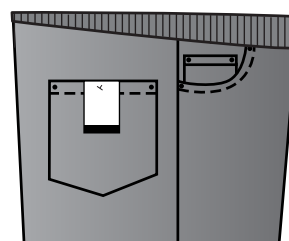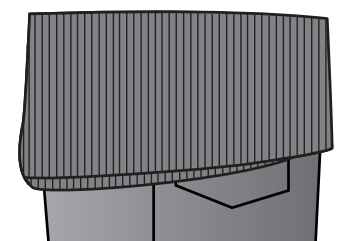**FRONT****BACK****FOR PACKING DIRECTION SEE PACKING AND POLYBAG REQUIREMENTS AND GUIDELINES**



FLOOR READY SPECS **BOTTOMS**


Size	Presentation		Garment Styles
	Type	Specification	
Kids, Infants and Toddlers	Hanging	Close/Side – Left Facing	Active Pants and Shorts

Ticket Placement


Target Owned Brand hangtag attachment type, color, and length may vary, consult the Print Brand Specifications document (PBS) for direction. For assembly of multiple hangtags, please reference the packaging file released by the separator. You may also reference the order codes on TOBP.

Attach ticket through the seam on wearer's left side at waistband using a 1"-3" clear swift-attachment.

NOTE: If feature sticker is required, consult merchant for placement. If it does not adhere to finish or print, consult merchant for direction.

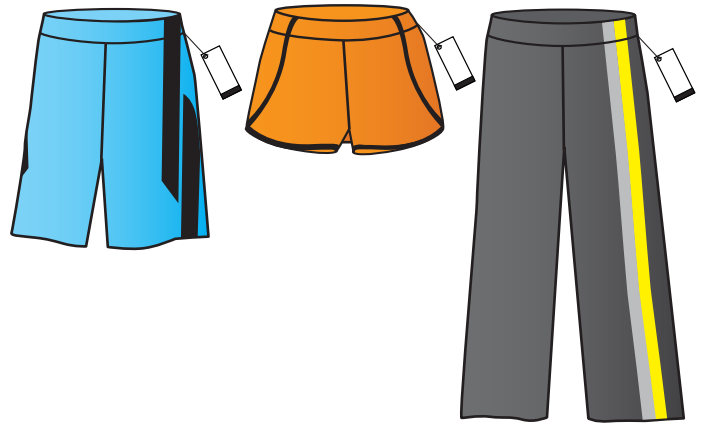

Hanger and Presentation Requirements

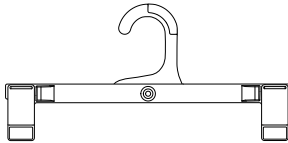

B10MC, B8MC

Style #
B10MC
B8MC
TCG5000

Used for:
Kids active pants and shorts
Infants and Toddlers active pants and shorts
Size cap



- Fold pant to side hang with wearer's left leg in front.
- Fly should be folded to the inside.
- Center garment on hanger and clip to waistband.
- Hanger hook must open to the left.
- Buttons, zippers and snaps should be closed.
- Drawcords should be tied as specified by the merchant.

FOR PACKING DIRECTION SEE **PACKING AND POLYBAG REQUIREMENTS AND GUIDELINES**



Size	Presentation		Garment Styles
	Type	Specification	
Mens, Womens	Folded	Rear Face – No Center Front Crease	Pants, Shorts and Skorts
Ticket Placement			


Target Owned Brand hangtag attachment type, color, and length may vary, consult the Print Brand Specifications document (PBS) for direction. For assembly of multiple hangtags, please reference the packaging file released by the separator. You may also reference the order codes on TOBP.

Attach matchbook ticket at waistband directly above wearer's right back pocket.

Additional trims when required:


- **Pocket flasher** - Insert and attach in wearer's right back pocket.
- **Hangtag**
 - **Womens** – Attach ticket through the seam on wearer's right side at waistband using a 1"-3" clear swift-attachment.
 - **Mens** – Attach through seam at waistband just left of belt loop and above wearer's right back pocket.
 - **Fleece/Knit Bottoms** – Attach ticket through seam on wearer's left side at waistband using a 1"-3" clear swift-attachment.

NOTE: If feature sticker is required, consult merchant for placement. If it does not adhere to finish or print, consult merchant for direction.

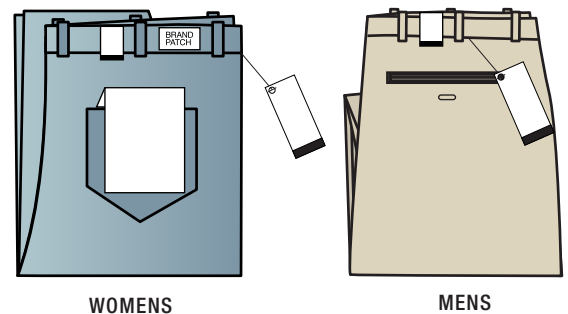


WOMENS

MENS

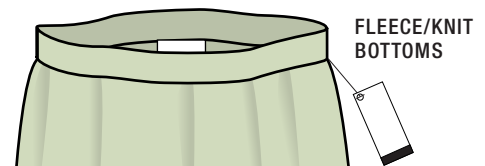

FLEECE/KNIT
BOTTOMS

Fold and Presentation Requirements

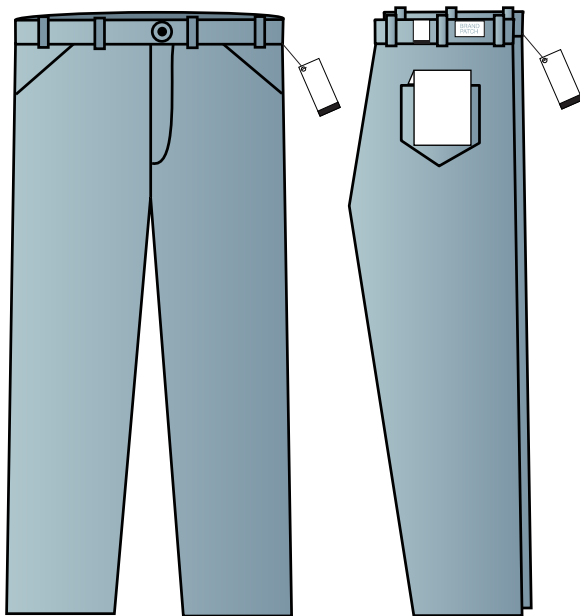

WOMENS

MENS

FLEECE/KNIT
BOTTOMS

- Lay pant flat and face up.
- Buttons, zippers and snaps should be closed.
- Drawcords should be tied as specified by the merchant.
- Fold in half widthwise, wearer's right leg over left.

NOTE: Folded width cannot exceed 13". If wider, fold rise to the back until maximum width of 13" is achieved.

- Size strips are required. **EXCEPTION:** Corduroy and velour fabrics.
- Place size strip on back of wearer's right leg and visible around the front folded edge. If cargo style, move size strip to right center of back pocket.

Final Fold

Mens and Womens Pants – Quarter-Fold

- Fold in half lengthwise bringing hems to waistband, then fold in half again to complete quarter-fold.

Mens and Womens Shorts - Half-Fold

- Fold in half lengthwise bringing hems to meet waistband and completing half-fold.

Lorem ipsum

FOR PACKING DIRECTION SEE **PACKING AND POLYBAG REQUIREMENTS AND GUIDELINES**



Size	Presentation		Garment Styles
	Type	Specification	
Mens, Womens, Maternity, Kids, Infants and Toddlers	Folded	Front Face - No Center Front Crease	Pants and Shorts, Skorts and Skirts

Ticket Placement


Target Owned Brand hangtag attachment type, color, and length may vary, consult the Print Brand Specifications document (PBS) for direction. For assembly of multiple hangtags, please reference the packaging file released by the separator. You may also reference the order codes on TOBP.

Attach ticket through the seam on wearer's left side at waistband using a 1"-3" clear swift-attachment.

Additional trims when required:• **Matchbook**


- **Womens** – Attach over waistband above wearer's left back pocket.
- **Kids, Infants and Toddlers** – Attach over waistband above wearer's left front pocket. Waistband with adjustable buttonhole elastic; add tack below waistband seam and avoid tacking the elastic.
- **Mens** – Consult merchant for placement.

NOTE: If feature sticker is required, consult merchant for placement. If it does not adhere to finish or print, consult merchant for direction.


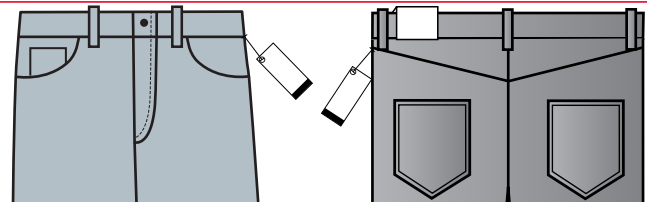


WOMENS FRONT

WOMENS BACK

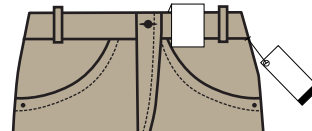

KIDS, INFANTS AND TODDLERS FRONT

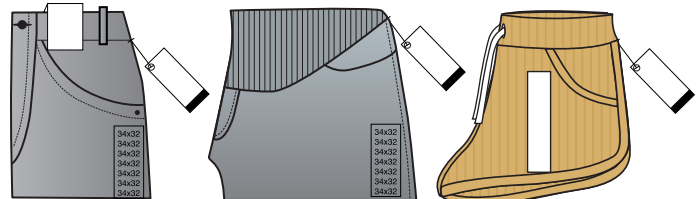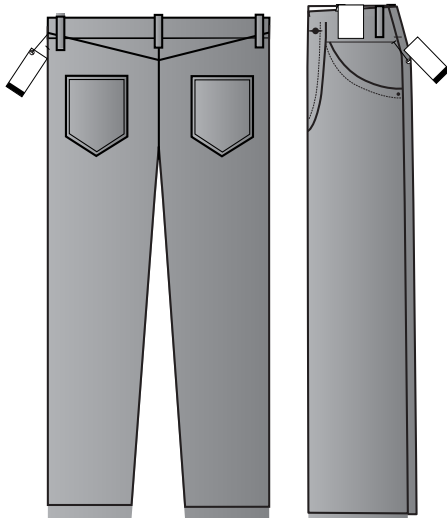Fold and Presentation Requirements

MATERNITY W/OVER THE BELLY PANEL



GIRLS AND INFANT/TODDLER SHORTS

- Lay pant flat and reverse side up.

NOTE: Maternity w/Over The Belly Panel – Tuck panel inside pant before folding.

- Buttons, zippers and snaps should be closed.
- Drawcords, belts and/or bows should be tied as specified by the merchant.
- Fold in half widthwise, wearer's left leg over right.

NOTE: Folded width cannot exceed 13". If wider, fold rise and inside leg seam to the inside until maximum width of 13" is achieved.

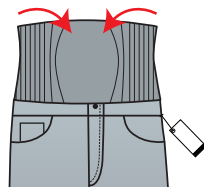

MATERNITY W/ OVER THE BELLY PANEL

- Size strips are required. **EXCEPTION:** Corduroy and velour fabrics.
- Place size strip on front of wearer's left leg, parallel with the left side seam and visible around the front folded edge.
 - **Girls Skorts and Infant and Toddlers Shorts, Skirts and Skorts** – Place size strip directly on front of wearer's left leg parallel with side seam since there is no front folded edge.

Final Fold

- **Mens and Womens Pants** – Quarter-Fold: Fold in half lengthwise bringing hems to waistband, then fold in half again to complete quarter-fold.
- **Maternity Pants:** Fold in half lengthwise bringing hems just below front pocket, then fold in half again to complete fold.
- **Kids Pants – Tri-Fold:** Fold lengthwise bringing hems toward waistband by a third, then fold lengthwise again to complete tri-fold.
- **Mens Shorts, Womens /Girls Bermudas, Infants and Toddlers Pants - Half-Fold:** Fold in half lengthwise bringing hems to meet waistband and completing half-fold.
- **Girls and Infants and Toddlers Shorts and Skorts - Flat:** Fold in half widthwise, wearer's left leg over right and stop.

FOR PACKING DIRECTION SEE **PACKING AND POLYBAG REQUIREMENTS AND GUIDELINES**



Size	Presentation		Garment Styles
	Type	Specification	
Mens, Womens, Womens Plus, Boys, Infants and Toddlers	Folded	Closed/Side – Center Front Crease	Pants and Shorts, NOTE: Required folding spec for all Womens Plus Pants and Shorts

Ticket Placement



Target Owned Brand hangtag attachment type, color, and length may vary, consult the Print Brand Specifications document (PBS) for direction. For assembly of multiple hangtags, please reference the packaging file released by the separator. You may also reference the order codes on TOBP.

Attach matchbook ticket at waistband directly above wearer's right front pocket.

Additional trims when required:


- **Pocket flasher** - Insert and attach in wearer's right back pocket.

NOTE: If feature sticker is required, consult merchant for placement. If it does not adhere to finish or print, consult merchant for direction.

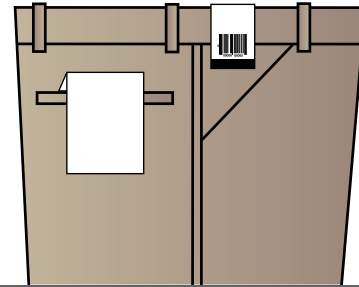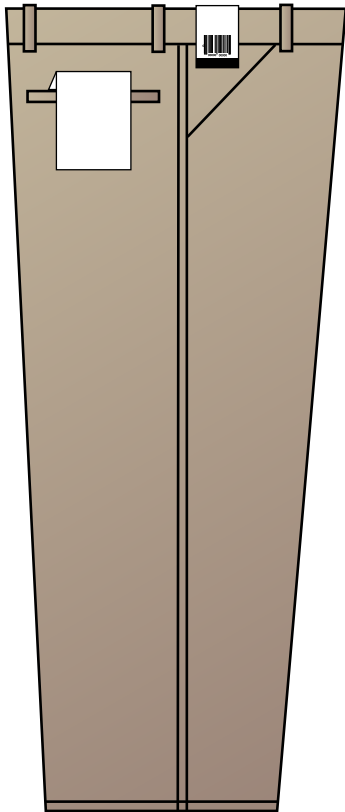**Fold and Presentation Requirements**

- Fold pant sideways with wearer's right leg in front.
- Buttons, zippers and snaps should be closed.
- Drawcords, belts and/or bows should be tied as specified by the merchant.
- Fly should be folded to the inside.

NOTE: Folded width cannot exceed 13". If wider, tuck fly in further until maximum width of 13" is achieved.

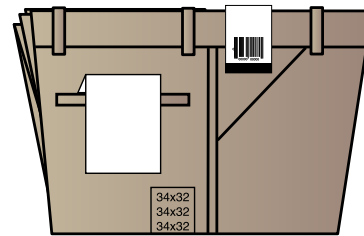

- Size strips are required. **EXCEPTION:** Corduroy and velour fabrics.
- Place size strip on back of wearer's right leg, parallel with the right side seam and visible around the front folded edge.
 - **Infants and Toddlers Shorts** – Place size strip directly on back of wearer's right leg left and parallel with the side seam since there is no front folded edge.

Final Fold**Mens, Womens and Womens Plus Pants – Quarter-Fold**

- Fold in half lengthwise bringing hems to waistband, then fold in half again to complete quarter-fold.

Boys Pants – Tri-Fold

- Fold lengthwise bringing hems toward waistband by a third, then fold lengthwise again to complete tri-fold.

Mens, Womens and Boys Shorts, Infants and Toddlers Pants – Half-Fold

- Fold in half lengthwise bringing hems to meet waistband and completing half-fold.

Infants and Toddlers Shorts and Skorts - Flat

- Fold in half widthwise, wearer's right leg over left and stop.



Size	Presentation		Garment Styles
	Type	Specification	
Kids	Folded	Front Facing – 10"L Rise Out	Shorts, including all knit and woven

Ticket Placement

Target Owned Brand hangtag attachment type, color, and length may vary, consult the Print Brand Specifications document (PBS) for direction. For assembly of multiple hangtags, please reference the packaging file released by the separator. You may also reference the order codes on TOBP.


Attach ticket through seam on wearer's left side at the waistband using a 1"-3" clear swift-attachment.

If required, attach matchbook above the wearer's left front pocket using thread or plastic staple. Waistband with adjustable buttonhole elastic; add tack below waistband seam and avoid tacking the elastic.

NOTE: If feature sticker is required, consult merchant for placement. If it does not adhere due to finish or print, consult merchant for direction.

**Fold and Presentation Requirements**

- Close all buttons, snaps and zippers.
- Lay shorts face down.
- Fold in half widthwise, back of wearer's left over right. Back of legs will be together.
- Pant rise must be pulled to the front.

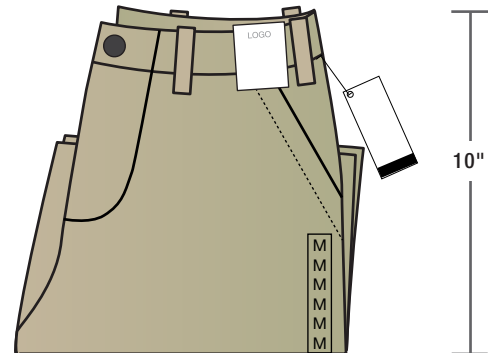

- Fold bottom of pant leg to the back to achieve a final finished length of 10". Length is measured from the highest point on the waistband to the fold.
- Size strips are required. Apply upper half of the size strip to the front of the wearer's left leg and lower half around the folded edge and onto the back, parallel with the left side seam.




FLOOR READY SPECS **BOTTOMS**

Size	Presentation		Garment Styles
	Type	Specification	
Girls and Toddler Girls	Folded	Knee Graphic	Leggings w/knee graphic

Ticket Placement


Target Owned Brand hangtag attachment type, color, and length may vary, consult the Print Brand Specifications document (PBS) for direction. For assembly of multiple hangtags, please reference the packaging file released by the separator. You may also reference the order codes on TOBP.

Attach ticket through rise seam in back of pant just below waistband using a 3" clear swift-attachment.

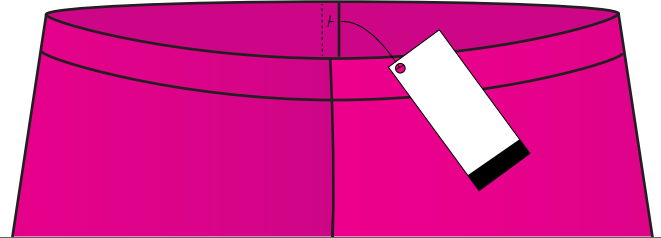

Fold and Presentation Requirements


Girls Leggings – Tri-Fold

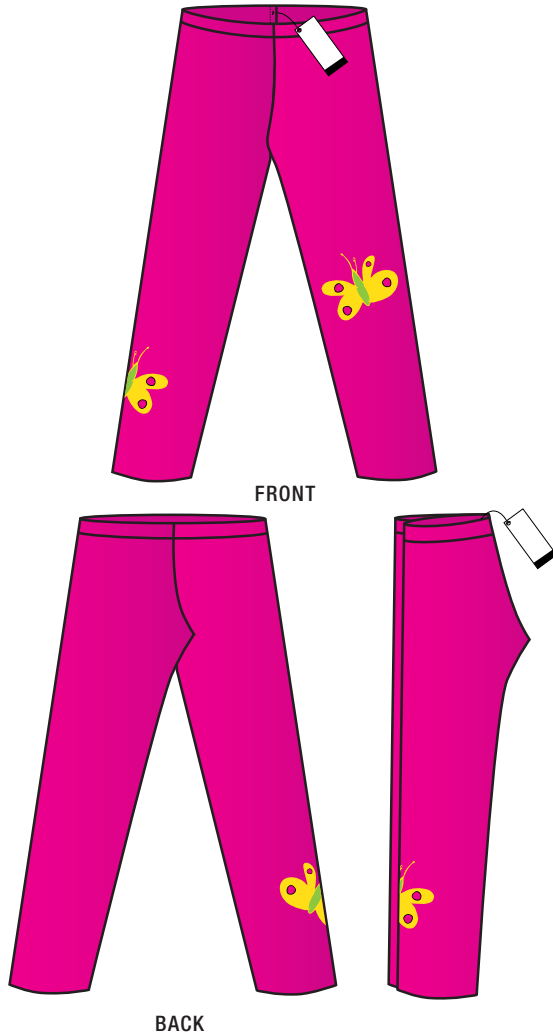

- Fold pant leg in thirds. Start by folding hem up to waistband by a third, then fold waistband down to meet folded edge.
- Turn pant over and then around so rise is now at the bottom right in the final store presentation.
- Apply size strip along leg seam and around front folded edge.

NOTE: If feature sticker is required, consult merchant for placement. If it does not adhere to finish or print, consult merchant.

Toddlers Leggings – Half-Fold

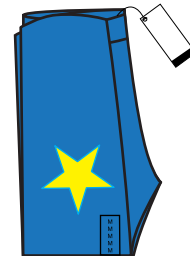

- Lay pant flat and reverse side up.
- Fold in half widthwise, wearer's right leg over left.
- Pull rise to the front. Front of wearer's right leg will be on top.

- Fold pant in half lengthwise bringing hem to top of waistband.
- Apply size strip along edge of pant leg and around front folded edge.

FOR PACKING DIRECTION SEE **PACKING AND POLYBAG REQUIREMENTS AND GUIDELINES**




FLOOR READY SPECS **BOTTOMS**

Size	Presentation		Garment Styles
	Type	Specification	
Girls and Toddler Girls	Folded	Hem or Calf Graphic	Leggings and capris w/hem or calf graphic


Ticket Placement

Target Owned Brand hangtag attachment type, color, and length may vary, consult the Print Brand Specifications document (PBS) for direction. For assembly of multiple hangtags, please reference the packaging file released by the separator. You may also reference the order codes on TOBP.


Attach ticket through rise seam in back of pant just below waistband using a 3" clear swift-attachment.

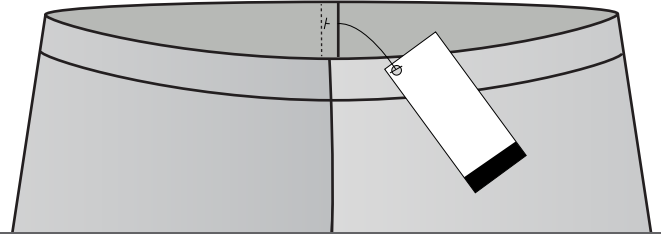

Fold and Presentation Requirements

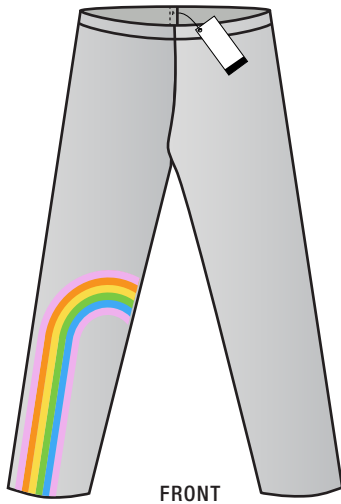


FRONT

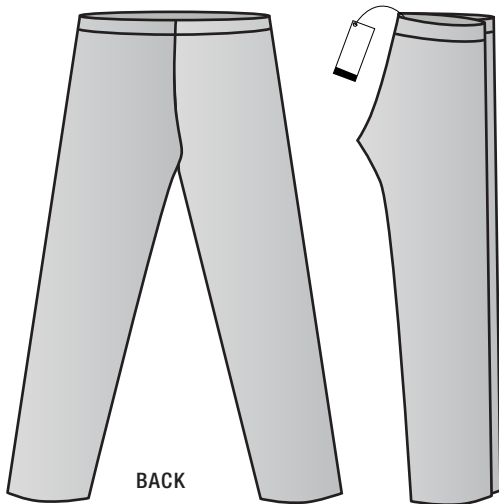

BACK


- Lay pant flat with back side up.
- Fold in half widthwise, wearer's left leg over right.
- Pull rise to the front. Front of wearer's left leg will be on top.

Girls Leggings – Tri-Fold

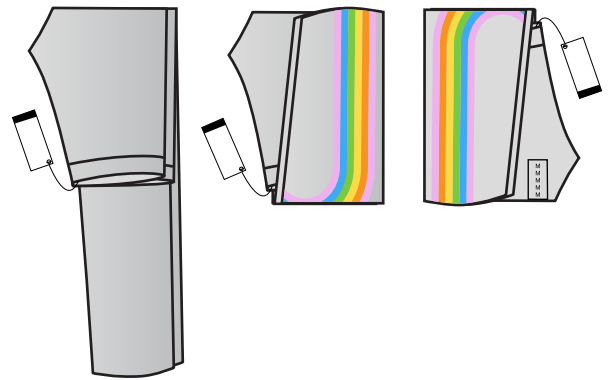

- Fold pant leg in thirds. Start by folding waistband down to hem by a third, then fold hem up to meet folded edge.
- Turn pant so rise is in the bottom right for final store presentation.
- Apply size strip left of rise and around front folded edge.

Girls Capris and Toddlers Leggings – Half-Fold

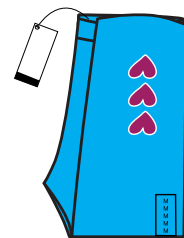

- Fold pant in half lengthwise bringing hem to top of waistband.
- Apply size strip along edge of pant leg and around front folded edge.

FOR PACKING DIRECTION SEE **PACKING AND POLYBAG REQUIREMENTS AND GUIDELINES**