


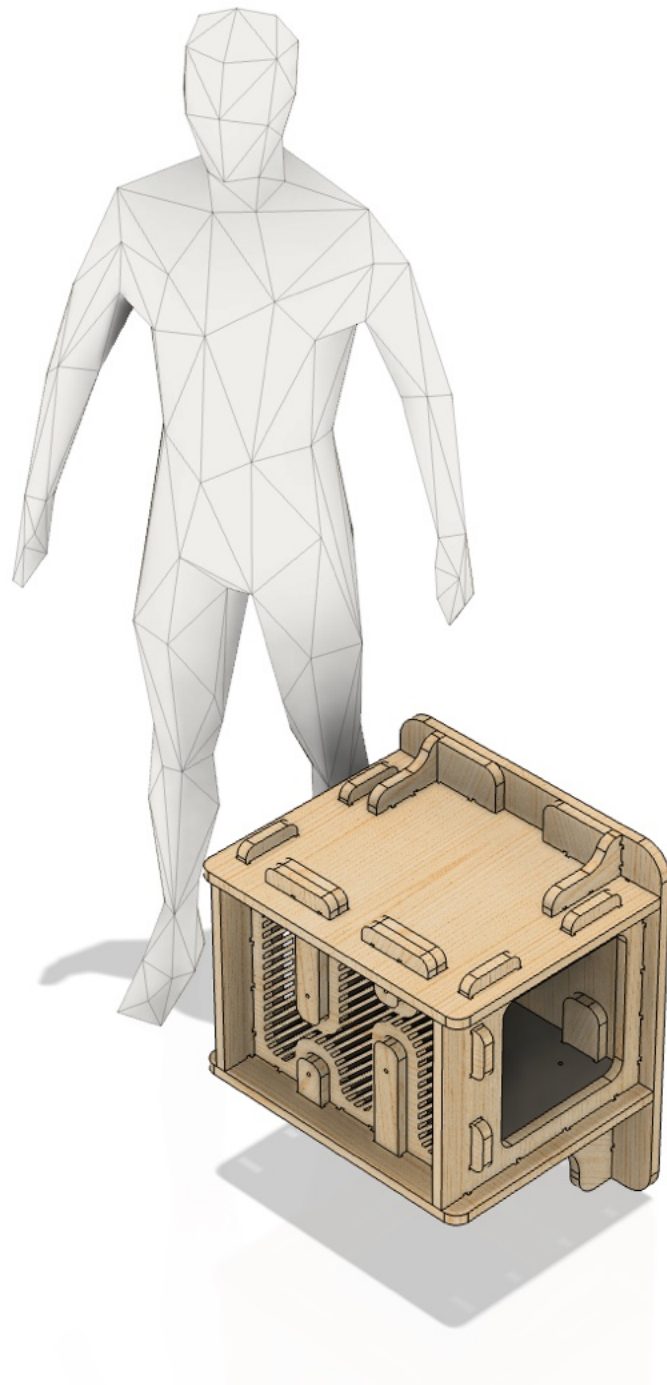

Diagonal Screen Nestbox Build Guide


Memphis Zoo

dbaldrige@memphiszoo.org

Parts:


$\frac{3}{4}$ " Parts:

Manufacturing note: All $\frac{3}{4}$ " thick parts were designed around through cuts with a $\frac{1}{4}$ " endmill on a CNC router. They are laid out in the provided .dxf files to fit on 2 4'x4' sheets.

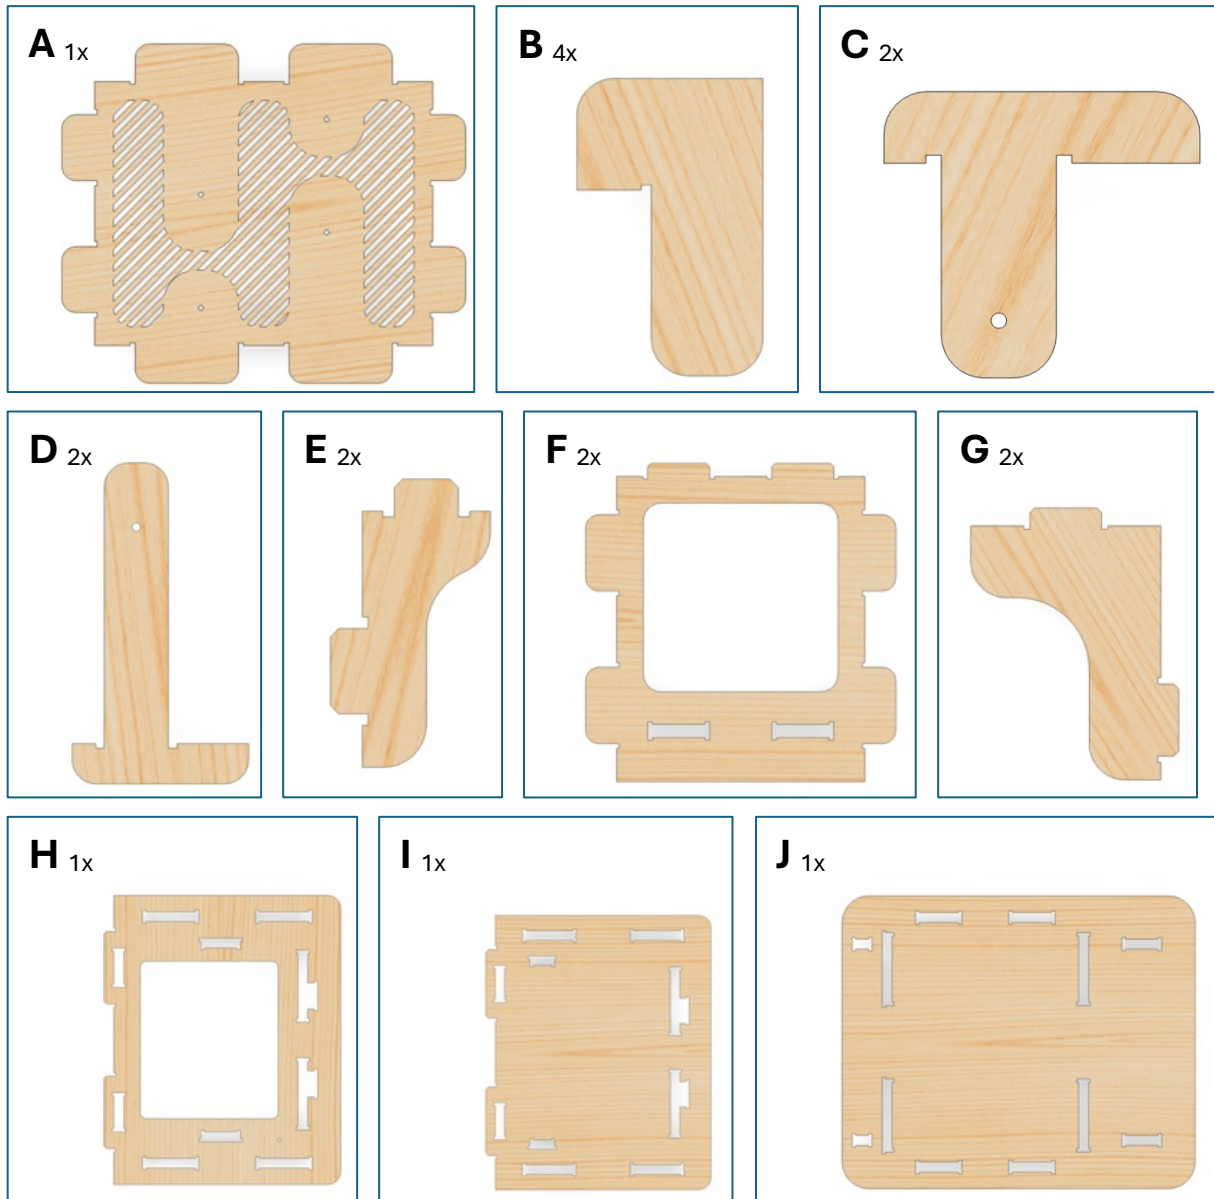


$\frac{1}{2}$ " Parts:

Manufacturing note: All $\frac{1}{2}$ " thick parts were designed around through cuts with a $\frac{1}{4}$ " endmill on a CNC router

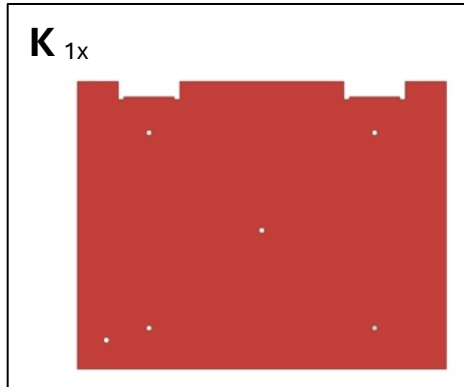

Assembly Guide:

Step 1:

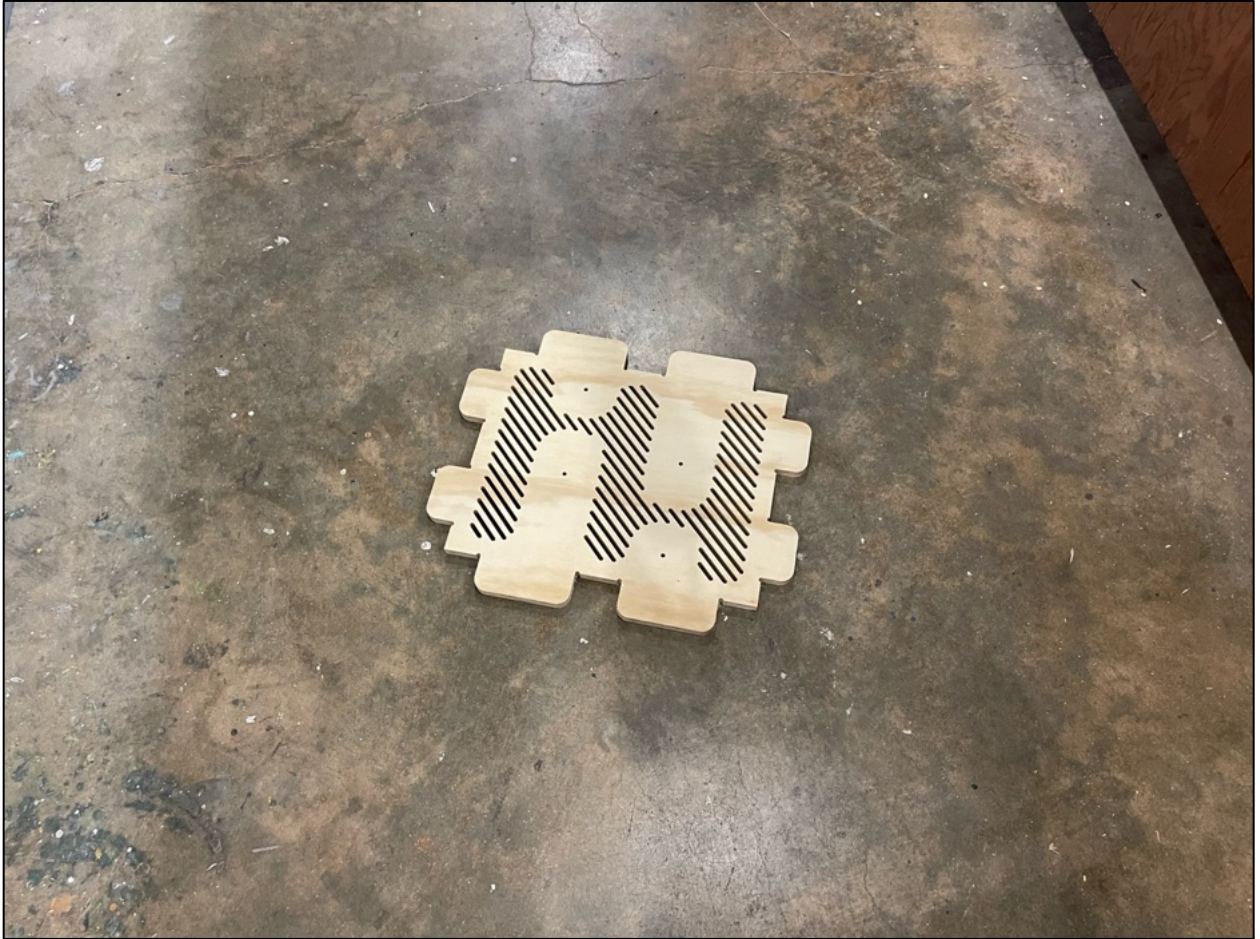

- Lay out part **A** to begin the assembly.

Step 2:



- Slot both instances of part **F** onto the sides of part **A**.

Step 3:



- Turn the assembly on its side and slot part **I** onto the fingers of parts **A** and both instances of part **F**.

Step 4:



- Turn the assembly so part **I** is facing down and slot part **H** onto the fingers of parts **A** and both instances of part **F**.

Step 5:



- Turn the assembly so part **A** is facing down and slot both instances of part **E** into part **I** and both instances of part **G** into part **H**.

Step 6:



- Put part **J** down on the assembly so that the fingers extending from parts **E**, **I**, **G**, and **H** slot into the relevant holes.

Step 7:




- Turn the assembly over and insert one instance of part **C** and one instance of part **D** into part **H** so their surfaces are parallel to part **A**.
- Do the same with the corresponding holes on part **I**.

Step 8:



- Insert two instances of part **B** into holes on part **I** so their surface is parallel to part **J** and perpendicular to part **E**.
- Do the same on with the other two instances of part **B** on part in the corresponding holes in part **H** by part **G**.
- Secure the front part of the assembly to part **J** using at least 6 wood screws through each instance of part **B**.

Step 9:

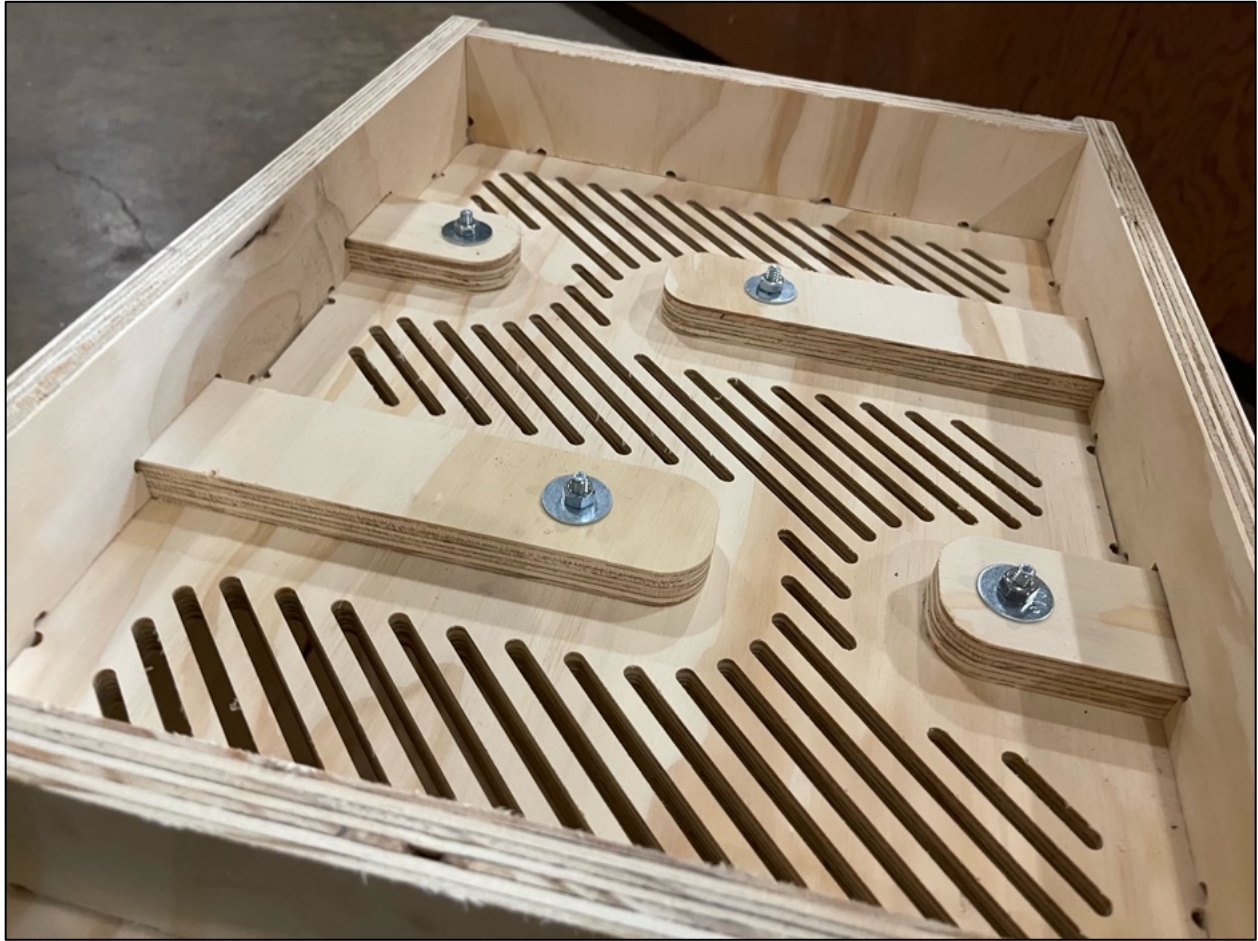

- Use 4 ¼" diameter bolts at least two inches long with washers on each side to connect all instances of parts **C** and **D** to part **A** through the four aligned ¼" diameter holed that run through the parts.

Step 10:



- Insert part **K** into the interior compartment of the nest box diagonally through the large square cutouts in part **F**. Use a ¼" bolt with washers and a nut to secure it in place using the hole in the front left or right corner of part **H**