POINT ASSIGNMENT INDEX

PAGE NO.	NO. OF SHEETS	DESCRIPTION
1	1	Mitsubishi SD-N35
2	2	Mean Well NDR-480-24
3	3	Direct Logic 205 D2-09B-1

REV	DATE	DESCRIPTION	Created By	Checked by

1				
2				
2				
2				
3				
4				

Mitsubishi SD-N35		POINT TYPE								
		Hardware Point					Virtual Point			
Point Description	**Origin Address**	DO	DI	AO	AI	Pwr		**Destination Address**	**Destination Description**	**Notes**
Contactor (Mitsubishi SD-N35) – Coil A1	A1	0	0	0	0	1	0	Y0	D2-08TD2 Output Module (12–24VDC)	A1 → DF103V (1/2A slow blow fuse) → D2-08TD2 output supplying +24VDC
Contactor (Mitsubishi SD-N35) – Coil A2	A2	0	0	0	0	1	0	-V	NDR-480-24 Power Supply	A2 → direct return to power supply negative (–V)
Contactor (Mitsubishi SD-N35) – Line Input	L1	0	0	0	0	1	0	L	Phoenix Contact TMC 83C 15A (2907618)	L1 → Phoenix Contact fuse breaker → fed from wall AC line
Contactor (Mitsubishi SD-N35) – Load Output	T1	0	0	0	0	1	0	R	HY Series VFD	T1 → passes through contactor → upplies VFD terminal R (line input)
	Total Points	0	0	0						

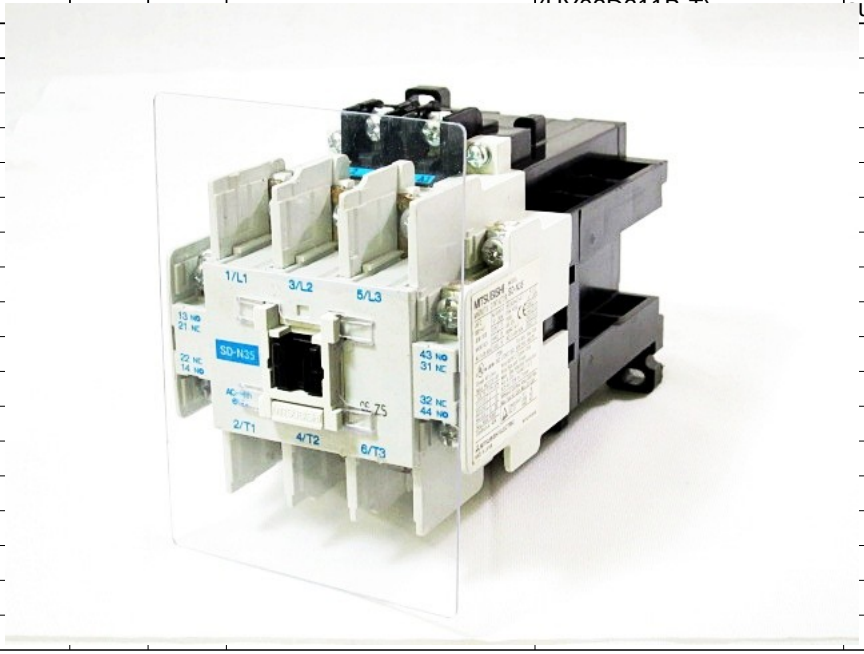

Mean Well NDR-480-24		POINT TYPE					
		Hardware Point					Virtual Point
Point Description	**Origin Address**	DO	DI	AO	AI	Pwr	
DC Power Supply (Mean Well NDR-480-24) – Line Input	L	0	0	0	0	1	
DC Power Supply (Mean Well NDR-480-24) – Neutral Input	N	0	0	0	0	1	
DC Power Supply (Mean Well NDR-480-24) – Ground (Protective Earth)	G	0	0	0	0	1	
DC Power Supply (Mean Well NDR-480-24) – Negative Output	-V	0	0	0	0	1	
DC Power Supply (Mean Well NDR-480-24) – Negative Output	-V	0	0	0			
DC Power Supply (Mean Well NDR-480-24) – Negative Output	-V	0	0	0			
DC Power Supply (Mean Well NDR-480-24) – Negative Output	-V	0	0	0			
DC Power Supply (Mean Well NDR-480-24) – Positive Output	+V	0	0	0			
	Total Points	0	0	0			

Destination Address	Destination Description
L	MORSETTITALIA EURO S10H-5H Fuse Block
N	Neutral Bus
G	Ground Bus
A2	ishi SD-N35 :tor
	TD2 Output Module
	ND3 Input Module
	RTD Module
	ETTITALIA EURO Terminal Block

Notes
Line from wall -> passes through power switch (closed = line passes) -> enters 25A fuse (EURO S10H-5H) -> splits to multiple loads -> enters PSU L terminal
Neutral from supply -> directly connected to PSU N terminal
Protective earth -> connected to PSU ground terminal / chassis bond
-V from power supply -> connected to A2 (coil return) of contactor
-V from power supply -> connected to COM of D2-08TD2
-V from power supply -> connected to COM of D2-08ND3
-V from power supply -> connected to COM of D2-04RTD
+24V from power supply -> enters terminal block -> passes through single 1.5A fast blow fuse -> distributed to pushbutton commons (Forward, Reverse, Dead man switch 1, Dead man switch 2)

Direct Logic 205 D2-09B-1		POINT TYPE					
		Hardware Point					Virtual Point
Point Description	**Origin Address**	DO	DI	AO	AI	Pwr	
PLC Rack (DirectLOGIC 205) – Base	Base	0	0	0	0	1	—
PLC Rack (DirectLOGIC 205) – Line Input	L	0	0	0	0	1	—
PLC Rack (DirectLOGIC 205) – Neutral Input	N	0	0	0	0	1	—
PLC Rack (DirectLOGIC 205) – Ground (Protective Earth)	**G**	0	0	0	0	1	—
PLC Rack (DirectLOGIC 205) – Slot 1	Slot 1	0	0	0	0	0	—
PLC Rack (DirectLOGIC 205) – Slot 2	Slot 2	0	8				
PLC Rack (DirectLOGIC 205) – Slot 3	Slot 3	0	0				
PLC Rack (DirectLOGIC 205) – Slot 4	Slot 4	0	0				
PLC Rack (DirectLOGIC 205) – Slot 5	Slot 5	8	0				
PLC Rack (DirectLOGIC 205) – Slot 6	Slot 6	0	0				
PLC Rack (DirectLOGIC 205) – Slot 7	Slot 7	—	—				
PLC Rack (DirectLOGIC 205) – Slot 8	Slot 8	—	—				
PLC Rack (DirectLOGIC 205) – Slot 9	Slot 9	—	—	—	—	—	—

Destination Address	Destination Description
D2-09B-1	Base / Power Unit
L	MORSETTITALIA EURO S10H-5H Fuse Block
N	Neutral Bus
G	Ground Bus
H2-DM1E	CPU / Ethernet Module
	t
	out
	:
	out
	utput
D2-Fill	Fill Panel

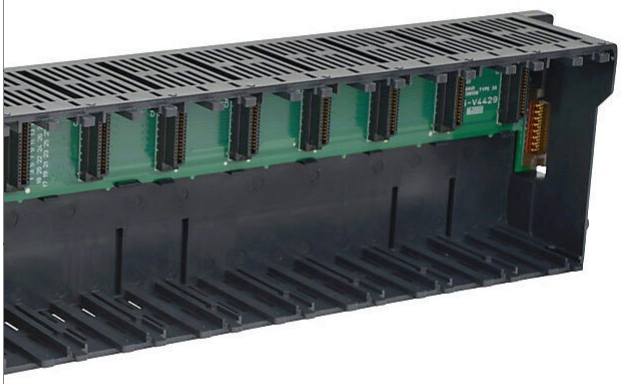

Notes
Rack base unit providing backplane power and I/O bus to all installed modules. Supports up to 9 I/O slots.
Line from wall -> passes through power switch (closed = line passes) -> enters EURO S10H-5H fuse block with 1A fast blow fuse (PLC branch) -> enters PLC L terminal
Neutral from wall -> directly connected to PLC N terminal
Protective earth -> connected to PLC ground terminal / chassis bond
CPU module with built-in Ethernet port. Executes the ladder logic program and handles network communications.
8-channel 24VDC discrete (digital) input module. Accepts sink/source wiring. Used for reading on/off signals such as pushbuttons, limit switches, and proximity sensors.
6-channel analog input module. Accepts 4–20mA or 0–10V signals. Used for reading continuous process values such as pressure, temperature, flow, or speed sensors.
4-channel RTD (Resistance Temperature Detector) input module. Compatible with PT100/PT1000 and other RTD types. Used for precision temperature measurement.
8-channel 12–24VDC transistor (sourcing) discrete output module. Used for switching loads such as relays, solenoids, indicator lights, and motor starters.
2-channel analog output module. Provides 4–20mA or 0–10V signals. Used for sending continuous control signals to devices such as VFDs, control valves, or analog meters.
Blank fill panel. No I/O. Slot reserved for future expansion.
Blank fill panel. No I/O. Slot reserved for future expansion.
Blank fill panel. No I/O. Slot reserved for future expansion.

DirectLOGIC PLC CPU(H2-DM1E)		POINT TYPE					
		Hardware Point					Virtual Point
Point Description	**Origin Address**	DO	DI	AO	AI	Pwr	
Power and communication interface	Backplane Connector (Left Edge)	0	0	0	0	1	0
Ground reference	Backplane GND	0	0	0	0		
	Total Points	0	0	0	0		

Destination Address	**Destination Description**
D2-09B-1 Base Slot 1 Connector	Provides power and backplane communication
	Common ground for logic power

Notes
__
__

Output Module (D2-08TA)		POINT TYPE								
		Hardware Point					Virtual Point			
Point Description	**Origin Address**	DO	DI	AO	AI	Pwr		**Destination Address**	**Destination Description**	**Notes**
Output Common (Hot)	C	1	0	0	0	1	0	120 V Hot Bus	ZipLink Terminal Block (ZL-RTB20-OUT). 1A inline slow blow fuse	120 V hot feed shared by all outputs
Output 0	OUT0	1	0	0	0	0	0	A1	TX Contactor (GH15-BN)	Drives TX coil via ZipLink
Output 1	OUT1	1	0	0	0	0	0	A1	BUS Contactor (GH15-BN)	Drives BUS coil via ZipLink
Output 2	OUT2	1	0	0	0	0	0	A1	F1 Contactor (GH15-BN)	Drives F1 coil via ZipLink
Output 3	OUT3	1	0	[illegible]	[illegible]	[illegible]	[illegible]	[illegible]	Thermal Overload Relay [illegible]	Feeds NC contact 95 → 96 → F2 coil
Module Power Feed	Backplane	0	0	[illegible]	[illegible]	[illegible]	[illegible]	[illegible]	[illegible] .20	No external wiring
	Total Points	5	0	[illegible]	[illegible]	[illegible]	[illegible]	[illegible]	[illegible]	[illegible]

6″ C-More color touch panel HMI (EA9-T6CL-R)		POINT TYPE								
		Hardware Point					Virtual Point			
Point Description	**Origin Address**	DO	DI	AO	AI	Pwr		**Destination Address**	**Destination Description**	**Notes**
HMI Serial Comm Port	COM Port	0	0	0	0	0	1	Serial Port	H2-DM1E	Serial link between PLC CPU and C-More HMI. Configure PLC and HMI ports for matching baud, parity, stop bits
HMI Power +V	+VDC	0	0	0	0	1	0	+V	Rhino power supply(PSB12-030-P)	HMI DC input powered from PSB12-030-P
HMI Power 0 V	0VDC	0	0	0	0	1	0	0V	Rhino power supply(PSB12-030-P)	0 VDC return to Rhino power supply; tie to system DC common as required by design
HMI Ground	Ground	0	0	0						
	Total Points	0	0	0						

Output Module (F2-02DAS-2)		POINT TYPE								
		Hardware Point					Virtual Point			
Point Description	**Origin Address**	DO	DI	AO	AI	Pwr		**Destination Address**	**Destination Description**	**Notes**
Analog Common (CH1)	CH1-V	0	0	1	0	0	0	CM	VFD (GS1-20P2) through Ziplink ZL-RTB20	0V1 and CH1-V are internally shorted
Analog Output CH1	CH1+V	0	0	1	0	0	0	AL	VFD (GS1-20P2) though Ziplink ZL-RTB20	0–10 V speed command to VFD
Module Logic +24 V	+V1	0	0	0	0	1	0	VDC +24V	PLC Base (D2-09B-1) through ZipLink ZL-RTB20	Powers analog output circuitry, also fused with 1A fast blow fuse
Module Logic 0 V	0V1	0	0	[illegible]	[illegible]	[illegible]	[illegible]	[illegible]	PLC Base (D2-09B-1) [illegible]320	Common return for module logic
Slot Power Feed	Backplane	0	0	[illegible]						No external wiring
	Total Points	0	0	[illegible]						