

SCADA AUTOMATION ENGINEERING SERIES

Closed-Loop Controllers & PID Control

Study Guide for Process & SCADA Engineers

Ricardo Barbosa

NERC-Certified EDF Operator • MS AI Candidate, JHU

May 2026

Contents

Contents	i
1 What Is Closed-Loop Control?	1
1.1 Open-Loop vs. Closed-Loop	1
1.2 The Feedback Loop Structure	1
1.3 Industrial Examples	2
2 Control Loop Fundamentals	3
2.1 Setpoint, Process Variable, and Error	3
2.2 Disturbances and Why Feedback Is Necessary	3
2.3 Direct vs. Reverse Action	4
3 P, I, and D — What Each Does	5
3.1 The PID Equation	5
3.2 Proportional Action	5
3.3 Integral Action	5
3.4 Derivative Action	6
4 Tuning Methods	7
4.1 Open-Loop Step Test (Process Reaction Curve)	7
4.2 Ziegler-Nichols Closed-Loop Method	7
4.3 Lambda Tuning (IMC-Based)	8
5 Process Dynamics	9
5.1 FOPDT Model	9
5.2 Self-Regulating vs. Integrating Processes	9
5.3 Dead Time: The Enemy of Control	9
6 Cascade & Advanced Control	11
6.1 Cascade Control	11
6.2 Feedforward Control	11
6.3 Ratio Control	11

CONTENTS

7	Digital PID Implementation	13
7.1	The Sampling Period	13
7.2	Position vs. Velocity Algorithm	13
7.3	Anti-Windup	13
8	PID in PLCs & SCADA	15
8.1	IEC 61131-3 CTRL_PID Function Block	15
8.2	Allen-Bradley (Rockwell) PID Instruction	15
8.3	Bumpless Transfer	15
8.4	PID Faceplate Elements	16
9	Troubleshooting Control Loops	17
9.1	Diagnostic Approach	17
9.2	Symptom Reference Table	18
10	Simulation Lab	19
10.1	Free Simulation Tools	19
10.2	Exercises	19
	Quick Reference	21
	Tuning Rule Summary	21
	Rule-of-Thumb Starting Points	21

What Is Closed-Loop Control?

1.1 Open-Loop vs. Closed-Loop

Every industrial control system makes a fundamental design choice: does the controller measure what it's producing and adjust accordingly, or does it apply a fixed output and hope for the best?

Open-loop control applies a control action based solely on a predetermined input—no measurement of the actual output. A conveyor belt running at a fixed speed, a heating element at a fixed power level, a timer-controlled irrigation valve: none of these care what's happening in the process. They execute their programmed action regardless of the result.


Closed-loop (feedback) control measures the actual process output, compares it to the desired value, and continuously adjusts the manipulated variable to minimize the error. This feedback path is what closes the loop.

Key Concept

Open-loop control is like driving with your eyes closed—technically possible, catastrophically wrong when anything changes. A closed-loop system measures where you actually are, computes the correction, and acts on it. Every cycle.

1.2 The Feedback Loop Structure

Every closed-loop control system—regardless of what variable is being controlled or what technology implements it—has the same fundamental structure:

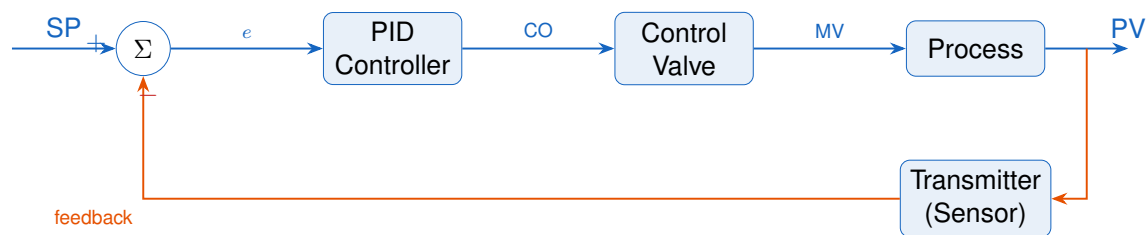

SP Setpoint — the desired value of the process variable.

e Error = $SP - PV$ — the deviation the controller must eliminate.

CO Controller Output — the signal sent to the final control element (typically 4–20 mA or 0–100%).

MV Manipulated Variable — the physical quantity changed by the actuator.

PV Process Variable — the measured output of the process.

1.3 Industrial Examples

Tank Level Control. A level transmitter measures liquid in a vessel (PV). The desired level is the setpoint (SP). The inlet control valve position is determined by the PID output. If a downstream pump increases its demand, the level drops, error increases, the controller opens the inlet valve—automatically, continuously, without operator intervention.

Heat Exchanger Temperature. Steam flow controls the outlet temperature of a process fluid. PV = outlet temperature. SP = desired temperature. CO drives the steam valve. A drop in steam header pressure is a disturbance; the controller detects the resulting temperature drop and opens the steam valve to compensate.

Boiler Drum Pressure. PV = drum pressure. SP = operating pressure. CO controls the fuel valve (firing rate). Steam demand changes are disturbances. The feedback loop maintains pressure within tight limits automatically.

Chapter 2

Control Loop Fundamentals

2.1 Setpoint, Process Variable, and Error

The three most fundamental quantities in any control loop:

Symbol	Name	Definition
SP	Setpoint	The target value an operator or system specifies.
PV	Process Variable	The measured actual value of the controlled variable.
e	Error	$e = SP - PV$. The deviation the controller acts to eliminate.
CO	Controller Output	The signal sent to the final control element (0–100%).
MV	Manipulated Variable	The physical quantity adjusted to control the PV.

2.2 Disturbances and Why Feedback Is Necessary

A **disturbance** is any external influence that moves the PV away from SP without the controller doing anything. Without feedback, the controller has no way to detect or correct disturbances. With feedback, the loop automatically detects the error and corrects.

Common disturbances in process plants: ambient temperature changes, feed composition shifts, upstream pressure fluctuations, heat transfer surface fouling, and changes in load (downstream demand).

2.3 Direct vs. Reverse Action

Controller action determines the sign of the controller's response:

Reverse Acting When PV increases above SP, CO decreases. Standard for most control loops where a higher PV requires less input (e.g., temperature with a heater).

Direct Acting When PV increases, CO increases. Used when a higher PV requires more of something (e.g., cooling water valve on a heat exchanger).

WARNING

Wrong action setting = positive feedback. The loop will slam to a limit in seconds. This looks exactly like severely aggressive tuning. Check the action setting before adjusting tuning constants.

3

Chapter

P, I, and D — What Each Does

3.1 The PID Equation

The PID Control Law

$$u(t) = K_p \cdot e(t) + K_i \int_0^t e(\tau) d\tau + K_d \frac{de(t)}{dt} \quad (3.1)$$

- $K_p \cdot e(t)$ — **Proportional**: responds to current error
- $K_i \int e d\tau$ — **Integral**: eliminates steady-state offset
- $K_d \frac{de}{dt}$ — **Derivative**: damps oscillation, predicts future error

3.2 Proportional Action

Proportional output = $K_p \times e(t)$. Larger error produces larger output. Zero error, zero proportional contribution. A P-only controller always has steady-state offset because the only way to produce a non-zero CO at steady state is to have a non-zero error.

3.3 Integral Action

Integral action accumulates error over time. As long as any error exists—no matter how small—the integral term keeps adjusting the CO until error = 0. This eliminates steady-state offset.

The danger: **integral windup**. When the output saturates (valve fully open/-closed), the integral keeps accumulating. When saturation clears, the accumulated

integral drives massive overshoot. Anti-windup mechanisms (clamping or back-calculation) prevent this.

3.4 Derivative Action

Derivative action responds to the *rate of change* of error. If the PV is approaching SP rapidly, derivative reduces the CO before the target is reached—damping the response and reducing overshoot.

Common Mistakes

Derivative kick: If derivative is computed on error (not PV), a step change in SP produces an instantaneous infinite rate-of-change in error, causing a massive CO spike. Apply derivative to PV, not error, to prevent this. Verify which mode your PLC's PID block uses.

Chapter 4

Tuning Methods

4.1 Open-Loop Step Test (Process Reaction Curve)

Before applying any tuning formula, identify the process. Put the controller in manual, wait for steady state, step the CO by 5–10%, and record the PV response. Extract:

- K = Process gain = $\Delta PV / \Delta CO$
- τ = Time constant = time for PV to reach 63.2% of total change (after dead time)
- θ = Dead time = delay before PV starts responding

This yields the FOPDT model: $G(s) = Ke^{-\theta s} / (\tau s + 1)$.

4.2 Ziegler-Nichols Closed-Loop Method

1. Set $K_i = 0$, $K_d = 0$ (P-only).
2. Increase K_p until sustained oscillation is achieved. This is the **ultimate gain** K_u .
3. Measure the oscillation period T_u .
4. Apply the table below.

Ziegler-Nichols Tuning Table

Controller	K_p	T_i	T_d
P only	$0.50 K_u$	—	—
PI	$0.45 K_u$	$T_u/1.2$	—
PID	$0.60 K_u$	$T_u/2$	$T_u/8$

WARNING

Ziegler-Nichols produces aggressive (quarter-decay) tuning. Apply a detuning factor of 0.5–0.7 to K_p before commissioning. Use as a starting point only.

4.3 Lambda Tuning (IMC-Based)

Lambda tuning requires step test data (K , τ , θ) and a desired closed-loop time constant λ :

$$K_p = \frac{\tau}{K(\lambda + \theta)}, \quad T_i = \tau$$

Choose $\lambda \geq \theta$. Conservative: $\lambda = 2\theta$ – 4θ . Lambda tuning is robust and directly relates to a physical performance specification.

Chapter 5

Process Dynamics

5.1 FOPDT Model

The First-Order Plus Dead Time (FOPDT) model approximates most industrial processes:

$$G(s) = \frac{K e^{-\theta s}}{\tau s + 1}$$

The three parameters (K , τ , θ) fully characterize the process for tuning purposes.

5.2 Self-Regulating vs. Integrating Processes

Self-regulating: The PV naturally reaches a new steady state if the CO is held constant. Temperature, pressure, flow loops. Standard PID tuning applies.

Integrating (non-self-regulating): The PV ramps indefinitely if CO is held constant unless CO exactly matches the load. Tank level is the classic example. A P-only or PD controller is often preferred—adding integral to a level loop creates a double-integrator that destabilizes easily.

5.3 Dead Time: The Enemy of Control

Dead time (θ) is the pure delay between a CO change and the first PV response. No tuning overcomes dead time. During θ , the controller is blind. The only remedy is process design: shorter pipes, faster sensors, closer measurement points.

The τ/θ ratio determines controllability. High τ/θ (e.g., 10:1): easy. Low τ/θ (e.g., 1:1): difficult—conservative tuning required.

Chapter 6

Cascade & Advanced Control

6.1 Cascade Control

Cascade control uses two loops in series. The primary (outer) loop controls the main process variable; its output becomes the setpoint for the secondary (inner) loop, which controls a faster intermediate variable.

Key Concept

The inner loop must be $3\text{--}5\times$ faster than the outer loop. Tune the inner loop first (outer in manual), then tune the outer loop with inner in auto.

Classic example: heat exchanger temperature (outer) cascaded to steam flow (inner). Steam supply pressure disturbances are rejected by the fast inner loop before they affect the slower outer temperature loop.

6.2 Feedforward Control

Feedforward measures a known disturbance and applies a compensating CO change *before* the PV is affected. Requires a process model. Always paired with feedback to trim model errors.

6.3 Ratio Control

Maintains a fixed ratio between two process streams. The “wild” (uncontrolled) stream is measured; the ratio multiplied by it generates the setpoint for the “controlled” stream’s flow controller.

Chapter 7

Digital PID Implementation

7.1 The Sampling Period

A digital PID samples at interval T . Between samples, the controller is open-loop. Rules of thumb: $T \leq \tau/10$ and $T \leq \theta/4$. Typical values: flow 0.1–0.5 s, temperature 1–10 s, level 1–5 s.

7.2 Position vs. Velocity Algorithm

Position (absolute) form:

$$u[k] = K_p e[k] + K_i T \sum_{j=0}^k e[j] + K_d \frac{e[k] - e[k-1]}{T}$$

Outputs absolute CO. Requires explicit anti-windup to prevent integral accumulation.

Velocity (incremental) form:

$$\Delta u[k] = K_p (e[k] - e[k-1]) + K_i T e[k] + K_d \frac{e[k] - 2e[k-1] + e[k-2]}{T}$$

Outputs CO increment. Natural anti-windup. Bumpless transfer by initializing $\Delta u = 0$.

7.3 Anti-Windup

Clamping: Stop accumulating integral when output is saturated AND error is in the saturating direction.

Back-calculation: Apply a correction term proportional to $(u_{\text{actual}} - u_{\text{desired}})$ when saturated. Provides smoother exit from saturation.

Chapter 8

PID in PLCs & SCADA

8.1 IEC 61131-3 CTRL_PID Function Block

Standard parameters include ACTUAL (PV input), SET_POINT (SP), KP, TI (integral time in seconds), TD (derivative time), MAN_IN (manual output value), AUTO (mode bool), and OUT (CO).

8.2 Allen-Bradley (Rockwell) PID Instruction

Key differences from IEC standard:

- Uses independent parallel gains (K_p , K_i , K_d), not T_i/T_d form
- K_i is in *repeats per minute*, not $1/T_i$ (seconds): $K_i^{\text{AB}} = 1/T_i^{\text{min}}$
- PV scaled via MinEU/MaxEU parameters (engineering units)
- Derivative of PV vs. error is a configurable bit

8.3 Bumpless Transfer

Bumpless transfer prevents CO jumps when switching between manual and auto modes. On switch to auto: initialize the integral accumulator so the computed CO matches the current manual CO. On switch to manual: set the manual CO to the last auto CO value.

8.4 PID Faceplate Elements

A standard HMI PID faceplate exposes: SP entry (operator), PV display (read-only), CO bar (auto: display, manual: entry), mode toggle (Auto/Manual/Cascade), deviation alarm display, and output limits.

Chapter

Troubleshooting Control Loops

9.1 Diagnostic Approach

Before changing any tuning constant, verify:

1. PV transmitter calibrated and reading correctly
2. Control valve stroking freely and linearly
3. Loop in auto mode (not left in manual from previous shift)
4. No mechanical issues: stiction, backlash, positioner failure
5. Process has not changed: fouling, composition, load

Common Mistakes

80% of loop problems are *not* tuning problems. Adjusting K_p to compensate for a stuck valve treats the symptom. The valve sticks again next week.

9.2 Symptom Reference Table

Symptom	Likely Cause	Fix
Regular oscillation	K_p too high or T_i too fast	Reduce K_p 30–50%; increase T_i
Steady-state offset	Integral disabled or too slow	Enable/decrease T_i
Sluggish response	K_p too low or valve binding	Increase K_p ; check valve
Sawtooth PV, CO ramps then jumps	Valve stiction (limit cycling)	Service valve; positioner
Massive overshoot at startup	Integral windup	Enable anti-windup; configure SP ramp
CO moves, PV does not follow	Valve/actuator mechanical failure	Inspect valve, positioner

Chapter 10

Simulation Lab

10.1 Free Simulation Tools

- **MATLAB/Simulink** (student \$35/yr) — industry standard, Control System Toolbox
- **Python control library** (`pip install control`) — free, flexible
- **CADSIM Plus** — free tier, process-oriented simulator
- **Excel spreadsheet** — build it yourself; most instructive option

10.2 Exercises

Exercise 1 — Excel FOPDT Simulator. Implement discrete-time PID ($T = 0.5$ s) controlling a FOPDT process ($K = 1.5$, $\tau = 30$ s, $\theta = 5$ s). Plot SP, PV, CO. Tune by doubling K_p until oscillation appears, then back off. Add integral. Observe windup if anti-windup is disabled.

Exercise 2 — Lambda Tuning Validation. Using the same process, calculate Lambda tuning constants with $\lambda = 2\theta = 10$ s. Simulate. Compare rise time, overshoot, and settling time against Z-N open-loop tuning.

Exercise 3 — Valve Stiction Simulation. Add a deadband of $\pm 2\%$ to the valve model (valve does not move unless CO changes by more than 2%). Observe limit cycling behavior. Compare the PV trend shape to the oscillation patterns in Chapter 9.

Exercise 4 — Process Type Comparison. Tune a self-regulating loop (temperature) and an integrating loop (level) with the same PID constants. Observe the dramatically different responses. Tune each appropriately and document the difference in required K_p , T_i .

Field Note

The simulation loop *is* the study loop. Build it, break it deliberately, diagnose why it broke, fix it. A student who has caused and fixed integral windup, oscillation, offset, and valve stiction in simulation will outperform a student who only read about these phenomena every time, in the field, on day one.

Quick Reference

Tuning Rule Summary

Method	K_p	T_i	T_d	Notes
Z-N (closed-loop)	$0.60 K_u$	$T_u/2$	$T_u/8$	Aggressive; detune
Lambda PI	$\tau/[K(\lambda + \theta)]$	τ	—	Choose $\lambda \geq \theta$
Cohen-Coon PI	See ch. 4 formulas	See ch. 4	—	Good for $\theta/\tau > 0.1$

Rule-of-Thumb Starting Points

Loop Type	K_p	T_i (min)	Notes
Flow	0.3–0.5	0.05–0.2	Noisy; avoid derivative
Liquid Level	1–3	5–30	Often P-only
Temperature	1–5	2–10	D sometimes helpful
Gas Pressure	2–5	0.5–3	Can be fast

Professional Certification Prep

ISA CCST — Certified Control Systems Technician

Three levels based on experience (Level I: 5 years, Level II: 7 years, Level III: 13 years). Cost: approximately \$415 USD. Recertification required every 3 years.

Exam domains relevant to this guide:

- **Basic Continuous Control** — PID control theory, DCS architecture, loop tuning, controller modes (P, PI, PID), control loop diagrams. This guide's Chapters 1–5 directly prepare for this domain.
- **Advanced Control** — Cascade control, feedforward, ratio control, split-range, override/select. Covered in this guide's Chapter 8.

- **Integration and Software** — Communication protocols (Modbus, HART, Fieldbus), SCADA integration, historian. Understanding PID in the context of SCADA tags is tested.
- **Deployment and Maintenance** — Startup procedures, troubleshooting oscillating loops, calibration, bump testing. Chapter 5 (tuning) and Chapter 9 (troubleshooting) apply.

Official Resources: isa.org/certification/ccst, ISA CCST Body of Knowledge at isa.org/certification/ccst/ccst-body-of-knowledge

ISA CAP — Certified Automation Professional

Target audience: automation engineers (mid-to-senior). Requirements: Bachelor's degree + 5 years experience (or equivalent). Cost: approximately \$500–\$750 USD. Format: 175 multiple-choice questions, 4-hour time limit. Recertification every 3 years.

Exam domains covered by this guide:

- **Basic Continuous Control (Domain 1)** — PID fundamentals, control loop performance analysis, DCS systems. This guide provides thorough preparation.
- **Advanced Control (Domain 3)** — Model predictive control (MPC) concepts, cascade, feedforward, FOPDT model identification (28.3%/63.2% method). Chapters 6–8 of this guide are specifically CAP-aligned.
- **Discrete, Sequencing, and Manufacturing Control (Domain 2)** — Covered partially; PLC integration with PID loops.
- **Project Work Structure (Domain 7)** — Automation project lifecycle; PID loop tuning as a commissioning deliverable.

Official Resources: isa.org/certification/cap, 2024 CAP Content Outline at isa.org/certification/cap/cap-body-of-knowledge