

Basic operation of HuaHuaSAW V7 software




1. Click the desktop huahuasawV7 button to start the software

① After opening the huahuasaw software, observe whether the software communicates correctly




Red indicates incorrect communication

② After each startup, it is necessary to return to the origin and then click back to the initial position

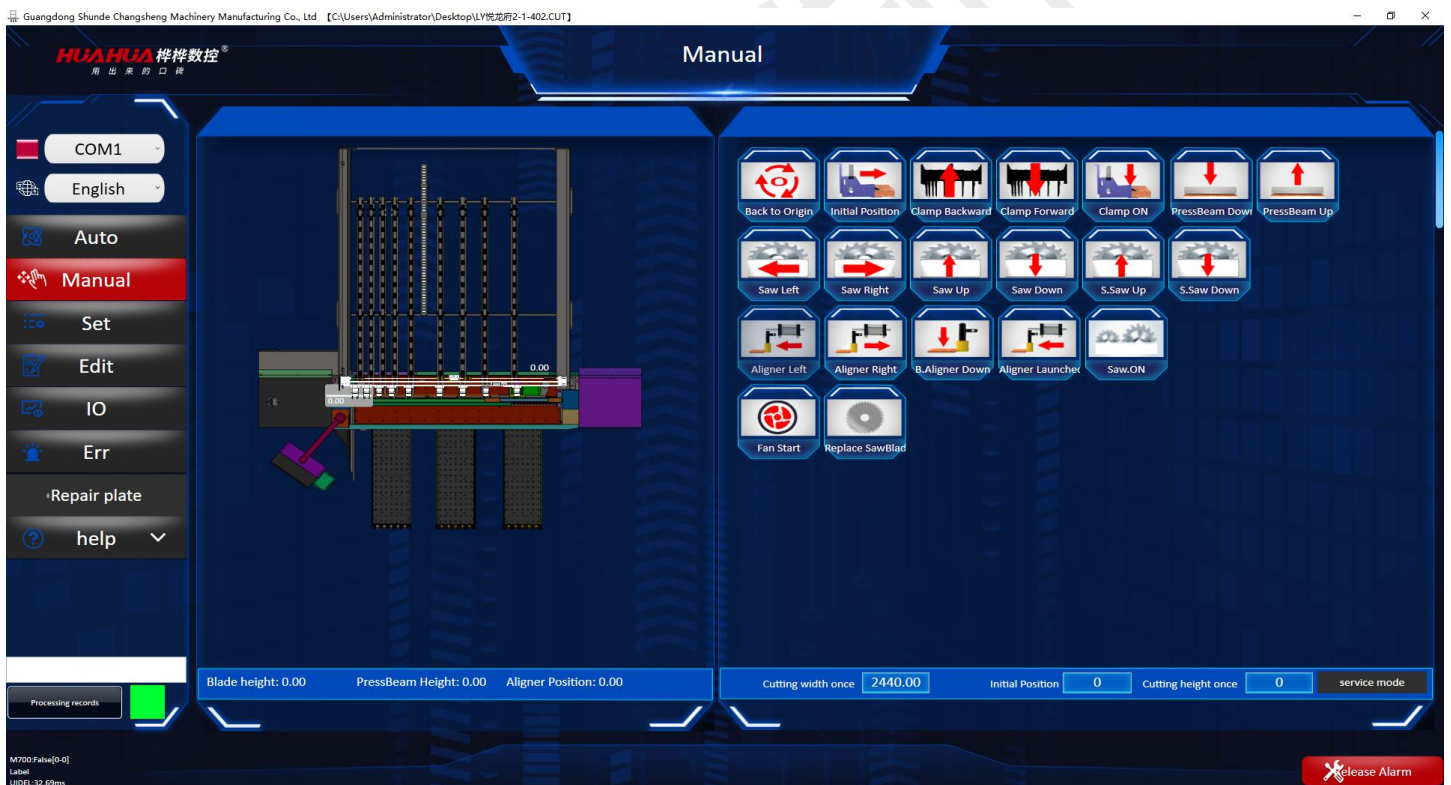


Automatic
page button

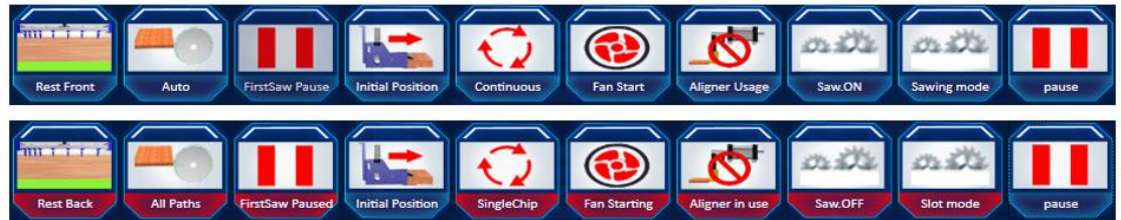

- Rest Front/Rest Back:** Choose whether to cut residual materials first or later according to the actual situation.
- Auto/All Paths:** Full process refers to the sawing car lifting the saw blade from the back, automatic refers to the sawing car adjusting the position in real time according to the board width, and the default saw seat offset is 500mm.
- FirstSaw Pause:** The pause after the first cut is completed, which facilitates picking up excess materials or leftover materials. Continuing to start will continue cutting.
- Continuous/SingleChip:** Continuous mode starts once and completes all cutting. Single slice mode is to start cutting one blade at a time.
- Fan Start:** Activate and deactivate the floating platform switch
- Aligner usage:** Use the aligner switch
- Saw.ON/Saw.OFF:** The program controls the start and stop of the saw blade, clicking once to start the saw blade and clicking again to stop it.
- Pause:** Refers to the situation where it is necessary to stop during cutting. After pausing, restarting will resume cutting without the need for re cutting.

- Load File:** Load optimized files or saved cutting files
- Label Design:** Users who require labels design the style of the labels
- View Drawing:** View all current machining graphics
- Graphics Edit:** Edit the current cut shape
- Simulated Cutting:** demonstrate simulated cutting of the current graphic
- 2D/3D:** Presentation method for cutting images.
- Label Printing:** Check the box when printing labels.
- Label templates:** report text tags, picture image tags
- Cutting Speed:** Adjust the speed of the saw cart's movement
- Clamp Position:** Set the placement position of the board according to the actual situation

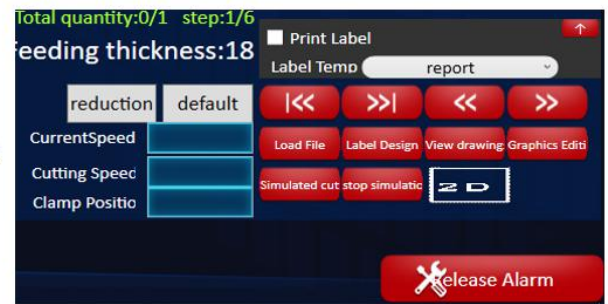

2.Click the back to origin button (required)




3.Click the Initial position button (required)

4.Manual editing mode

① Click the edit button




to pop up an editing box

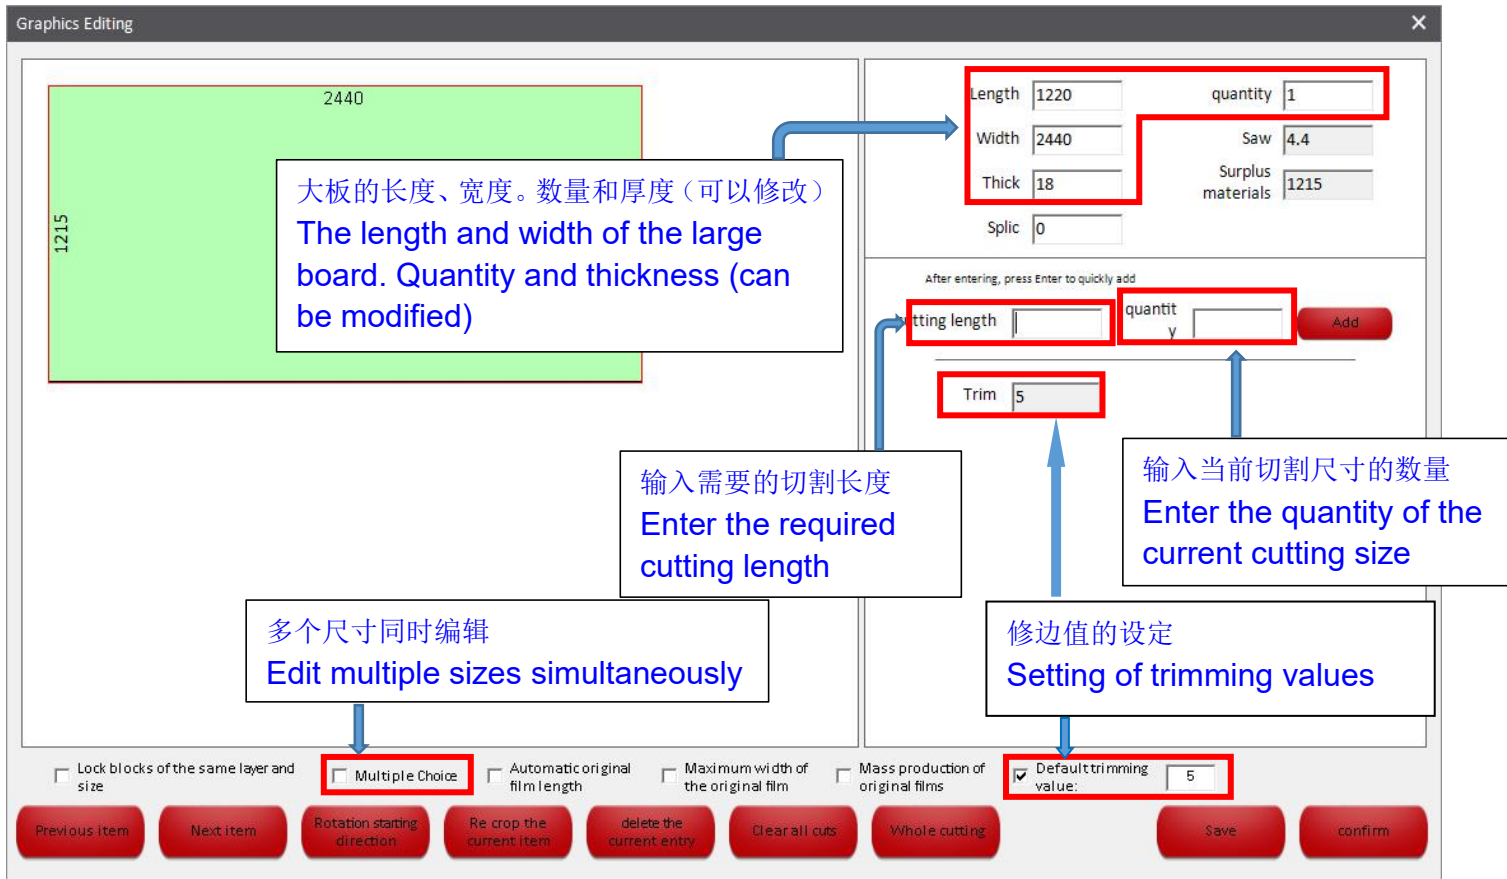

②Example of operation, such as cutting several 400×300 , 350×600 wooden boards

a. Enter cutting length of 400 and quantity of 1, click the add button (or press enter directly), enter cutting length of 350 and quantity of 2 again, click the add button (or press enter directly)

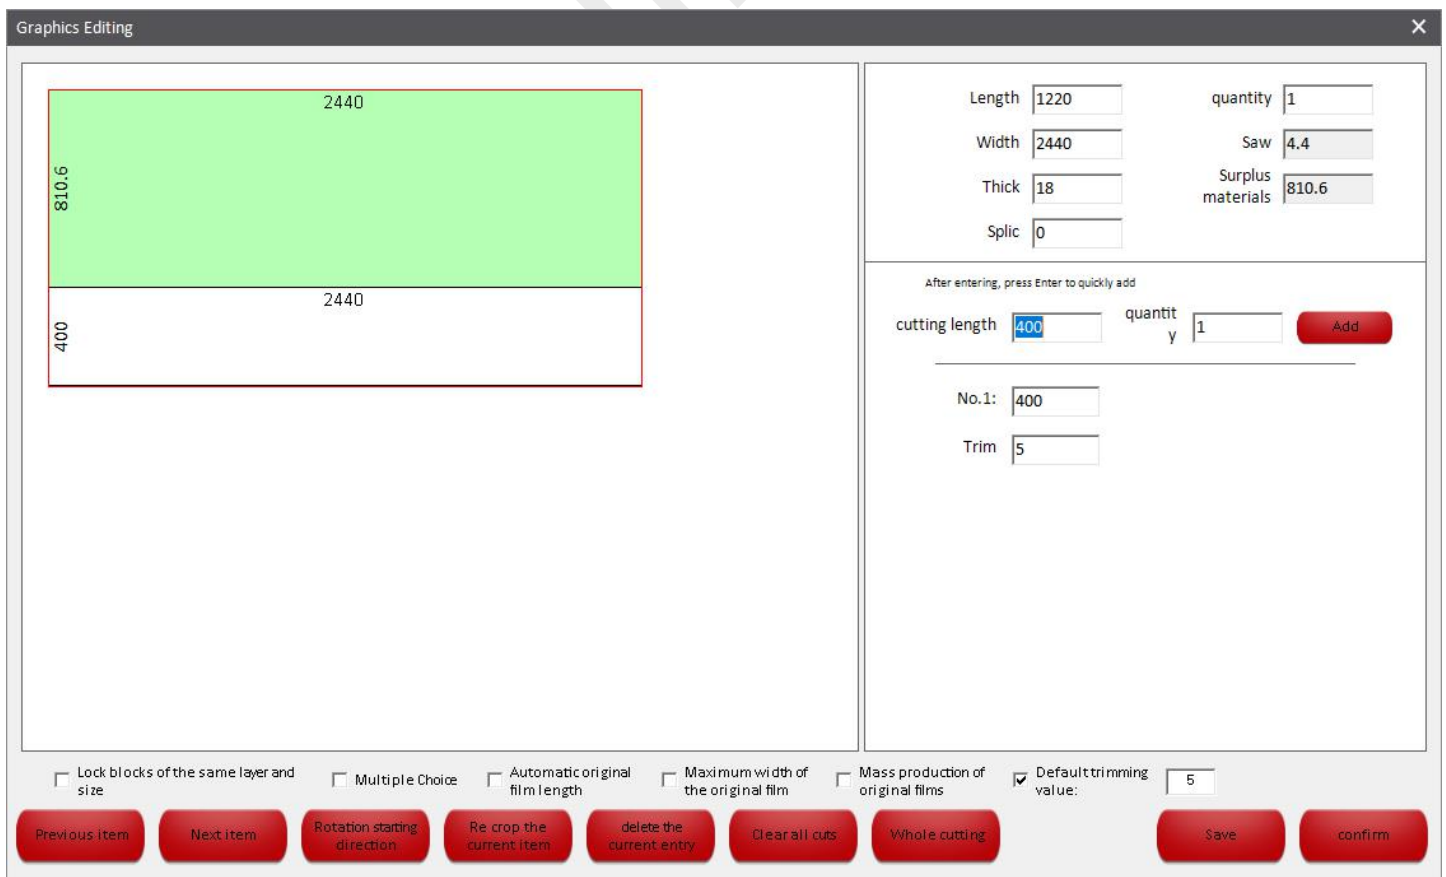

Graphics Editing

350	2440
350	2440
400	2440

Length	1220	quantity	1
Width	2440	Saw	4.4
Thick	18	Surplus materials	101.8
Splic	0		

After entering, press Enter to quickly add

cutting length quantity

No.3:

No.2:

No.1:

Trim

☐ Lock blocks of the same layer and size
 ☐ Multiple Choice
 ☐ Automatic original film length
 ☐ Maximum width of the original film
 ☐ Mass production of original films
 ☒ Default trimming value:

b. Click on the graphic that needs to be edited

Graphics Editing

350	2440
350	2440
400	2440

Length	2440	quantity	1
Width	400	Saw	4.4
Thick	18	Surplus materials	2440
Splic	1		

After entering, press Enter to quickly add

cutting length quantity

Trim

☐ Lock blocks of the same layer and size
 ☐ Multiple Choice
 ☐ Automatic original film length
 ☐ Maximum width of the original film
 ☐ Mass production of original films
 ☒ Default trimming value:

c. Enter cutting length of 300 and quantity of 6, add

Graphics Editing

350	2440						
350	2440						
300	300	300	300	300	300	300	608.6
400	400	400	400	400	400	400	400

Length quantity
Width Saw
Thick Surplus materials
Splic

After entering, press Enter to quickly add
cutting length quantity

No.6:
No.5:
No.4:
No.3:
No.2:
No.1:
Trim

☐ Lock blocks of the same layer and size
☐ Multiple Choice
☐ Automatic original film length
☐ Maximum width of the original film
☐ Mass production of original films
☒ Default trimming value:

d. Multiple selection with a check mark, click on two graphics consecutively to merge and edit. Multiple selection without a check mark, only one graphic can be edited

Graphics Editing

350	2440						
350	2440						
300	300	300	300	300	300	300	608.6
400	400	400	400	400	400	400	400

Length quantity
Width Saw
Thick Surplus materials
Splic

After entering, press Enter to quickly add
cutting length quantity

☒ Multiple Choice
☐ Automatic original film length
☐ Maximum width of the original film
☐ Mass production of original films
☒ Default trimming value:

Multiple selections checked, editing multiple graphics simultaneously

e. Enter cutting length of 600 and quantity of 3, add

Graphics Editing

350	600	350	600	350	600	350	621.8
350	600	350	600	350	600	350	621.8
400	400	400	400	400	400	400	400

Length quantity
Width Saw
Thick Surplus materials
Splic

After entering, press Enter to quickly add
cutting length quantity
Trim

☐ Lock blocks of the same layer and size ☒ Multiple Choice ☐ Automatic original film length ☐ Maximum width of the original film ☐ Mass production of original films ☒ Default trimming value:

f. After editing is complete, click the confirm button to transfer to processing

Guangdong Shunde Changsheng Machinery Manufacturing Co., Ltd. [Edit.txt]

HUAHUA 桦桦数控

Auto

COM1
English
Auto
Manual
Set
Edit
IO
Err
Repair plate
help

Blade height: 0.00 Beam Height: 0.00 Aligner Position: 0.00
0.00
Robot arm 1:1220.00*2440.00
Surplus materials:115.00
Trimming value:5.00
400.00 350.00 350.00

0/1
115*2440

350*600 [14]	350*600 [14]	350*600 [17]	350*635
350*600 [14]	350*600 [14]	350*600 [17]	350*635
400*600 [11]			


[Material][1]:1/1 MainWindow.SetCut.Saw:0 Trim:5/0
graphical:1/1 Total quantity:0/1 step:1/3
Stacking:1 Feeding thickness:18
reduction default
CurrentSpeed
Cutting Speed
Clamp Positio
Print Label
Label Temp report
Load File Label Design View drawing Graphics Edit
Simulated cut stop simulate
Release Alarm

Rest Front Auto FirstSaw Pause Initial Position Continuous Fan Start Aligner Usage Saw ON Sawing mode pause


M200-Fahu[0-0]
Label
LUREL 32 51ms

5. Automatic import mode


① Click the auto button  , click the load file button  in the bottom right corner, and select the required processing file

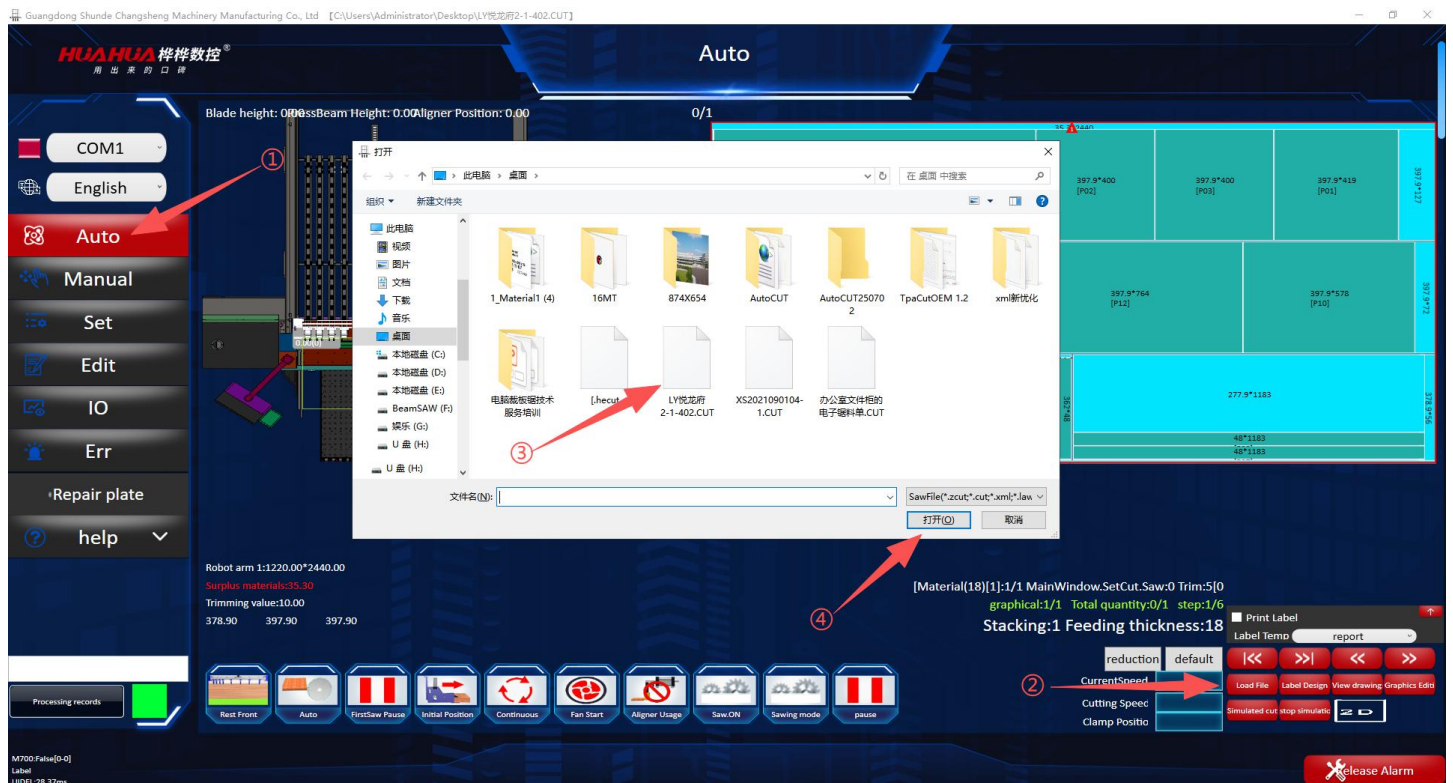

② After importing the page, click to return

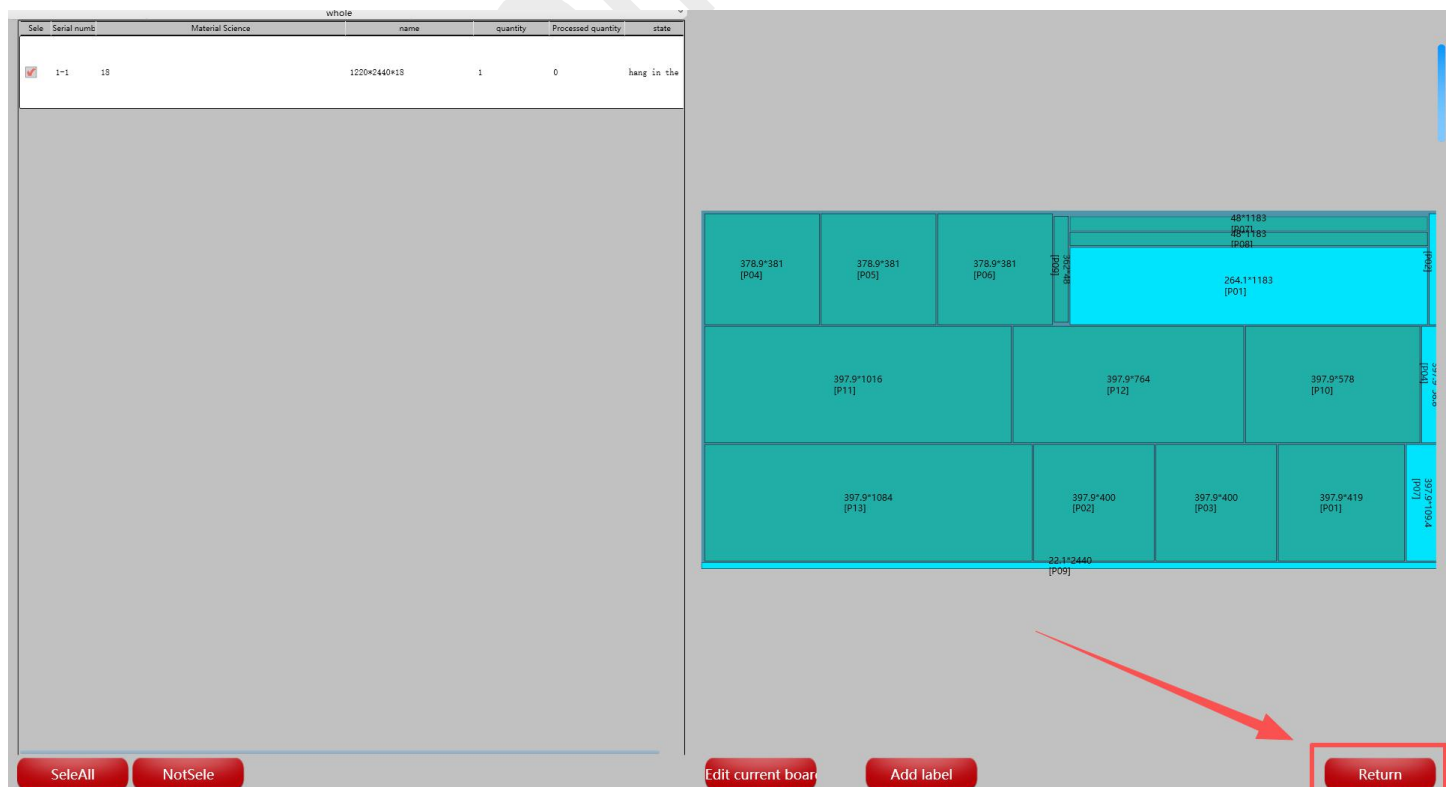

③Processing page after import completion

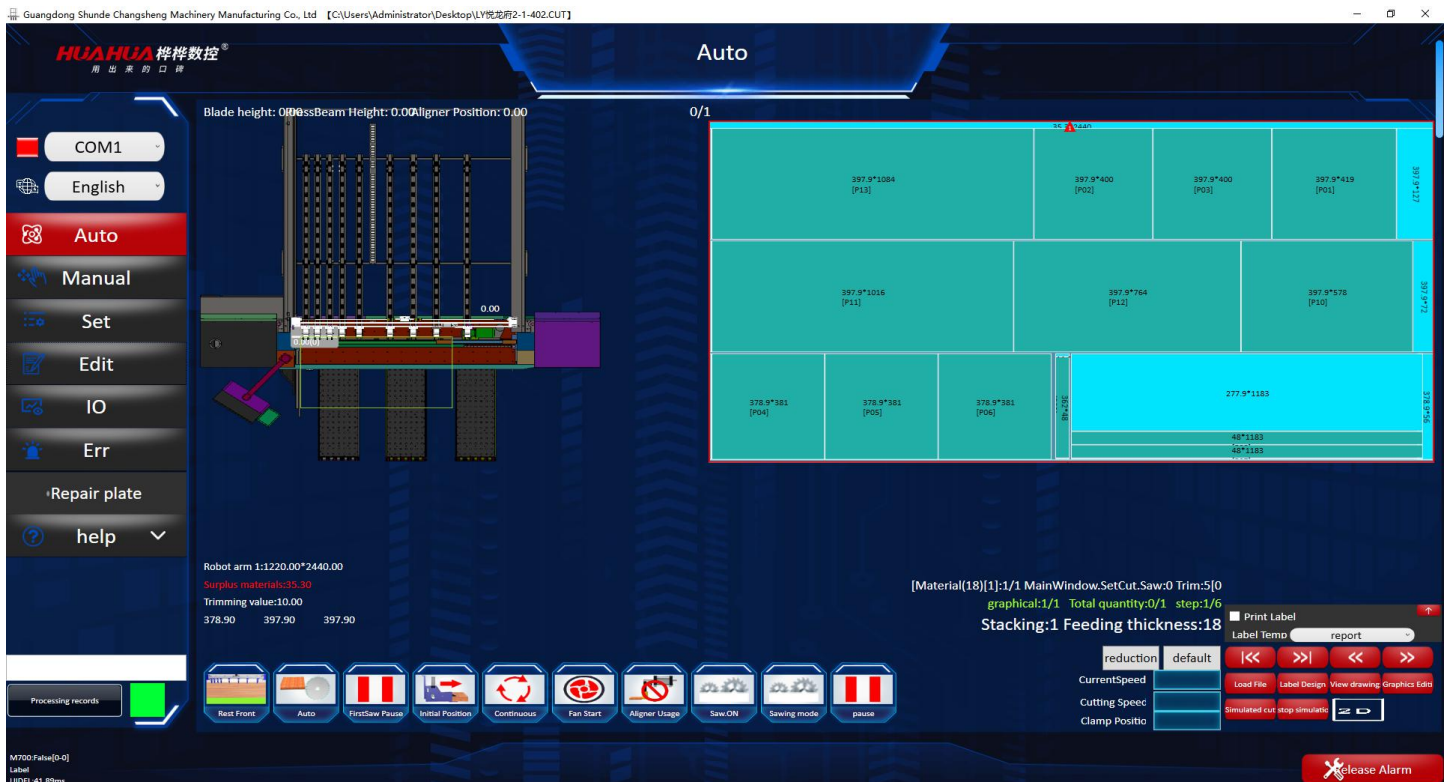

6. Click the saw blade start button , click the floating platform start button ,

place the wooden board, press the program start button, and start processing

